INSTRUCTION MANUAL

RACAL-DANA

RACAL
The Electronics Group

PUBLICATION NO. 980673

SERIES 1260 VXI SWITCHING CARDS

RACAL-DANA

RACAL-DANA INSTRUMENTS INC.
4 Goodyear Street, P.O. Box C-19541, Irvine, CA 92713
Telephone: 714/859-8999, Fax: (714)859-2505

RACAL-DANA INSTRUMENTS LTD.
Hardley Industrial Estate, Hythe, Southampton, Hampshire SO4 6ZH, England
Telephone: (0703) 843265, FAX: (0703) 848919, TLX: 47600

RACAL-DANA INSTRUMENTS S.A.
18 Avenue Dutartre, 78150 Le Chesnay, France
Telephone: 3-955-8888, TLX: 697215

RACAL-DANA INSTRUMENTS GmbH
Frankenforster Strasse 21, 5060 Bergisch Gladback 1, Federal Republic of Germany
Telephone: 2204 60081, TLX: 887-8428

RACAL-DANA INSTRUMENTS ITALIA srl.
Via Roma, 108 / Pal.E1, 20060 Cassina De Pecchi, Italy
Telephone: 2.9514717-737-770, Fax: 2.9514522

PUBLICATION DATE: FEBRUARY 1991

© Copyright 1991 by Racal-Dana Instruments, Inc. Printed in the United States of America. All rights reserved.
This book or parts thereof may not be reproduced in any form without written permission of the publishers.

WARRANTY

Within one year of purchase, Racal-Dana will repair or replace your instrument, at our option, if in any way it is defective in material or workmanship. The instrument must be returned to the country of purchase, unless prior arrangement has been made, and Racal-Dana Instruments will pay all parts and labor charges. Just call Racal-Dana Customer Service at (714) 859-8999 in U.S.A., (0703) 843265 in England, (1) 3-955-8888 in France, 06102-2861/2 in Germany or (02) 5062767, 5052686, or 503444 in Italy for assistance. We will advise you of the proper shipping address for your prepaid shipment. Your instrument will be returned to you freight prepaid.

PROPRIETARY NOTICE

This document and the technical data herein disclosed, are proprietary to Racal-Dana Instruments, Inc., and shall not, without express written permission of Racal-Dana Instruments, Inc., be used, in whole or in part to solicit quotations from a competitive source or used for manufacture by anyone other than Racal-Dana Instruments, Inc. The information herein has been developed at private expense, and may only be used for operation and maintenance reference purposes or for purposes of engineering evaluation and incorporation into technical specifications and other documents which specify procurement of products from Racal-Dana Instruments, Inc.

FOR YOUR SAFETY

Before undertaking any maintenance procedure, whether it be a specific troubleshooting or maintenance procedure described herein or an exploratory procedure aimed at determining whether there has been a malfunction, read the applicable section of this manual and note carefully the **WARNING** and **CAUTION** notices contained therein.

The equipment described in this manual contains voltage hazardous to human life and safety and which is capable of inflicting personal injury. The cautionary and warning notes are included in this manual to alert operator and maintenance personnel to the electrical hazards and thus prevent personal injury and damage to equipment.

If this instrument is to be powered from the AC line (mains) through an autotransformer (such as a Variac or equivalent) ensure that the common connector is connected to the neutral (earthed pole) of the power supply.

Before operating the unit ensure that the protective conductor (green wire) is connected to the ground (earth) protective conductor of the power outlet. Do not defeat the protective feature of the third protective conductor in the power cord by using a two conductor extension cord or a three-prong/two-prong adaptor.

Maintenance and calibration procedures contained in this manual sometimes call for operation of the unit with power applied and protective covers removed. Read the procedures carefully and heed Warnings to avoid "live" circuit points to ensure your personal safety.

Before operating this instrument:

1. Ensure that the instrument is configured to operate on the voltage available at the power source. See Installation Section.

2. Ensure that the proper fuse is in place in the instrument for the power source on which the instrument is to be operated.

3. Ensure that all other devices connected to or in proximity to this instrument are properly grounded or connected to the protective third-wire earth ground.

If at any time the instrument:

- Fails to operate satisfactorily
- Shows visible damage
- Has been stored under unfavorable conditions
- Has sustained stress

It should not be used until its performance has been checked by qualified personnel.

FOR YOUR SAFETY

TABLE OF CONTENTS

SECTION 1 GENERAL INFORMATION

1.1	Introduction	1-1
1.2	General Information	1-1
1.3	Options	1-3
1.4	1260 Series Switching Module Specifications	1-4
1.4.1	1260-12 Relay Actuator	1-4
1.4.2	1260-20 Power Module	1-6
1.4.3	1260-30 Signal Multiplexer / Scanner Module	1-8
1.4.4	1260-40 Signal Matrix Module	1-10
1.4.5	1260-54 1 GHz Tree Multiplexer Module	1-12
1.4.6	1260-14 Digital I/O module	1-14
1.4.7	1260-13 Signal Switching / Relay Actuator Module	1-16
1.4.8	1260-35 Signal Multiplexer/Scanner Module	1-18

SECTION 2 INSTALLATION

2.1	Introduction	2-1
2.2	Unpacking and Inspection	2-1
2.3	Reshipment Instructions	2-1
2.4	Option 01 Installation	2-1
2.6	Interrupt Level and Logical Address setting	2-2
2.7	Switching Module Address Setting	2-3
2.8	LBUS Lockout Keys	2-4
2.9	Switching Module Chassis Installation	2-7

SECTION 3 OPERATION

3.1	Introduction	3-1
3.2	1260 Series Input Format	3-1
3.3	1260 Series Output Format	3-1
3.4	1260-01 Device Dependant Command Codes	3-3
3.5	1260 Series Module Specific Syntax	3-13
3.5.1	1260-20 Module Specific Syntax	3-13
3.5.4	1260-30 Module Specific Syntax	3-15
3.5.5	1260-40 Module Specific Syntax	3-27
3.5.6	1260-54 Coaxial Switching Module Specific Syntax	3-36
3.5.7	1260-12 Module Specific Syntax	3-38
3.5.10	1260-14 Digital I/O Module Specific Syntax	3-42
3.5.11	1260-13 Module Specific Syntax	3-56
3.5.12	1260-35 Module Specific Syntax	3-63

SECTION 4 THEORY OF OPERATION

4.1	Introduction	4-1
4.1.3	Functional Blocks	4-1
4.2	Theory of Operation	4-2
4.2.1	Power Supplies	4-2
4.2.2	Microprocessor Block	4-2

SECTION 5 DRAWINGS 5-1

SECTION 6 PARTS LIST 6-1

SECTION 7 WIRE LISTS 7-1

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_10405

SECTION 1 GENERAL INFORMATION

1.1 Introduction

1.1.1 This manual provides the information necessary to install one or more of the Racal-Dana 1260 Series switching modules in a VXIbus compatible chassis and to operate the switching modules correctly.

1.2 General Information

1.2.1 The Racal-Dana 1260 Series switching modules are a range of C size, VXIbus compatible switching modules that provide switching for microwave, RF, audio, high voltage, high current, low level and video applications. The switching modules are configured as matrices, multiplexers, switching trees, SPDTs and DPDTs. Refer to Figure 1-1 for an illustration of a 1260 Series Switch Module in a VXIbus chassis.

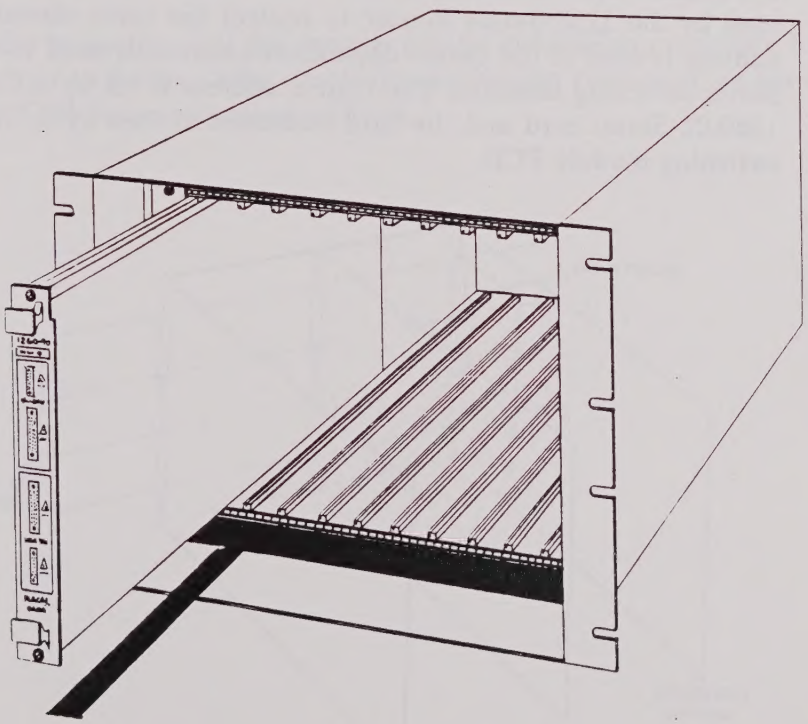

Figure 1-1, 1260 Series Switch Module

1.2.2 The 1260 Series switching modules are installed in a VXIbus compatible chassis in a continuous set of adjacent chassis slots. One of the 1260 Series switching modules to be fitted to the VXIbus chassis must be designated the system master and must be fitted with Option 01. All other switching modules fitted to the chassis are slaved to the master. Refer to Figure 1-2 for an illustration of this arrangement.

1.2.3 A 1260 Series switching module fitted with Option 01 must be fitted in the leftmost chassis slot that is to contain a switching module. If only one switching module is to be fitted to the chassis, then several jumper wires must be removed from the switching module. If more than one switching module is to be fitted to the chassis, then these jumpers must be removed from the switching module in the rightmost chassis position that contains a switching module.

1.2.4 Two separate addresses are required in the use of a 1260 Series switching system. The first is the VXIbus specification defined logical address used by the chassis resource manager and the second, the card address, is an address used by the 1260 Series Master to control the cards slaved to it. The card address is used in the device dependant commands used to control the 1260 Series switching modules. The logical address is set by a DIP switch on the 1260-01 Smart card and the card addresses are set by a DIP switch on the switching module PCB.

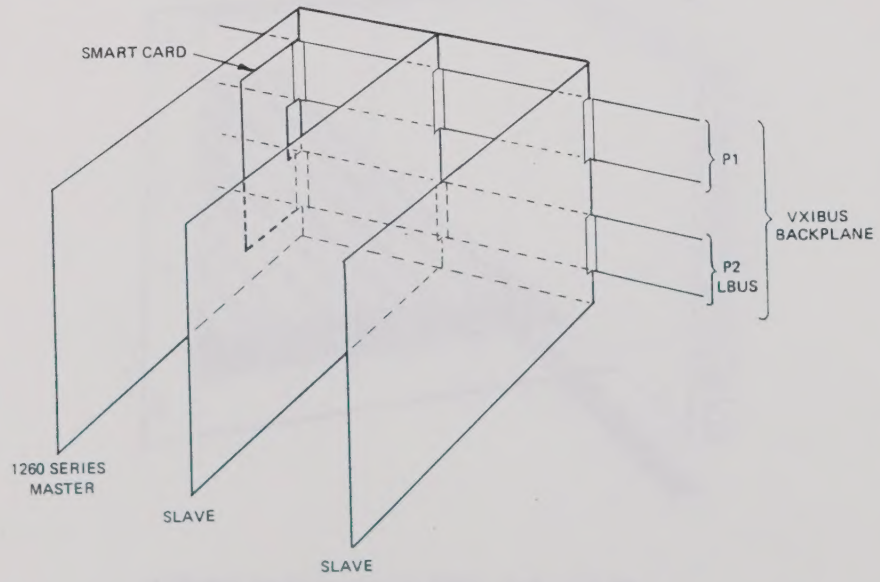

Figure 1-2, 1260 Series Smart card and Slaves

1.3 Options

1.3.1 Option 01 - 1260 Series Master (Smart Card).

1.3.1.1 Option 01 is required for use in all 1260 Series switching systems. This option acts as the switching system master and all other 1260 Series switching are slaved to it. It turns any number of switching modules into a message based VXIbus switching system.

1.3.1.2 The smart card is addressed over the VXIbus and all other switching modules resident in the VXIbus chassis are controlled by the smart card. Option 01 uses the local bus on the VXI P2 connector to provide scanning, delay and exclude capabilities.

1.3.1.3 The built-in-test features provided in the 1260 Series smart card include confidence checking, which monitors the state of each relay by monitoring a spare set of contacts or sensing coil current to ensure that the 1260 Series switching system configuration is as programmed.

1.3.1.4 Refer to Section 2 of this manual for the installation procedure for the 1260-01, and to Section 3 for the device dependant command set used to control the 1260 Series switching modules.

1.4 1260 Series Switching Module Specifications

1.4.1 1260-12 Relay Actuator

1.4.1.1 The 1260-12 Relay Actuator Module is a 20 channel double-pole, double-throw switching module.

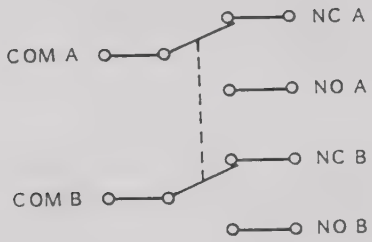

Specifications

User Connector:	Quick Disconnect
Maximum Switchable Voltage (Terminal-Terminal or Terminal-Chassis):	220 VDC, 220 VAC RMS
Maximum Switchable Current:	2 A DC or rms
Maximum Switchable Power per channel:	60 W DC, 62.5 VA AC
DC Performance	
Differential Thermal Offset:	< 3 μV per channel,
Path Resistance:	200 milliohm at 2A
Isolation:	$>10^9$ ohms

AC Performance

Capacitance	
Open Channel:	<25 pF
Channel-Chassis:	<25 pF
Hi-Lo:	<50 pF
Bandwidth, (-3 dB, 50 ohm termination):	35 MHz (typical)
Insertion Loss, (50 ohm termination):	<.20 dB at 100 kHz <.25 dB at 1 MHz <0.5 dB at 10 MHz
Crosstalk, (50 ohm termination):	<-75 dB at 100 kHz <-60 dB at 1 MHz <-40 dB at 10 MHz
Switching Time:	≤ 10 ms / channel

General

Cooling (Airflow Backpressure)	4.0 l/s, 0.5 mm H_2O
Power Requirements:	+5V: 0.4A (2.5A with Option 01 installed) +24V: 10 mA per relay
Weight:	1.174 kg (2.59 lbs) 1.315 kg (2.90 lbs)

1.4.2 1260-20 Power Module

1.4.2.1 The 1260-20 Power Module is a 20 Channel Double-pole, Single-throw power switching module.

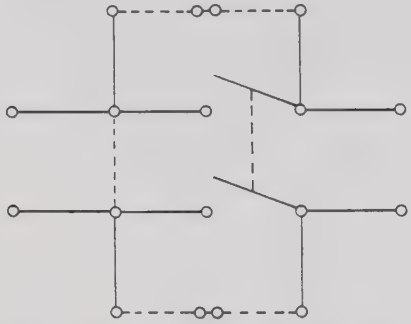

Model 1260-20. Twenty independent relays. One channel is shown, with provision for addition of series and shunt elements.

Specifications

Switch configuration:	20 DPST Relays
User Connector:	Positronics GMCT41FOE100JC
Maximum Switchable Voltage	250 VDC, 250 VAC RMS or 350 VAC pk

Maximum Switchable Current (DC or AC rms)

Per Channel:	8 A
Per Module:	30 A

Maximum Switchable Power

Per Terminal:	150 W DC, 1250 VA
Per Channel:	240 W DC, 2000 VA
Per Module:	900 W DC, 7500 VA

DC Performance

Path Resistance:	150 mΩ at 5A DC 50 mΩ Typical
Isolation (High-Low):	> 10^9 ohms

AC Performance:

Capacitance	
Open Channel:	<20 pF
Channel-Chassis:	<20 pF
Hi-Lo:	<50 pF
Bandwidth,: (-3 dB, 50 ohm termination)	30 MHz (typical)
Insertion Loss, (50 ohm termination):	<0.10 dB at 100 kHz <0.10 dB at 1 MHz <1.5 dB at 10 MHz
Crosstalk, (50 ohm termination):	<-60 dB at 100 kHz <-40 dB at 1 MHz <-20 dB at 10 MHz
Switching Time:	≤ 15 ms

Cooling Requirements:

Airflow:	4 litres / sec
Backpressure:	0.5 mm H_2O
Power Requirments (I_{Pm}):	+5 V = 2.5 A +24 V = 10 mA per relay
Weight:	1.14 Kg (2.51 lbs) without Option 01 (Smart Card) 1.30 Kg (2.875 lbs) with Option 01 (Smart Card)

1.4.3 1260-30 Signal Multiplexer / Scanner Module

1.4.3.1 The 1260-30 Signal / Multiplexer Module is a 1 x 40 multiplexer. It switches two lines per channel and has the capability of being configured as two 1 x 20 matrices, four 1 x 10 matrices or eight 1 x 5 matrices.

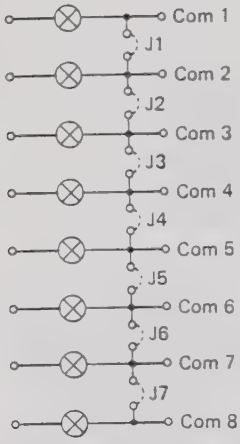

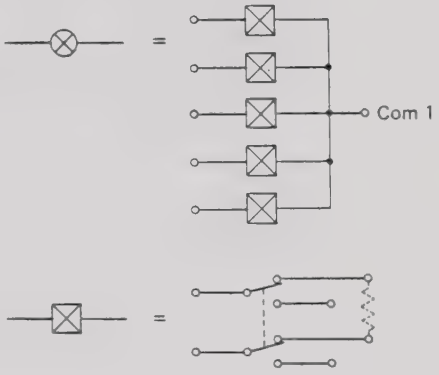

Specifications

Maximum Switchable Voltage (Terminal-Terminal or Terminal-Chassis):	220 VDC, 250 VAC RMS
Maximum Switchable Current:	2 A DC or RMS
Maximum Switchable Power per channel:	60 W DC, 62.5 VA AC

DC Performance

Isolation:	$>10^9$ ohms

AC Performance

Capacitance	
Open Channel:	<40 pF
Channel-Chassis:	<60 pF
Hi-Lo:	<280 pF

Bandwidth, (-3 dB, 50 ohm termination):		10 MHz (typical)
Insertion Loss, (50 ohm termination):		<0.1 dB at 100 kHz <0.1 dB at 1 MHz <1.3 dB at 10 MHz
Crosstalk, (50 ohm termination):		<-55 dB at 100 kHz <-45 dB at 1 MHz <-30 dB at 10 MHz
Switching Time:		≤ 4 ms / channel

General

Cooling (Airflow Backpressure)		4.0 l/s, 0.5 mm H_2O
Power Requirements:	+5V:	0.4A (2.5A with Option 01 installed)
	+24V:	10 mA per relay
Weight:		1.174 kg (2.59 lbs) 1.315 kg (2.90 lbs)

1.4.4 1260-40 Signal Matrix Module

1.4.4.1 The 1260-40 Signal Matrix Module is a 4 x 24 matrix. It switches two lines per channel and has the capability of being configured as two 4 x 12 matrices or an 8 x 12 matrix. The configuration is determined at the time of ordering, and is set in the factory. An expansion port is provided to allow the 1260-40 to be used as part of a larger matrix.

Switch Configurations

1260-40A: One 4x24 two wire matrix
1260-40B: One 8x12 two wire matrix
1260-40C: Two 4x12 two wire matrix

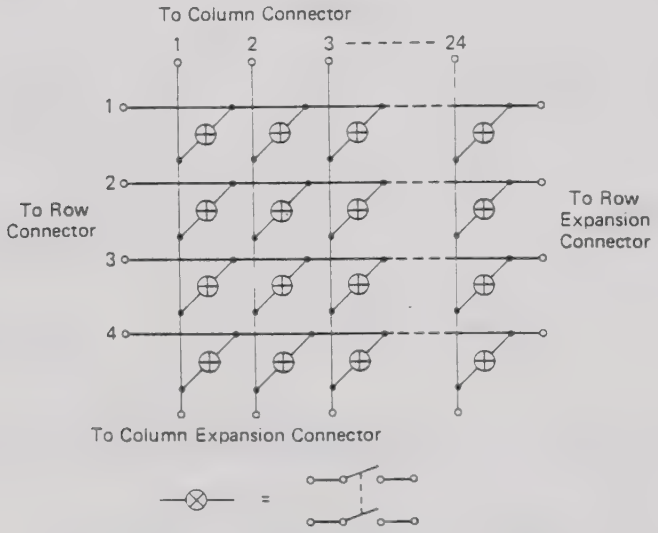

Model 1260-40. 4 x 24 two-wire matrix configuration with provisions for expansion connector.

Specifications

User Connector:	Quick Disconnect
Maximum Switchable Voltage (Terminal-Terminal or Terminal-Chassis):	110 VDC, 125 VAC RMS
Maximum Switchable Current per channel:	1 ADC, 1A RMS
Maximum Switchable Power per channel:	30 W DC, 62.5 VA AC

Path Resistance:	$<3\ \Omega$
Isolation Hi-Lo:	$>10^{10}$ ohms
Capacitance	
Open Channel:	<10 pF
Channel-Chassis:	<70 pF
Hi-Lo:	<40 pF
Bandwidth, 50 ohm termination:	30 MHz (Typical)
Insertion Loss, 50 ohm termination:	<.30 dB to 100kHz <1 dB to 1 MHz <3.00 dB to 10 MHz
Crosstalk, 50 ohm termination:	<-70 dB to 100 kHz <-50 dB to 1 MHz <-25 dB to 10 MHz
Switching Time:	2 ms

Cooling Requirements:

Airflow:	4 litres / sec
Backpressure:	0.5 mm H_2O

Power Requirments (I_{Pm}):

+5 V	2.5 A
+24 V	10 mA per relay
Weight:	1.174 Kg (2.59 lbs) without option 01 1.315 Kg (2.90 lbs) with option 01

1.4.5 1260-54 1 GHz Tree Multiplexer Module (Preliminary)

1.4.5.1 The 1260-54 provides six 1 x 4 tree multiplexers. Each channel has the capability of being terminated into an optional 50 ohm SMB terminator.

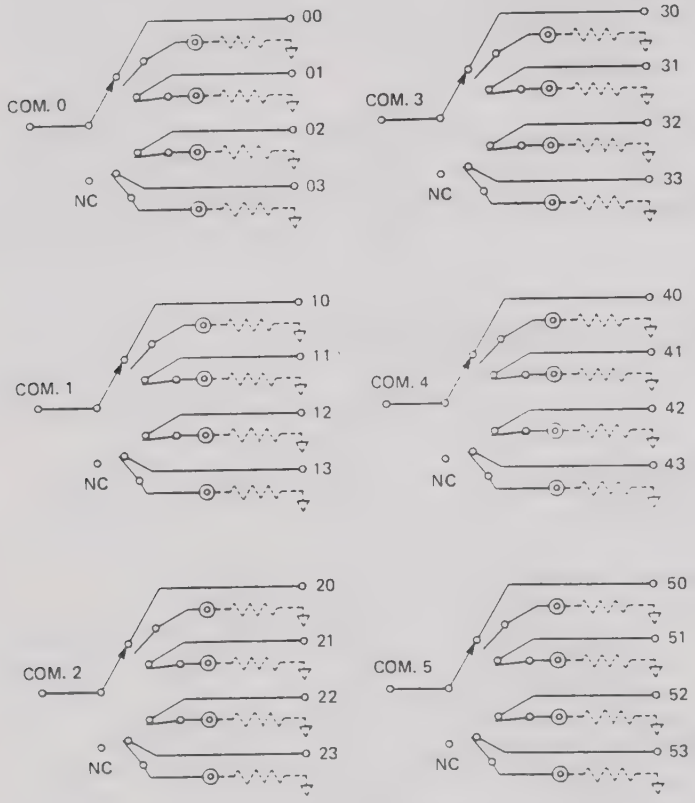

Specifications

User Connector:	SMC
Maximum Switchable Voltage (Signal to Ground):	30 VDC, 100 VAC RMS
Maximum Switchable Current per channel:	1.5 ADC, 1.5 A RMS
Maximum Switchable Power per channel:	60 W DC, 60 VA AC, 60 W RF Power

DC Performance

Path Resistance:	1Ω at 2A DC

AC Performance

Bandwidth, (-3 dB) 50 ohm termination:	1 GHz
Insertion Loss, 50 ohm termination:	<.50 dB at 100 MHz <1.5 dB to 500 MHz
Crosstalk across groups 50 ohm termination:	<-95 dB to 100 MHz <-80 dB to 500 MHz <-70 dB to 1 GHz
Isolation between Channels 50 ohm termination:	<-80 dB at 100 MHz <-65 dB at 500 MHz <-50 dB at 1 GHz
VSWR (50 ohm termination)	1.2 : 1 at 100 MHz 1.3 : 1 at 500 MHz 2.0 : 1 at 1 GHz
Switching Time:	<10 ms

Cooling Requirements:

Airflow:	4 litres / sec
Backpressure:	0.5 mm H_2O

Power Requirments (I_{Pm}):

+5 V	2.5 A
+24 V	10 mA per relay
Weight:	1.174 Kg (2.59 lbs) without option 01 1.315 Kg (2.90 lbs) with option 01

1.4.6 1260-14 Digital I/O module

1.4.6.1 The 1260-14 provides 96 TTL compatible digital I/O lines in 12 groups of 8 bits each. Each port of 8 bits can be individually controlled in the asynchronous mode, or be synchronous with other ports. Data appears at the 1260-14 outputs on a port by port basis.

Two handshake lines are available for the synchronous I/O mode of operation at a transfer rate of up to 1 kHz. The polarity of these lines is programmable in order to provide a flexible interface with user handshake signals.

Tri-state output control is provided for each port, under either software or hardware control.

The 1260-14 is programmable in several operating modes and data may be manipulated in either Hex, Decimal or Binary. Memory is available on the 1260 Series Smart card (Option 01) to allow buffered I/O operations.

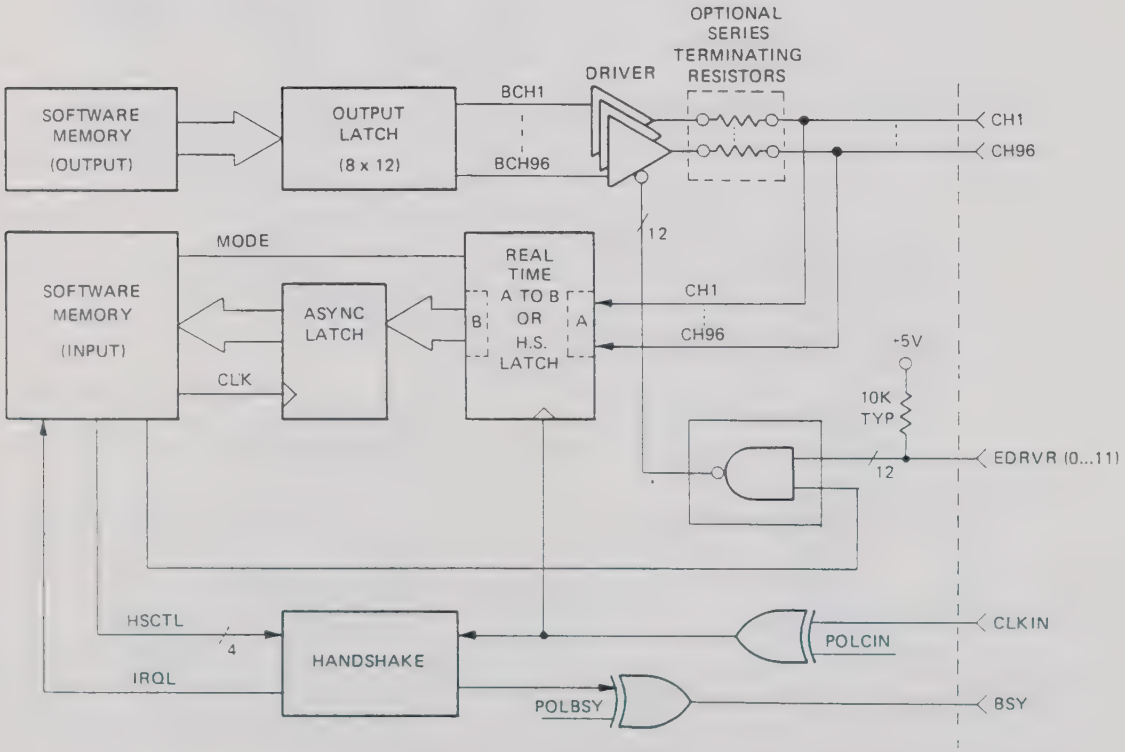

1260-14 Block Diagram

Specifications

User Connector:	Two 50 pin IDC and two 60 pin IDC
Number of I/O channels:	96
Configuration:	I/O lines selected as either input or output on an 8-bit byte basis
Data Rate:	Static to approximately 1 kHz
Operating modes:	1) Asynchronous 2) Synchronous 3) Mixed synchronous and asynchronous
Input / Output:	TTL compatible *
Output	
V_{out} (High):	≥ 2.4 V at -3 mA output
V_{out} (Low):	≤ 0.5 V at 48 mA output
Input	
V_{in} (High):	≥ 2.0 V
V_{in} (Low):	≤ 0.8 V
V_{ih} (Max):	5.25 VDC

* A CMOS-compatible version of the 1260-14 is available as an option

1.4.7 1260-13 Signal Switching / Relay Actuator Module

The 1260-13 Signal Switching/Relay Actuator module provides 40 independent channels of DPST switching. All pins of each channel are accessible through the front panel allowing each channel to function independently. Each channel features mounting holes to allow the addition of a series and shunt element such as arc suppressor for contact protection, filter, etc. It also provides mounting holes for jumpers to allow the configuration of custom relay switching networks. The module permits switching up to 2 amps and 220 volts DC or 250 volts rms per channel.

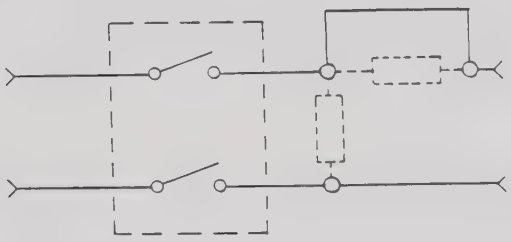

Specifications (per independent channel)

Switch Configuration	40 DPST Relays
User Connector	Positronics SMPL 4 FOTO LB
Maximum Switchable Voltage	220 VDC, 250 VAC rms
Maximum Switchable current Per Channel:	2 ADC or AC rms
Maximum Switchable power:	60 W or 62.5 VA
Path Resistance:	< 300 milliohms
Capacitance (per independent channel)	
Open Channel:	< 50 picofarads
Hi-Lo:	< 80 picofarads
Bandwidth, 50-ohm termination:	100 MHz
Isolation, 50-ohm termination:	0.2 dB to 100 kHz 0.3 dB to 1 MHz 0.5 dB to 10 MHz
Crosstalk, 50-ohm termination:	< -70 dB to 100 kHz < -50 dB to 1 MHz < -25 dB to 10 MHz
Switching Time:	10 milliseconds
Cooling Requirements	
Airflow:	4 liters/sec
Backpressure:	0.5 mm of Hg
Power Requirements (I_{pm})	+5 V = 2.5 A +24 V = 10 mA per relay
Weight	1.26 kg (2.77 lbs) without option 01 1.41 kg (3.11 lbs) with option 01

1.4.8 1260-35 Signal Multiplexer/Scanner Module

1.4.8.1 The 1260-35 Signal Multiplexer/Scanner Module is a 1 x 96 multiplexer. It switches two lines per channel and has the capability of being configured as two 1 x 48 multiplexers, four 1 x 24 multiplexers, eight 1 x 12 multiplexers or sixteen 1 x 6 multiplexers. The configuration is user selectable, but is supplied by the factory in the one 1 x 96 two-wire mode. Upon receipt of the unit, the analog bus and one-wire mode jumpers, W2, W11 and W20, should be removed if they are not to be used.

Specifications

Switch Configurations:

1260-35A:	Four-wire mode, any configuration.
1260-35B:	Two-wire mode, any configuration.
User Connector:	IDC, Quick Disconnect.
Maximum Switchable Voltage (Terminal-Terminal or Terminal Chasis):	110VDC, 125VAC RMS
Maximum Switchable current per channel:	1ADC, 1A RMS
Maximum Switchable Power per channel:	30 WDC, 62.5 VA AC
Path Resistance:	< 0.5 ohm (1 x 6 configuration) < 1.0 ohm (1 x 96 configuration)
Isolation Hi-Lo:	> 7.5×10^8 ohms
Capacitance	
Open Channel:	< 600pf (1 x 96 configuration)
Channel-Chassis:	< 60pf (1 x 6 configuration) < 200pf (1 x 96 configuration)
Hi-Lo:	< 50pf (1 x 6 configuration) < 600pf (1 x 96 configuration)
Bandwidth, 50 ohm termination:	> 50 MHz (1 x 6 configuration) > 15 MHz (1 x 45 configuration)
Insertion loss, 50 ohm termination: (1 x 6 configuration)	< .1 dB to 100KHz < .5 dB to 1MHz < 1 dB to 10MHz

Insertion loss, 50 ohm termination: (1 x 96 configuration)	< 3dB to 8MHz
Crosstalk, 50 ohm termination:	< - 90dB to 100KHz < - 70dB to 1MHz < - 23dB to 10MHz
Switching Time:	2ms

SECTION 2 INSTALLATION

2.1 Introduction

2.1.1 This section describes the unpacking and inspection, reshipment, installation and environmental requirements of the 1260 Series switching modules.

2.2 Unpacking and Inspection

2.2.1 Before unpacking the switching module, check the exterior of the shipping carton for any signs of damage. All irregularities should be noted on the shipping bill. Remove the instrument from its carton, preserving the factory packaging as much as possible. Inspect the switching module for any defect or damage. Notify the carrier immediately if any damage is apparent. Have a qualified person check the instrument for safety before use.

2.3 Reshipment Instructions

2.3.1 Use the original packing if it is necessary to return the switching module to Racal-Dana for calibration or servicing. The original shipping carton and the instruments plastic foam will provide the necessary support for safe reshipment. If the original packing is unavailable, wrap the switching module in plastic sheeting and use plastic spray foam to surround and protect the instrument. Reship in either the original or a new, sturdy shipping carton.

2.4 Option 01 Installation

2.4.1 To install Option 01 to a 1260 Series switching module, carry out the following procedure.

2.4.1.1 Remove the 1260 Series module top and bottom covers.

2.4.1.2 Remove the jumper board (Racal-Dana p/n 411951) fitted to connector P4 on the switching module. Note that for the 1260-40 has jumpers installed in the P4 connector that must be removed.

2.4.1.3 Align the 1260-01 card with the switching module, P3 to P3, P4 to P4, and press the 1260-01 and the switching module firmly together to mate the P3 and P4 connectors, taking care not to bend or otherwise damage any pins on the mating connectors. Refer to Figure 2-1 for the locations of P3 and P4. Secure the 1260-01 card to the switching module with the fasteners provided at the three standoff positions on the 1260-01.

2.4.1.4 The 1260 Series Master is fitted with the VXIbus defined SYSFAIL LED. To

install the LED, connect the cable supplied to the 3-pin plug in the Option 01 PCB. The cable and plug are configured such that correct operation is achieved whichever way the cable is connected at this end. The LED itself is inserted into the hole marked FAIL at the top of the module front panel from the outside of the module so that the LED pins point into the module. The cable supplied is fitted with a 2 pin connector at the LED end and is polarized to ensure correct installation.

2.5 Local Bus Daisychaining

2.5.1 All 1260 Series modules slaved to a master must be daisychained together along the VXI Local bus to allow communication between the 1260 Series Master and its slaves. The 1260 Series modules must also be isolated from the rest of the VXI modules on the local bus. The daisychaining of the Master and Slaves is implemented by the jumper board fitted to connector P4 on the switching modules and closing the switches fitted to the underside of the switching module. The jumper board connects the local bus to the switching module from the left and the switches connect the module to the local bus on the right of the module. The 1260 Series module fitted to the rightmost slot used must have all switches open to isolate the 1260 Series group from the rest of the VXI modules using the local bus. Note that the 1260-40 has jumpers in positions E125 - E136 instead of DIP switches

2.6 Interrupt Level and Logical Address setting

2.6.1 To set the 1260-01 logical address, set switch SW1 on the 1260-01 board to the binary equivalent of the logical address selected. For SW1, a switch in the OFF position corresponds to binary 1 and the ON position corresponds to binary 0. Switch 1 on SW1 corresponds to the most significant digit and switch 8 corresponds to the least significant digit. Logical addresses in the range 0 to 255 are permitted. Refer to Figure 2-1 for the location of SW1.

NOTE

The 1260-01 logical address is set to 15 by Racal-Dana before shipment.

2.6.2 All switching modules resident in a VXIbus chassis must have unique addresses. Incorrect operation of the switching system will result if two or more switching modules are set to the same module address.

2.6.3 To set the 1260-01 interrupt level, set switches 1, 2 and 3 on SW2 on the 1260-01 board to the binary equivalent of the interrupt level selected. For

SW2, a switch in the OFF position corresponds to binary 1 and the ON position corresponds to binary 0. Switch 1 on SW2 corresponds to the least significant bit and switch 3 corresponds to the most significant bit. Interrupt levels in the range 0 to 7 are permitted. Switch 4 is not used. Refer to Figure 2-1 for the location of SW2.

NOTE

The 1260-01 interrupt level is set to 2 by Racal-Dana before shipment.

2.6.4 If only one switching module is to be installed in the VXIbus chassis, for the 1260-40, remove the twelve jumpers fitted at E125 to E136 and for all other 1260 Series modules open all of the DIP switches fitted to the underside of the module PCB.

2.6.5 Replace the switching module covers. Replacement is the reverse of the removal procedure.

NOTE

Any 1260 Series switching card may have Options 01 fitted and be designated as the Master.

2.7 Switching Module Address Setting

2.7.1 To set a switching module address, carry out the following procedure.

2.7.1.1 For the 1260-40 ONLY, remove the switching module covers, as detailed in Section 2.4.

2.7.1.2 Set switch SW1 on the switching module to the binary equivalent of the address. Switches 1 to 4 are used to set the switching module address, with switch 4 the least significant bit and switch 1 the most significant. The OFF positions for SW1 correspond to binary 0 and ON positions correspond to binary 1. Addresses in the range 1 to 12 are permitted. Refer to Figure 2-2 for the location of SW1 on the switching module PCB or to Figure 2-3 for the location of SW1 on the 1260-40.

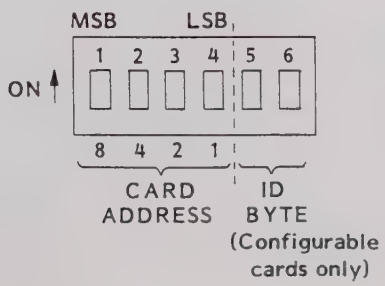

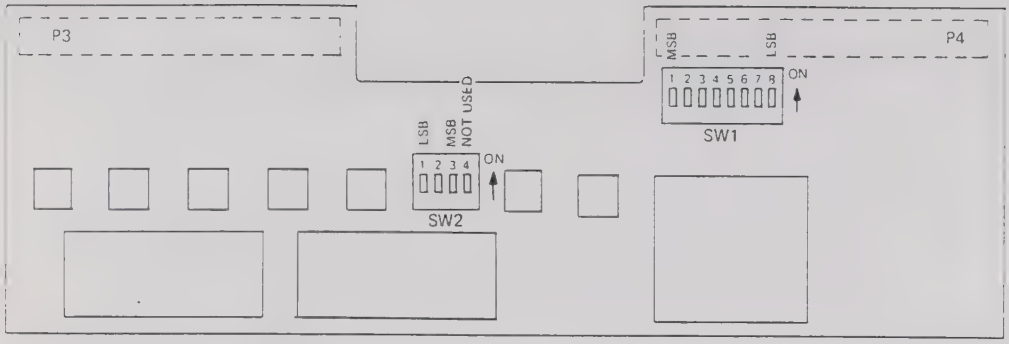

Figure 2-1, 1260-01 Smart card

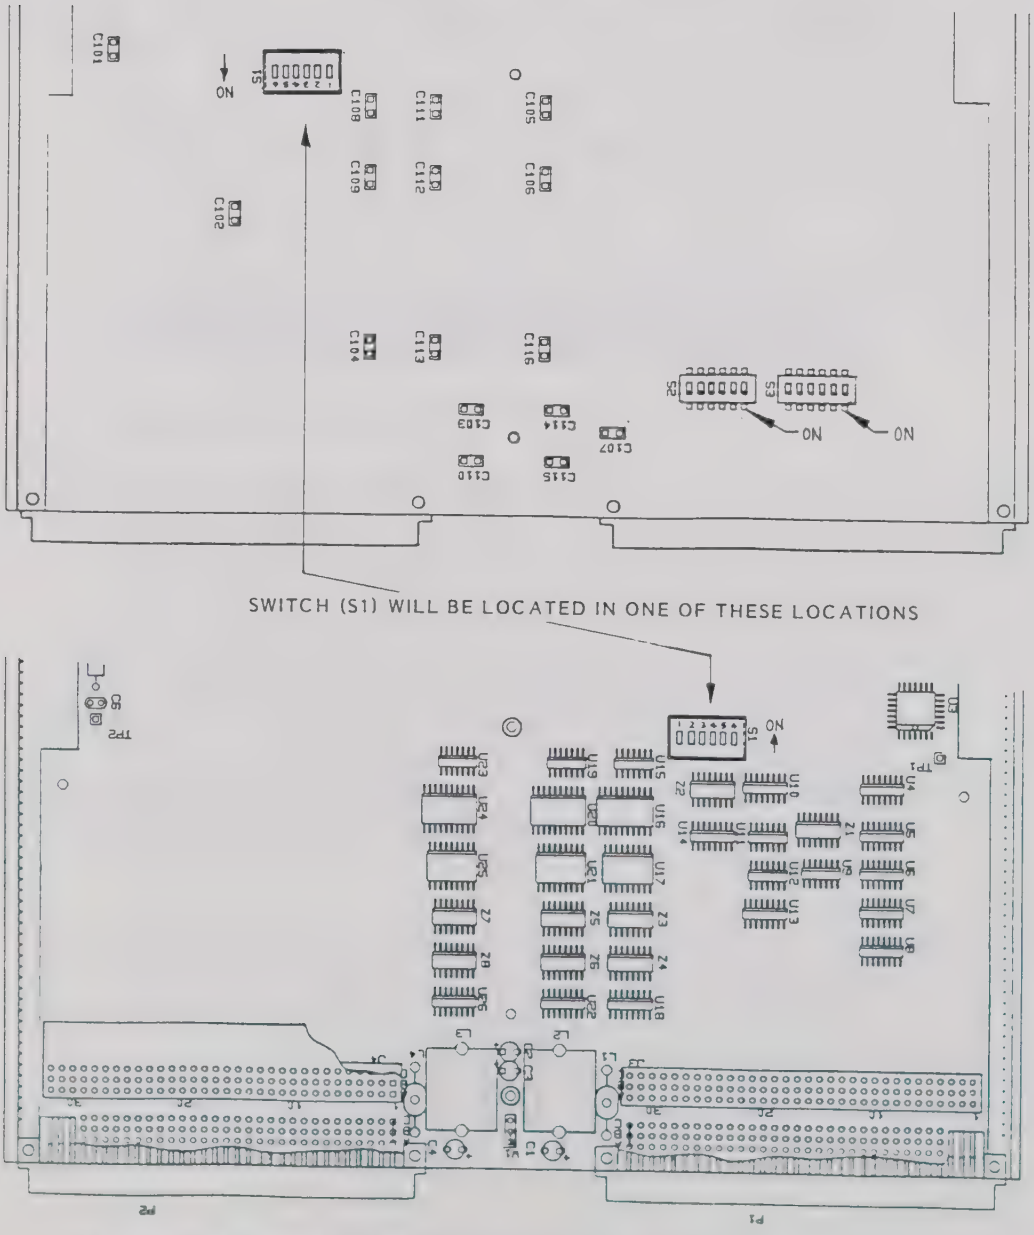

Figure 2-2, Switching Module Connector and Switch Locations

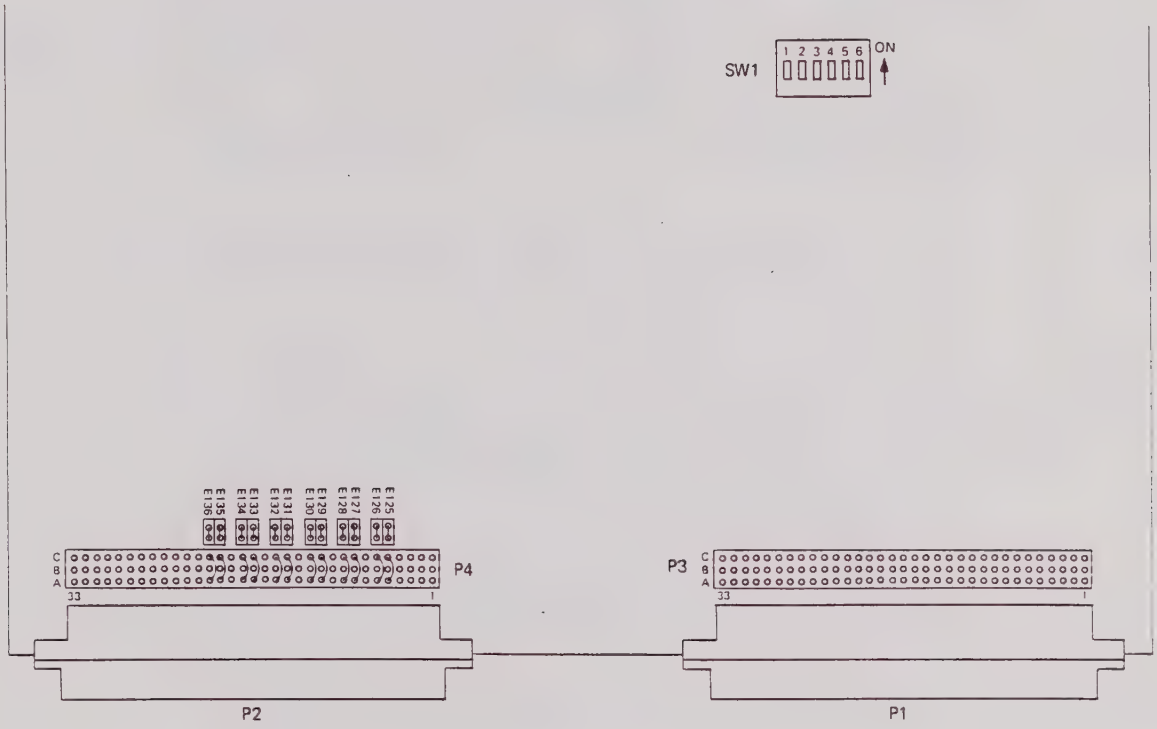

Figure 2-3, 1260-40 Switch, Connector and Jumper Locations

NOTE

The address set at switch SW1 on the switching module controls the value of the card address that the switching module will respond to. The OPEN and CLOSE statements that use the card address are detailed in Section 3.4 of this manual. Example:- For a switching module to respond to the command CLOSE 5.1205, the address of the switching module must be set to 5.

2.7.1.3 Several 1260 Series modules are capable of more than one configuration and respond to different command codes in their various configurations. Switches 5 and 6 on SW1 may be used to select the command code sets that these 1260 Series modules respond to. Refer to the module specific syntax section for the 1260 Series module in question for the details of how to set these switches for each module.

2.7.1.4 For the 1260-40 ONLY, replace the switching module covers. Replacement is the reverse of the removal procedure.

2.8 LBUS Lockout Keys

2.8.1 The VXIbus defined LBUS lockout keys are designed to prevent the connection together of incompatible logic families. They are attached to the exterior of the 1260 Series module at the top of the module front panel.

2.8.2 Note that all 1260 Series modules shipped from the factory are supplied with all three of these keys. Because their use is application dependent, it is the users responsibility to configure each 1260 Series module with the correct lockout key unless they are ordered specifying which modules are to be the leftmost (Master) module, the rightmost module in the group and the modules between the leftmost and rightmost modules.

2.8.3 Racal-Dana implement the LBUS lockout scheme in one of three ways for each 1260 Series module, each of which is TTL-compatible, as follows:

2.8.3.1 VXIbus defined "C" key. Racal-Dana part number 455541

This LBUS Lockout key is fitted to the leftmost 1260 Series module in the group, (i.e) the 1260 Series Master. Its presence means "This module does not connect to the LBUS to the left of the module. It is connected to the LBUS to the right of the module and this connection is TTL-compatible."

2.8.3.2 VXIbus defined "A" key. Racal-Dana part number 455542

This LBUS Lockout key is fitted to the rightmost of the 1260 Series modules installed in a VXIbus chassis. Its presence means "This module is not connected to the LBUS to the right of this module. It is connected to the LBUS to the left of the module and this connection is TTL-compatible."

2.8.3.3 VXIbus defined "A/C" key. Racal-Dana part number 455540

This LBUS Lockout key is fitted to all 1260 Series modules that are NOT the leftmost or the rightmost module in the 1260 Series group. Its presence means

"This module is connected to the LBUS both to the left and to the right and this connection is TTL-compatible."

2.8.3.4 A special case arises if only one 1260 Series module is to be installed in a VXIbus chassis. This configuration requires that the Option 01 Smart Card be installed and that the LBUS be open circuited to the right of the module. This will not require any use of the LBUS and so no LBUS Lockout keys are required.

2.8.4 Refer to Figures 2-3, 2-4 and 2-5 for illustrations of the three LBUS Lockout keys used and to Figure 2-6 for an illustration of a 1260 Series Master / Slave configuration.

Figure 2-3, LBUS Lockout "C" key

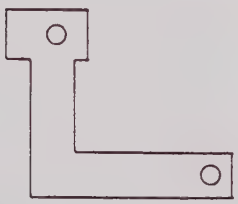

Figure 2-4, LBUS Lockout "A" key

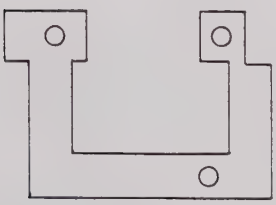

Figure 2-5, LBUS Lockout "A/C" key

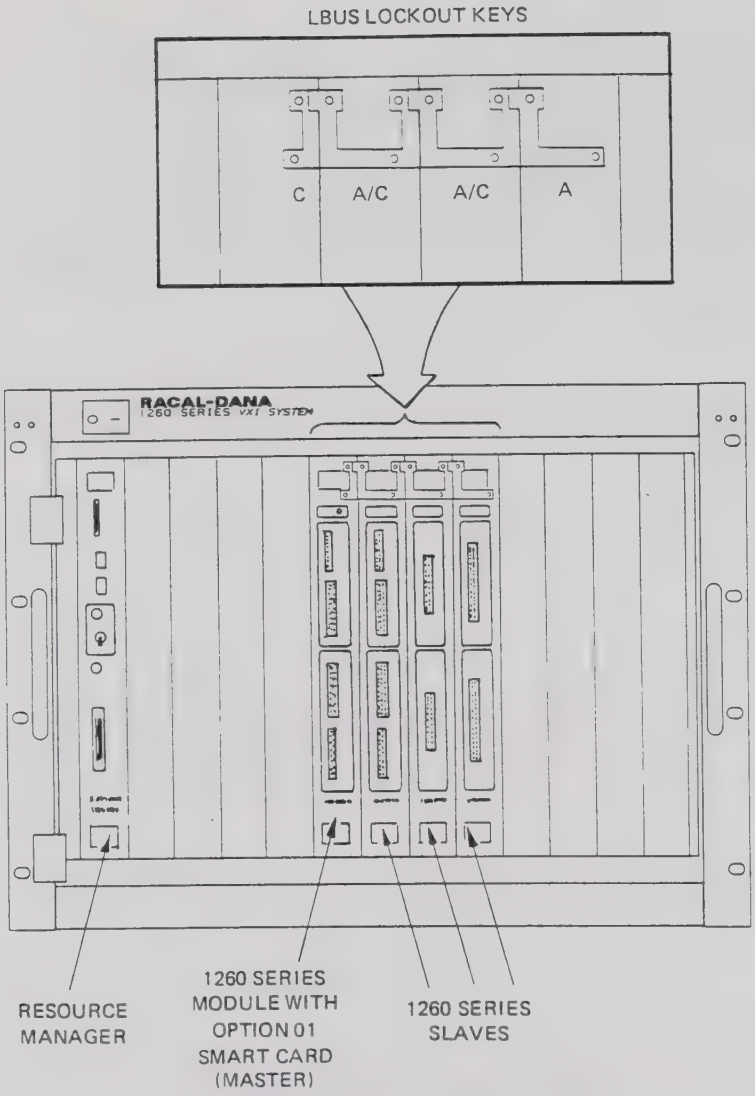

Figure 2-6, 1260 Series Master / Slave configuration

2.8.5 LBUS Lockout Key Installation

2.8.5.1 In order to accomodate the VXIbus defined minimum thickness of the LBUS Lockout keys and the clearance provided around the 1260 Series module ejector handle, two LBUS Lockout keys must be fitted on top of each other to each module.

2.8.5.2 To install the A and C keys on a 1260 Series module, align the screw holes in the Lockout keys with the appropriate holes in the 1260 Series module front panel. Fit the two screws required and secure the Lockout keys to the module front panel.

2.8.5.3 To install A/C Lockout keys to the 1260 Series module, the module ejector handle must be in the unejected position. The first key may be pushed around the ejector handle and aligned with the front panel screw holes. This takes up most of the clearance under the ejector handle, preventing the second Lockout key from being installed. To provide the necessary clearance, move the first Lockout key away from the module body and slide the second key underneath the first key and around the ejector handle.

2.8.5.4 To secure the A/C Lockout keys to the 1260 Series module, align the Lockout keys screw holes with the screw holes in the module front panel. Install two screws in the two screw holes at the top of the module front panel and tighten the two screws. Move the ejector handle to the ejected position and install a third crew in the screw hole now made accessible.

2.9 Switching Module Chassis Installation

2.9.1 Before attempting installation of the 1260 Series switching module, carry out a visual inspection of the switching module. Pay particular attention to connectors P1 and P2 on the rear of the switching module, and ensure that there are no bent, damaged or missing pins. Repair any damage to the switching module before proceeding.

2.9.2 Before installing the switching system Master, the VXIbus specification defined IACKIN / IACKOUT daisy chain connection for the chassis slot that the Master will be resident in must be open circuited. This is acomplished in the Racal-Dana 1261 or 1262 chassis by opening the switch fitted on the daisychain. The switch used is the higher of the two switches on the lower switchbank to the left of the slot the Master is to be fitted to. Note that other vendors may choose to implement the daisy chain with either switches or jumpers. Refer to Figure 2-7 for an illustration of the LBUS daisychaining required by a 1260 Series Master and Slaves.

2.9.3 If more than one switching module is to be installed in the VXIbus chassis, the switching module with the 1260-01 smart card installed must be fitted at the leftmost position of all switching modules to be installed in the chassis. The rightmost switching module must have the twelve jumpers mounted on the jumper PCB installed removed from positions E125 to E136 on the switching module PCB or all DIP switches opened. Refer to Figure 2-2 for the location of the jumpers fitted at positions E125 to E136 and to Figure 2-3 for an illustration of the overall LBUS interconnection scheme.

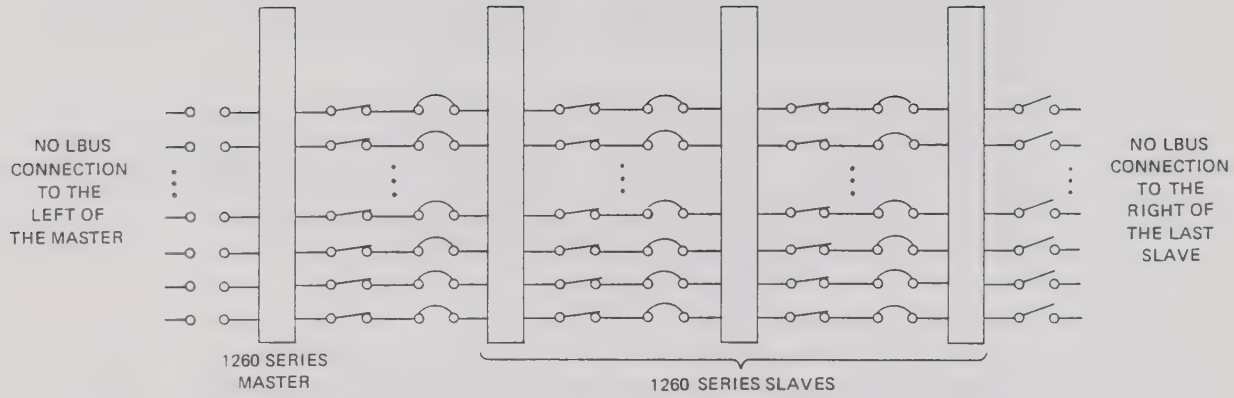

Figure 2-7, 1260 Series Master and Slave LBUS Interconnections

2.9.4 To install the 1260 Series switching module in a C size, VXI mainframe, ensure that the module has rear connector P1 oriented to mate with the corresponding connector on the mainframe backplane. Align the module with the guides for the slot selected and slide the module into the mainframe. Push the module home to connect the module to the mainframe. Secure the module to the mainframe with the captive screws provided at the top and bottom edges of the module.

2.9.5 Power up the mainframe. Ensure that the SYSFAIL LED on the 1260 Series Master switching module front panel lights and extinguishes after a few seconds to show that the switching module has passed its power up self test. The 1260 Series switching module is now ready for use.

2.9.6 To remove the 1260 Series switching module from the VXI mainframe, release the captive screws that secure the module to the mainframe. Use the plastic levers provided on the top and bottom edges to eject the 1260 Series switching module from the mainframe. Pull the switching module along the guides provided and out of the mainframe.

SECTION 3 OPERATION

3.1 Introduction

This Section supplies the information necessary to operate 1260 Series switching modules housed in a VXIbus chassis. It describes the command codes and module specific syntax needed to control 1260 Series Master and Slave switching modules and the formats for the character strings output by the 1260 Series switching modules.

3.2 1260 Series Input Format

3.2.1 The 1260 Series Master is capable of recognizing any of the device dependant commands given in Section 3.4 from the first two characters of the command, with the exception of the READ, RESET and RECALL commands, which may be recognised from the first three characters of the command. The 1260 Series Master will interpret a command in the same way if a command string supplies the first two (or three) or more characters of the command string.

3.2.2 When used with a GPIB/VXI resource manager, the 1260 Series Master will respond to the following terminators.

GPIB line EOI asserted

line feed

carriage return, line feed

carriage return, line feed with EOI asserted

3.3 1260 Series Output Format

3.3.1 The 1260 Series Master switching module will output character strings in response to the PDATAOUT, PSETUP and YERR commands. These character strings consist of one or more lines of information that will be terminated by the carriage return, line feed pair with the GPIB EOI line asserted as determined by the EOI <0|1> command. This means that the character string output by the 1260 Series Master may be required to be read repeatedly until the final line of the output is read. The final character string output by the 1260 Master is <module address>.END, where <module address> is the <module address> of the last switching module to be described in the case of the PDATAOUT and PSETUP commands. The character string output in response to the YERR command is a single line.

3.3.2 The character strings output in response to the PDATAOUT and PSETUP commands consist of multiple lines of the form:

<module address>.<header> or <module address>.<module specific syntax>

where <module address> is the address set on switch SW1 on the switching module PCB, value 1 through 12. The value of <module address> and the decimal equivalent of the binary value set on SW1 must be the same for the switching module to respond correctly to any device dependant commands addressed to it. Note that no two switching modules are permitted to have the same value of <module address> in a VXIbus chassis.

<header> describes the switching module type.

<module specific syntax> describes the closed relay paths of the present configuration of the switching modules.

NOTE

The PSETUP command returns information on the configuration of the 1260-01 Master. The 1260-01 will return a value of 000 for <module address>. This does NOT correspond to the address of the VXI resource manager card resident in Slot 0 of the VXI chassis or the 1260-01 logical address.

3.3.3 When outputting a character string to the VXI controller, the 1260 Series Master will output a carriage return, line feed pair. If the resource manager is a VXI / GPIB interface, then the resource manager will output a carriage return, line feed with GPIB EOI asserted. Note that in the case of the output string consisting of multiple lines, the EOI line may be asserted at the end of each line or at the end of the character string, as determined by the EOI <1|0> command.

3.4 1260-01 Device Dependant Command Codes

3.4.1 CLOSE <module address>.<module specific syntax> [;<module address>.<module specific syntax>]....

3.4.1.1 This command causes one or more connections on a switching module to close.Any number of connections in more than one slot may be closed in one CLOSE statement if the <module address>.<module specific syntax> sections are concatenated using a semi-colon (;). Refer to Section 3.5 for the <module specific syntax> to be used for each 1260 Series switching module.

3.4.2 CNF <ON|OFF>

3.4.2.1 This command turns the 1260 Confidence test on or off. The Confidence test checks that the state of all relays is as programmed and causes the 1260 Series Master to assert the VXI Request True line after each OPEN or CLOSE command is processed if an error is detected. A character string detailing the failure may be obtained from the 1260-01 in response to the YERR command. The character string that the Confidence test causes the 1260 Master to generate is <module address>.51. <module address> is a three digit number that is the address of the module slaved to the 1260-01. 51 is the error code associated with a confidence test failure. A GPIB / VXI resource manager will cause the assertion of the GPIB SRQ line in response to the Request True assertion. The default (power-up) state for the confidence test is OFF.

3.4.3 DLY <value>

3.4.3.1 This command is used to cause a delay between the last relay closure after a command string is processed and the SYNC OUT pulse. <value> may be 0-655 ms, and is set to zero at power up.

3.4.4 EOI <0|1>

3.4.4.1 EOI 0 causes the GPIB EOI line to be asserted by the VXI resource manager at the end of each line of a multi line data output by the 1260 Series Master if a VXI/GPIB resource manager is in use. EOI 0 is the default (power-up) state.

3.4.4.2 EOI 1 causes the GPIB EOI line to be asserted by the VXI resource manager only at the last character of a data string output by the 1260 Series Master if a VXI/GPIB resource manager is in use.

3.4.5 EQU <equate list>

3.4.5.1 This command causes any OPEN, CLOSE or TRIG/SCAN commands addressed to any switching module on the <equate list> to be carried out for all switching modules on the <equate list>. All modules on the list are required to be identical.

3.4.5.2 The <equate list> is made up of the slot numbers of the switching modules that are to be equated separated by a semi-colon (;). Continuous groups of switching modules may be entered onto the <equate list> by entering the first and last modules to appear on the list joined by a hyphen (-). More than one equate group may be set up in a single EQU statement by separating the

equate groups with a comma (,).

Example: EQU 1;3-6,2;9-11

This command will equate slots 1, 3, 4, 5 and 6 as one equate group and slots 2, 9, 10 and 11 as another.

NOTE

All switching modules must be of the same type to be accepted in the same equate list or the 1260 Master will generate an error.

NOTE

Use of the EQU command will overwrite all previously entered <equate list>s. An <equate list> of 0 may be used to clear all equate groups.

NOTE

When an <equate list> is entered, all switching modules on the list adopt the state of the first module to appear on the list.

3.4.6 EXCL <exclude list>

3.4.6.1 This command causes the 1260 Master to regard the channel closures specified in the <exclude list> as mutually exclusive. A channel is described in the <exclude list> by the slotnumber of a switching module and module specific syntax to describe the relay closures in a channel. Refer to Section 3.5 for the module specific syntax of the various switching modules available. More than one <exclude list> may be specified in an EXCL statement by separating the Exclude groups with the letter E and a semi-colon (E;). Continuous groups of switching modules may be entered onto the <exclude list> by entering the first and last modules to appear on the list joined by a hyphen (-).

NOTE

Use of the EXCL command will overwrite all previously entered <exclude list>s. An <exclude list> of 0 may be used to clear all exclude groups.

3.4.7 OPEN <module address>.<module specific syntax> [;<module address>.<module specific syntax>].....

3.4.7.1 This command causes one or more connections on a switching module to open. Any number of conections in more than one slot may be opened in one OPEN statement if the <module address>.<module specific syntax> sections are concatenated using a semi-colon (;). Refer to Section 3.5 for the <module specific syntax> to be used for each 1260 Series switching module.

3.4.8 PDATAOUT <module address>;<module address>.....

3.4.8.1 This command causes the specified switching modules to output the present state of the relays contained in those modules. An example character string output by the 1260 Series Master is given below.

000.Model 1260 Universal Switch Controller
000.OS Rev 1.2 1260
015.1260-40A 4 x 24 signal matrix
015.0219
000.END

This example shows that a 1260 Series controller with an operating system Rev. level of 1.2 is present at module address 000. There is also a 1260-40A switching module present at address 015 and row 2 of the switching matrix is connected to column 19.

NOTE

The switching module configuration is described in the same format as is required by the OPEN and CLOSE commands.

NOTE

The address obtained for the Model 1260 Universal Switch Controller is NOT the address of the slot 0 resource manager or the logical address of the 1260-01. It is equivalent to the module address of a switching module and is always 000.

NOTE

The character string output by the 1260 Master is made up of multiple lines and contains carriage-return, line-feed pairs. These may terminate the output string and so the PSETUP output string must be read repeatedly until all lines of the output have been read for all modules specified. The final line output by the 1260 Series Master is <module address>.END where <module address> is the VXI chassis slot that the last 1260 Series module described is resident.

3.4.9 PSETUP <module address>[;<module address>]....

3.4.9.1 This command causes the 1260 Master to output a character string describing the setup of the switching system master and switching modules. An example of a character string obtained in response to a PSETUP command is given below.

000.Model 1260 Universal Switch Controller
000.OS Rev 1.2 1260
000.CNF OFF
000.DLY 0
000.EOI 0
000.EQU
000.EXCL
000.SCAN ON
000.SLIST 0
000.SRQMASK 40
000.SYNC 8
000.TTLTRG 0
000.PUPRCL OFF

NOTE

The character string output by the 1260 Master is made up of multiple lines and contains carriage-return, line-feed pairs. These will terminate the output string and so the PSETUP output string must be read repeatedly until all lines of the output have been read for all modules specified. The final line output by the 1260 Series Master is <module address>.END where <module address> is the VXI chassis slot that the highest 1260 Series module address present in the VXI chassis.

3.4.10 PUPRCL <ON|OFF>

3.4.10.1 This command enables and disables the automatic recall of non-volatile memory location 1 at power up. The configuration in non-vol location 1 is stored by the use of the STORE command. Refer to Section 3.4.18 for details of the STORE command.

NOTE

If non-volatile location 1 is cleared and PUPRCL is ON, no recall will take place at power up.

3.4.11 READ <module address>.<portnumber>

where <module address> ::= 1|2|3|4|5
<portnumber> ::= 0|1|2

3.4.11.1 This command is supported by 1260 Series digital and breadboard cards only. It allows the data appearing at one of the 1260 Series digital or breadboard cards eight bit ports to be read by the system controller via the VXIbus.

3.4.12 RECALL <non-vol location>
where <non-vol location> = 1|2|.....|51

3.4.12.1 This command will set all switching modules in the VXI chassis to the configuration stored in the non-volatile location specified. The physical location of the modules in the chassis slots is unimportant as long as the same type switching modules are at the same module addresses as when the switching system configuration was stored and the rules governing 1260 Series module locations are observed. Note that an error will be generated if an attempt is made to RECALL a memory setting into a switching system configuration that differs from the configuration present when the memory setting was stored. An error will also be generated if an attempt is made to RECALL a memory setting from an empty location.

3.4.13 RESET

3.4.13.1 This command causes all master and slave switching modules to be set to their de-energised states.

3.4.14 SCAN <ON|OFF|CONT>

3.4.14.1 The SCAN ON command causes the 1260 Master to open and close the channels as specified in the scan list in turn. Each channel is closed on receipt of a trigger signal from one of the VXIbus TTLTRG lines or the VXIbus trigger command is received. The 1260 Series Master will scan the channels until it reaches a break point or the SCAN OFF command is received. Refer to Section 3.4.16 for further details of the scan list.

3.4.14.2 The SCAN CONT command causes the 1260 Series Master to resume scanning the channels on the scan list after pausing at a break point in the scan list. The 1260 Series Master will continue to scan until it reaches a break point on the scan list or it receives the SCAN OFF command.

3.4.14.3 SCAN OFF causes the 1260 Series to stop scanning. Scanning may only be resumed by the use of the SCAN ON command.

NOTE

The SCAN command may also be used to recall non volatile memory settings in turn. Refer to Section 3.4.16 for further details of the scan list.

3.4.15 SETUP <module address>.<seqmode>

3.4.15.1 This command is used to control the sequence in which a switching modules relays are opened and closed. The sequence modes (<seqmode>s) are IMM (Immediate), BBM (Break-before-make) and MBB (Make-before-break).

3.4.15.2 The Immediate (IMM) sequence mode will cause the opening and closing of switching module channels as quickly as possible, and the sequence of opening and closing is indeterminate. Care must be taken to avoid potentially damaging connections while the switching module is in a state of transition, (e.g.) short circuiting power supplies to ground, connecting high power outputs together or applying excessive power to low impedance inputs.

3.4.15.3 The Break-before-make (BBM) sequence mode causes existing channel closures to be opened before new channel closures are made. BBM is the default (power up) state.

3.4.15.4 The Make-before-break (MBB) sequence mode causes new channel closures to be executed before existing channel closures are opened.

3.4.16 SLIST <scan list>

where <scan list> is <module address>.<channel> [;<module address>.<channel>];....

3.4.16.1 This command enters the slot and channel information to be used in the scan list while in the SCAN mode.

3.4.16.2 The range of values of <module address> is from 1 to 12. Switching channels are closed if <channel> is a module specific statement. If a non volatile memory setting is to be recalled, <channel> must have an integer value between 1 and 51.

3.4.16.3 A break point in the scan list will cause the 1260 Series Master to stop scanning after opening the previous channel. A break point in the scan list is defined as the character zero (0), delimited by semi-colons (;0;). Scanning is resumed only after receipt of the SCAN CONT or SCAN ON commands. SCAN CONT will cause the 1260 Series Master to resume scanning from the scan list break point it was paused at and the SCAN ON command will cause the 1260 Series Master to resume scanning from the beginning of the scan list.

3.4.16.4 If the 1260 Series Master pauses at a scan list break point, bit 4 of the GPIB status byte, Scan list at break point, is asserted and SRQ asserted if the SRQMASK permits. Refer to Section 3.4.17 for further details of the SRQMASK command.

3.4.17 SRQMASK <32|33.....254|255>

3.4.17.1 This command controls the circumstances under which the 1260 Series Master will cause a VXI/GPIB resource manager to assert SRQ by masking the 1260 Series Master status byte. The mask value, <integer> is the decimal equivalent of the binary weighted eight bit byte ANDED with the GPIB status byte, (i.e.) if a bit in the mask is a logic 1, then the assertion of the corresponding bit in the status byte will cause the 1260 Series Master to assert SRQ. Refer to Table 3-2 for the bit assignments of the 1260 Series GPIB Status byte. SRQ is asserted by asserting the VXI Request True line to the VXI resource manager. Note that the status byte also details the possible responses of the 1260-01 to a GPIB serial poll.

Bit Number	Description
1 (lsb)	Unused
2	Unused
3	Unused
4	Scan list at break point
5	Ready
6	Programming error
7	Service requested
8 (msb)	Unused

Table 3-2, 1260 Series Master Status Byte

3.4.17.2 The Programming error bit cannot be masked and so the range of values for valid SRQMASKs is 32 - 63, 96 - 127, 160 - 191 and 223 - 255.

3.4.17.3 The power up (default) value of the SRQMASK is 40, (i.e.) Programming error or Scanlist at break point will cause SRQ to be asserted.

3.4.18 STORE <non-vol location> where <non-vol location> = 1|2|.....|50

3.4.18.1 This command will store the present state of all switching modules resident in the VXI chassis in the non-volatile memory location specified.

3.4.18.2 A STORED configuration must be recalled into the same module set as was stored. Any changes in module location will be disregarded as long as the same module types are at the same module addresses as were stored.

3.4.19 SYNC <0|1|2|3|4|5|6|7|8>

3.4.19.1 The commands SYNC <0|1|2|3|4|5|6|7> connect the selected SYNC output to the corresponding TTLTRG line. SYNC 8 disconnects the SYNC output from the TTLTRG lines and is the default (power up) state.

3.4.20 TEST 0.<testnumber> where <testnumber>::=1|2|3

3.4.20.1 This command causes the 1260 Series Master to carry out a self test. The possible tests are:

1 - Non-destructive RAM test
2 - EPROM checksum test
3 - Non-destructive non-volatile memory test

3.4.20.2 On commencing a test, the Ready bit of the status byte is reset until the test is completed.

3.4.21 TRIG <ON|OFF>

3.4.21.1 This command enables or disables the VXI TTLTRG trigger inputs of the 1260 Series Master.

3.4.22 TTLTRG <0|1|2|3|4|5|6|7|8>

3.4.22.1 Commands TTLTRG <0.....7> cause the connection of one of the eight TTLTRG lines to a selected 1260 Series switching card. TTLTRG 8 deselects the TTLTRG line selected without affecting the TRIG <ON|OFF> condition of the 1260 Series switching card.

3.4.23 WRITE <module address>.<portnumber>,<data>

where <module address> ::= 1|2|3|4|5
<portnumber> ::= 0|1|2
<data> 0|1|2|3|.....254|255

3.4.23.1 This command is supported by 1260 Series digital and breadboard cards only. It allows the system controller to write data to one of the three eight bit ports on a 1260 Series digital or breadboard module.

3.4.24 YERR

3.4.24.1 This command causes the master switching module in a system to transmit the location (<module address>) of the most recent error and a two digit number (<errornumber>) that describes the error. Refer to Table 3-1 for a listing of all possible values of <errornumber> and the corresponding error descriptions.

<errornumber>	Error Description
0	No error
1	Invalid module number specified
2	Specified module not installed
3	Invalid channel number specified
4	Invalid port number specified
5	Command syntax error
6	Read value larger than expected
7	Function not supported by module
8	Expected line terminator not found
9	Valid command not found
20	Exclude list too long
21	Channel entered on exclude list twice
22	Module doesn't allow exclude function
23	Scan list too long
24	Module doesn't allow scan
25	Equate list too long
26	Module entered on scan list twice
27	Incompatible modules equated or digital modules invalid
31	SRQMASK invalid
40	Number invalid as a test number
41 *	RAM test failure
42 *	ROM test failure
43 *	Non-vol memory test failure
44 *	Incompatible operating system EPROMS, software revisions
45 *	Self-test CPU or related circuitry failure
46 *	Self-test 24 V supply failure
47 *	Self-test timer chip failure
48 *	Insufficient RAM for option module
49 *	Checksum error reading from option module EPROM
50 *	Option module EPROM incompatible with CPU EPROM
51	Failed confidence test
55	Error STOREing to non-vol memory
56	Error RECALLing from non-vol memory
57	Non-vol storage location number out of range
58	RECALLing from an empty non-vol location not allowed

Note: * denotes a 'fatal' error

Table 3-1, 1260 Series Error Codes

3.5 1260 Series Module Specific Syntax

3.5.1 1260-20 Module Specific Syntax

3.5.1.1 The Module Specific Syntax for the 1260-20 is required in the use of the OPEN and CLOSE commands. It will also appear in data output by the 1260 Series Master in response to the PDATAOUT and PSETUP commands.

3.5.1.2 The Module Specific Syntax for the 1260-20 Power Switching module is as follows:

<module address>.<switchnumber>

where <module address> is the card address of the 1260-20.

<switchnumber> is the reference number of the relay to be closed, value 0 - 19.

NOTE

The <module address> used here is NOT the VXIbus defined logical address of the 1260 Series Master. It is peculiar to the 1260 Series and describes the switching module in relation to the 1260 Series Master. This address corresponds to the binary value of the switch setting of SW1 on the switching module PCB.

The 1260-20 pin connections made by each <switchnumber> are as follows:

<switchnumber>	Pin connections	
	J200	
0	A to D,	C to K
1	E to H,	J to L
2	B to F,	M to N
3	P to T,	S to Y
4	U to W,	X to e
5	V to a,	R to Z
6	b to j,	c to d
7	m to v,	n to h
8	p to r,	f to k
9	x to s,	t to u

J201

10	A to D,	C to K
11	E to H,	J to L
12	B to F,	M to N
13	P to T,	S to Y
14	U to e,	X to W
15	V to a,	R to Z
16	b to j,	c to d
17	m to v,	n to h
18	p to r,	f to k
19	x to s,	t to u

3.5.2 Refer to Figure 3-1 for the pin configurations of connectors J200 and J201 on the 1260-20.

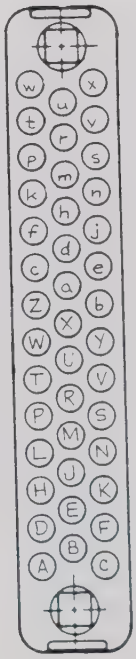

Figure 3-1 , 1260-20 Pin Connections

3.5.3 The Racal-Dana part number for the mating connectors for 1260-20 connectors J200 and J201 is 601850 and the pins required for the mating connector are Racal-Dana part number 601849. 41 pins are required to fully populate each mating conector.

3.5.4 1260-30 Module Specific Syntax

3.5.4.1 The Module Specific Syntax for the 1260-30 is required in the use of the OPEN and CLOSE commands. It will also appear in data output by the 1260 Series Master in response to the PDATAOUT and PSETUP commands.

3.5.4.2 The Module Specific Syntax for the 1260-30 Signal Multiplexer / Scanner module is as follows:

<module address>.<group number><channel>

where <module address> is the card address of the 1260-30.

<group number> is number of switching groups implemented in the 1260-30. The range of values for <group number> is up to 0 - 7.

<channel> is the path in the group to be switched. For 1260-30 configurations that contain more than one group, the values for <channel> are repeated for each group.

NOTE

The <module address> used here is NOT the VXIbus defined logical address of the 1260 Series Master. It is peculiar to the 1260 Series and describes the switching module in relation to the 1260 Series Master. This address corresponds to the binary value of the switch setting of SW1 on the switching module PCB.

The valid values of <group number> and <channel> for the different 1260-30 configurations are as follows:

Configuration	<channel>	<group number>s
One 1 x 40	00 - 39	0
Two 1 x 20	00 - 19	0, 1
Four 1 x 10	00 - 09	0, 1, 2 and 3
Eight 1 x 5	00 - 04	0, 1, 2, 3, 4, 5, 6 and 7

Refer to Figure 3-2 for the 1260-30 connector pin configurations and to Figure 3-3 for the command codes required to open and close the various <channels> for the four configurations of the 1260-30.

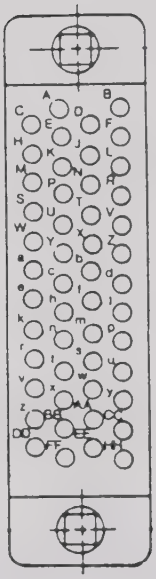

Figure 3-2, 1260-30 J200 and J201 Connector Pin Configuration

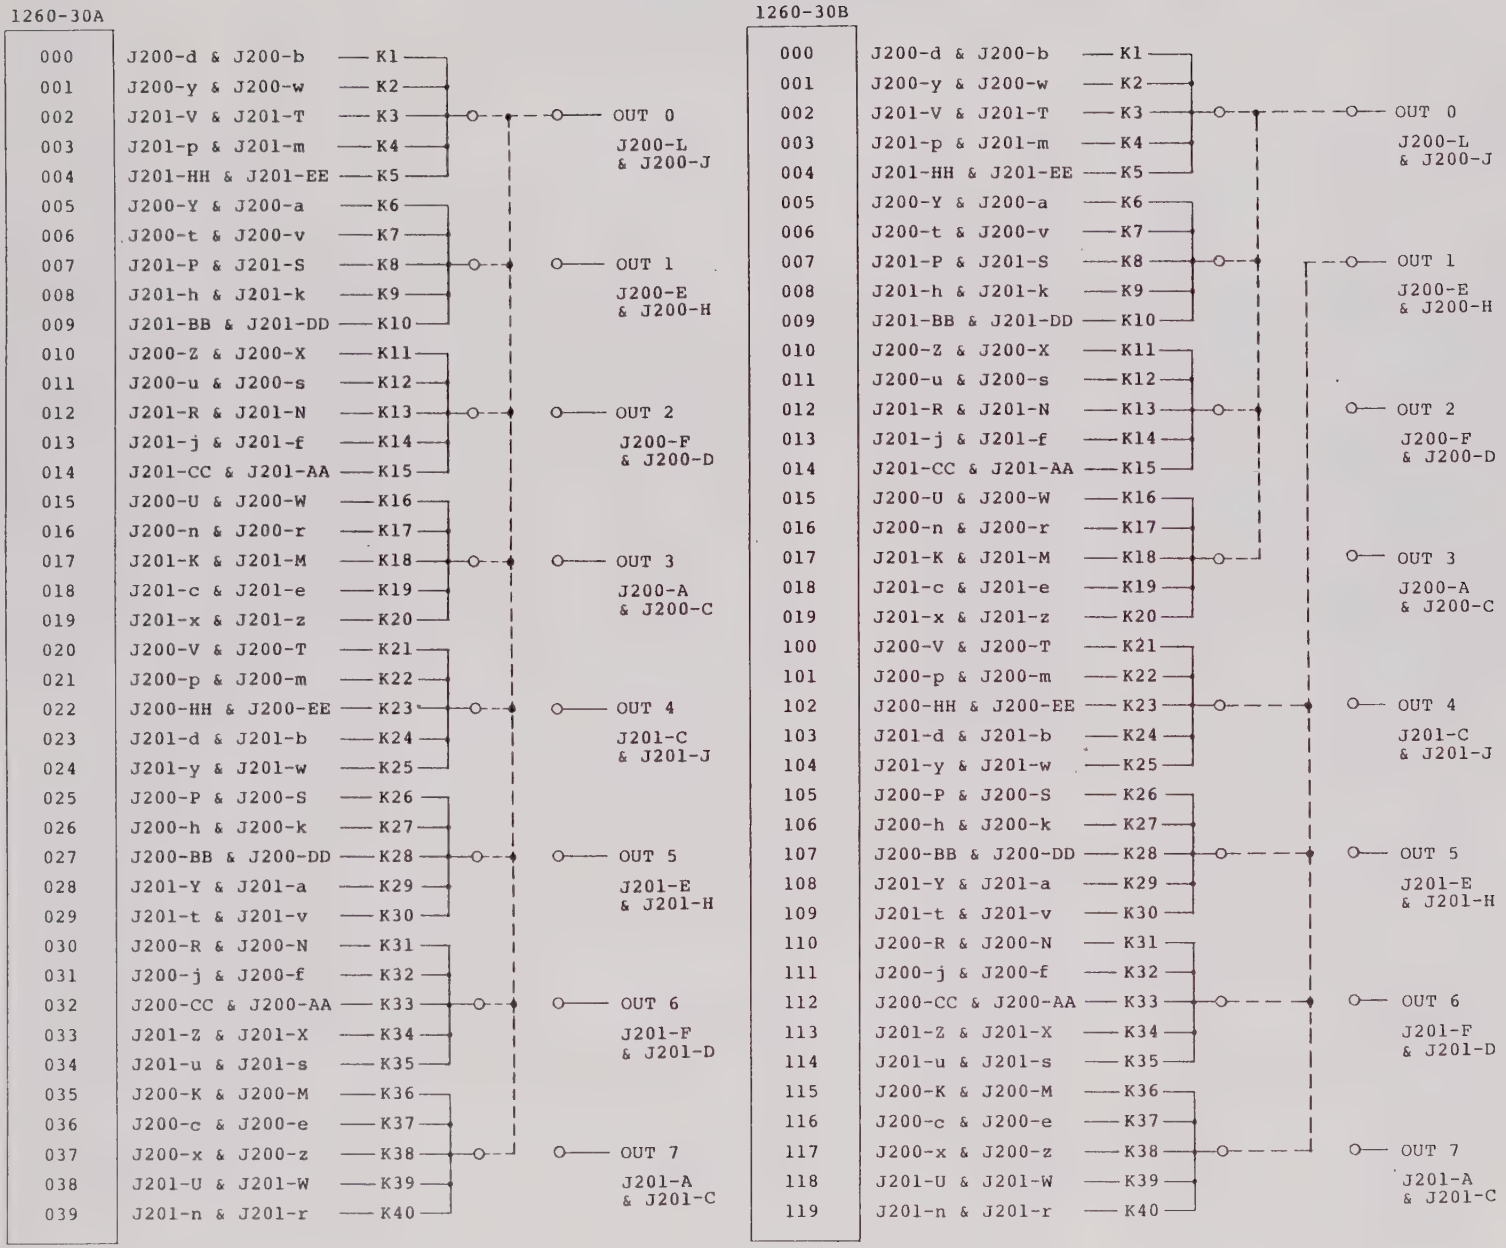

J200-B, J200-FF, J201-B, J201-FF are chassis ground.

Figure 3-3, 1260-30 Configurations and Command Codes

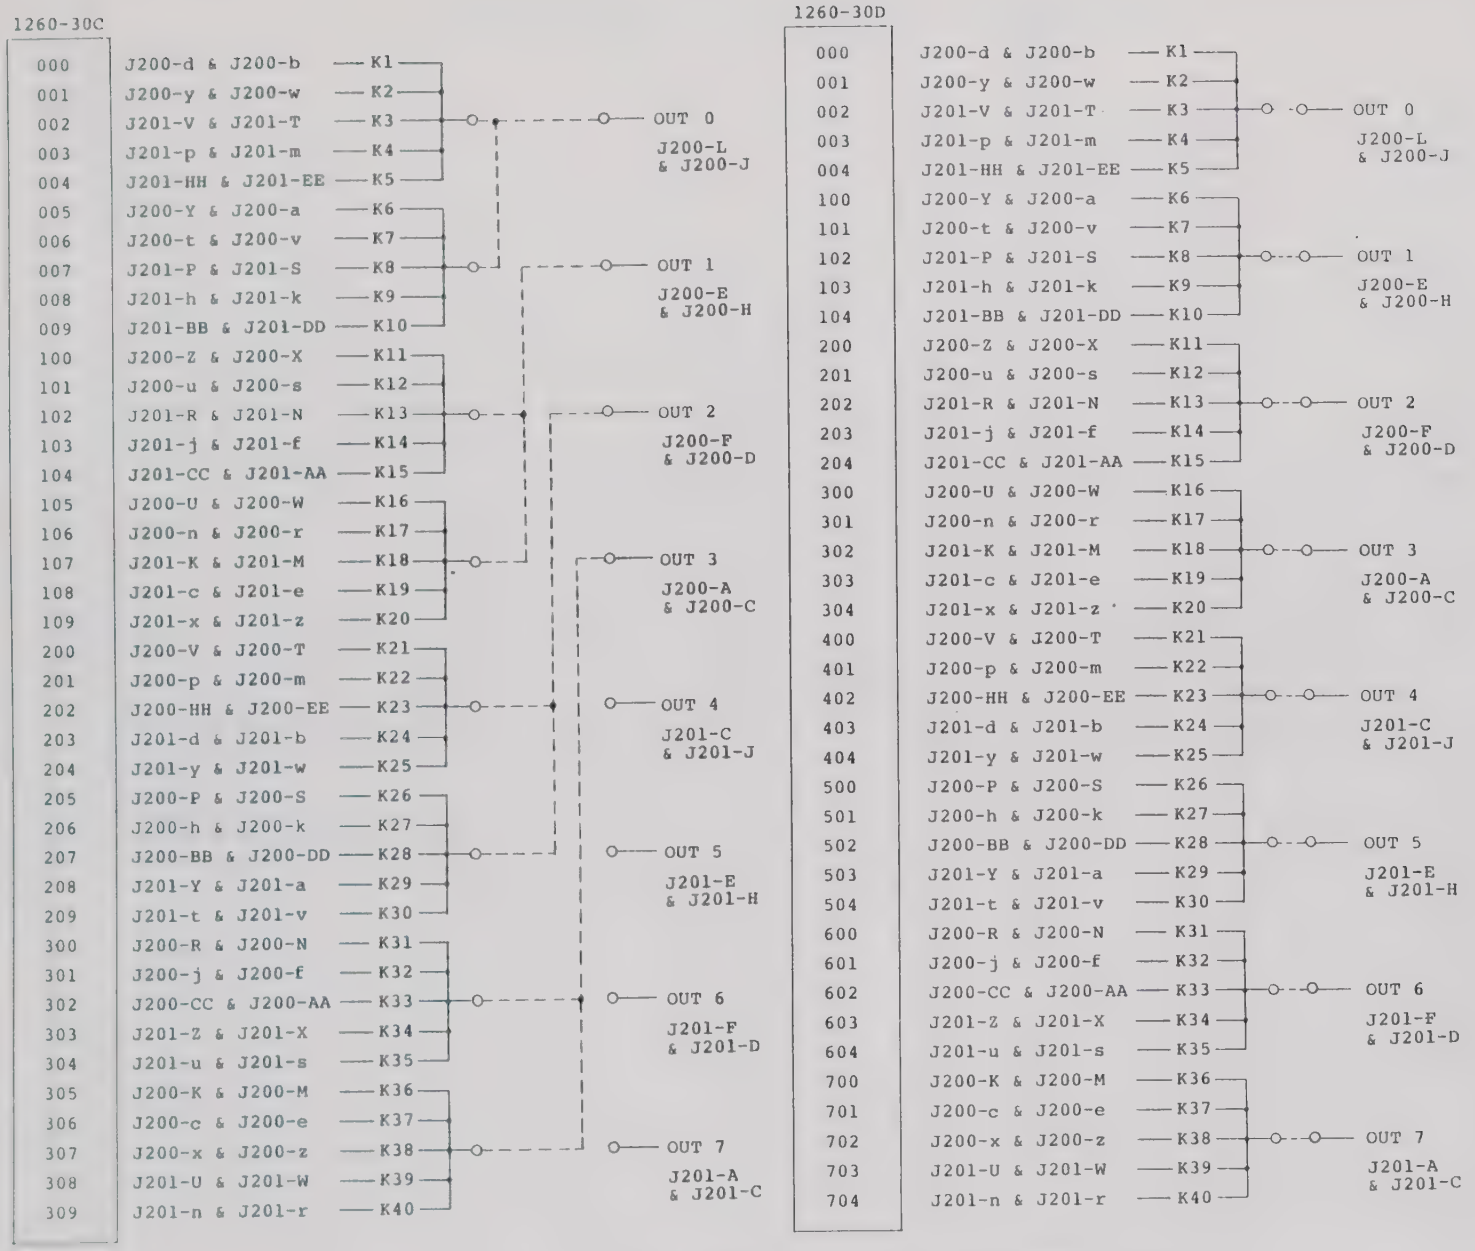

J200-B, J200-FF, J201-B, J201-FF are chassis ground.

Figure 3-3, 1260-30 Configurations and Command Codes

3.5.4.3 1260-30 Configuration Setting

3.5.4.3.1 The 1260-30 is configurable as one 1 x 40, two 1 x 20, four 1 x 10, or eight 1 x 5 multiplexers. The configuration is set by the installation of 24 gauge jumpers to the board as follows:

Model	Configuration
1260-30A	One 1 x 40
1260-30B	Two 1 x 20
1260-30C	Four 1 x 10
1260-30D	Eight 1 x 5

Note that this illustrates the principle of the 1260-30 configuration setting. The connections to be made on the 1260-30 PCB are given below.

3.5.4.3.2 1260-30A Configuration Setting

3.5.4.3.2.1 The following connections are required to configure the 1260-30 as a 1260-30A. To configure the 1260-30A from any other 1260-30 configuration, remove all connections not on this list and install 22 gauge solid jumpers as listed below unless otherwise specified.

COM 01 to E01

COM 02 to E02

COM 11 to E11

COM 12 to E12

COM 21 to E21

COM 22 to E22

COM 31 to E31

COM 32 to E32

COM 41 to E41

COM 42 to E42

COM 51 to E51

COM 52 to E52

COM 61 to E61

COM 62 to E62

COM 71 to E71

COM 72 to E 72

W11 to W12

E01-1 to E12-1

E01-2 to E12-2

E23-1 to E34-1

E23-2 to E34-2

E45-1 to E56-1

E45-2 to E56-2

E67-1 to E00-1 Teflon stranded, 24 gauge, white

E67-2 to E00-2 Teflon stranded, 24 gauge, black

Twisted pair

3.5.4.3.3 1260-30B Configuration Setting

3.5.4.3.3.1 The following connections are required to configure the 1260-30 as a 1260-30B. To configure the 1260-30B from any other 1260-30 configuration, remove all connections not on this list and install 22 gauge solid jumpers as listed below unless otherwise specified.

COM 01 to E01

COM 02 to E02

COM 11 to E11

COM 12 to E12

COM 21 to E21

COM 22 to E22

COM 31 to E31

COM 32 to E32

COM 41 to E41

COM 42 to E42

COM 51 to E51

COM 52 to E52

COM 61 to E61

COM 62 to E62

COM 71 to E71

COM 72 to E72

W1-1 to W1-2

E01-1 to E12-1

E01-2 to E12-2

E45-1 to E56-1

E45-2 to E56-2		
E67-1 to E10-1	Teflon stranded, 24 gauge, white	Twisted pair
E67-2 to E10-2	Teflon stranded, 24 gauge, black	
E23-1 to E00-1	Teflon stranded, 24 gauge, white	Twisted pair
E23-2 to E00-2	Teflon stranded, 24 gauge, black	

3.5.4.3.4 1260-30C Configuration Setting

3.5.4.3.4.1 The following connections are required to configure the 1260-30 as a 1260-30C. To configure the 1260-30C from any other 1260-30 configuration, remove all connections not on this list and install 22 gauge solid jumpers as listed below unless otherwise specified.

COM 01 to E01

COM 02 to E02

COM 11 to E11

COM 12 to E12

COM 21 to E21

COM 22 to E22

COM 31 to E31

COM 32 to E32

COM 41 to E41

COM 42 to E42

COM 51 to E51

COM 52 to E52

COM 61 to E61

COM 62 to E62

COM 71 to E71

COM 72 to E 72

W11 to W12

E01-1 to E00-1	Teflon stranded, 24 gauge, white	Twisted pair
E01-2 to E00-2	Teflon stranded, 24 gauge, black	

E23-1 to E10-1	Teflon stranded, 24 gauge, white	Twisted pair
E23-2 to E10-2	Teflon stranded, 24 gauge, black	
E45-1 to E20-1	Teflon stranded, 24 gauge, white	Twisted pair
E45-2 to E20-2	Teflon stranded, 24 gauge, black	
E67-1 to E30-1	Teflon stranded, 24 gauge, white	Twisted pair
E67-2 to E30-2	Teflon stranded, 24 gauge, black	

3.5.4.3.5 1260-30D Configuration Setting

3.5.4.3.5.1 The following connections are required to configure the 1260-30 as a 1260-30D. To configure the 1260-30B from any other 1260-30 configuration, remove all connections not on this list and install 22 gauge solid jumpers as listed below unless otherwise specified.

COM 01 to E00-1	Teflon stranded, 24 gauge, white	Twisted pair
COM 02 to E00-2	Teflon stranded, 24 gauge, black	
COM 11 to E10-1	Teflon stranded, 24 gauge, white	Twisted pair
COM 12 to E10-2	Teflon stranded, 24 gauge, black	
COM 21 to E20-1	Teflon stranded, 24 gauge, white	Twisted pair
COM 22 to E20-2	Teflon stranded, 24 gauge, black	
COM 31 to E30-1	Teflon stranded, 24 gauge, white	Twisted pair
COM 32 to E30-2	Teflon stranded, 24 gauge, black	
COM 41 to E40-1	Teflon stranded, 24 gauge, white	Twisted pair
COM 42 to E40-2	Teflon stranded, 24 gauge, black	
COM 51 to E50-1	Teflon stranded, 24 gauge, white	Twisted pair
COM 52 to E50-2	Teflon stranded, 24 gauge, black	
COM 61 to E60-1	Teflon stranded, 24 gauge, white	Twisted pair
COM 62 to E60-2	Teflon stranded, 24 gauge, black	
COM 71 to E70-1	Teflon stranded, 24 gauge, white	Twisted pair
COM 72 to E70-2	Teflon stranded, 24 gauge, black	

W1-1 to W1-2

3.5.4.4 1260-30 ID Byte

3.5.4.4.1 Each configuration of the 1260-30 will respond to different sets of values for <group number> and <channel>. The set of values that the 1260-30 will respond to is controlled by switches 5 and 6 on DIP switch S1 on the 1260-30 PCB. The switch settings that correspond to the four configurations are as follows:

Model	Configuration	S1 Switches 5	6
1260-30A	One 1 x 40	Off	Off
1260-30B	Two 1 x 20	On	Off
1260-30C	Four 1 x 10	Off	On
1260-30D	Eight 1 x 5	On	On

3.5.5 1260-40 Module Specific Syntax

3.5.5.1 The Module Specific Syntax for the 1260-40 is required in the use of the OPEN and CLOSE commands. It will also appear in data output by the 1260 Series Master in response to the PDATAOUT and PSETUP commands.

3.5.5.2 The Module Specific Syntax for the 1260-40 4 x 24 Signal Matrix module is as follows:

<module address>.<group number><rownumber><columnnumber>

where <module address> is the address of the 1260-40.

NOTE

The <module address> used here is NOT the VXIbus defined logical address of the 1260 Series Master. It is peculiar to the 1260 Series and describes the switching module in relation to the 1260 Series Master. This address corresponds to the binary value of the switch setting of SW1 on the switching module PCB.

<group number> is a reference to the matrix containing the to be switched. It is value 0 for the 1260-40A and 1260-40B, and value 0 or 1 for the 1260-40C. The 1260-40A and 1260-40B contain only one matrix and <group number> may be omitted if desired.

<rownumber> is the matrix row to be connected to column <columnnumber>, value 0 - 3 or 0 -7 , depending on the configuration set.

<columnnumber> is is the matrix column to be connected to row <rownumber>, value 0 - 08, 0 - 12 or 0 - 23, depending on the configuration set.

Refer to Figures 3-4, 3-5 and 3-6 for the group numbers, row numbers, column numbers and connector pins to be used in the various configurations of the 1240-40. Note that Figure 3-6 shows the <group number> and <row number> together.

3.5.5.3 In the case that more than one connection is to be made or broken on the 1260-40 with contiguous rows or columns, then the following format is supported:

<module address> . <rownumber> <columnnumber>
-<rownumber> <columnnumber>

Example: OPEN 3.0101-0304

This OPEN statement have the same effect as a series of open commands to open all of the connections between rows from 1 through 3 and columns 1 through 4.

3.5.5.4 1260-40 ID Byte

3.5.5.4.1 Each configuration of the 1260-40 will respond to different sets of values for <group number>, <row number> and <column number>. The set of values that the 1260-40 will respond to is controlled by switches 5 and 6 on DIP switch S1 on the 1260-40 PCB. The switch settings that correspond to the three configurations are as follows:

Model	Configuration	S1 Switches 5	6
1260-40A	One 4 x 24	Off	Off
1260-40B	One 8 x 12	On	Off
1260-40C	Two 4 x 12	Off	On
Reserved for future use		On	On

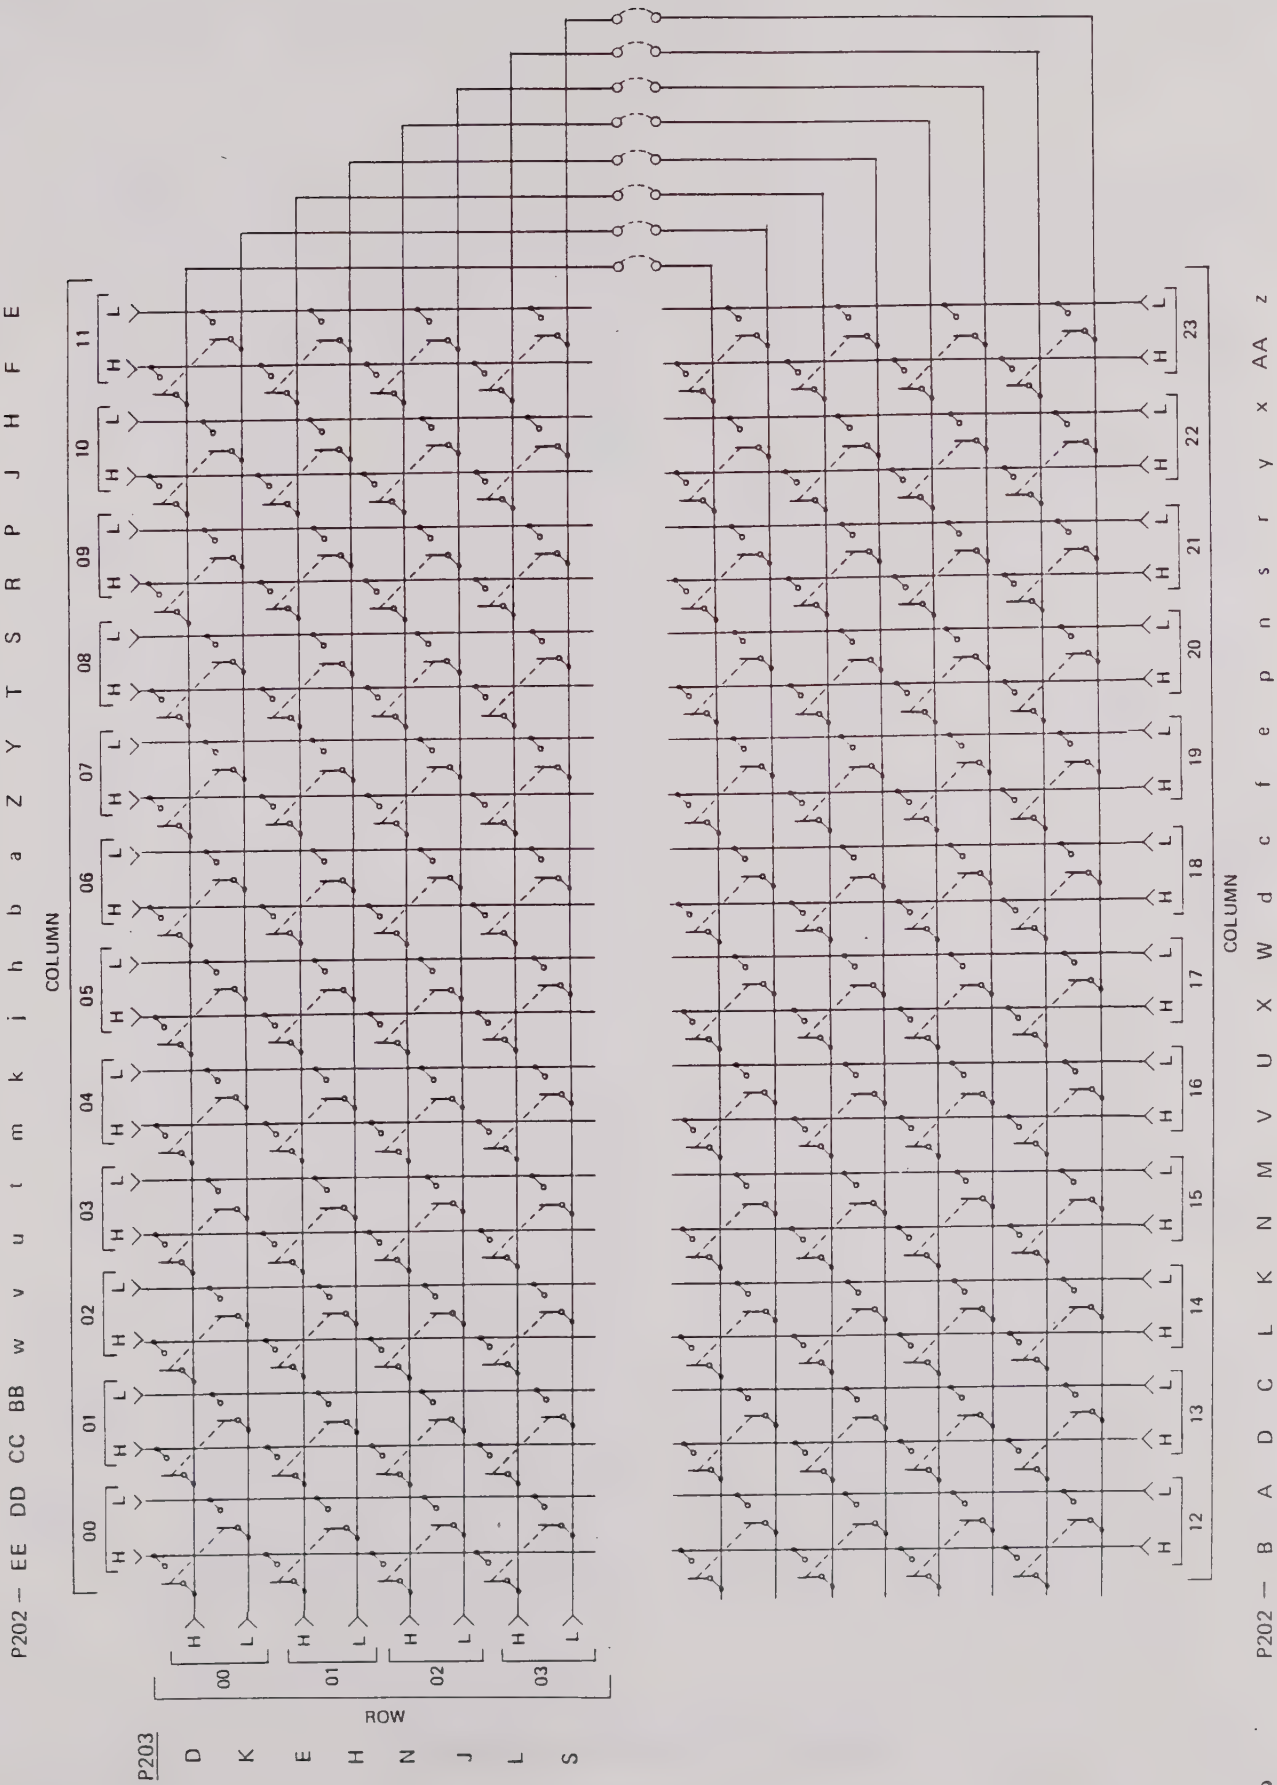

Figure 3-4, 1260-40A Configuration

Figure 3-5, 1260-40B Configuration

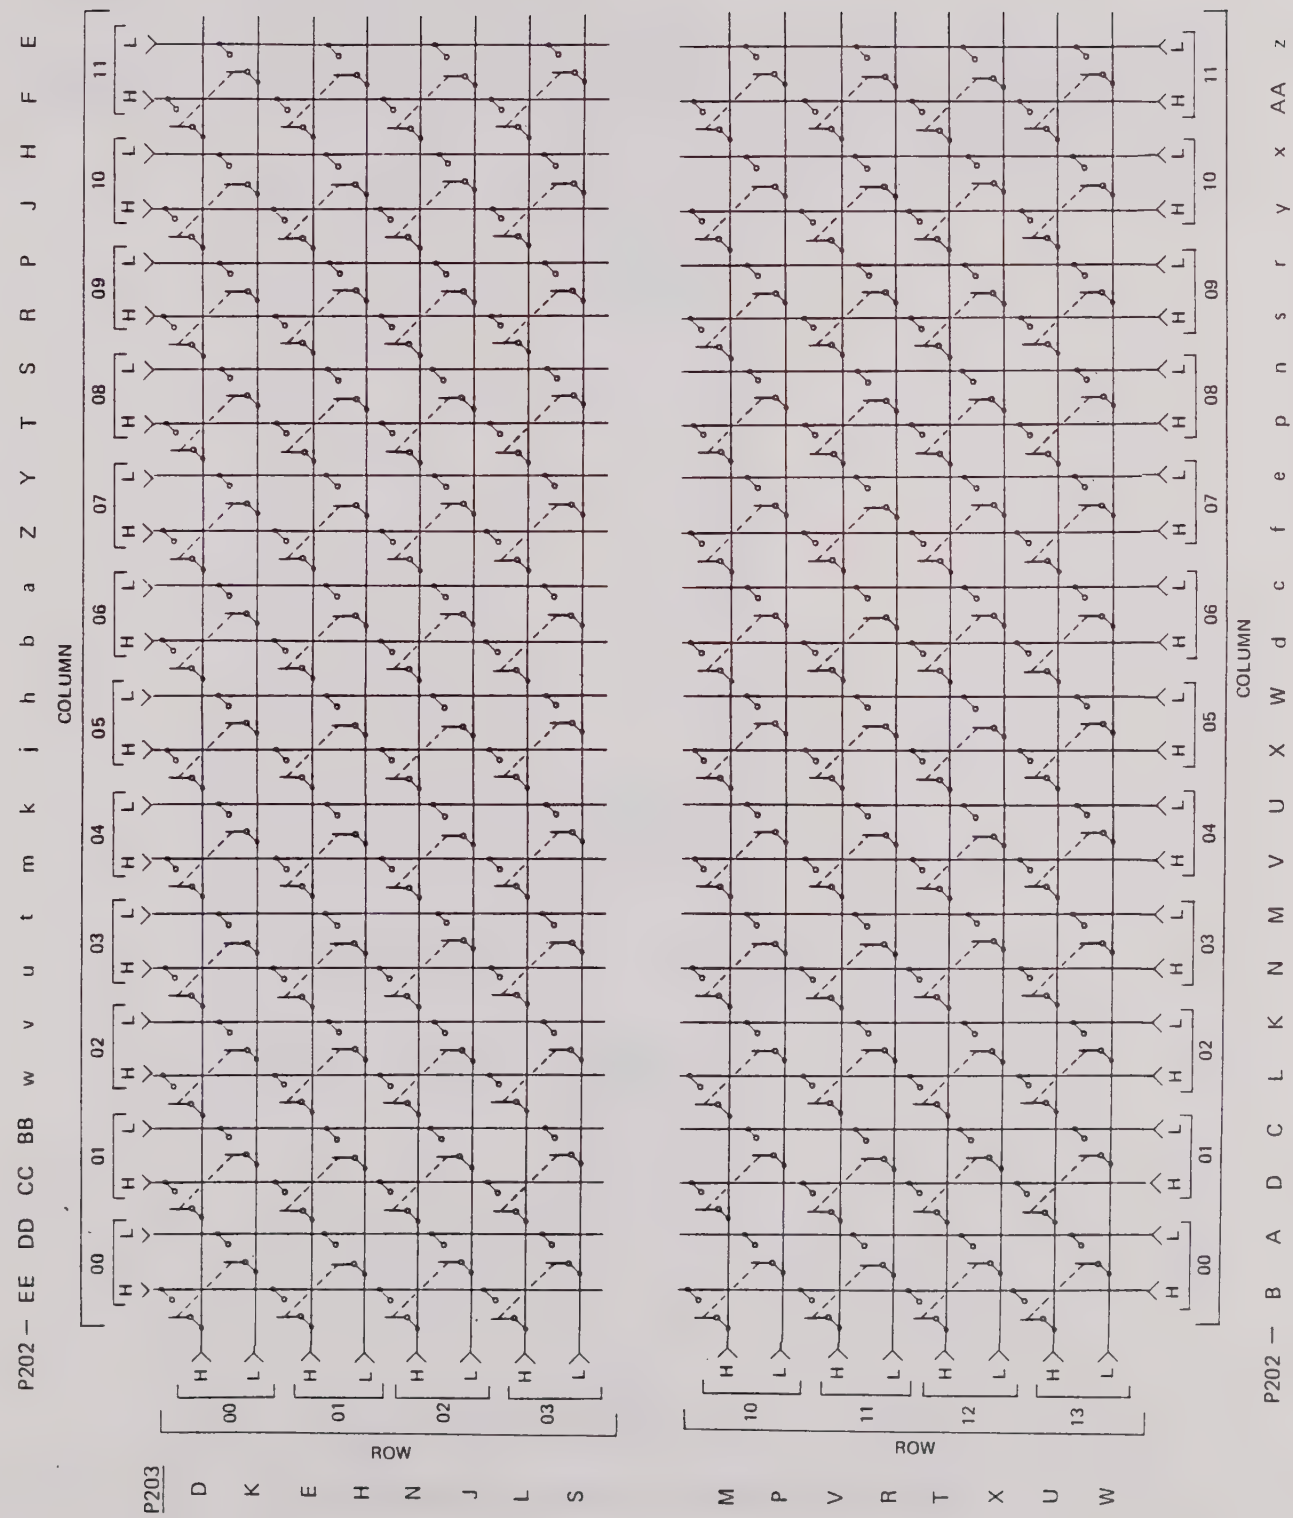

Figure 3-6, 1260-40C Configuration

3.5.5.5 1260-40 Connector Pin Configurations

3.5.5.5.1 Refer to Figures 3-7 and 3-8 for the pin configurations of P200, P201, P202 and P203 on the 1260-40.

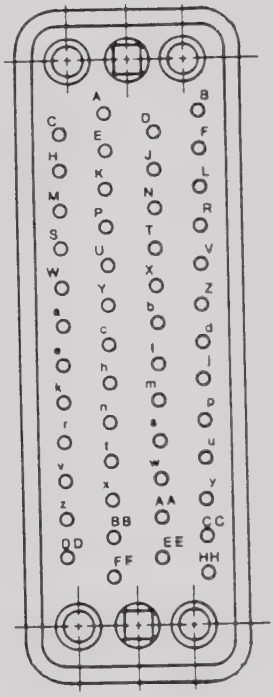

Figure 3-7, 1260-40 P201 and P202 Pin Configurations

Figure 3-8, 1260-40 P200 P203 Pin Configurations

3.5.5.6 1260-40 Expansion Port

3.5.5.6.1 The 1260-40 matrix row and column connections on P203 and P202, respectively, are in parallel with expansion ports P200 amd P201, respectively, to allow the 1260-40 to be used in the configuration of matrices larger than those that may be configured by the 1260-40 alone. The pin to pin correspondance of the matrix rows and columns connections to the expansion ports is as follows:

Matrix Rows (0 - 7)	Main Port	Expansion Port
Row 0 Hi	P 203-D	P 200-R
Row 0 Lo	P 203-K	P 200-V
Row 1 Hi	P 203-E	P 200-P
Row 1 Lo	P 203-H	P 200-M
Row 2 Hi	P 203-N	P 200-S
Row 2 Lo	P 203-J	P 200-L
Row 3 Hi	P 203-L	P 200-C
Row 3 Lo	P 203-S	P 200-D
Row 4 Hi	P 203-M	P 200-H
Row 4 Lo	P 203-P	P 200-E
Row 5 Hi	P 203-V	P 200-K
Row 5 Lo	P 203-R	P 200-D
Row 6 Hi	P 203-T	P 200-B
Row 6 Lo	P 203-X	P 200-F
Row 7 Hi	P 203-U	P 200-A
Row 7 Lo	P 203-W	P 200-C

Matrix Columns (0 - 23)	Main Port	Expansion Port
Column 0 Hi	P 202-EE	P 201-C
Column 0 Lo	P 202-DD	P 201-D
Column 1 Hi	P 202-CC	P 201-E
Column 1 Lo	P 202-BB	P 201-F
Column 2 Hi	P 202-w	P 201-M
Column 2 Lo	P 202-v	P 201-N
Column 3 Hi	P 202-u	P 201-P
Column 3 Lo	P 202-t	P 201-R
Column 4 Hi	P 202-m	P 201-W
Column 4 Lo	P 202-k	P 201-X
Column 5 Hi	P 202-j	P 201-Y
Column 5 Lo	P 202-h	P 201-Z
Column 6 Hi	P 202-b	P 201-e
Column 6 Lo	P 202-a	P 201-f
Column 7 Hi	P 202-Z	P 201-h
Column 7 Lo	P 202-Y	P 201-j
Column 8 Hi	P 202-T	P 201-r
Column 8 Lo	P 202-S	P 201-s
Column 9 Hi	P 202-R	P 201-t
Column 9 Lo	P 202-P	P 201-u
Column 10 Hi	P 202-J	P 201-z
Column 10 Lo	P 202-H	P 201-AA
Column 11 Hi	P 202-F	P 201-BB
Column 11 Lo	P 202-E	P 201-CC
Column 12 Hi	P 202-B	P 201-FF
Column 12 Lo	P 202-A	P 201-HH
Column 13 Hi	P 202-D	P 201-DD
Column 13 Lo	P 202-C	P 201-EE

Matrix Columns (0 - 23)	Main Port	Expansion Port
Column 14 Hi	P 202-L	P 201-x
Column 14 Lo	P 202-K	P 201-y
Column 15 Hi	P 202-N	P 201-v
Column 15 Lo	P 202-M	P 201-w
Column 16 Hi	P 202-V	P 201-n
Column 16 Lo	P 202-U	P 201-p
Column 17 Hi	P 202-X	P 201-k
Column 17 Lo	P 202-W	P 201-m
Column 18 Hi	P 202-d	P 201-c
Column 18 Lo	P 202-c	P 201-d
Column 19 Hi	P 202-f	P 201-a
Column 19 Lo	P 202-e	P 201-b
Column 20 Hi	P 202-p	P 201-U
Column 20 Lo	P 202-n	P 201-V
Column 21 Hi	P 202-s	P 201-S
Column 21 Lo	P 202-r	P 201-T
Column 22 Hi	P 202-y	P 201-K
Column 22 Lo	P 202-x	P 201-L
Column 23 Hi	P 202-AA	P 201-H
Column 23 Lo	P 202-z	P 201-J

3.5.6 **1260-54 Coaxial Switching Module Specific Syntax**

NOTE

The 1260-54 Coaxial Switching module is supported by 1260 Series Option 01 Operating Systems at Rev. levels 3.1 and above

3.5.6.1 The 1260-54 R.F. Multiplexer supports the OPEN, CLOSE, PSETUP, RESET and PDATAOUT commands.

3.5.6.2 The module specific syntax for the 1260-54 R.F. Multiplexer is as follows:

3.5.6.3 OPEN <module address>.<channel>[;<module address>.<channel>].....

where <module address> is the address of the 1260-54.
<channel> is the relay to be closed to connect an input to the output.

Note that Channels remain closed until opened by an OPEN command.

The range of values for <channel> is:

00 - 03
10 - 13
20 - 23
30 - 33
40 - 43
50 - 53

3.5.6.4 The Module Specific Syntax for the CLOSE command is the same as for the OPEN command. Note that each group of <channel> values contains five values. Using the highest value in each group, 04, 14, 24 etc, will give a connection to a "not connected" pin, i.e. open the path from input to output. This has the same effect as using an OPEN command.

3.5.6.5 Connections between input and output are mutually exclusive within a group in the 1260-54 switch module. A CLOSE command will open an existing connection and close the new connection and an OPEN command will open any existing connection in the group and open circuit the Common connection.

3.5.6.6 The 1260-54 is restricted to the Break Before Make sequence mode.

3.5.6.7 The PSETUP command causes the specified module setup to be transmitted to the VXI controller. The syntax used is:

PSETUP <module address>[;<module address>][;<module address>].....

where <module address> is the 1260 Series address of the 1260-54.

The responses to the PSETUP command for the 1260-54 multiplexer is as follows:

<module address>.1260-54 COAXIAL SWITCHING MODULE
<module address>.BBM
<module address>.END

3.5.6.8 The PDATAOUT command causes the specified module to transmit the CLOSED state of the relays fitted to the switching module to the 1250s controller. The syntax used is:

PDATAOUT <module address>[;<module address>][;<module address>].....

The responses to the PDATAOUT command for the 1260-54 is as follows:

<module address>.1260-54 RF MULTIPLEXER
<module address>.<channel>[,<channel>][,<channel>].....
<module address>.END

The range of values for <channel> is:

00 - 03, 10 - 13, 20 - 23, 30 - 33, 40 - 43 and 50 - 53.

Note that connections to the "not connected" pins within a group are not displayed.

3.5.7 **1260-12 Module Specific Syntax**

NOTE

The 1260-12 Relay Actuator Module is supported by 1260 Series Option 01 Operating Systems at Rev. levels 2.1, Release A.

3.5.7.1 The Module Specific Syntax for the 1260-12 is required in the use of the OPEN and CLOSE commands. It will also appear in data output by the 1260 Series Master in response to the PDATAOUT and PSETUP commands.

3.5.7.2 The Module Specific Syntax for the 1260-12 Relay Actuator module is as follows:

<module address>.<channel>

where <module address> is the card address of the 1260-12.

<channel> is the reference number of the relay to be closed, value 0 - 19.

NOTE

The <module address> used here is NOT the VXIbus defined logical address of the 1260 Series Master. It is unique to the 1260 Series and describes the switching module in relation to the 1260 Series Master. This address corresponds to the binary value of the switch setting of SW1 on the switching module PCB.

3.5.7.3 Each <channel> of the 1260-12 is a double-pole, double throw relay with two normally open and normally closed connections. The connections made by the 1260-12 are between the Common and the Open pins if the <channel> is OPENed, and between the Common and the Closed pins if the <channel> is CLOSED. The 1260-12 pin connections made by each CLOSE <card address>.<channel> command are given in Table 3-3

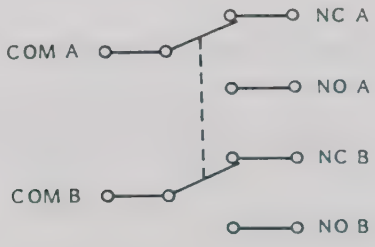

Table 3-3, 1260-12 <channel>s

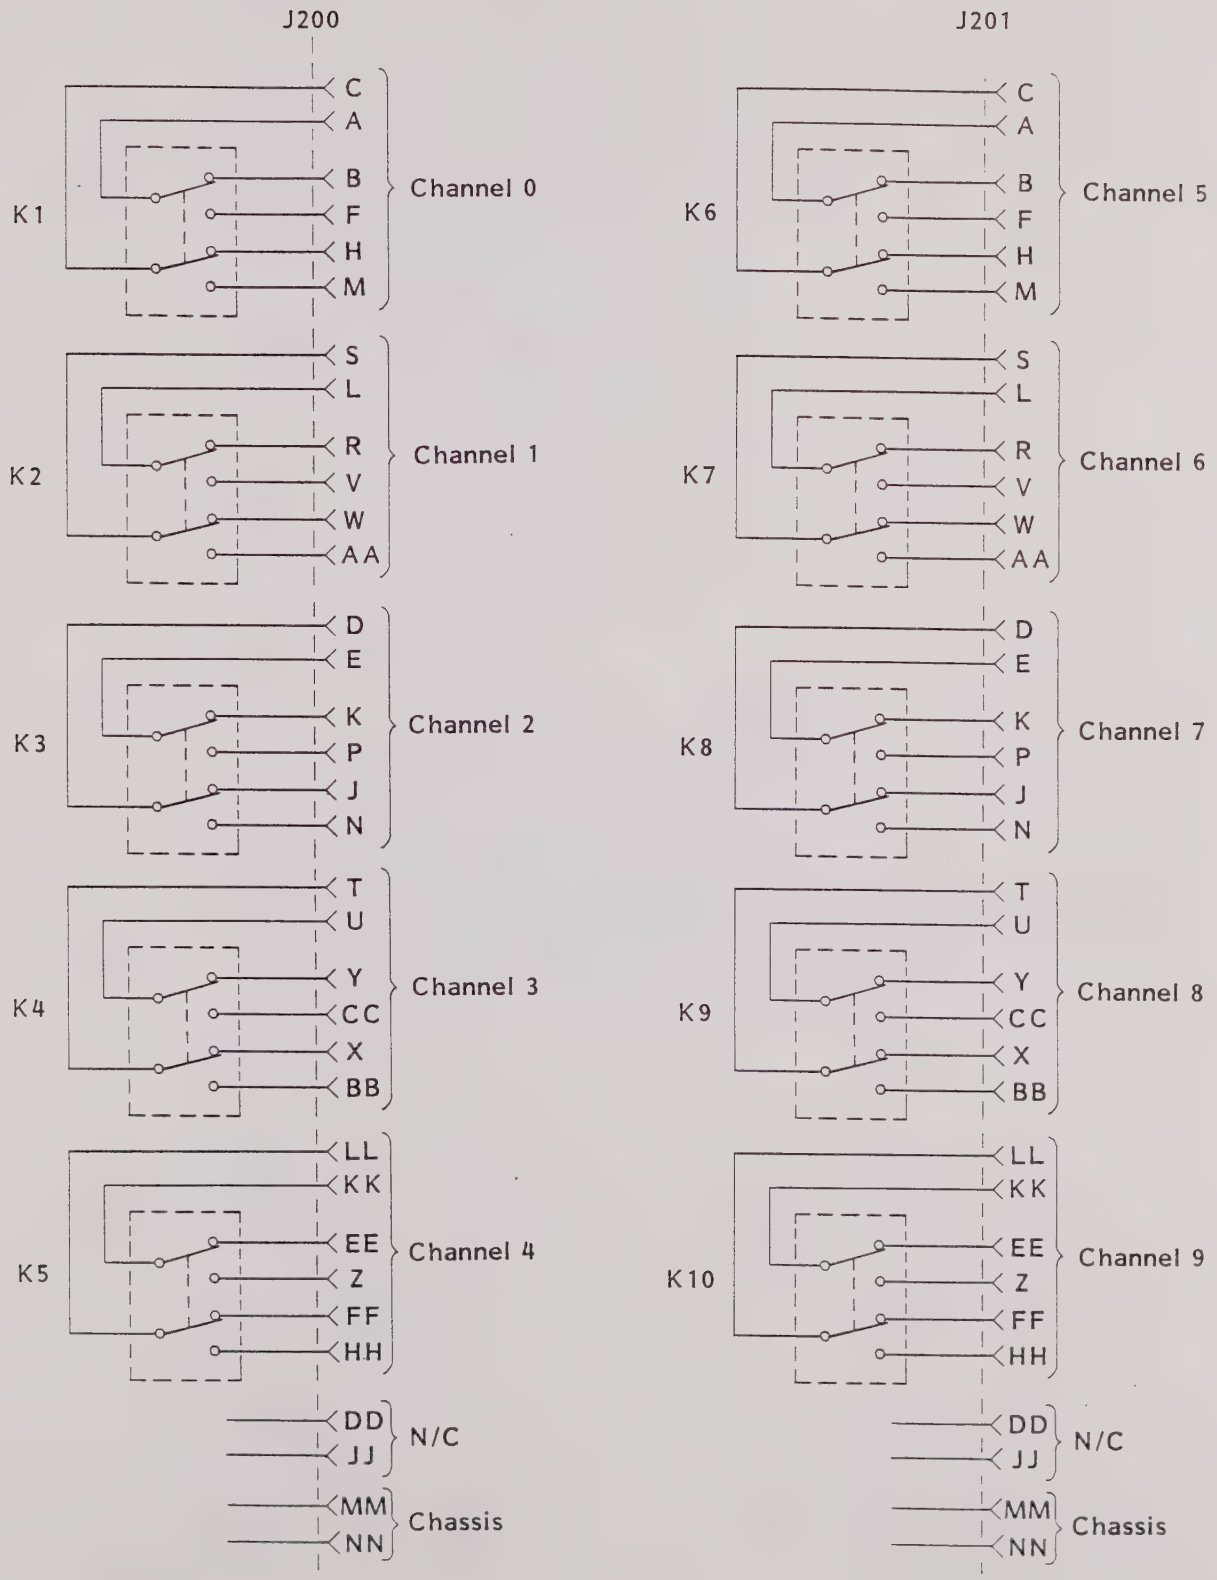

Table 3-3, 1260-12 <channel>s (cont.)

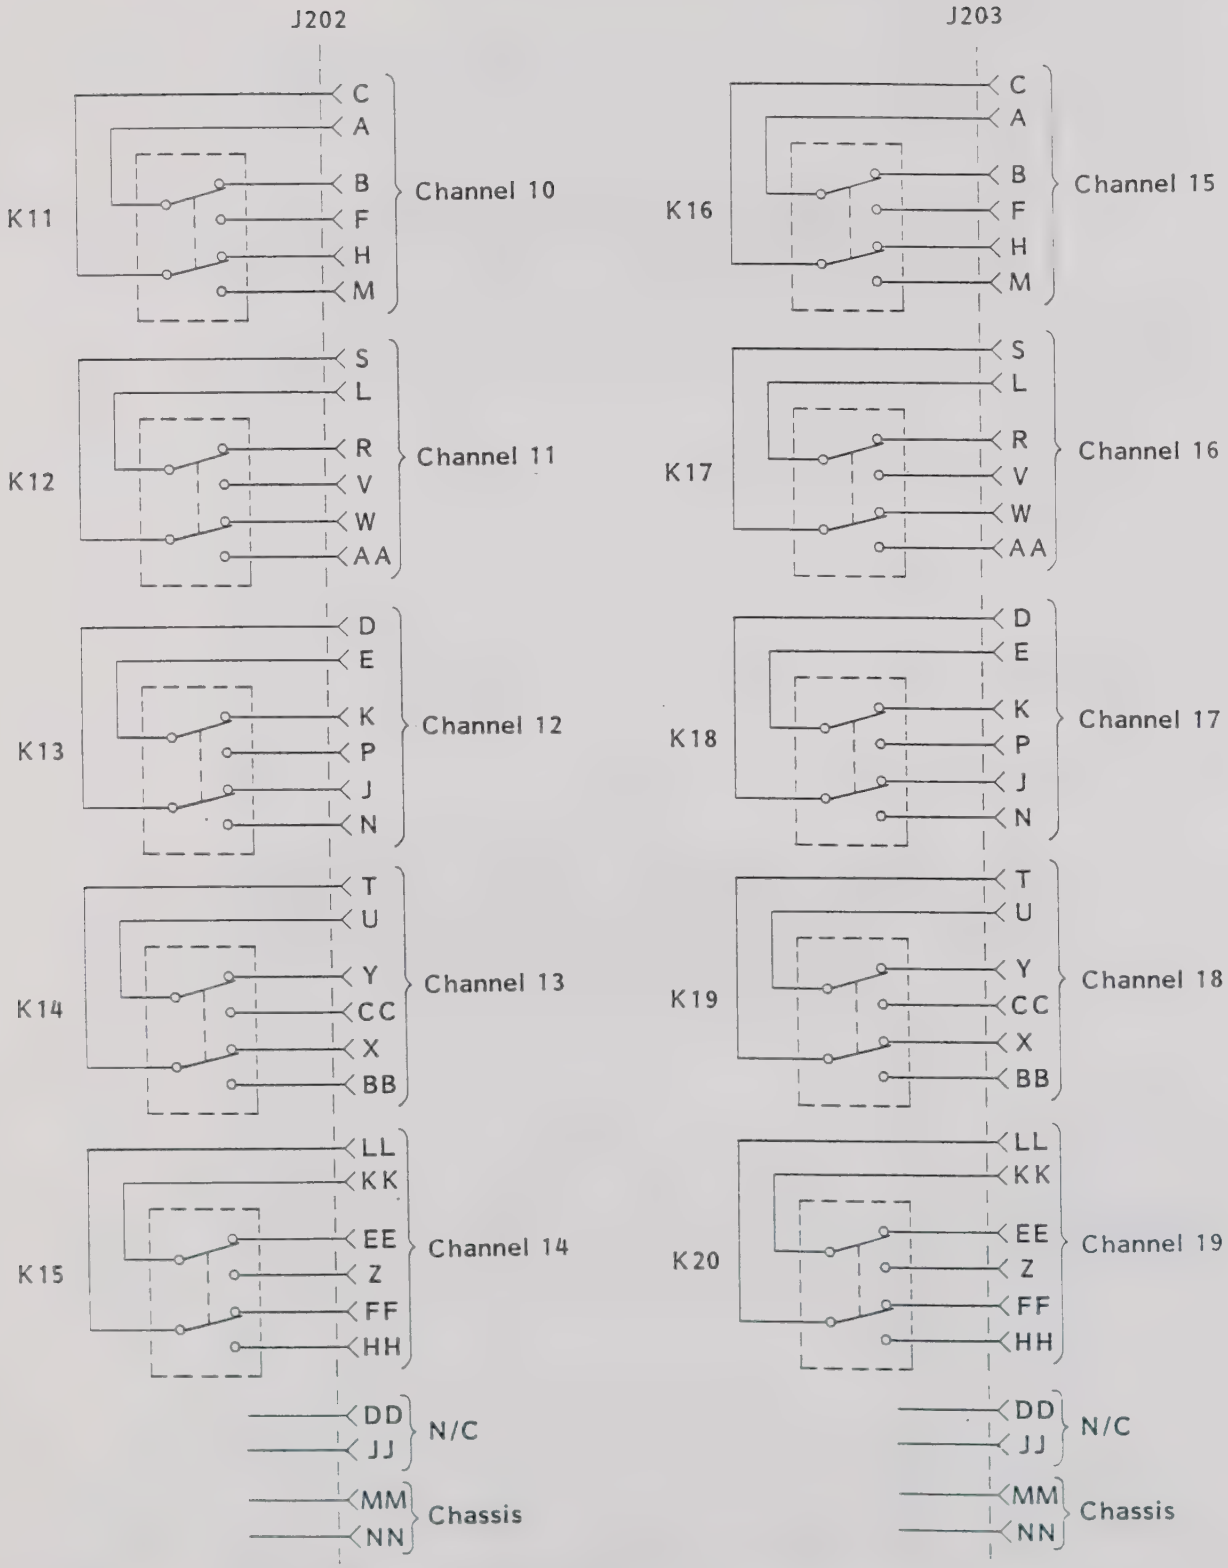

3.5.8 Refer to Figure 3-9 for the pin configurations of connectors J200, J201, J202 and J203 on the 1260-12.

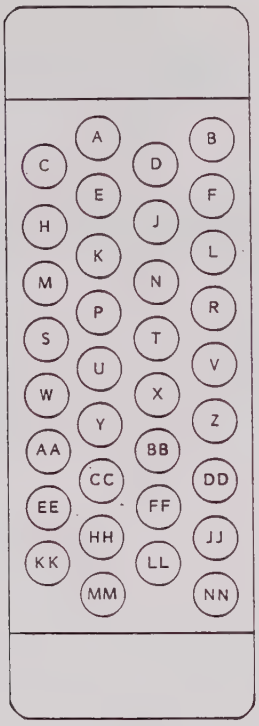

Figure 3-9, 1260-12 Pin Connections

3.5.9 The Racal-Dana part number for the mating connectors for 1260-12 connectors J200 and J201 is 601855-034 and the pins required for the mating connector are Racal-Dana part number 601857. 34 pins are required to fully populate each mating connector.

3.5.10 1260-14 Digital I/O Module Specific Syntax

NOTE

The 1260-14 Digital I/O module is supported by 1260 Series Option 01 Operating Systems at Rev. levels 4.1 and above.

3.5.10.1 The 1260-14 Digital I/O module supports the READ, WRITE, PSETUP, RESET and PDATAOUT commands.

3.5.10.2 The module specific syntax for the 1260-14 Digital I/O module is of the form:

<module address>.<command>

where <module address> is the card address of the 1260-14.

<command> is the operation or setup to be carried out by the 1260-14.

NOTE

The <module address> used here is NOT the VXIbus defined logical address of the 1260 Series Master. It is peculiar to the 1260 Series and describes the switching module in relation to the 1260 Series Master. This address corresponds to the binary value of the switch setting of SW1 on the switching module PCB.

3.5.10.3 <command> is one of:

SE[TUP] m.EN[ABLE][,p,p,p,...,p]

Enable the output drivers for each specified port. The output drivers are tri-stated when not enabled. In order for write data to be present on the data lines, the output driver must be enabled. In order to read data from the data lines, the output driver must be tri-stated. All output drivers are disabled on power up. CAUTION: Damage to users equipment or to the Digital I/O card could occur if the user enables the output drivers for a port that is connected to a device that is also attempting to drive the data lines.

SE[TUP] m.SY[NC],n

Enable the handshake mode of operation (synchronous mode) for 'n' number

of ports. Synchronous ports are always the lowest numbered ports, i.e. the command SETUP 1.SYNC,5 would cause the digital I/O card at address 1 to have 5 synchronous ports from port 0 to port 4. On power up, synchronous mode is disabled for all ports. When the SYNC command is given, those ports that change configuration from nonsynchronous to synchronous, or vice versa, are re-initialized. This causes any old format, mode, or read/write data to be removed. Consequently, all new synchronous ports must be reprogrammed with a SETUP m.READ/WRITE command before they can be used in synchronous operations. Only those ports that have been defined as synchronous may perform data transfers utilizing the CLKIN and BUSY handshake lines. A WRITE command will work normally on a synchronous port, but a READ command will return whatever data was last left in the port. It will NOT read the data lines.

SE[TUP] m.RD s[,B | ,H],q
SE[TUP] m.RD s,W[,B | ,H],q
SE[TUP] m.RD s,Xx[,Xx...],q

Set up a synchronous port to perform a buffered read operation. A READ of the port will be initiated by the active edge of CLKIN. Read data will be stored in a buffer for up to 'q' number of handshake operations. A 'q' of 0 implies that the port is to do nothing. The maximum 'q' is 256. After the final data transfer has occured for all synchronous ports, the ARM will be automatically disabled. The user can access the READ data via the PDATA command, but only after the card has been disarmed, either by completing all of its synchronous operations or by the user turning the ARM off. A 'W' specifies that the port is in the 16 bit WORD mode. Word operations may only occur on even numbered ports and will place the least significant eight bits in the even port and the most significant eight bits in the following odd numbered port. Word sized operations may NOT be mixed with bit or byte operations. An 'X' specifies the BIT mode of operation. Any number of bits from X0 through X7 may be specified. Only those bits that have been requested will be printed when the user sends a PDATA for the port. The bits will be printed in msb to lsb order. The format defaults to binary when the BIT mode is used. The default MODE is byte mode. An 'H' specifies that the output format for the data is to be hexadecimal, a 'B' specifies that the output mode is binary, and the default output mode is decimal.

SE[TUP] m.WR s[,Y][,yd1,yd2,...yd256]
SE[TUP] m.WR s[,W][,wd1,wd2,...wd256]
SE[TUP] m.WR s[,X][,xd1; xd2;...;xd256]

Set up a synchronous port to perform a buffered write operation. A WRITE to the port will be initiated by the active edge of CLKIN. Up to 256 data

items can be set up ahead of time, allowing up to 256 synchrounous write operations to occur. Three different modes of operation may be specified for a port. Any time a mode is specified, the previous WRITE data is cleared from the ports buffer, otherwise the data will be appended to the existing data in the buffer, for up to 256 data items. The Word, Byte and Bit modes may not be mixed in a port, only one mode may be used at a time. A 'W' specifies that the port is in the 16 bit WORD mode. Word operations may only occur on even numbered ports and will place the least significant eight bits in the even port and the most significant eight bits in the following odd numbered port. A 'Y' will set the port to the BYTE sized transfer. An 'X' specifies the bit mode of operation. The x'th bit of the port will be ORed (if 'Hx') or ANDed (if 'Lx') with the previous data item, then written to the ports buffer. Data from each ports buffer will be written to the port following each active edge of CLKIN, for as long as there is data in the buffer. The buffer may contain up to 256 data items. See example A below.

SE[TUP] m.BU[SY],POS | NEG

Define the polarity of the BUSY handshake line. Setting the polarity to negative will cause the BUSY line to be inverted. The default power up condition is POS.

SE[TUP] m.CL[KIN],POS | NEG

Define the polarity of the CLKIN handshake line. Setting the polarity to negative will cause the CLKIN line to be inverted. The default power up condition is POS.

SE[TUP] m.AR[M],ON | OFF

Arm/disarm the synchronous handshake mode. Setup data for may only be entered when the ARM is OFF. Once the card is armed, any attempts to send a setup commands other than a SETUP x.ARM,OFF will cause an error. The completion of the last buffered READ/WRITE will automatically set the ARM mode to OFF. Synchronous data transfers may only take place when ARM is ON. The active edge of CLKIN, which is used to invoke data transfers, will be disregarded when ARM is OFF. The default power up condition is OFF. Each time the ARM is toggled, synchronous READ/WRITE operations restart at the beginning, i.e. if the user sets up a port to output five data items, resetting the ARM will cause the first data item to be transfered at the next CLKIN signal no matter what the last data item transferred was. PDATA commands will not be recognized until ARM is OFF.

PS[ETUP] m

Show the condition of all the setup variables.

RE[AD] m.p[,B | ,H]
RE[AD] m.p,W[,B | ,H]
RE[AD] m.p,Xx[,Xx...]

Read data from the specified ports with no handshaking. An immediate read of the specified ports will occur and an SRQ will be sent to the GPIB when completed. Data for each requested port will be sent to the user in the order of lowest port to highest. All data will be in the form requested. A READ from a synchronous port will not read the data lines. Instead, it will return whatever the last data was that was latched into the port by CLKIN. A 'W' specifies that the port is in the 16 bit WORD mode. Word operations may only occur on even numbered ports and will place the least significant eight bits in the even port and the most significant eight bits in the following odd numbered port. An 'X' specifies the BIT mode of operation. Any number of bits from X0 through X7 may be specified. Although all eight bits of the port are read, only those bits that have been requested will be printed. The bits will be printed in msb to lsb order. The format defaults to binary when the BIT mode is used. The default MODE is byte mode. An 'H' specifies that the output format for the data is to be hexadecimal, a 'B' specifies that the output mode is binary, and the default output mode is decimal.

WR[ITE] m.p[,yd0,yd1,...,yd11]
WR[ITE] m.p[,W][,wd0,wd2,...wd10]
WR[ITE] m.p[,X][,xd0;xd1;.....;xd11]

Write data to the specified port with no handshaking. This will cause all specified data to be written immediately to the port with no handshaking, one data item per port. Data is in low port to high port order. A 'W' will put the port in the WORD mode. Word sized operations may only occur on even numbered ports and will place the least significant 8 bits in the even port and the most significant 8 bits in the following odd numbered port. An Lx or Hx specifies the port is in the BIT mode. The data from the ports most recent READ or RIGHT will be ORed (if Hx) or ANDed (if Lx) with the bit data then written to the port. An 'X' will cause the data to be ORed or ANDed with zero instead of the previous value.

PD[ATA] m1[.p],...,mn[.p]

Output data for specifed ports in the order given. Each ports data will be

preceeded with the port number and a colon. For each synchronous port specified, the data will be output in the format defined by the last setup command for that port. For each asynchronous port, the data will be output in the same format used by the last read or write command to that port.

DEFINITION OF TERMS: All terms in capital letters are to be used directly in the command syntax. All lower case letters are to be replaced by a numeric value in the range specified.

B ==:	Specifies a BINARY format for output data.
Bv==:	Specifies a BINARY format for input data.
H ==:	Specifies a HEXADECIMAL format for output data.
Hv==:	Specifies a HEXADECIMAL format for input data.
Hx==:	HI written to bit number x (0-7) for the specified port.
Lx==:	LOW written to bit number x (0-7) for the specified port.
W ==:	Set WORD mode active & clear the buffer for this port.
X ==:	Set BIT mode active & clear the buffer for this port.
Xx==:	Sets which bits (X0 - X7) to display for this read port.
Y ==:	Set BYTE mode active & clear the buffer for this port.
d ==:	8 or 16 bit data in the form: v ==: Decimal format Bv ==: Binary format Hv ==: Hexadecimal format
m ==:	Module logical address (1-11).
n ==:	Number of ports to make synchronous (0-12).
p ==:	Port number (0-11) or range of ports in the form (s | low_s-high_s).
q ==:	Number of buffered READ operations to perform for this port.
s ==:	single port number (0-11).
v ==:	Decimal, hexadecimal, or binary numeric value.
x ==:	Bit number (0-7).
wd==:	16 bit data in the form v | Bv | Hv where $0 \leq v \leq 65535$
xd==:	1 bit data in the form Lx | Hx[,Lx | ,Hx]
yd==:	8 bit data in the form v | Bv | Hv where $0 \leq v \leq 255$
[]==:	All entries in brackets are optional.
| ==:	Select one of the choices given.

EXAMPLE A: An example of SETUP READ/WRITE commands (1260-14 in slot 1) using the Synchronous mode of operation.

1. SE 1.SY,2<CR><LF>	Sets up 2 ports for SYNC mode (starting at port 0); ports 2-11 will

	be in ASYN mode.
2. SE 1.RE 0,8<CR><LF>	Reads data into 1st 8 buffer locations.
3. SE 1.WR,1,Y,1,2,3,4<CR><LF>	Writes data to the 1st 4 buffer locations.
4. SE 1.WR,1,5,6,7,8<CR><LF>	Writes data to the next 4 buffer locations.

Now the 1260-14 has data in the 1st 8 buffer locations for port 1.

5. SE AR, ON<CR><LF>	Enable SYNC handshake of READ/WRITE.

Now 8 clock inputs occur each one causing a READ/WRITE to/from ports 0/1 for the 8 programed buffer locations. The 8th clock input will cause an SRQ and the 1260-14 will dis-arm and stop handshaking till it has been (optionally re-programmed then) re-armed.

6. PD 1.0<CR><LF>	Read the data from the 1260-14.

Now repeat steps 3-6 above using a new set of WRITE data or just re-arm repeat the above test.

EXAMPLE B: An example of SETUP READ/WRITE commands (1260-14 in slot 1) using a mixture of Synchronous and Asynchronous modes of operation.

1. SE 1.SY,1<CR><LF>	Set 1 port starting at port 0 for SYNC mode (port 0 will be used as a handshake control port while ports 1-11 will be data ports), ports 1-11 will be in ASYN mode.

For this example port 1 will do ASYN WRITEs and ports 2-5 ASYN READs.

2. SE 1.WR,0,Y,1<CR><LF>	Write data (1) for port 0; buffer length = 1.
3. WR 1.1,22<CR><LF>	Write data (22) to port 1.
4. SE AR, ON<CR><LF>	Enable SYNC handshake on port

0.

Now 1 clock input will occur causing the 1260-14 to dis-arm and stop handshaking.

5. RE 1.2-5,H<CR><LF>	Read data in Hex format from ports 2-5.
6. WR 1.1,44<CR><LF>	Write new data (44) to port 1.
7. SE AR, ON<CR><LF>	Enable SYNC handshake on port 0.

Now 1 clock input will occur causing the 1260-14 to dis-arm and stop handshaking. Loop steps 5-7 as above to repeat WRITE/READ operation.

3.5.10.4 1260-14 Pin Configuration

3.5.10.4.1 The 1260-14 Digital I/O module has 96 channels, grouped as 12 eight bit ports available at front panel connectors J1 through J4. Each port may be configured as an input or an output.

3.5.10.4.2 Refer to Figure 3-10 for the pin configurations of the 50 and 60 pin connectors on the front panel of the 1260-14 and to Table 3-4 for the correspondance between the physical channel assignments and the port numbers used in the 1260-14 command codes.

3.5.10.4.3 Refer to Table 3-5 for the correspondance between the 1260-14 front panel pins and the signal names and descriptions.

Table 3-5, 1260-14 Channels and Ports

Channel no.	Port no.	Tri-state control
1 - 8	0	EDRVR0
9 - 16	1	EDRVR1
17 - 24	2	EDRVR2
25 - 32	3	EDRVR3
33 - 40	4	EDRVR4
41 - 48	5	EDRVR5
49 - 56	6	EDRVR6
57 - 64	7	EDRVR7
65 - 72	8	EDRVR8
73 - 80	9	EDRVR9
81 - 88	10	EDRVR10
89 - 96	11	EDRVR11

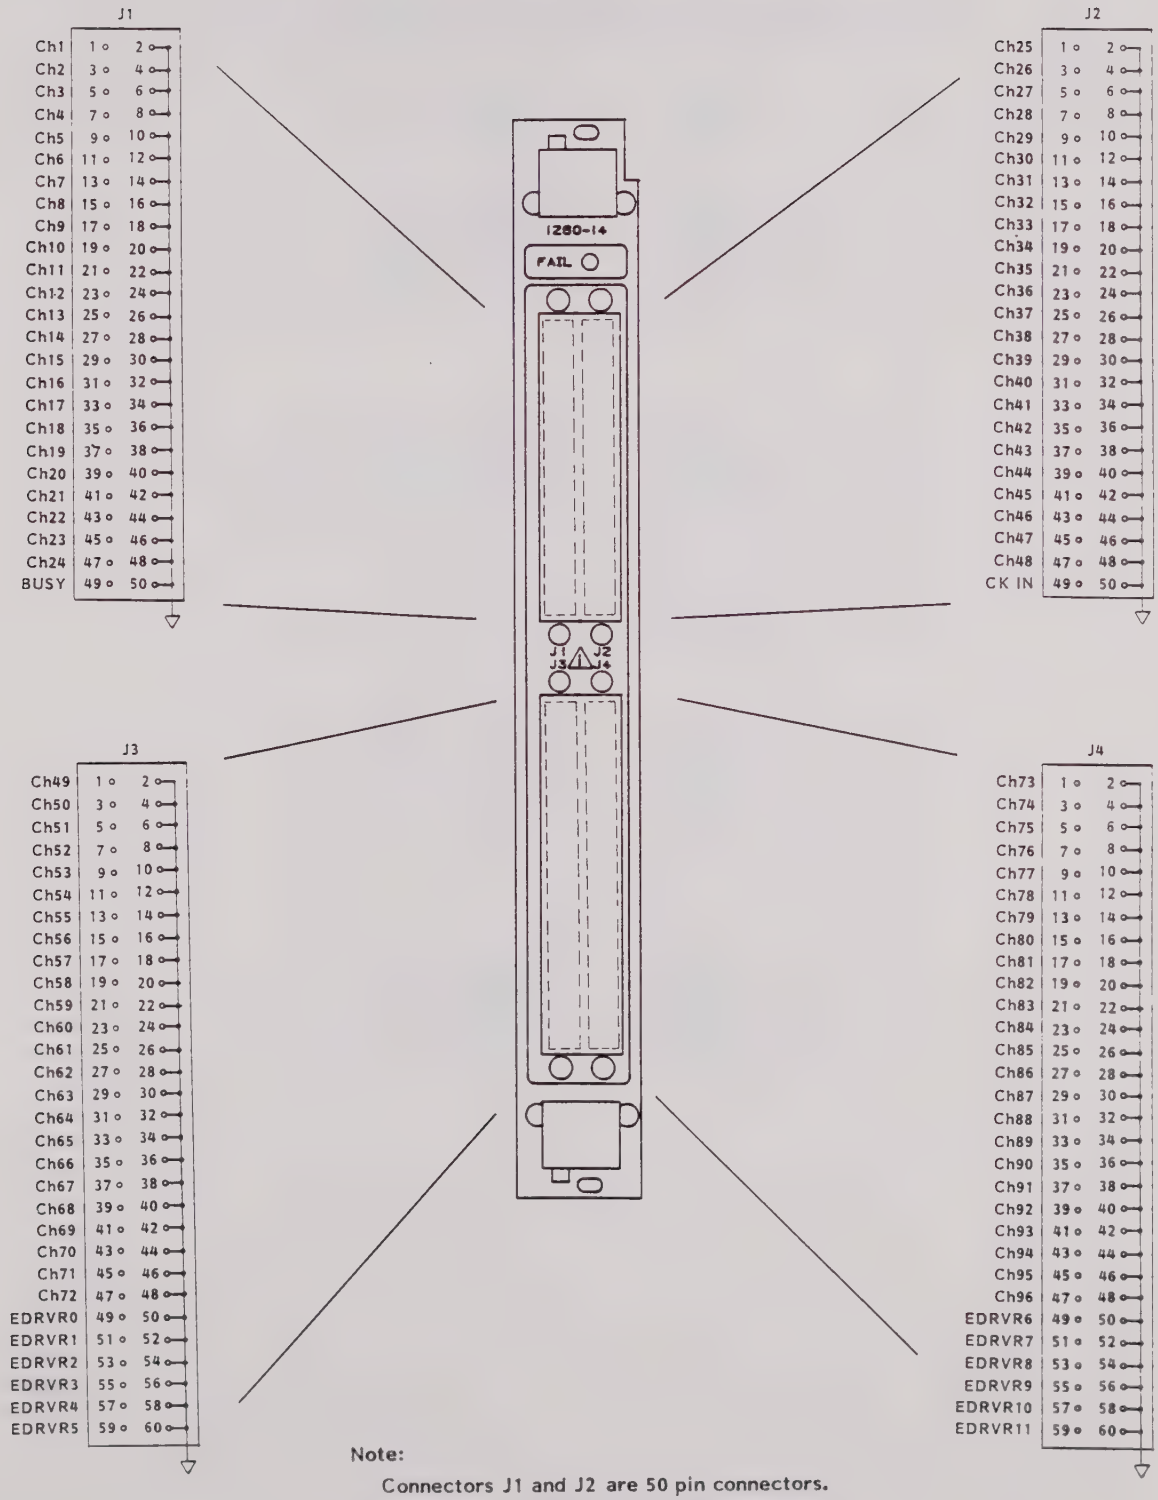

Note:

Connectors J1 and J2 are 50 pin connectors.
Connectors J3 and J4 are 60 pin connectors.

Figure 3-10, 1260-14 Front Panel and Pin Configuration

Table 3-5, 1260-14 Pins, Signals and Descriptions

J1 Pin	Row A Signal	Description
1	CH1	Channel 1 I/O
3	CH2	Channel 2 I/O
5	CH3	Channel 3 I/O
7	CH4	Channel 4 I/O
.	.	.
.	.	.
.	.	.
45	CH23	Channel 23 I/O
47	CH24	Channel 24 I/O
49	BSY	BUSY Handshake output.

J1 Pin	Row B Signal	Description
2	GND	Channel 1 RTN
4	GND	Channel 2 RTN
6	GND	Channel 3 RTN
8	GND	Channel 4 RTN
.	.	.
.	.	.
.	.	.
44	GND	Channel 22 RTN
46	GND	Channel 23 RTN
48	GND	Channel 24 RTN
50	GND	BUSY Signal return

Table 3-5, 1260-14 Pins, Signals and Descriptions(Cont.)

J2 Pin	Row A Signal	Description
1	CH25	Channel 25 I/O
3	CH26	Channel 26 I/O
5	CH27	Channel 27 I/O
7	CH28	Channel 28 I/O
.	.	.
.	.	.
.	.	.
45	CH47	Channel 47 I/O
47	CH48	Channel 48 I/O
49	BSY	CKIN Handshake output.

J2 Pin	Row B Signal	Description
2	GND	Channel 25 RTN
4	GND	Channel 26 RTN
6	GND	Channel 27 RTN
8	GND	Channel 28 RTN
.	.	.
.	.	.
.	.	.
44	GND	Channel 46 RTN
46	GND	Channel 47 RTN
48	GND	Channel 48 RTN
50	GND	CKIN Signal return

Table 3-5, 1260-14 Pins, Signals and Descriptions(Cont.)

J3 Pin	Row A Signal	Description
1	CH49	Channel 49 I/O
3	CH50	Channel 50 I/O
5	CH51	Channel 51 I/O
7	CH52	Channel 52 I/O
.	.	.
.	.	.
.	.	.
45	CH71	Channel 71 I/O
47	CH72	Channel 72 I/O
49	EDRVR 0	Driver Enable 0
51	EDRVR 1	Driver Enable 1
53	EDRVR 2	Driver Enable 2
55	EDRVR 3	Driver Enable 3
57	EDRVR 4	Driver Enable 4
59	EDRVR 5	Driver Enable 5

J3 Pin	Row B Signal	Description
2	GND	Channel 49 RTN
4	GND	Channel 50 RTN
6	GND	Channel 51 RTN
8	GND	Channel 52 RTN
.	.	.
.	.	.
.	.	.
44	GND	Channel 70 RTN
46	GND	Channel 71 RTN
48	GND	Channel 72 RTN
50	GND	EDRVR0 RTN
52	GND	EDRVR1 RTN
54	GND	EDRVR2 RTN
56	GND	EDRVR3 RTN
58	GND	EDRVR4 RTN
60	GND	EDRVR5 TRN

Table 3-5, 1260-14 Pins, Signals and Descriptions(Cont.)

J4 Pin	Row A Signal	Description
1	CH73	Channel 73 I/O
3	CH74	Channel 74 I/O
5	CH75	Channel 75 I/O
7	CH76	Channel 76 I/O
.	.	.
.	.	.
.	.	.
45	CH95	Channel 95 I/O
47	CH96	Channel 96 I/O
49	EDRVR6	Driver Enable 6
51	EDRVR7	Driver Enable 7
53	EDRVR8	Driver Enable 8
55	EDRVR9	Driver Enable 9
57	EDRVR10	Driver Enable 10
59	EDRVR11	Driver Enable 11

J4 Pin	Row B Signal	Description
2	GND	Channel 73 RTN
4	GND	Channel 74 RTN
6	GND	Channel 75 RTN
8	GND	Channel 76 RTN
.	.	.
.	.	.
.	.	.
44	GND	Channel 94 RTN
46	GND	Channel 95 RTN
48	GND	Channel 96 RTN
50	GND	EDRVR6 RTN
52	GND	EDRVR7 RTN
54	GND	EDRVR8 RTN
56	GND	EDRVR9 RTN
58	GND	EDRVR10 RTN
60	GND	EDRVR11 TRN

3.5.10.4.4 When operating as an output, the port may be tri-stated under either software or hardware control, as shown in Figure 3-11. If the EDRVR(n) signal is not tied to a logic level via the user interface, internal pull-up resistors act to enable the drivers for port (n).

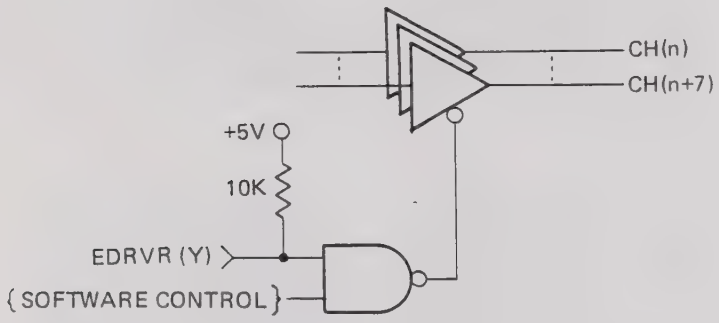

Figure 3-11, 1260-14 Tri-state Control

3.5.10.5 **1260-14 Operating Modes**

3.5.10.5.1 The 1260-14 has three operating modes available. These are:

1) Synchronous
2) Asynchronous
3) Mixed synchronous and asynchronous

3.5.10.5.2 There is a limitation placed on the 1260-14 in the mixed synchronous and asynchronous mode that synchronous and asynchronous transfers cannot occur simultaneously.

3.5.10.6 **1260-14 Handshaking mode**

3.5.10.6.1 The 1260-14 has a two wire handshake mode available for the control of synchronous I/O transactions. The polarity of the handshake lines is programmable for both the BUSY and CLKIN lines. Refer to Figure 3-12 for the timing diagrams of the input and output handshaking modes available in the 1260-14.

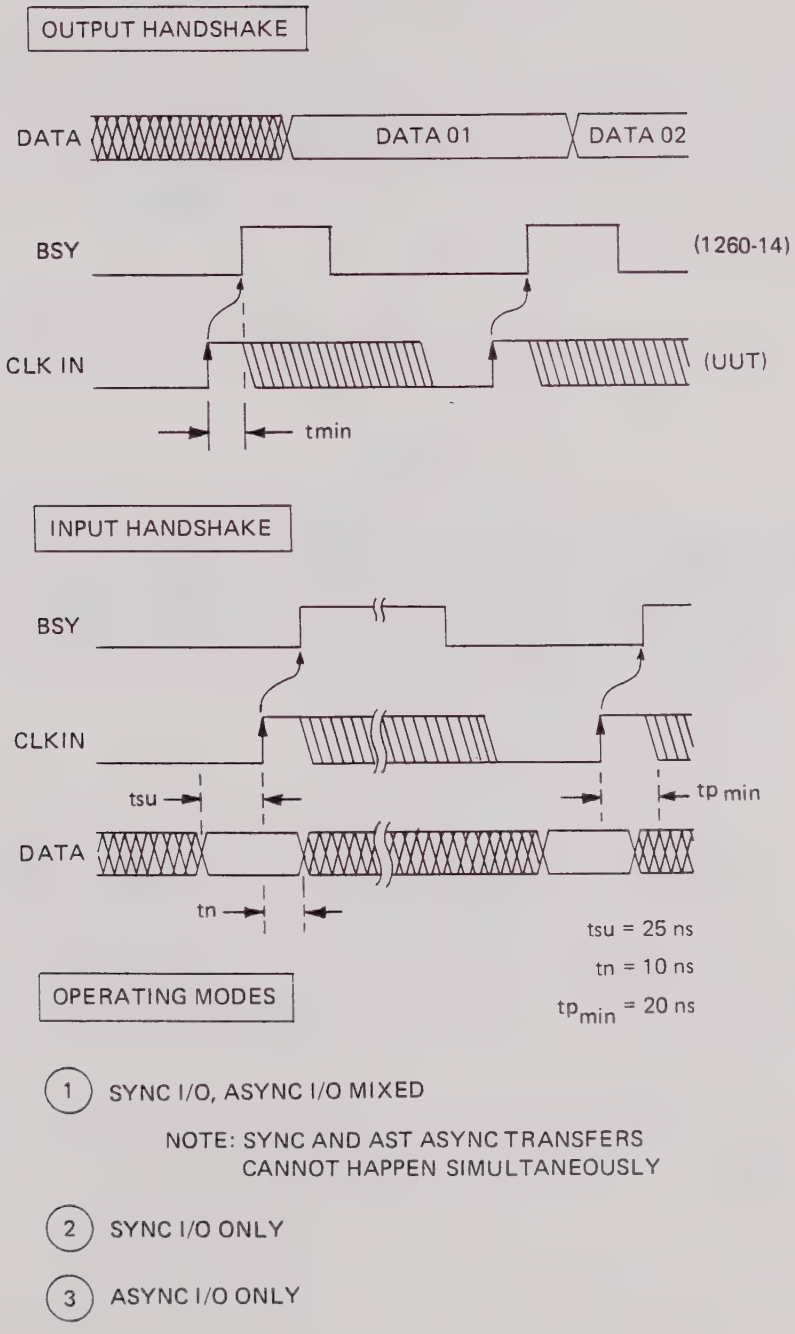

Figure 3-12, 1260-14 Input and Output Handshake modes

3.5.11 1260-13 Module Specific Syntax

3.5.11.1 The module specific syntax for the 1260-13 is required in the use of the OPEN and CLOSE commands. It will also appear in the data output by the 1260 Series Master in response to the PDATAOUT and PSETUP commands.

3.5.11.2 The Module Specific Syntax for the 1260-13 module is as follows:
<module address>.<channel>

where <module address> is the card address of the 1260-13
<channel> is the channel number to be switched; he valid values for <channel> range from 0 to 39

NOTE

The <module address> used here is NOT the VXIbus defined logical address of the 1260 Series Master. It is peculiar to the 1260 Series and describes the switching module in relation to the 1260 Series Master. This address corresponds to the binary value of the switch setting of SW1 on the module PCB.

3.5.11.3 Configuration Setting for the 1260-13

3.5.11.3.1 The 1260-13 Signal Switching/Relay Actuator module provides 40 independent channels of DPST switching. All four pins of each DPST relay are accessible through the front panel allowing each channel to function independently. Each channel features mounting holes to allow the addition of a series and shunt element such as arc suppressor for contact protection, filter, etc. It also provides mounting holes for jumpers to allow the configuration of custom relay switching networks. The module permits switching up to 2 amps and 220 volts DC or 250 volts rms per channel.

A total of 200 pins are accessible through the front panel connectors, 22 of which are not used. Each channel is assigned 4 pins, A, B, C and D, as shown below.

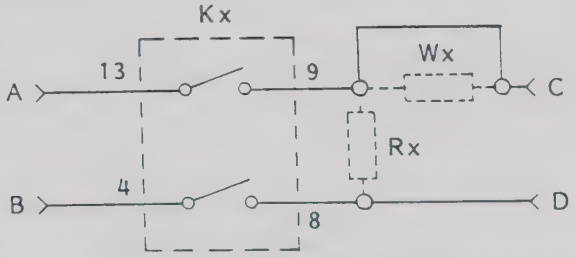

The corresponding pin assignments of the 4 pins for each channel is tabulated on Table 3-6.

3.5.11.4 **1260-13 Connector Pin Configuration**

3.5.11.4.1 Refer to Figure 3-13 below for the pin configurations of the front panel connectors J200 to J203 on the 1260-13. (J200 to J203 are Racal-Dana part number 601856-050. The mating connectors are Racal-Dana part number 601855-050 and mating pins are Racal-Dana part number 601857)

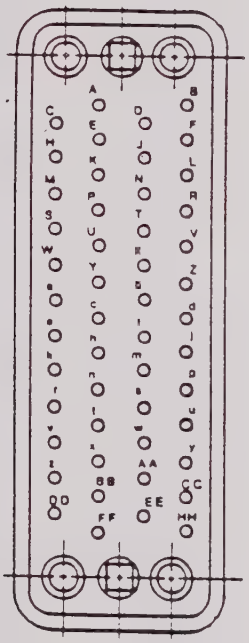

Figure 3-13, 1260-13 J200-J203 Pin Configurations

Table 3-6, 1260-13 "A, B, C and D" Assignments

CHANNEL NO.	Pin A	Pin C	Pin B	Pin D
00	J200-s	J200-p	J200-r	J200-n
01	J200-m	J200-j	J200-k	J200-h
02	J200-f	J200-d	J200-e	J200-c
03	J200-b	J200-Z	J200-a	J200-Y
04	J200-X	J200-V	J200-W	J200-U
05	J200-T	J200-R	J200-S	J200-P
06	J200-N	J200-L	J200-M	J200-K
07	J200-J	J200-F	J200-H	J200-E
08	J201-f	J201-d	J201-e	J201-c
09	J201-b	J201-Z	J201-a	J201-Y
10	J201-X	J201-V	J201-W	J201-U
11	J201-T	J201-R	J201-S	J201-P
12	J201-N	J201-L	J201-M	J201-K
13	J201-J	J201-F	J201-H	J201-E
14	J200-EE	J200-CC	J200-DD	J200-BB
15	J200-AA	J200-y	J200-z	J200-x
16	J202-X	J202-V	J202-W	J202-U
17	J202-T	J202-R	J202-S	J202-P
18	J202-N	J202-L	J202-M	J202-K
19	J202-J	J202-F	J202-H	J202-E
20	J201-EE	J201-CC	J201-DD	J201-BB
21	J201-AA	J201-y	J201-z	J201-x
22	J201-w	J201-u	J201-v	J201-t
23	J201-s	J201-p	J201-r	J201-n
24	J203-N	J203-L	J203-M	J203-K
25	J203-J	J203-F	J203-H	J203-E
26	J202-EE	J202-CC	J202-DD	J202-BB
27	J202-AA	J202-y	J202-z	J202-x
28	J202-w	J202-u	J202-v	J202-t
29	J202-s	J202-p	J202-r	J202-n
30	J202-m	J202-j	J202-k	J202-h
31	J202-f	J202-d	J202-e	J202-c
32	J203-EE	J203-CC	J203-DD	J203-BB
33	J203-AA	J203-y	J203-z	J203-x
34	J203-w	J203-u	J203-v	J203-t
35	J203-s	J203-p	J203-r	J203-n
36	J203-m	J203-j	J203-k	J203-h
37	J203-f	J203-d	J203-e	J203-c
38	J203-b	J203-Z	J203-a	J203-Y
39	J203-X	J203-V	J203-W	J203-U

Table 3-6, 1260-13 "A, B, C and D" Assignments (Cont.)

COM	A	B
0	J200-D	J200-C
1	J200-w	J200-v
2	J201-m	J201-k
3	J202-b	J202-a
4	J203-T	J203-S

Chassis ground

J200-A	J200-FF
J201-A	J201-FF
J202-A	J202-FF
J203-A	J203-FF

3.5.11.5 Figure 3-14 shows a 1260-13 channel with a series and shunt element associated with each channel. The series elements are designated W1 to W40 while the shunt elements are designated R1 to R40. To allow immediate use of the module, a zero-ohm jumper is installed on all positions for W1 to W40. On the other hand, no component is installed on R1 to R40.

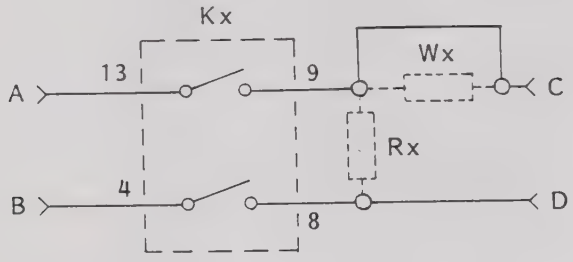

Figure 3-14, 1260-13 Channel

To install a shunt element at a particular channel, locate the "R" position which has a numerical assignment that is one higher than the channel number. For example, the shunt element associated with CH 19 will have the designation R20. The same procedure applies to the installation of a series element except instead of an "R" designation, a series element will be installed on a "W" position. Since the module is shipped with jumpers installed on W1 to W40, installation of a series element will first require the removal of the jumper on the location of interest. Fig. 3-15 summarizes the components associated with each channel. It also shows how the series and shunt elements are connected to the relay which is useful when the elements being installed have associated polarities.

Custom relay switching networks can be implemented by using jumpers and mounting holes on the module. Referring to Fig. 3-16, mounting holes are provided on the "A" and "B" side of each relay. In addition, a pair of "common" lines with mounting holes run alongside each column of 8 relays. These lines can be used to implement a multiplexer using the 8 adjacent relays. For example, to implement an 8 x 1 multiplexer using K1 to K8, use jumpers to connect E1-1 to E1-2, E2-1 to E2-2, ..., E16-1 to E16-2 (See Fig. 3-16). K1 to K8 now composes a 2-wire, 8 x 1 multiplexer with COM0A and COM0B as the common pair. The other 4 columns of 8 relays can be configured in the same manner to provide a total of five 8 x 1 multiplexers. The pin assignment of the common pairs is shown on Table 3-6.

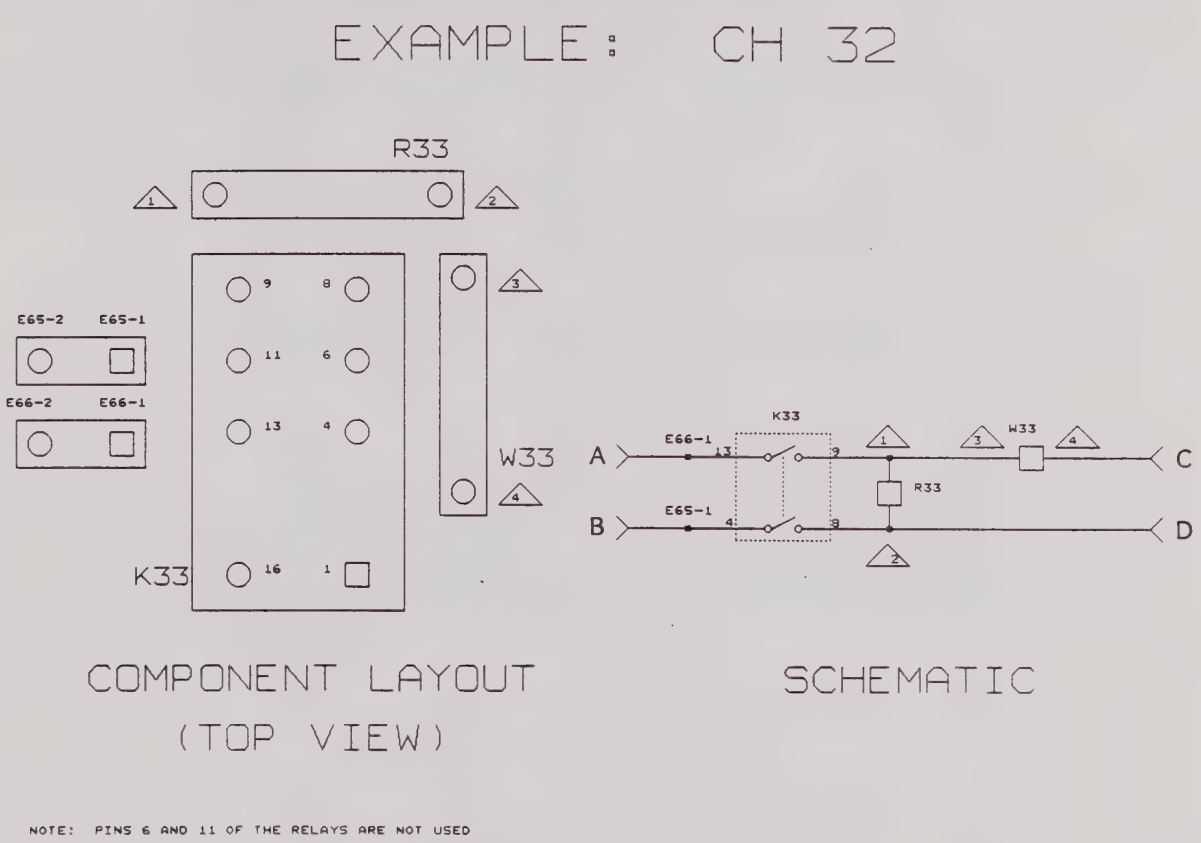

Figure 3-15, 1260-13 components per channel

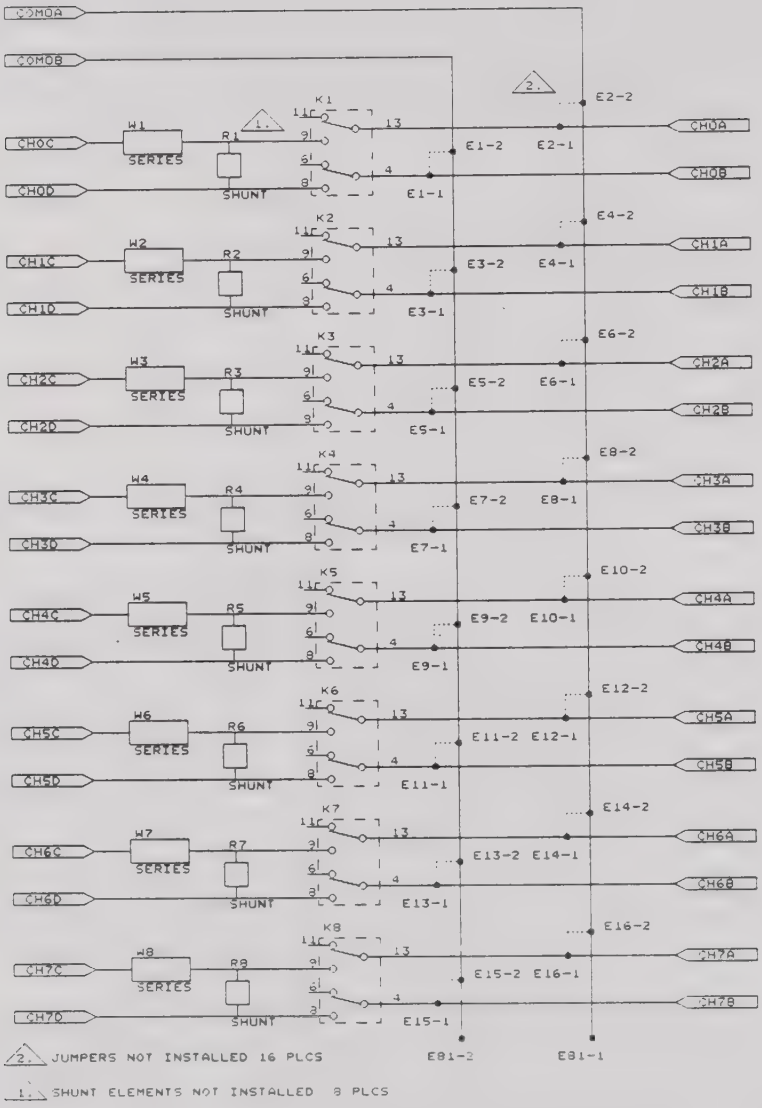

Figure 3-16, 1260-13 jumper locations

3.5.12 1260-35 Module Specific Syntax

3.5.12.1 The Module Specific Syntax for the 1260-35 is required in the use of the OPEN and CLOSE commands. It will also appear in data output by the 1260 Series Master in response to the PDATAOUT and PSETUP commands.

3.5.12.2 The Module Specific Syntax for the 1260-35 Signal Multiplexer/Scanner module is as follows:

<module address>.<channel number>

where <module address> is the card address of the 1260-35.

<channel number> is the reference number of the channel to be closed, value 0 - 96 in the two-wire mode and 0-47 in the four-wire mode.

NOTE

The <module address> used here is NOT the VXIbus defined logical address of the 1260 Series Master. It is peculiar to the 1260 Series and describes the switching module in relation to the 1260 Series Master. This address corresponds to the binary value of the switch setting of SW1 on the switching module PCB.

3.5.12.3 **1260-35 ID Byte**

3.5.12.3.1 Each configuration of the 1260-35 will respond to different sets of values for <channel number>. The set of values that the 1260-35 will respond to is controlled by switch 5 on DIP switch S1 on the 1260-35 PCB. The switch settings that correspond to the two configurations are as follows:

Model	Configuration	S1 Switch 5
1260-35A	four-wire	Off
1260-35B	Two-wire	On

3.5.12.3.2 The 1260-35 pin connections made by each <channel number> are defined in the channel closure (Table 3-8).

The 1260-35 Scanner / Multiplexer Module is a user configurable switching module that may be configured in ten different configurations. These are:

1) Sixteen 1 x 6 two wire scanner/multiplexers

2) Eight 1 x 6 four-wire scanner/multiplexers

3) Eight 1 x 12 two-wire scanner/multiplexers

4) Four 1 x 12 four wire scanner/multiplexers

5) Four 1 x 24 two-wire scanner/multiplexers

6) Two 1 x 24 four-wire scanner/multiplexers

7) Two 1 x 48 two-wire scanner/multiplexers

8) One 1 x 48 four-wire scanner/multiplexers

9) One 1 x 96 two-wire scanner/multiplexers

10) One 1 x 192 one-wire scanner/multiplexers

Refer to jumper installation table for the 1260-35.(Table 3-7)

3.5.12.3.4 In most of the above configurations the 1260-35 may be user configured to access an analog bus. The analog bus allows internal expansion for the configuration of larger scanner/multiplexers than the 1260-35 may achieve alone.

Table 3-7, 1260-35 Jumper Installation

The 1260-35 is dispatched from the factory with all jumpers fitted. This is the 1 (1 x 192) one-wire configuration. The following table gives the information necessary to configure the 1260-35 into all of it's different configurations. An X indicates that a jumper is to be fitted. An (X) indicates that the jumper is optional, depending in whether access to the analog bus is required. A blank indicates that no jumper is to be fitted.

	16(1x6) 2-wire	8(1x6) 4-wire	8(1x12) 2-wire	4(1x12) 4-wire	4(1x24) 2-wire	2(1x24) 4-wire	2(1x48) 2-wire	1(1x48) 4-wire	1(1x96) 2-wire
W2A,B							(X)	(X)	(X)
W3A,B			X	X	X	X	X	X	X
W4A,B					X	X	X	X	X
W5A,B			X	X	X	X	X	X	X
W6A,B							X	X	X
W7A,B									X
W8A,B			X	X	X	X	X	X	X
W9A,B					X	X	X	X	X
W10A,B			X	X	X	X	X	X	X
W11A,B						1(1x192) 1-WIRE ONLY--->			X
W12A,B			X	X	X	X	X	X	X
W13A,B					X	X	X	X	X
W14A,B			X	X	X	X	X	X	X
W15A,B									X
W16A,B							X	X	X
W17A,B			X	X	X	X	X	X	X
W18A,B					X	X	X	X	X
W19A,B			X	X	X	X	X	X	X
W20A,B							(X)	(X)	(X)

3.5.12.4 Analog Bus

3.5.12.4.1 The 1260-35 may be configured to acccess the analog bus by the fitting of jumpers. This access is "hard wired" and cannot be dynamically disengaged.

3.5.12.4.2 To connect and disconnect the 1260-35 to and from the analog bus, jumpers W2A, W2B, W20A, and W20B are fitted as necessary for the two or four-wire configuration, also refer to jumper installation table for the 1260-35.

3.5.12.4.3 Analog bus access is useful in the following configurations.

Two 1 x 48 two-wire scanner/multiplexers

One 1 x 48 four-wire scanner/multiplexers

One 1 x 96 two-wire scanner/multiplexers

One 1 x 192 one-wire scanner/multiplexers

3.5.12.4.4 The one wire mode is not supported by software. Although, scanning in the one-wire mode can be accomlished by utilizing non-vol memory locations. To execute a one wire mode, The appropriate channel of interest must be closed and the state of channel 96 must be defined.

3.5.12.4.5 See channel closure table for explanation of the state of channel 96. (Table 3-8)

Table 3-8, 1260-35 Channel Closure

Channel interconnect for 1, 2 and 4-wire modes.

1-wire mode:

<channel>	<channel> output	<channel> input
(channel 96 open)		
0 thru 95	always J202- B2	(see 2-wire mode channels 0-95 input pins b-side of channel)
(channel 96 closed)		
0 thru 95	always J202- B2	(see 2-wire mode channels 0-95 input pins a-side of channel)

Thus, a one 1 x 191 1-wire mode is acheived.

2-wire mode:

<channel>	<channel> output pins a / b (HI) (LO)	to	<channel> input pins a / b (HI) (LO)
0	J200- A30 / B30		J200- A29 / B29
1	J200- A30 / B30		J200- A28 / B28
2	J200- A30 / B30		J200- A27 / B27
3	J200- A30 / B30		J200- A26 / B26
4	J200- A30 / B30		J200- A25 / B25
5	J200- A30 / B30		J200- A24 / B24
6	J200- A23 / B23		J200- A22 / B22
7	J200- A23 / B23		J200- A21 / B21
8	J200- A23 / B23		J200- A20 / B20
9	J200- A23 / B23		J200- A19 / B19
10	J200- A23 / B23		J200- A18 / B18
11	J200- A23 / B23		J200- A17 / B17
12	J200- A16 / B16		J200- A15 / B15
13	J200- A16 / B16		J200- A14 / B14
14	J200- A16 / B16		J200- A13 / B13
15	J200- A16 / B16		J200- A12 / B12
16	J200- A16 / B16		J200- A11 / B11
17	J200- A16 / B16		J200- A10 / B10
18	J200- A9 / B9		J200- A8 / B8
19	J200- A9 / B9		J200- A7 / B7
20	J200- A9 / B9		J200- A6 / B6
21	J200- A9 / B9		J200- A5 / B5
22	J200- A9 / B9		J200- A4 / B4
23	J200- A9 / B9		J200- A3 / B3
24	J202- A30 / B30		J202- A29 / B29
25	J202- A30 / B30		J202- A28 / B28
26	J202- A30 / B30		J202- A27 / B27
27	J202- A30 / B30		J202- A26 / B26
28	J202- A30 / B30		J202- A25 / B25
29	J202- A30 / B30		J202- A24 / B24

30	J202- A23 / B23	J202- A22 / B22
31	J202- A23 / B23	J202- A21 / B21
32	J202- A23 / B23	J202- A20 / B20
33	J202- A23 / B23	J202- A19 / B19
34	J202- A23 / B23	J202- A18 / B18
35	J202- A23 / B23	J202- A17 / B17
36	J202- A16 / B16	J202- A15 / B15
37	J202- A16 / B16	J202- A14 / B14
38	J202- A16 / B16	J202- A13 / B13
39	J202- A16 / B16	J202- A12 / B12
40	J202- A16 / B16	J202- A11 / B11
41	J202- A16 / B16	J202- A10 / B10
42	J202- A9 / B9	J202- A8 / B8
43	J202- A9 / B9	J202- A7 / B7
44	J202- A9 / B9	J202- A6 / B6
45	J202- A9 / B9	J202- A5 / B5
46	J202- A9 / B9	J202- A4 / B4
47	J202- A9 / B9	J202- A3 / B3
48	J201- A30 / B30	J201- A29 / B29
49	J201- A30 / B30	J201- A28 / B28
50	J201- A30 / B30	J201- A27 / B27
51	J201- A30 / B30	J201- A26 / B26
52	J201- A30 / B30	J201- A25 / B25
53	J201- A30 / B30	J201- A24 / B24
54	J201- A23 / B23	J201- A22 / B22
55	J201- A23 / B23	J201- A21 / B21
56	J201- A23 / B23	J201- A20 / B20
57	J201- A23 / B23	J201- A19 / B19
58	J201- A23 / B23	J201- A18 / B18
59	J201- A23 / B23	J201- A17 / B17
60	J201- A16 / B16	J201- A15 / B15
61	J201- A16 / B16	J201- A14 / B14
62	J201- A16 / B16	J201- A13 / B13
63	J201- A16 / B16	J201- A12 / B12
64	J201- A16 / B16	J201- A11 / B11
65	J201- A16 / B16	J201- A10 / B10
66	J201- A9 / B9	J201- A8 / B8
67	J201- A9 / B9	J201- A7 / B7
68	J201- A9 / B9	J201- A6 / B6
69	J201- A9 / B9	J201- A5 / B5
70	J201- A9 / B9	J201- A4 / B4
71	J201- A9 / B9	J201- A3 / B3
72	J203- A30 / B30	J203- A29 / B29
73	J203- A30 / B30	J203- A28 / B28
74	J203- A30 / B30	J203- A27 / B27
75	J203- A30 / B30	J203- A26 / B26
76	J203- A30 / B30	J203- A25 / B25
77	J203- A30 / B30	J203- A24 / B24

78	J203- A23 / B23	J203- A22 / B22
79	J203- A23 / B23	J203- A21 / B21
80	J203- A23 / B23	J203- A20 / B20
81	J203- A23 / B23	J203- A19 / B19
82	J203- A23 / B23	J203- A18 / B18
83	J203- A23 / B23	J203- A17 / B17
84	J203- A16 / B16	J203- A15 / B15
85	J203- A16 / B16	J203- A14 / B14
86	J203- A16 / B16	J203- A13 / B13
87	J203- A16 / B16	J203- A12 / B12
88	J203- A16 / B16	J203- A11 / B11
89	J203- A16 / B16	J203- A10 / B10
90	J203- A9 / B9	J203- A8 / B8
91	J203- A9 / B9	J203- A7 / B7
92	J203- A9 / B9	J203- A6 / B6
93	J203- A9 / B9	J203- A5 / B5
94	J203- A9 / B9	J203- A4 / B4
95	J203- A9 / B9	J203- A3 / B3

96 (not used in 2-wire mode)

4-wire mode:

<channel>	refer to the following 2-wire channels for the input/output pins	<channel>	refer to the following 2-wire channels for the input/output pins
0	0,48	24	24,72
1	1,49	25	25,73
2	2,50	26	26,74
3	3,51	27	27,75
4	4,52	28	28,76
5	5,53	29	29,77
6	6,54	30	30,78
7	7,55	31	31,79
8	8,56	32	32,80
9	9,57	33	33,81
10	10,58	34	34,82
11	11,59	35	35,83
12	12,60	36	36,84
13	13,61	37	37,85
14	14,62	38	38,86
15	15,63	39	39,87
16	16,64	40	40,88
17	17,65	41	41,89
18	18,66	42	42,90
19	19,67	43	43,91
20	20,68	44	44,92
21	21,69	45	45,93
22	22,70	46	46,94
23	23,71	47	47,95

96 (not used in 4-wire mode)

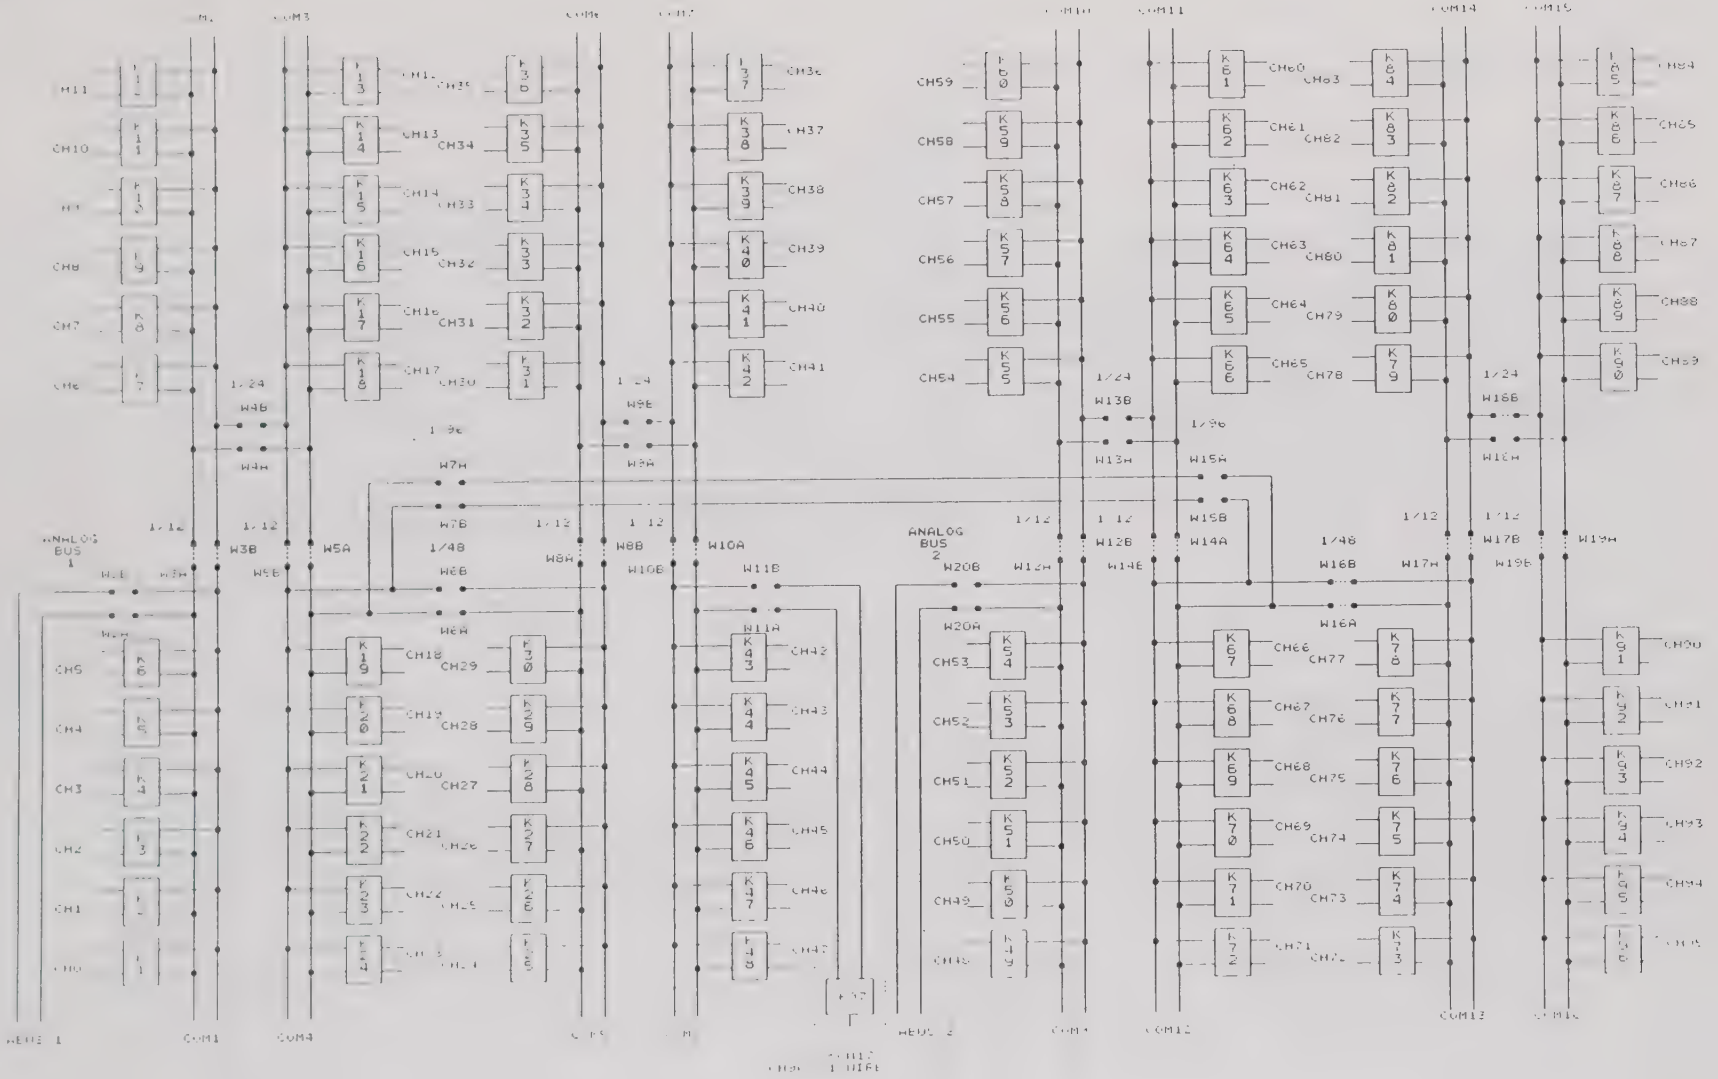

Figure 3-17, 1260-35 Block Diagram



Figure 3-18, 1260-35 Pin Connections

SECTION 4 THEORY OF OPERATION

4.1 Introduction

4.1.1 This section describes the theory of operation of a 1260 Series switching system as configured from a 1260-01 smart card and a 1260 Series switching module. The 1260-40 switching module is used as an example and the reference designators for that card are used in the circuit descriptions given in this section.

4.1.2 This section begins with a block diagram description of the switching system and then extends the description to a discussion of the circuit action that takes place in the 1260-01 and 1260-40 at the component level.

4.1.3 Functional Blocks

The 1260-01 switch controller board consists of the following functional blocks:

a. The microprocessor block

b. The VXIbus interface block

c. The Lbus interface block

The functional relationships between the blocks of the 1260-01 is illustrated in Figure 4-1. Switch configuration information is received from the VXIbus via the VXIbus interface and routed to the Microprocessor block. The commands received are interpreted by the Microprocessor block and the corresponding switch control information is transmitted to the appropriate 1260 switch module via the Lbus interface.

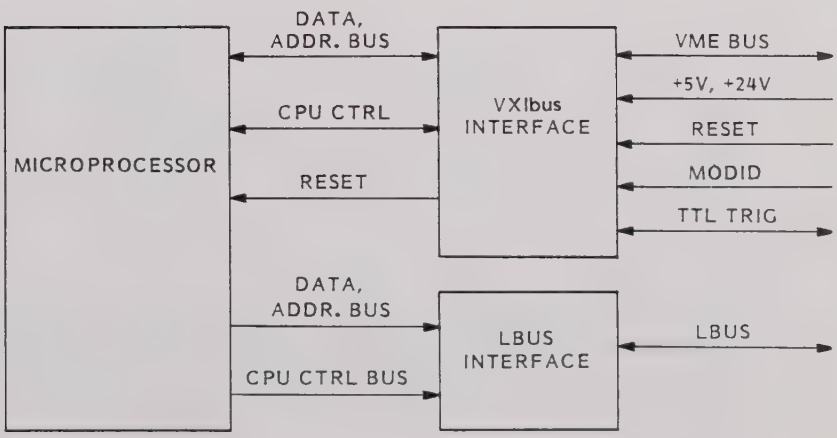

Figure 4-1, 1260 Series Smart Card block Diagram

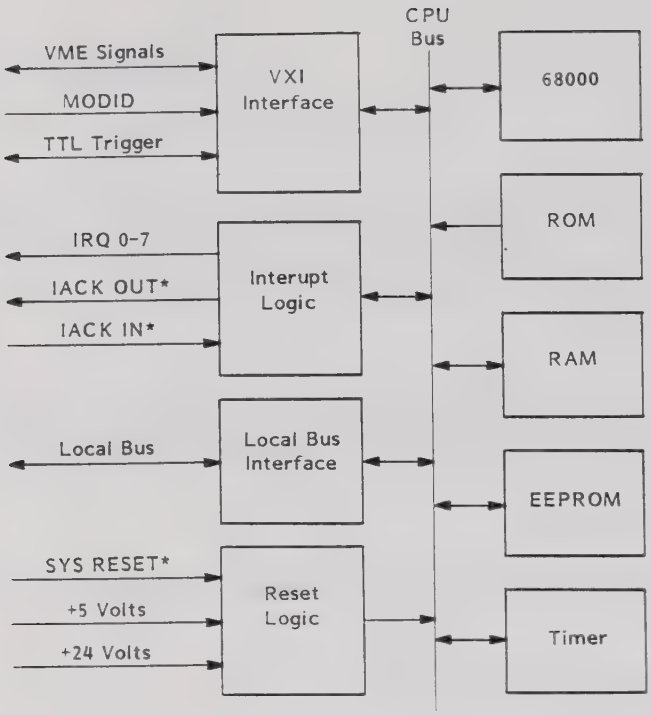

Figure 4-2, 1260 Series Microprocessor Block Diagram

4.2 Theory of Operation

4.2.1 Power Supplies

4.2.1.1 DC power for the 1260-01 is derived from the VXI backplane via its host switch card. A +5V supply is used to operate all of the logic on the Master and Slave boards. A +24V supply is used to supply relay coil drive and the +24V supply is monitored by U11b on the 1260-01 to ensure that the relay coil drive voltage is available.

4.2.2 Microprocessor Block

4.2.2.1 The microprocessor block accepts commands from the VXIbus, interprets the commands and sends the required data to the appropriate relay card via the Lbus interface. A simplified block diagram is given in Figure 4-2. The microprocessor is a Motorola MC68000 operating at 8 MHz. This block also contains ROM, RAM, EEPROM, address decoding, interrupt logic, a counter/timer and general purpose input and output ports.

4.2.2.2 The program memory consists of two devices, U33 and U34. These devices provide 64K by 16 (optionally 128K by 16) of program memory as selected by W2. The OE\ of U33 and U34 is controlled by a PAL, U24. U24 is programmed such that:

MLOE\ goes low when R/W\ is high and LDS\ is low .

MHOE\ goes low when R/W\ is high and UDS\ is low.

4.2.2.3 The system RAM consists of U114 and U115. These devices provide 32K by 16 of memory. The OE\ of U114 and U115 is also derived from U24 in addition to their WR\ signals. U24 is programmed such that:

MLWE\ goes low when R/W\ and LDS\ are low .

MUWE\ goes low when R/W\ and UDS\ are low.

4.2.2.4 The EEPROM is an 8K by 8 device and is configured for 6800 peripheral timing. PWE\ goes low when R/W\ is low and the clock E is high. The non-volatile memory's CE\ is qualified by U21a with NVENB\ which is generated by the reset circuitry. This prevents false writes to the EEPROM during power up and power down sequences ensuring memory integrity. The time delay between writes to the EEPROM is controlled by the system software.

4.2.2.5 Address decoding is performed by a PAL, U23. This device provides the necessary logic to map the other devices into the microprocessors memory map. This device also provides the necessary DTACK\ or VPA\ signals for the microprocessor depending on whether the selected device is a 16 bit device or a 6800 peripheral. LDTACK\ is an input to U23 and is used to insert wait states when an Lbus cycle is accessed. The fourth and final function provided by U23 is to detect an interrupt cycle from the states of FC0\ and FC1\ and dropping the VPA\ line.

4.2.2.6 The microprocessor is configured so that it can support up to seven interrupts without requiring the polling of devices to determine the interrupt. These seven sources are encoded onto three lines by U108 which in turn drives the IPL0 - 2 lines of the microprocessor.

4.2.2.7 All time dependent tasks are controlled by a counter\timer which is a Motorola 6840 CTC. This is mapped as a 6800 peripheral. The timer is configured by the microprocessor and generates interrupts at a programmed interval. During normal operation, the timer is programmed to interrupt the microprocessor every 10 mS. Note that the interrupt response latency of the microprocessor is expected to vary by some small amount.

4.2.2.8 The microprocessor system has one general purpose input port and two

general purpose output ports, of 8 lines each. These ports are mapped as part of the VXIbus interface and use 6800 timing. The input port, U110, is used to read the status of the VXIbus interface state machine and the status of the +24V on the backplane in conjunction with U11b. This port also reads the status of the VXIbus chassis receiver mechanism safety switches if fitted and the checkin signal used to put the microprocessor in self test mode. The safety switch input is protected by R111, Q3 and Q4, while R112 acts as a pullup when the switches are not used. U106 is an output port which is used along with U1, U2 and U3 to select which VXIbus defined TTLTRG line will be used to trigger the switching system. U109 is an output port to the VXIbus state machine that clears the trigger input latch, the trigger output and the check output used in self test mode.

4.2.3 The Reset Circuits

4.2.3.1 The reset circuit provides a reliable signal under the most difficult situations. The circuit consists of a voltage reference, VR1, which provides a nominal 1.23 voltage level, U11d, which senses when the +5V supply drops below 4.5 volts and discharges the reset timing capacitor, C2, via Q2. As the +5V supply is applied to the board, the output of U11d is held low until the supply reaches a nominal 4.75 volts, at which time it goes high. This signal is inverted by U11c which in turn drives Q2. As long as the +5V line is below +4.75 volts, the gate of Q2 is held high and prevents C2 from charging. If, at any time the +5V supply drops below 4.5 volts due to the hysteresis provided by Z4d, the gate of Q2 is again pulled high and the transistor discharges C2, restarting a reset cycle. CR1 holds the voltage across C2 to 0.6 volts above the reference voltage to reduce the time required to discharge the capacitor. U11a senses the voltage across the reset timing capacitor C2 and drives the HALT\ line, from which all other reset signals are derived. This comparator also provides hysteresis due to Z4c to prevent oscillation as the capacitor voltage crosses the reference voltage. The HALT\ signal is the hardwired logical-OR of three signals. Q1 buffers the reset signal from the VXIbus backplane and drives HALT\. U111d buffers the low +5V sense signal from U11d and also drives HALT\. U111a inverts HALT\ to provide the non-inverted RESET signal while U111c buffers HALT\ to provide the board's inverted RESET\ signal. U111b and Q100 provide a high powered BPRST\ signal for the switching cards in the 1260 Series switching system via the Lbus. The +24V supply from the backplane is divided by Z2b, Z2c and R102 and compared to the reference voltage by U11b. This comparator drives the general purpose input port which is read by the microprocessor.

4.2.4 The Lbus Interface

4.2.4.1 The Lbus interface is the vehicle through which the microprocessor controls the relay cards in the system. It is a state machine which transmits the microprocessor's address and data serially through the Lbus to the 1260 Series switching modules in the switching system. The state machine makes

the transfer of data to and from the relay latches look as though they are memory mapped in the microprocessors address space, and because of the ability to add wait states to the microprocessors's bus cycle, this process is entirely transparent to the user.

4.2.4.2 The Lbus interface state machine is implemented in a master and slave configuration, where the master is part of the microprocessor card and slaves are part of each relay card. The master state machine is implemented in two 22V10 PALs, three shift registers and three differential line drivers. U14 is the primary state machine and controls the state transitions for all data transfer activities. The master state machine has 27 states, where state S0 is the dormant state. When the state machine detects that its select line (LBUS\) and AS\ input are both low, then it will proceed to state S1, otherwise it will remain at state S0. During state S1 LD/SH\ is lowered and the 13 lowest address lines are loaded into U22 and U112. During states S2 and S14 the address data is shifted through a multiplexer, U13, and line driver U4 onto the Lbus. This data is received by all relay cards in the system and the four most significant bits of the 13 are used to select a specific card.

4.2.4.3 If the microprocessor was executing a write cycle, the data would be loaded into data shift register U12 during state S1 and this register would be held in its hold mode until state S18 where it is allowed to shift its contents out via the multiplexer, U13, and line driver U4 to the Lbus. Alternatively, if the microprocessor was executing a read cycle, then data shift register U12 would shift in the data from the slave state machine during states S17 through S24 and hold the data for states S25 and S26 to allow the microprocessor to read the data back. In both cases, the state machine generates the LDTACK\ signal for the microprocessor, which is combined with the other DTACK\ signals in the address decoder PAL U23, making data transfers to the slaves transparent to the microprocessor program.

4.2.4.4 Each slave relay card has a slave state machine. These state machines track the master state machine during the address transfer portion of a data transfer cycle. The slaves receive five signals from the master which are:
a. Clock, which only toggles during a transfer cycle to reduce noise induced into the relay cards.

b. A/D, which distinguishes between address and data transfers.

c. R/W, which distinguishes between read and write cycles.

d. STROBE, which tranfers the newly written data into the relay latches at the end of a write cycle.

e. DATA, which is a bidirectional line for tranfering address and data between master and slaves.

4.2.4.5 The slave state machines in the system remain dormant until the master needs to transfer data to or from one of them. The master applies a clock signal to the Lbus and raises the A/D line to indicate the start of a transfer. As a result the slave state machines will lag the master by one state and therefore has only 26 states. Note that the following description of the slave state machines uses the 1260-40 switching module as an example and the reference designators refered to apply to this assembly only. The principles of operation are, however, identical for all relay assemblies within the 1260 Series.

4.2.4.6 The slave state machine is implemented in a 22V10 PAL, U52, and it tracks the states and provides the control signals for the switching module. When U52 receives a clock signal and A/D is high, it proceeds from state S0 to S1 through to S13 and starts clocking the address data into shift registers U62 and U61 using the CLKADDR signal. From state S14 to the end of the transfer, CLKADDR remains high, maintaining the address data at the shift register's outputs. The four highest address bits transfered to the slave are routed to a comparator, U56, and compared to the board address as set by SW1. If there is a match, BOARDENA goes high indicating that the data to be read or written pertains to this card. BOARDENA is read by the state machine U52 and if it is high during state S14 then the state machine will proceed to state S15. If it is not, then it will return to state S0.

4.2.4.7 If the state machine proceeds to state S15 and a write cycle is being executed, then CLKDENA goes high from state S16 until S21 and U53 gates its CLOCK input on and drives the CLKIN signal. CLKIN is gated to the correct input shift register through U54 and U55 as determined by the lower order address bits from U62 and U61. A9 is used to split the address space on the board between the relay space and the identification byte space. During the slave's state S24, the master will raise the STROBE line for one state, transfering the shift register's data into the relay latch. The relay latch then drives a sinking current driver to control the relay coil.

4.2.4.8 If a read cycle is being executed and applies to the relay board, CLKDENA goes high from state S15 to S21 and U53 gates its CLOCK input on and drives the CLKOUT signal. CLKOUT drives all of the read back shift registers. During state S15, SH/LD\ goes low and the data at the parallel inputs of the shift registers is loaded in. The relay data is derived from the relay coil drive voltage, and is divided by a 220K and 47K resistor set. The identification byte register is also loaded and shifted out, but its inputs are wired to a specific value, used by the system to identify the type of card being accessed. Each read back shift register's output is routed to a multiplexer, U70, U71 and U72 and the required output is selected by the address as presented by U62 and U61. This data is routed to the line driver U51 which is enabled by U53's DIN/OUT\ signal which goes low when CLKDENA is high and RD/WR\ is high.

SECTION 5 DRAWINGS

1260-12	404774	Final Assy., Actuator	5-3
	401905	PCB Assy., Actuator	5-4
	431905	Schematic, Actuator	5-5
	401951	PCB Assy., LBus jumper	5-83
	431951	Schematic, LBus jumper	5-84
1260-13	404941	Final Assy., Actuator	5-116
	401987	PCB Assy., Actuator	5-117
	431987	Schematic, Actuator	5-118
	401951	PCB Assy., LBus jumper	5-83
	431951	Schematic, LBus jumper	5-84
1260-14	404916	Final Assembly, Digital I/O	5-100
	401980	PCB Assy., Digital I/O	5-101
	431980	Schematic, Digital I/O	5-102
	401951	PCB Assy., LBus jumper	5-83
	431951	Schematic, LBus jumper	5-84
	404970	Cable Assy., J101	5-158
	404971	Cable Assy., J102	5-159
	404972	Cable Assy., J103	5-160
	404973	Cable Assy., J104	5-161
1260-20	404773	Final Assy., Power Module	5-16
	401919	PCB Assy., Power Module	5-17
	431919	Schematic, Power Module	5-18
	401951	PCB Assy., LBus jumper	5-83
	431951	Schematic, LBus jumper	5-84
1260-30A	404767-001	Final Assy., Scanner / MUX	5-28
	401906	PCB Assy., Scanner / MUX	5-32
	431906	Schematic, Scanner / MUX	5-33
	401951	PCB Assy., LBus jumper	5-83
	431951	Schematic, LBus jumper	5-84
1260-30B	404767-002	Final Assy., Scanner / MUX	5-29
	401906	PCB Assy., Scanner / MUX	5-32
	431906	Scematic, Scanner / MUX	5-33
	401951	PCB Assy., LBus jumper	5-83
	431951	Schematic, LBus jumper	5-84

1260-30C	404767-003	Final Assy., Scanner / MUX	5-30
	401906	PCB Assy., Scanner / MUX	5-32
	431906	Schematic, Scanner / MUX	5-33
	401951	PCB Assy., LBus jumper	5-83
	431951	Schematic, LBus jumper	5-84
1260-30D	404767-004	Final Assy., Scanner / MUX	5-31
	401906	PCB Assy., Scanner / MUX	5-32
	431906	Schematic, Scanner / MUX	5-33
	401951	PCB Assy., LBus jumper	5-83
	431951	Schematic, LBus jumper	5-84
1260-35	404944	Final Assy., Scanner / MUX	5-132
	401989	PCB Assy., Scanner / MUX	5-133
	431989	Schematic, Scanner / MUX	5-134
	401951	PCB Assy., LBus jumper	5-83
	431951	Schematic, LBus jumper	5-84
	401992	PCB Assy., 1260-35D	5-151
	431992	Schematic, 1260-35D	5-152
1260-40A	404775-001	Final Assy., 4 x 24 Matrix	5-50
	401914	PCB Assy., 4 x 24 Matrix	5-53
	431914	Schematic, 4 x 24 Matrix	5-55
	401951	PCB Assy., LBus jumper	5-83
	431951	Schematic, LBus jumper	5-84
1260-40B	404775-002	Final Assy., 4 x 24 Matrix	5-51
	401914	PCB Assy., 4 x 24 Matrix	5-53
	431914	Schematic, 4 x 24 Matrix	5-55
	401951	PCB Assy., LBus jumper	5-83
	431951	Schematic, LBus jumper	5-84
1260-40C	404775-003	Final Assy., Dual 4 x 12 Matrix	5-52
	401914	PCB Assy., Dual 4 X 12 Matrix	5-53
	431914	Schematic, Dual 4 x 12 Matrix	5-55
	401951	PCB Assy., LBus jumper	5-83
	431951	Schematic, LBus jumper	5-84
1260-54	404768	Final Assy., 50 Ohm Terminated	5-69
	401908	PCB Assy., 50 Ohm Terminated	5-70
	431908	Schematic, 50 Ohm Terminated	5-71
	401951	PCB Assy., LBus jumper	5-84
	431951	Schematic, LBus jumper	5-84
Option 01	401901	PCB Assy., Option 01	5-85
	431901	Schematic, Option 01	5-87

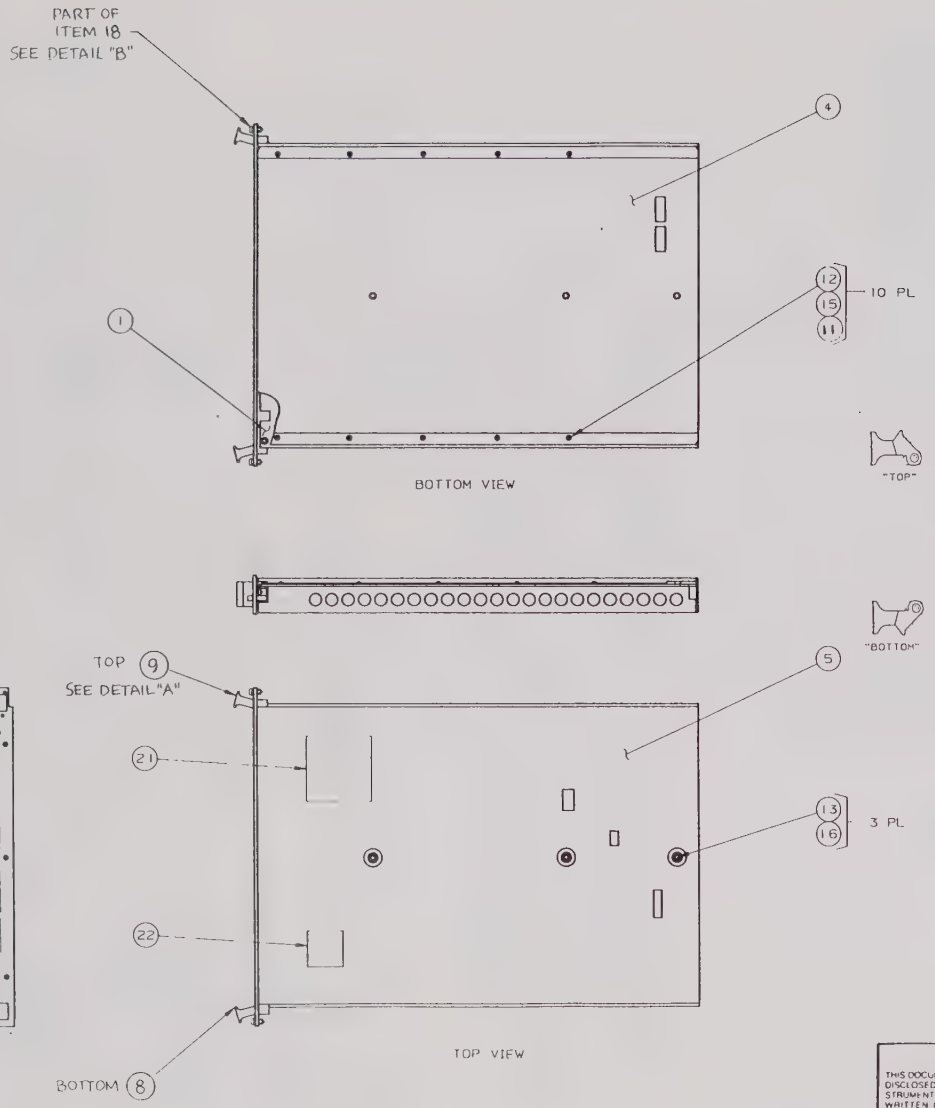

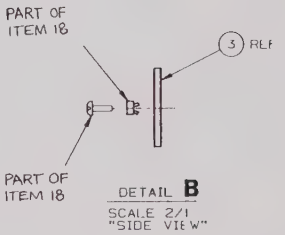

DETAIL **B**
SCALE 2/1
"SIDE VIEW"

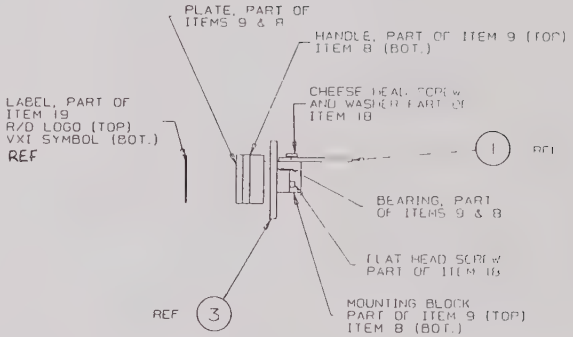

DETAIL **A**
SCALE 2/1
SIDE VIEW

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

FINAL ASSY., 1260-12

SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	404774	B
SCALE/2		SHEET 1 OF 2	

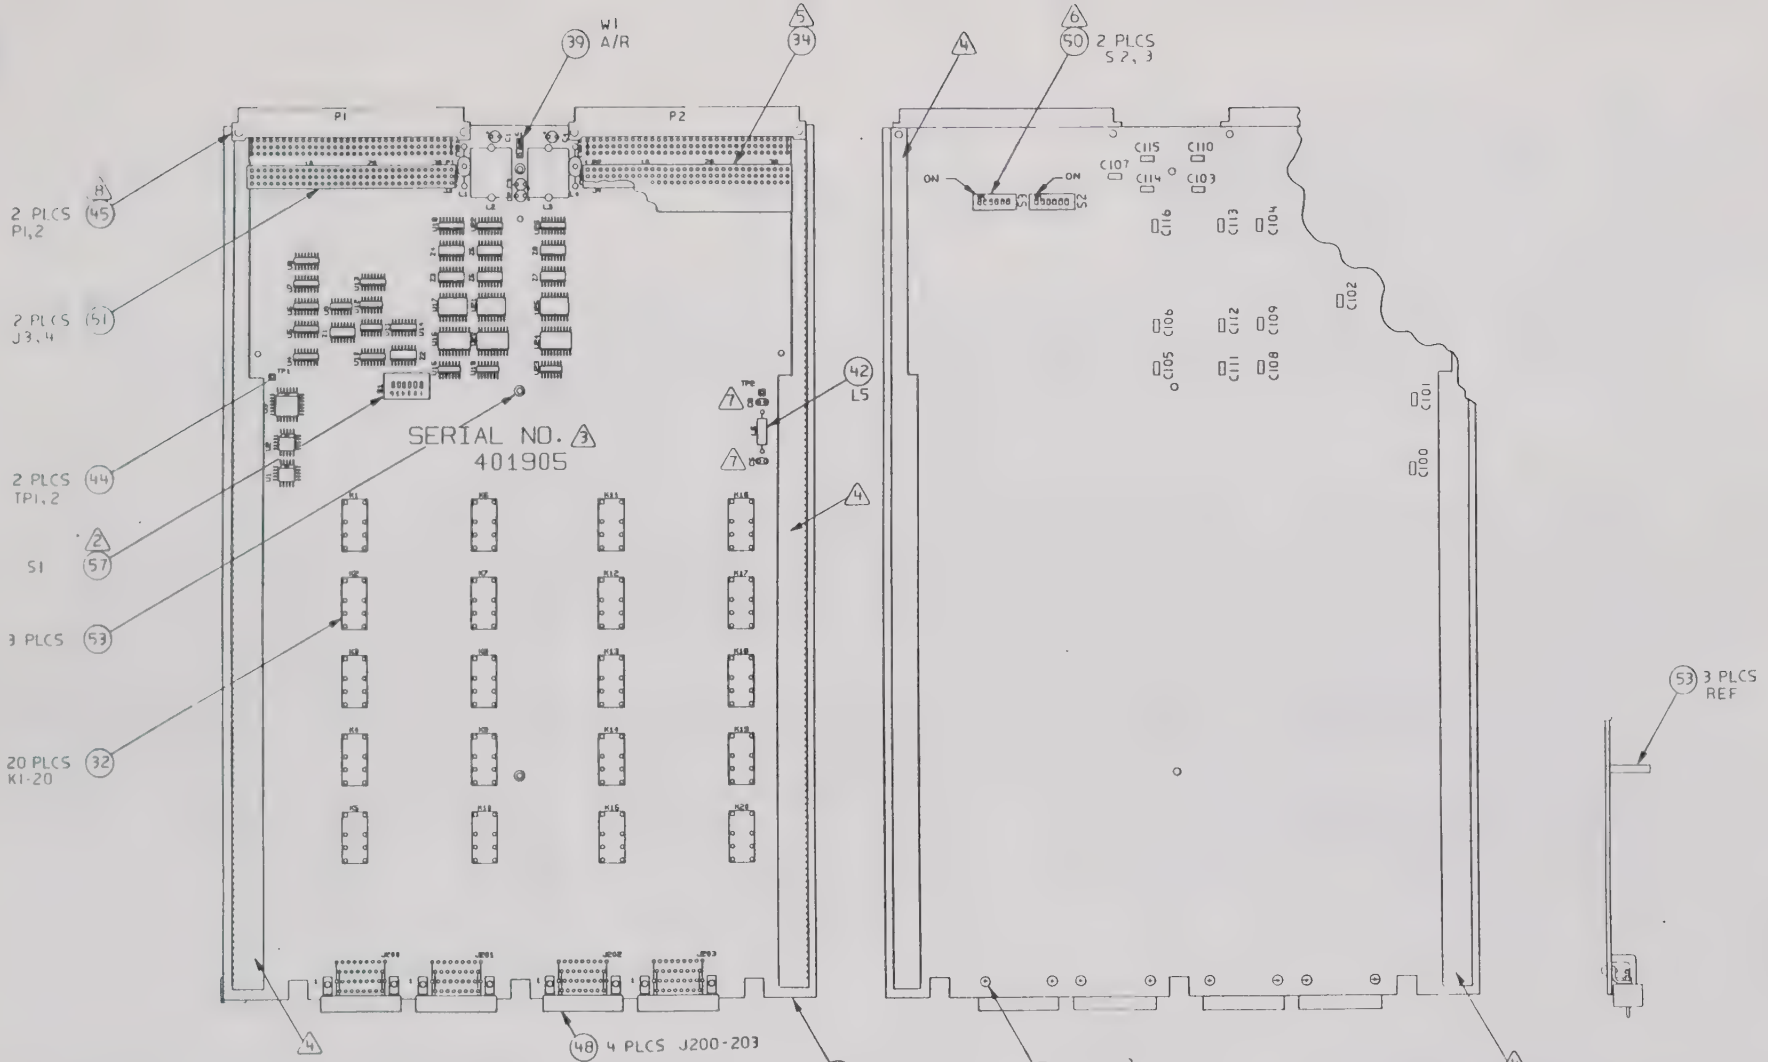

(B) P1 AND P2 MUST BE INSTALLED FLUSH, AT RIGHT ANGLES TO PC BOARD.

(7) C5 AND C6 ARE NOT INSTALLED.

(6) SET ALL S2, S3 SWITCHES TO (ON) OR (CLOSED) OR (1) POSITION. DO NOT WAVE SOLDER.

(5) INSTALL (ITEM 34) PCB JUMPER INTO (ITEM 51) J4

(4) AREAS INDICATED TO BE FLAT AND FREE FROM SOLDER (BOTH SIDES).

(3) INK STAMP SERIAL NO ON COMPONENT SIDE IN INDICATED AREA.

(2) SET S1 TO LOGICAL ADDRESS 1 PER TABLE 1, SHT 4 OF 4.

1. REFERENCE SCHEMATIC 431905.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE: PCB ASSY, 1260-12

SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	401905	B

SCALE ---- SHEET 1 OF 4

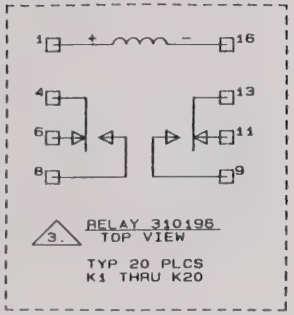

REF. DES.	IC TYPE	+5V PIN NO.	GND PIN NO.
U17, 21, 25	2803		9
U16, 20, 24	74HCT273	20	10
U14	74HCT85	16	8
U13	74LS138	16	8
U11, 12, 15, 19, 23	74HCT164	14	7
U10, 18, 22, 26	74HCT166	16	8
U9	LM339	3	12
U7, 8	26LS32	16	8
U6	26LS31	16	8
U4, 5	74HCT253	16	8
U3	231154 (22V10H)	28	14
U2	231153 (16R4)	20	10
U1	231152 (16L8Q)	20	10

IC POWER AND GROUND CONNECTIONS

HIGHEST REF. DES.
C116
J203
K20
L5
P2
S3
TP2
U26
W1
Z8

4. C5 AND C6 ARE NOT INSTALLED.

3. RELAYS K1 THRU K20 ARE RACAL DANA P/N 310196.
ALL RELAYS SHOWN IN DE-ENERGIZED POSITION.

2. RESISTOR NETWORKS ARE IN OHMS.

1. CAPACITOR VALUES ARE IN MICROFARADS, 50V, +/-20% UNLESS OTHERWISE SPECIFIED.

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

SCHEM., 1260-12

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431905	A

SCALE ——— SHEET 1 OF 11

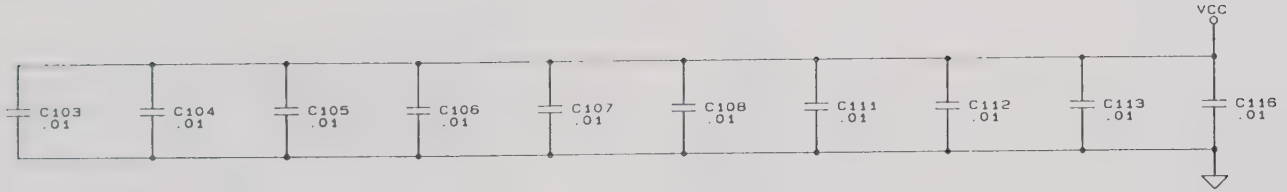

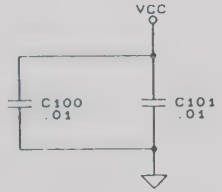

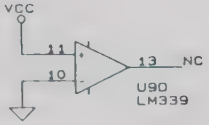

SIZE	CODE IDENT NO.	DOCUMENT NO	REV.
B	21793	431905	A
SCALE		SHEET 2 OF 11	

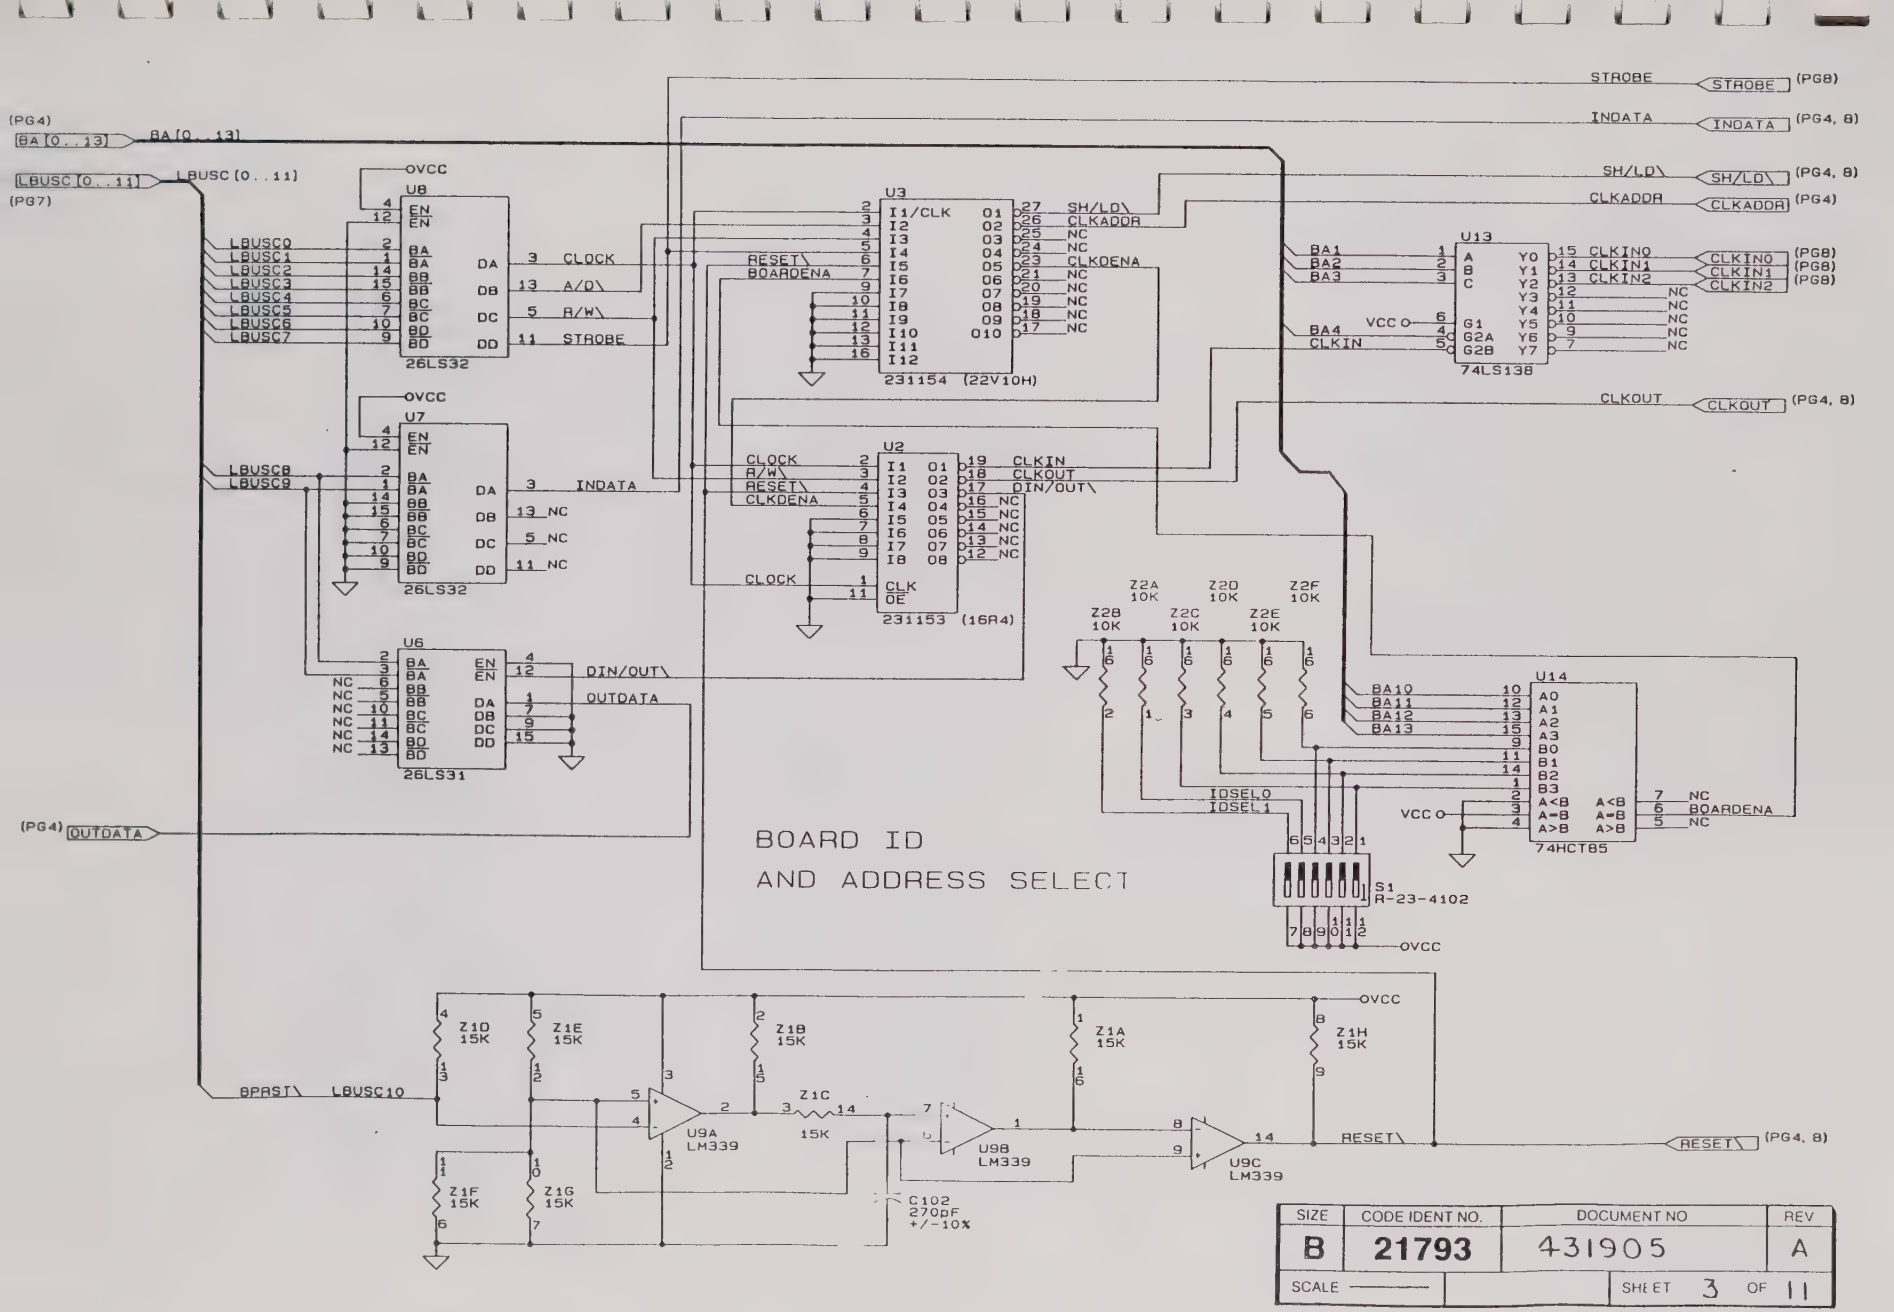

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431905	A
SCALE		SHEET 3 OF 11	

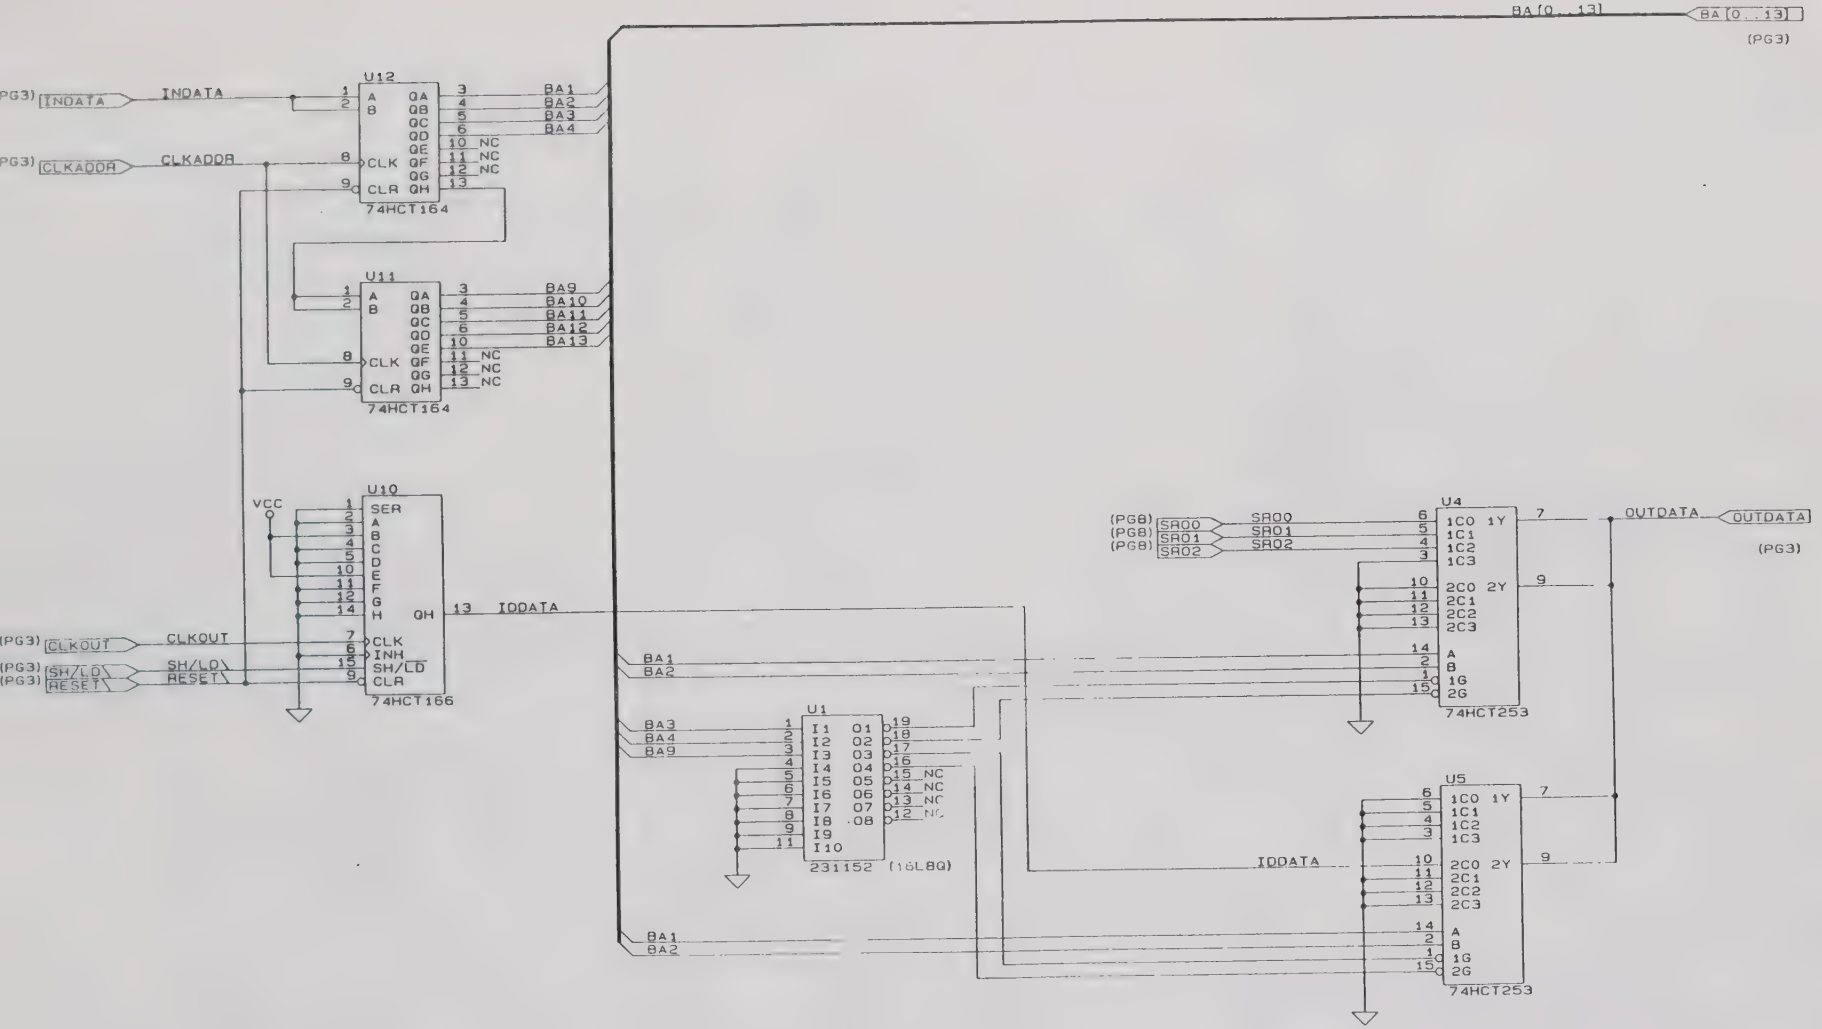

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431905	A
SCALE		SHEET 4 OF 11	

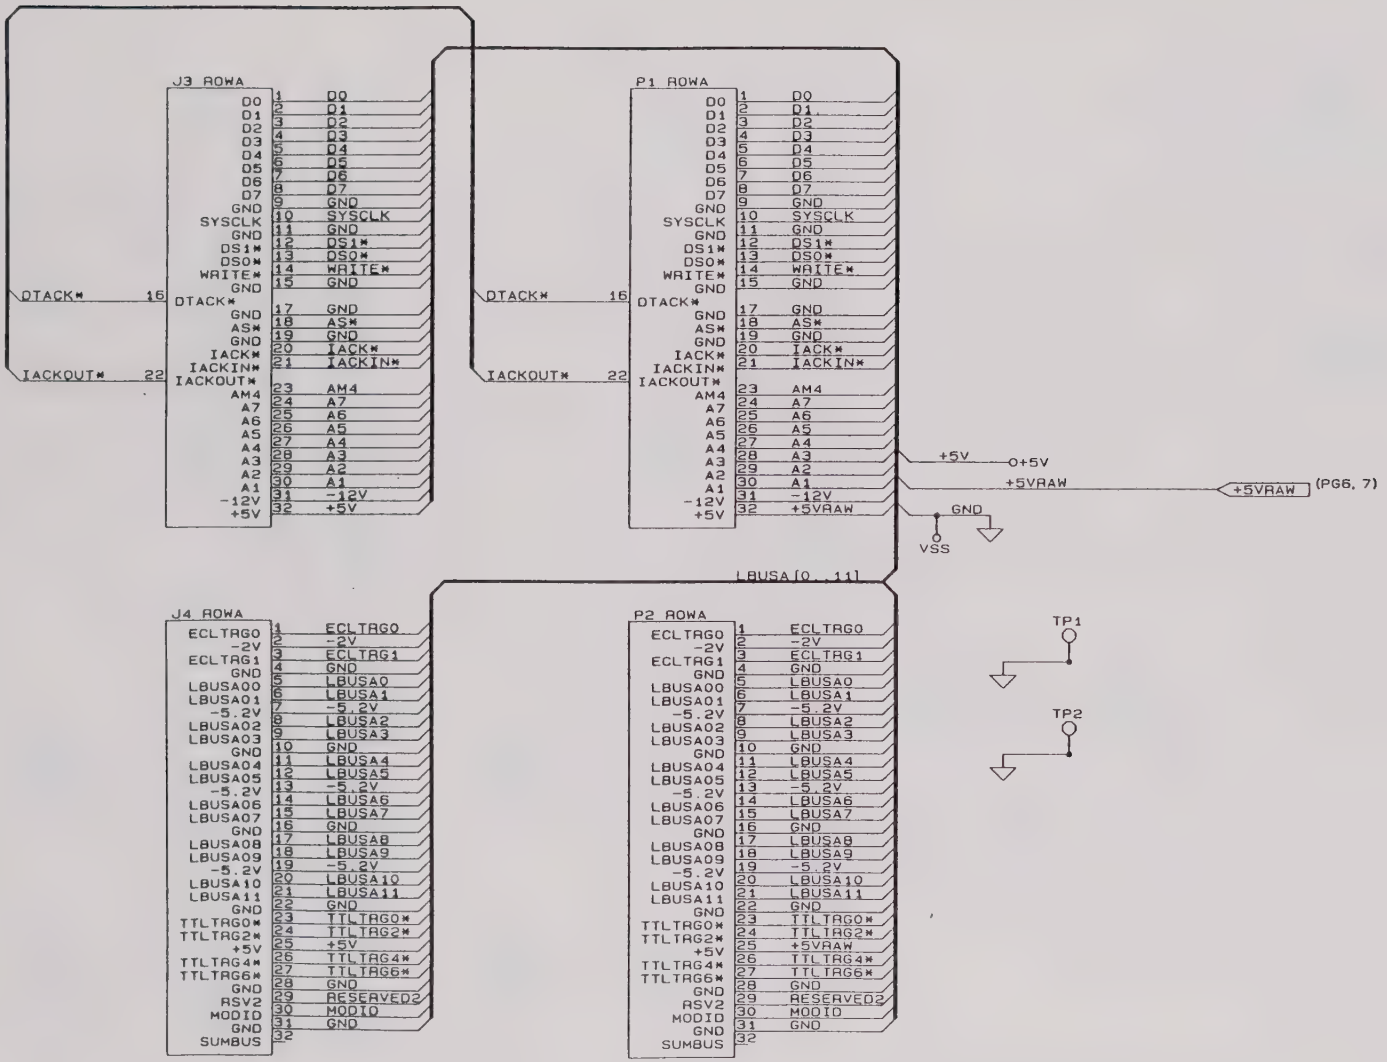

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431905	A
SCALE		SHEET 5 OF 11	

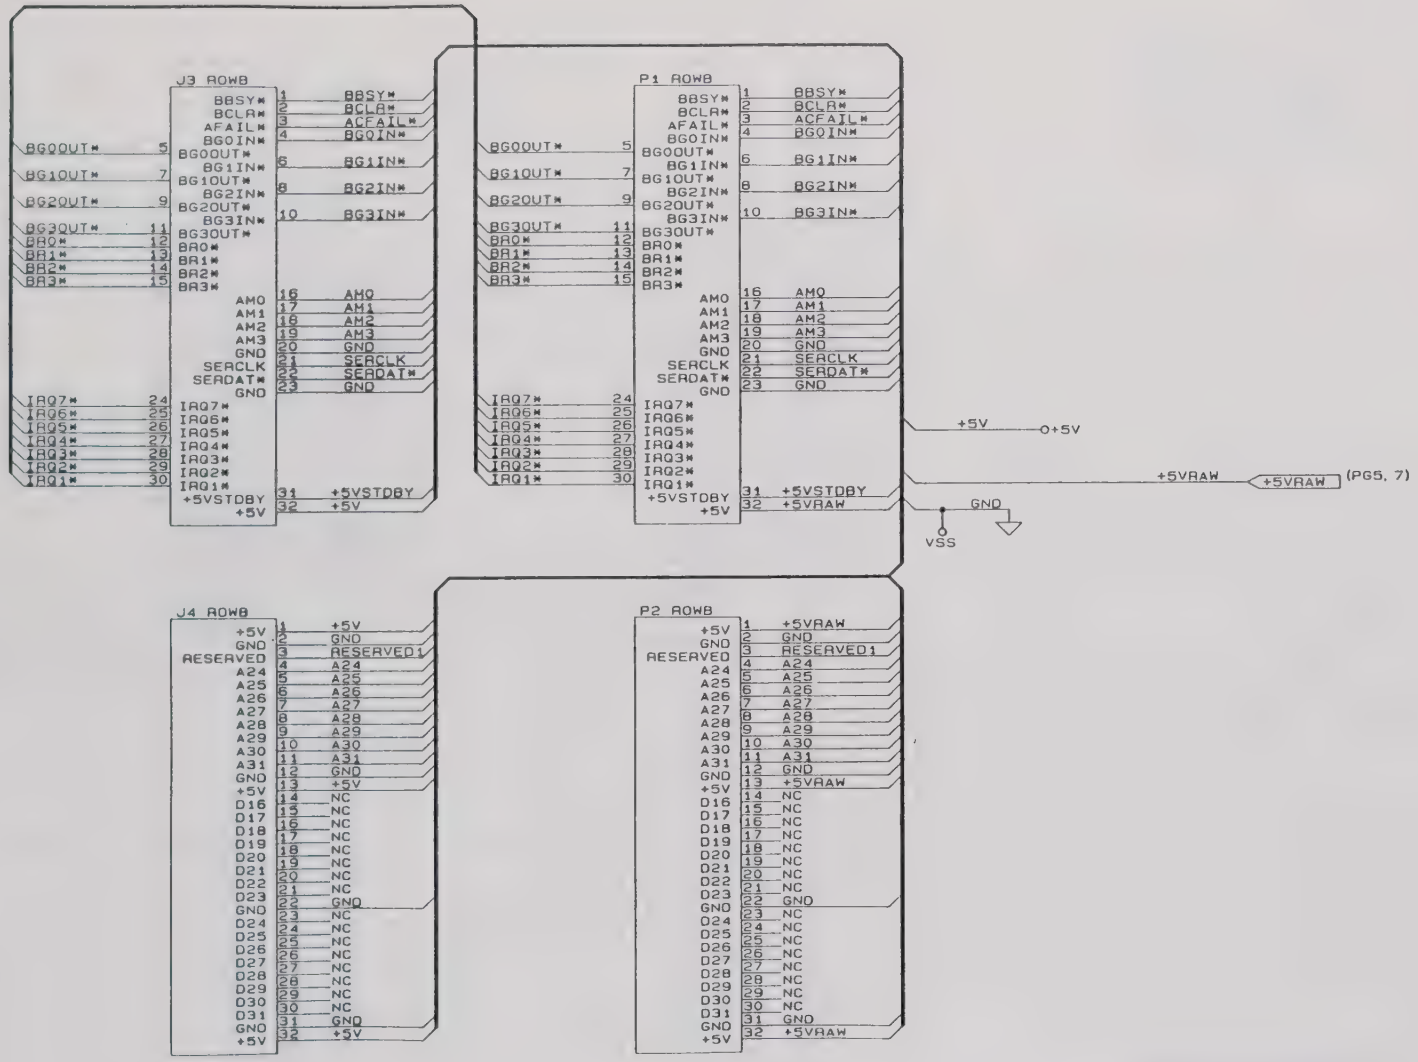

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431905	A
SCALE		SHEET 6 OF 11	

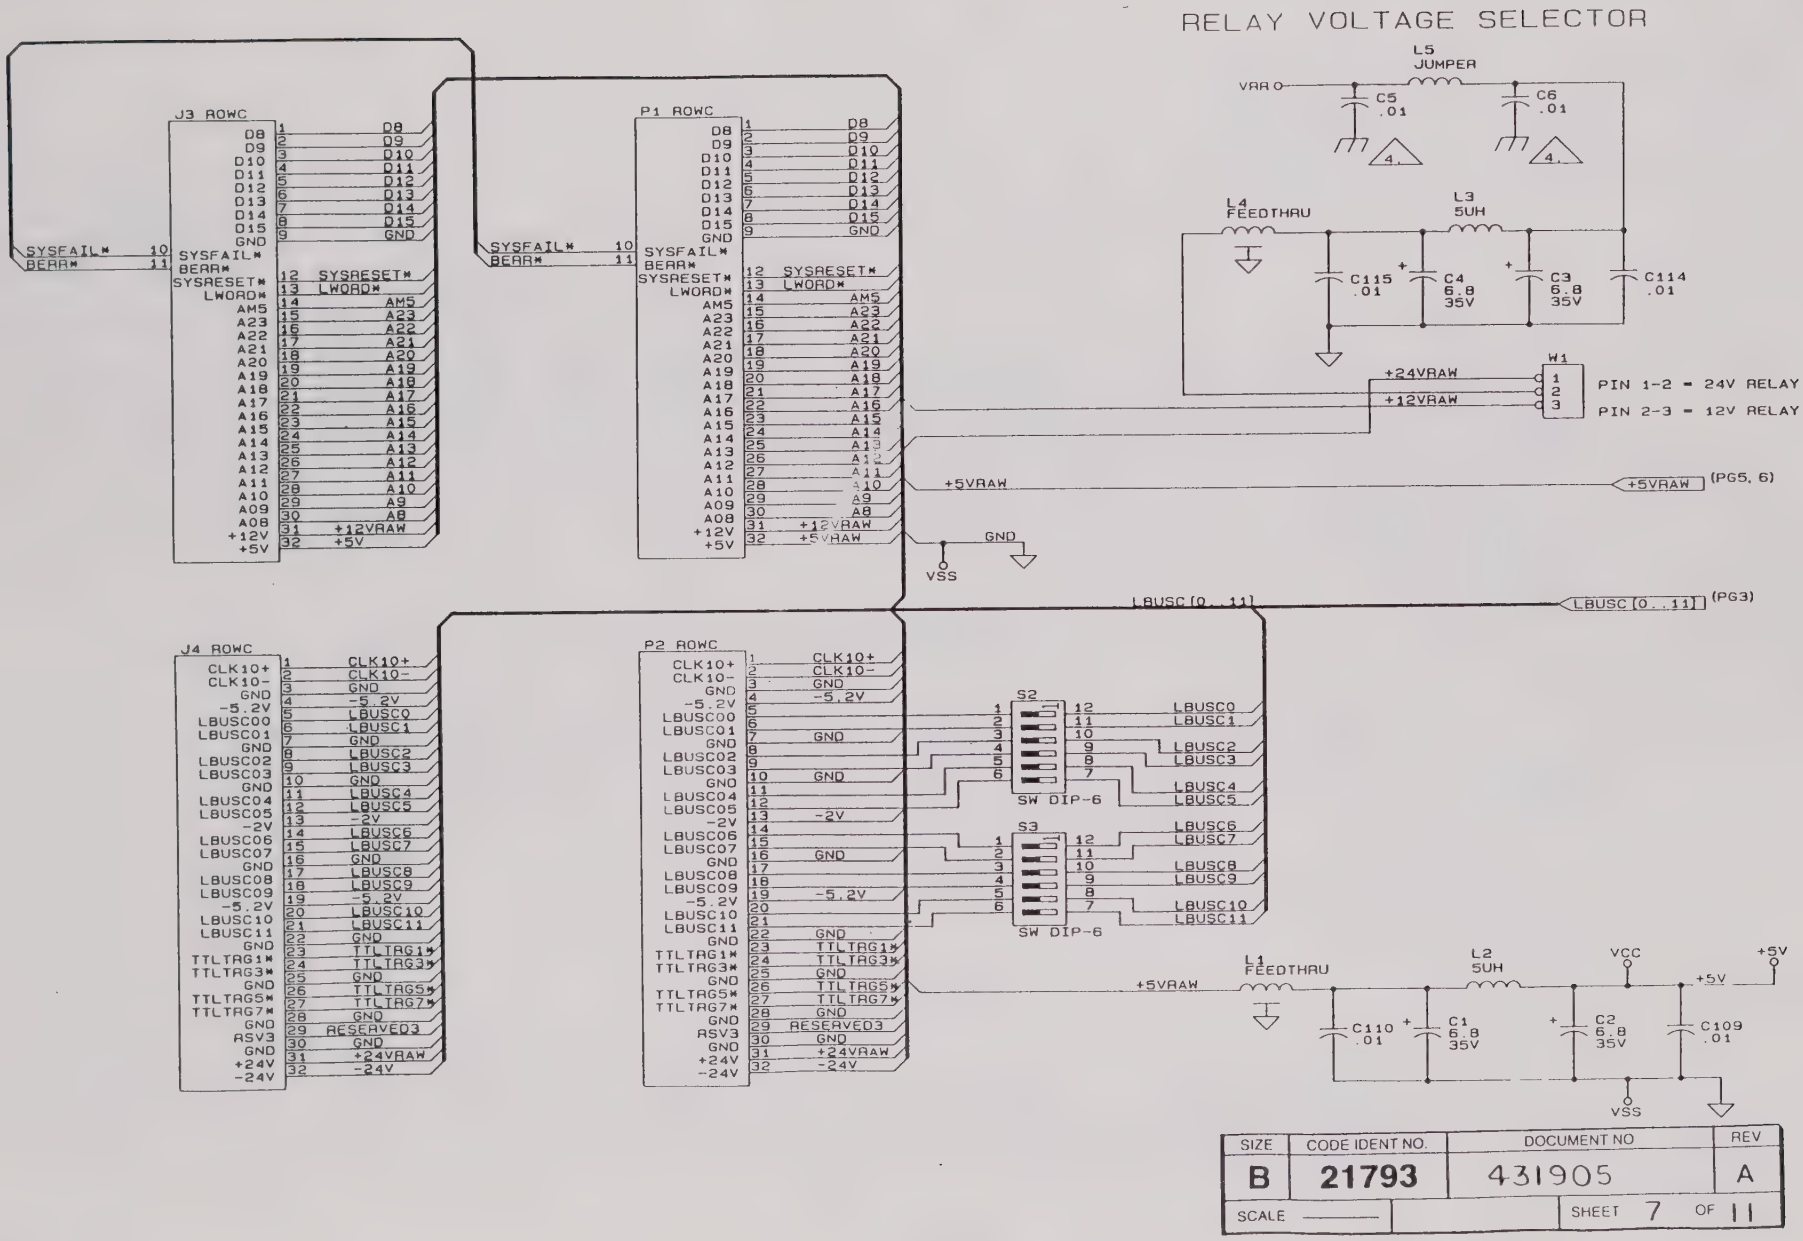

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431905	A
SCALE		SHEET 7 OF 11	

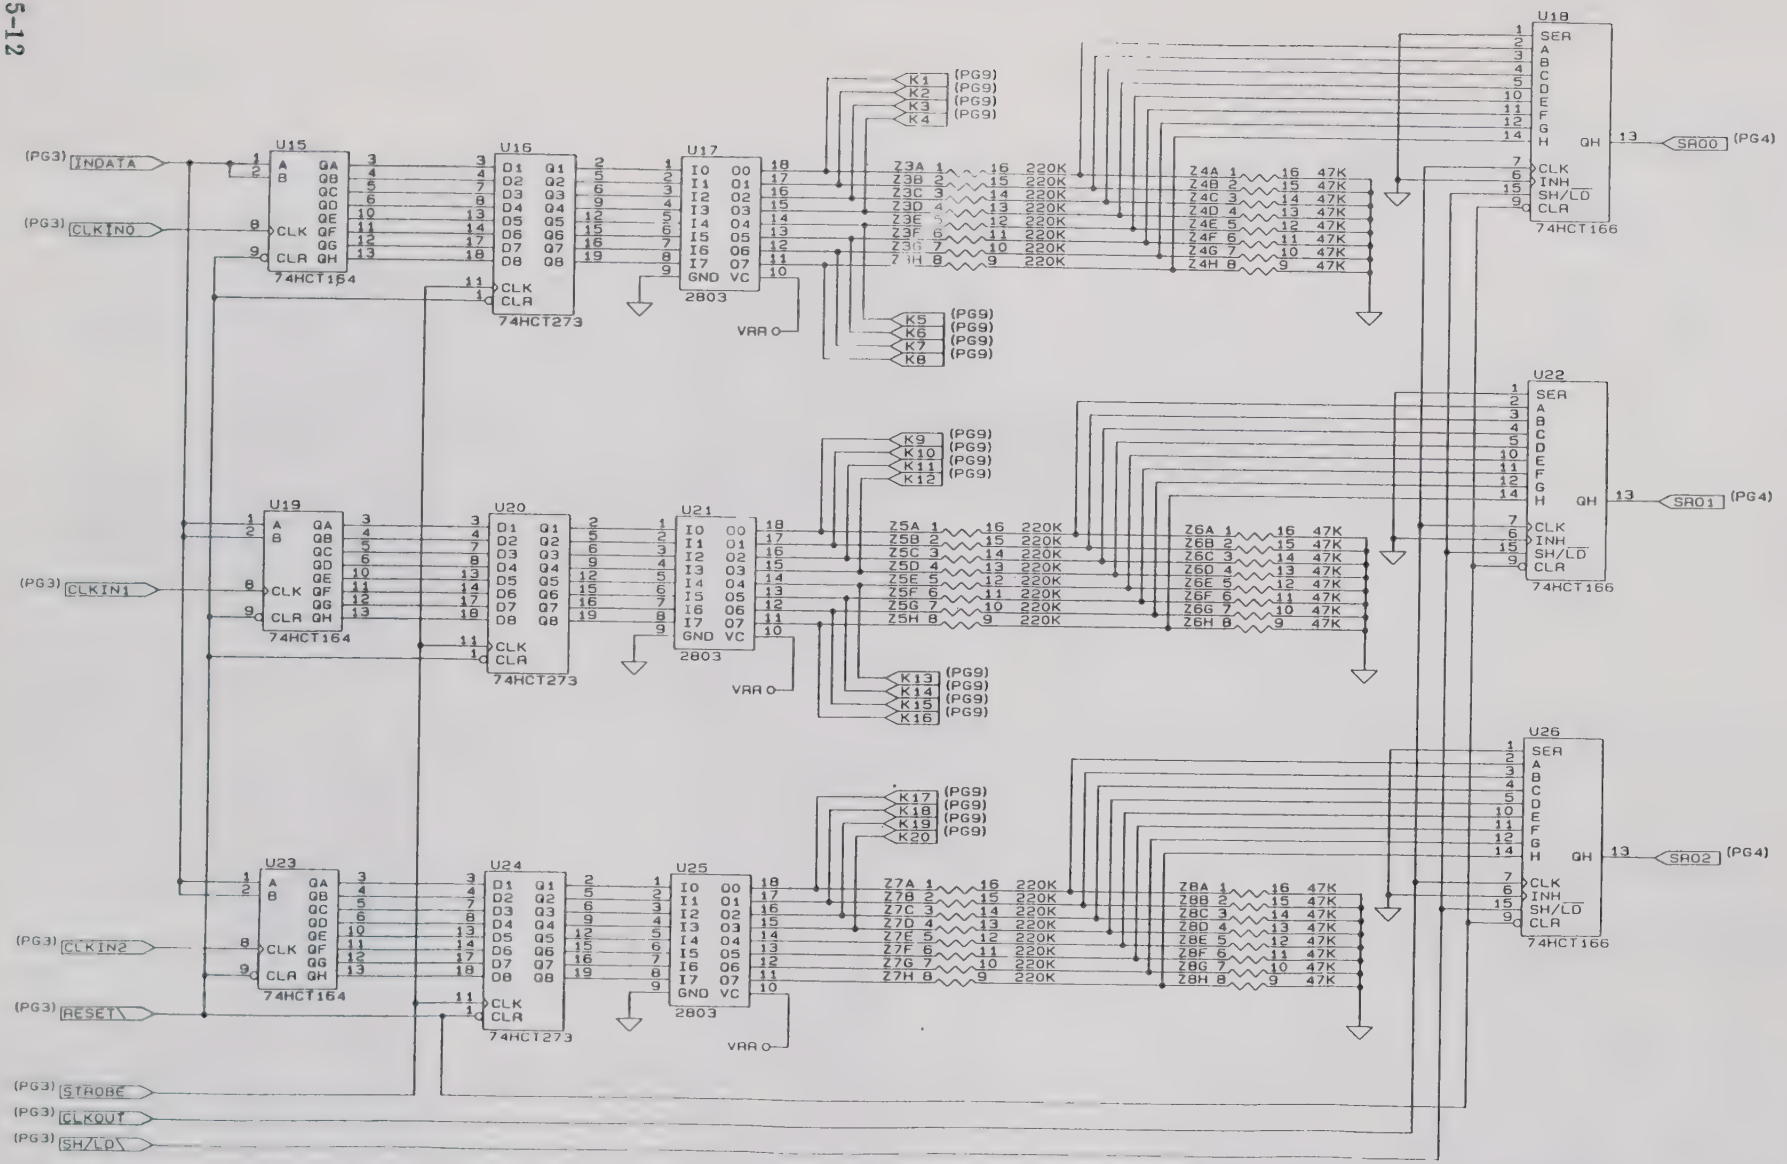

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431905	A
SCALE		SHEET 8 OF 11	

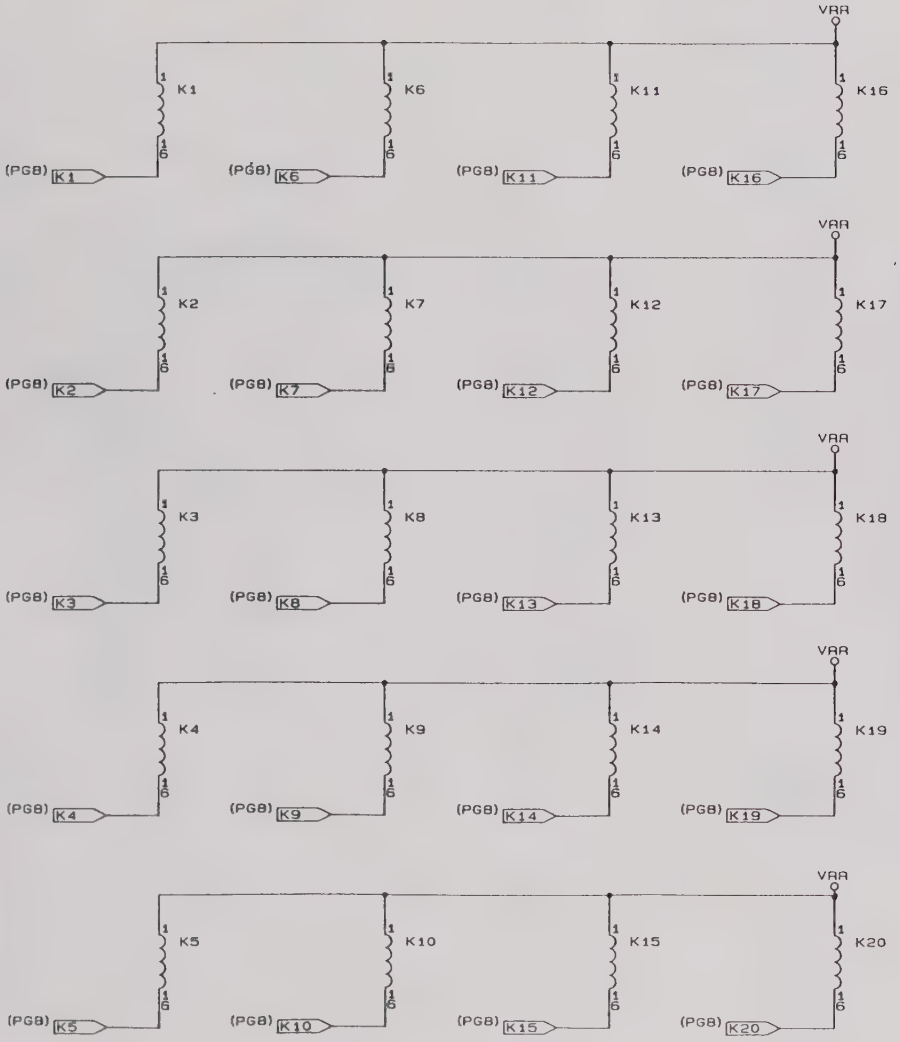

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431905	A
SCALE		SHEET 9 OF 11	

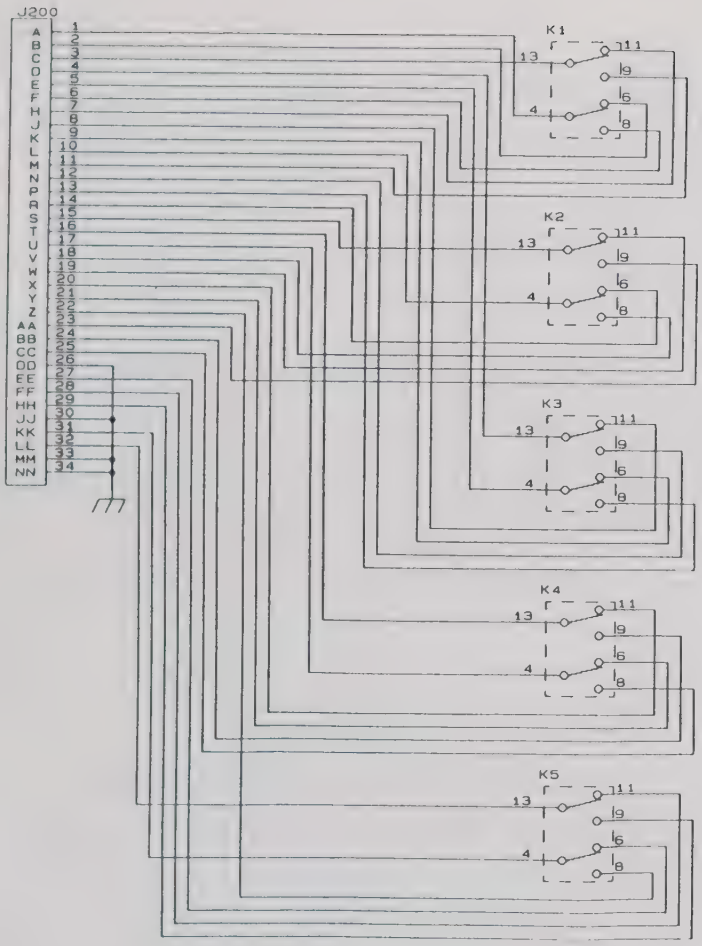

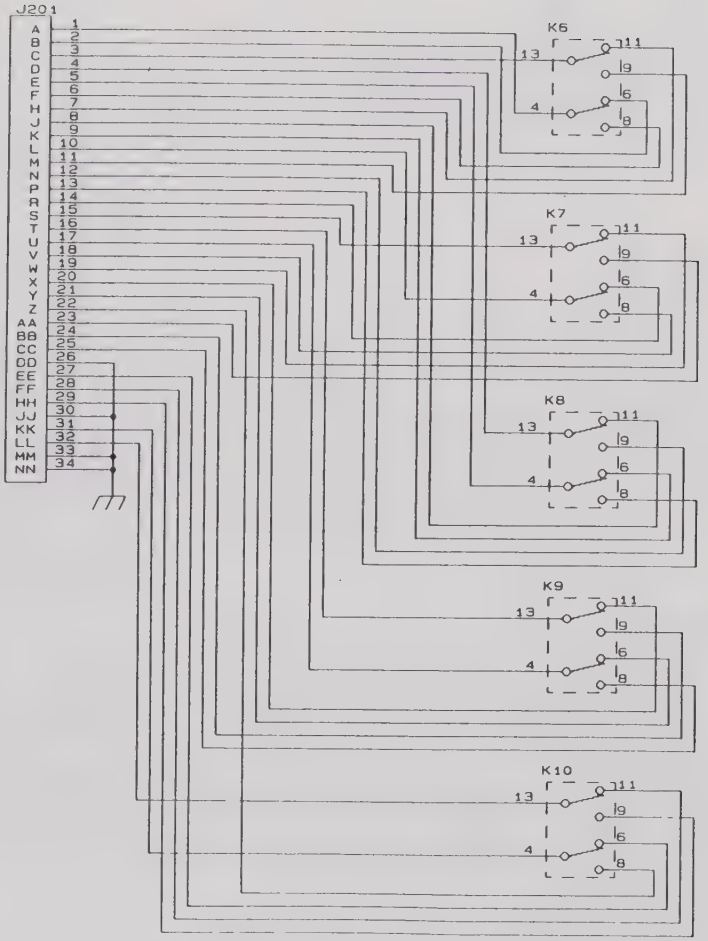

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431905	A
SCALE		SHEET 10 OF 11	

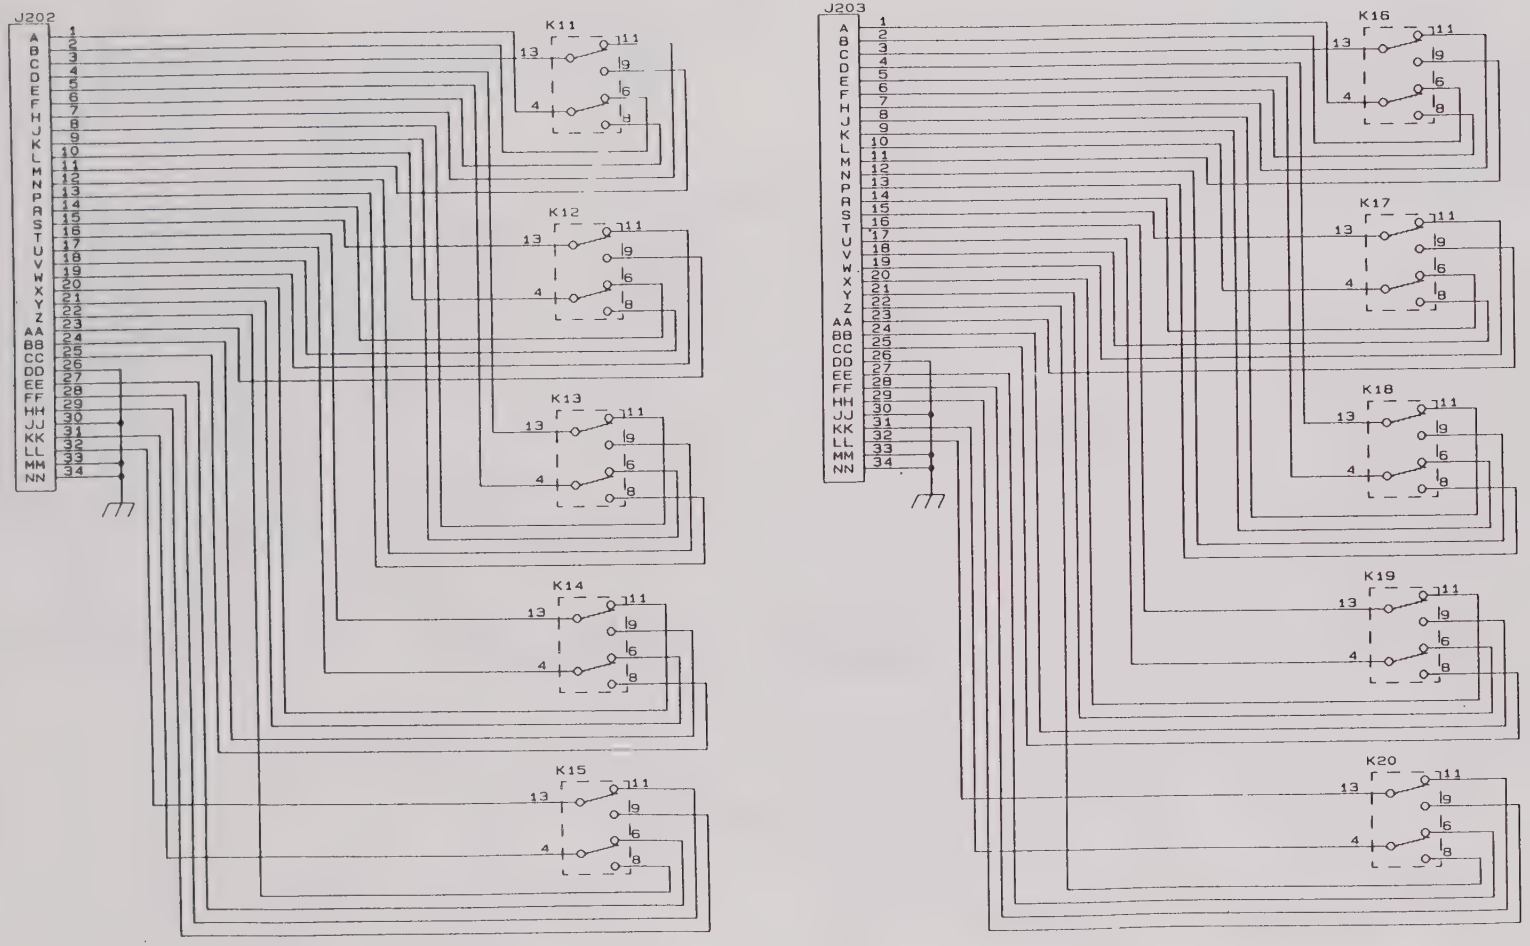

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431905	A
SCALE		SHEET 11 OF 11	

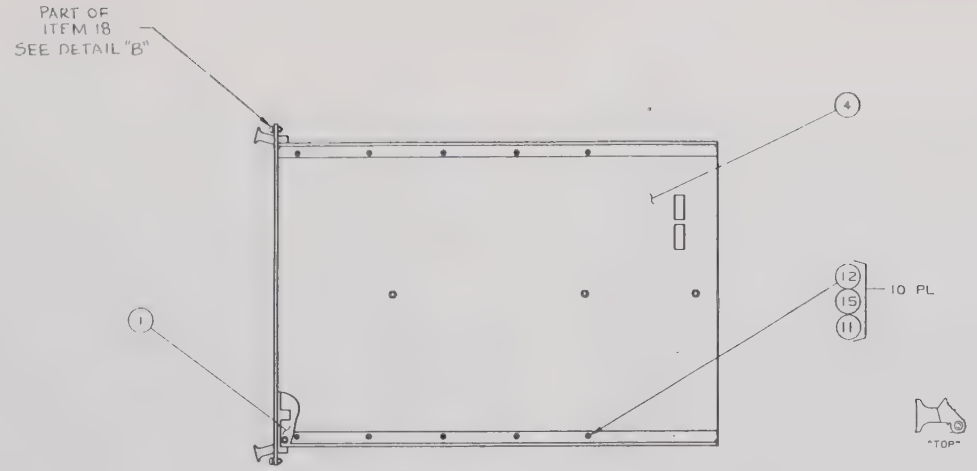

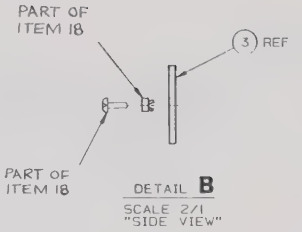

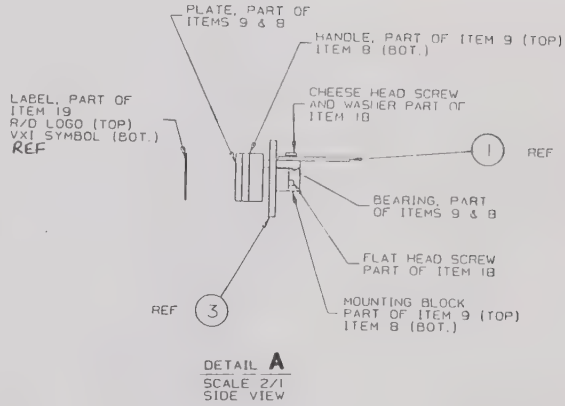

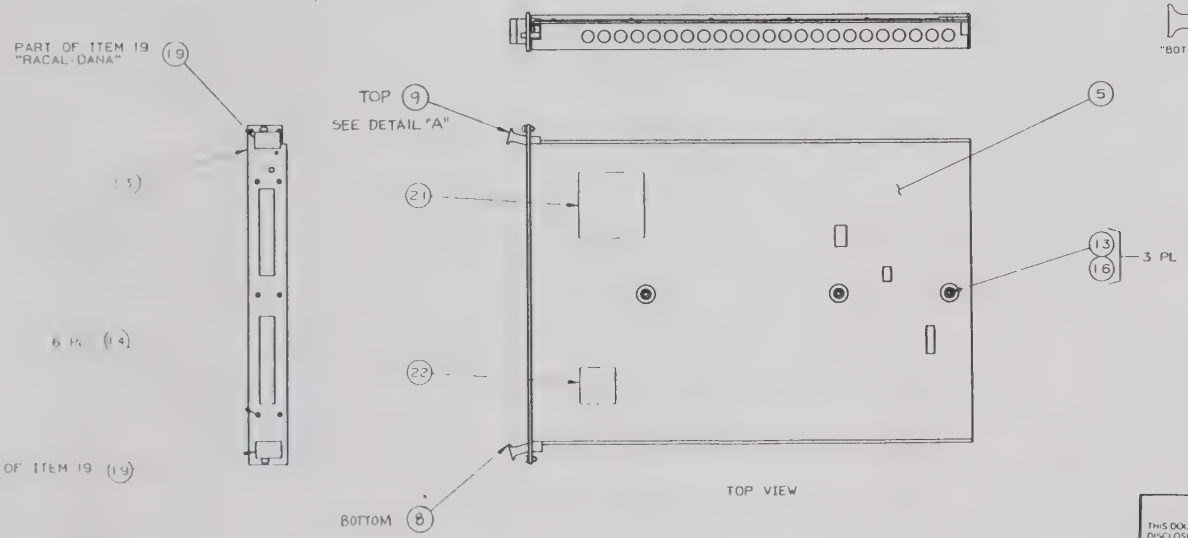

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

FINAL ASSY., 1260-20

SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	404773	B

SCALE/2 | SHEET 1 OF 2

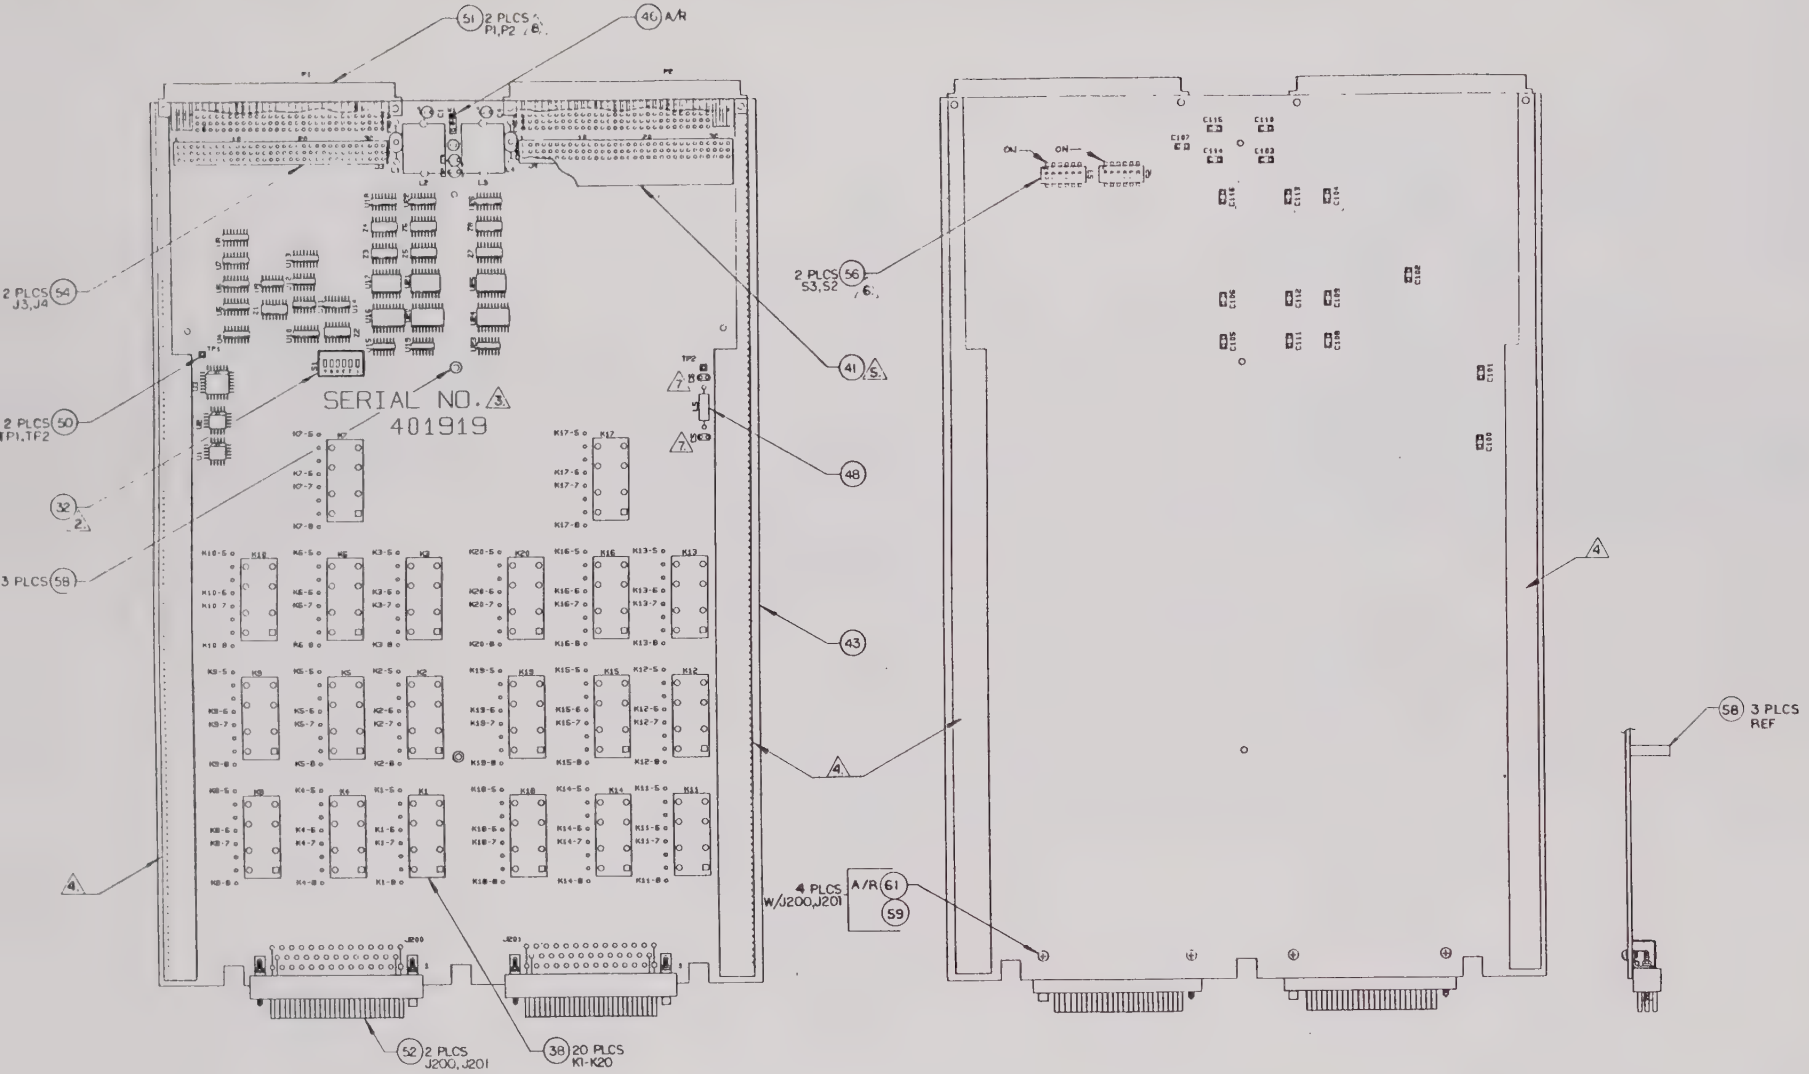

8. P1 AND P2 MUST BE INSTALLED FLUSH AT RIGHT ANGLES TO PC BOARD.
7. C5 AND C6 ARE NOT INSTALLED.
6. SET ALL S2,S3 SWITHES TO (ON) OR (CLOSED) OR (1) POSITION. DO NOT WAVE SOLDER.
5. INSTALL (ITEM 41) PCB INTO (ITEM 54) J4.
4. AREAS INDICATED TO BE FLAT AND FREE FROM SOLDER (BOTH SIDES).
3. INK STAMP SERIAL NO ON COMPONENT SIDE IN INDICATED AREA.
2. SET S1 TO LOGICAL ADDRESS 1 PER TABLE 1.
1. REFERENCE SCHEMATIC 431919.

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE CALIFORNIA 92714

DOCUMENT TITLE
PCB ASSY, 1260-20 OPT. POWER SWITCH

SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	401919	B

SCALE 1/1 SHEET 1 OF 4

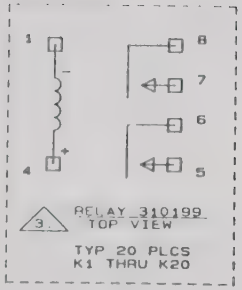

REF. DES.	IC TYPE	+5V PIN NO.	GND PIN NO.
U17, 21, 25	2803		9
U16, 20, 24	74HCT273	20	10
U14	74HCT85	16	8
U13	74LS138	16	8
U11, 12, 15, 19, 23	74HCT164	14	7
U10, 18, 22, 26	74HCT166	16	8
U9	LM339	3	12
U7, 8	26LS32	16	8
U6	26LS31	16	8
U4, 5	74HCT253	16	8
U3	231154 (22V10H)	28	14
U2	231153 (16R4)	20	10
U1	231152 (16L8Q)	20	10

IC POWER AND GROUND CONNECTIONS

HIGHEST REF. DES.
Z8
W1
U26
S3
P2
L5
K20
J201
C116

4. C5 AND C6 ARE NOT INSTALLED.

3. RELAYS K1 THRU K20 ARE RACAL DANA P/N 310199. ALL RELAYS SHOWN IN DE-ENERGIZED POSITION.

2. RESISTOR NETWORKS ARE IN OHMS.

1 CAPACITOR VALUES ARE IN MICROFARADS, 50V, +/-20% UNLESS OTHERWISE SPECIFIED.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL-DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL-DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

SCHEM., 1260-20 OPTION POWER SWITCH

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431919	A

SCALE ——— SHEET 1 OF 10

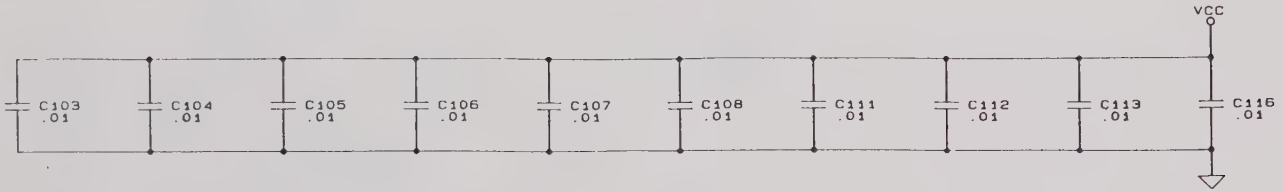

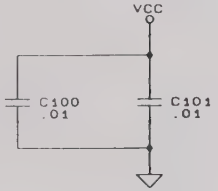

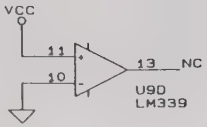

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431919	A
SCALE ———		SHEET 2 OF 10	

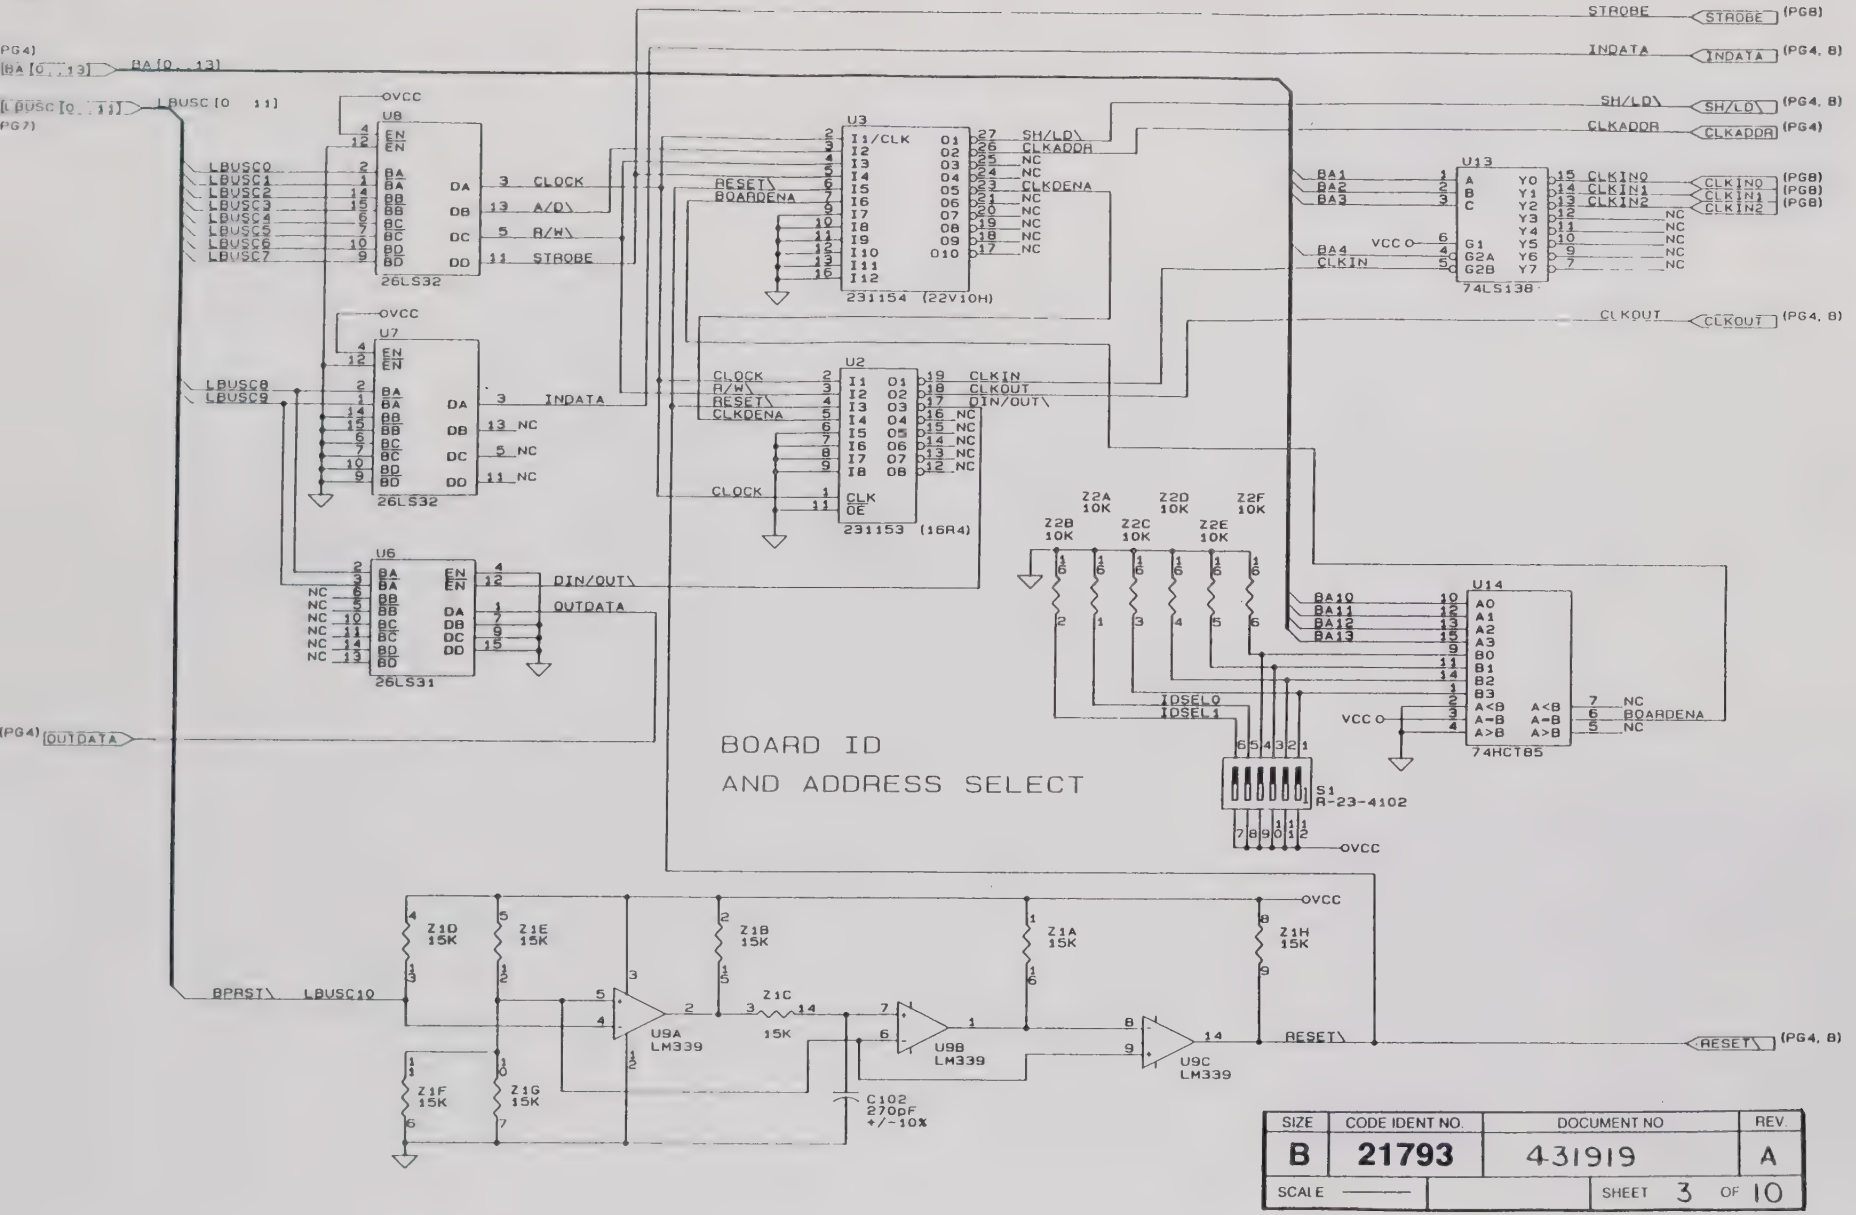

SIZE	CODE IDENT NO.	DOCUMENT NO	REV.
B	21793	431919	A
SCALE		SHEET 3 OF 10	

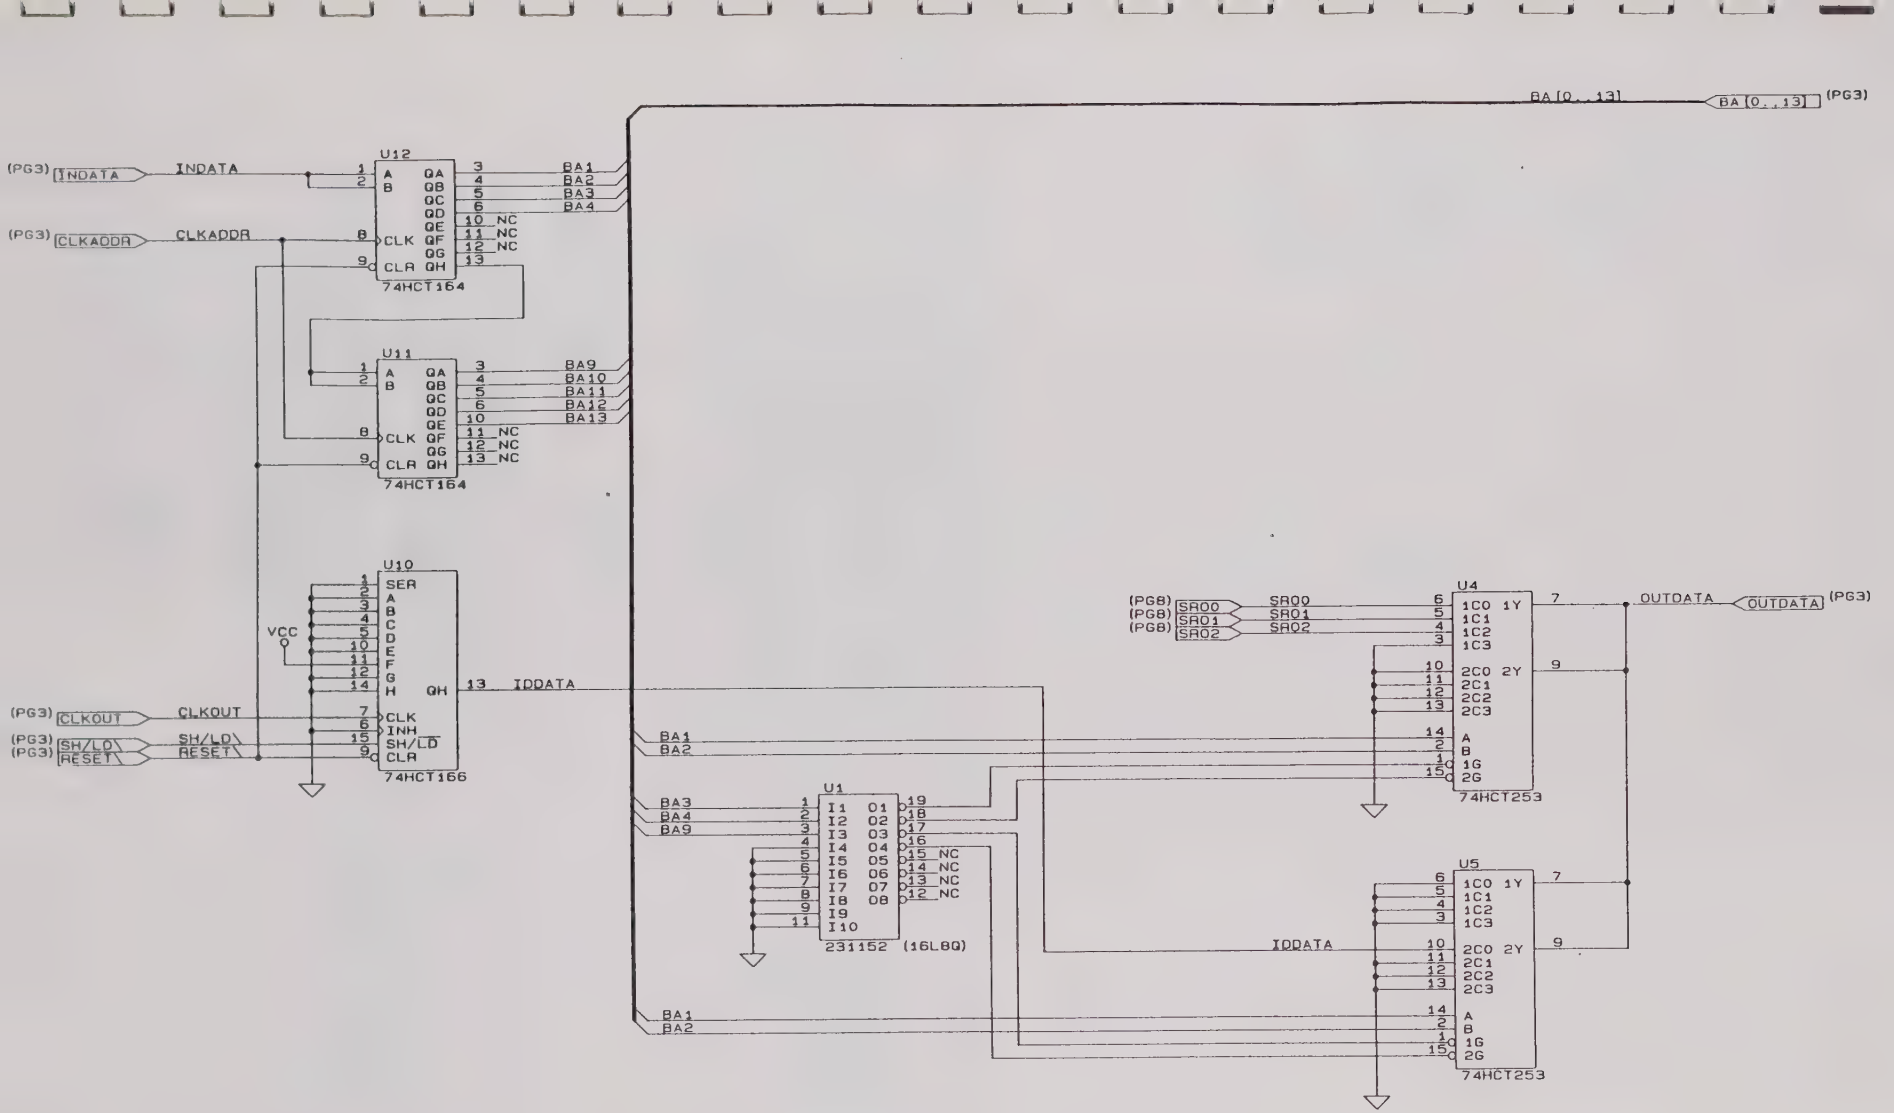

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431919	A
SCALE		SHEET 4 OF 10	

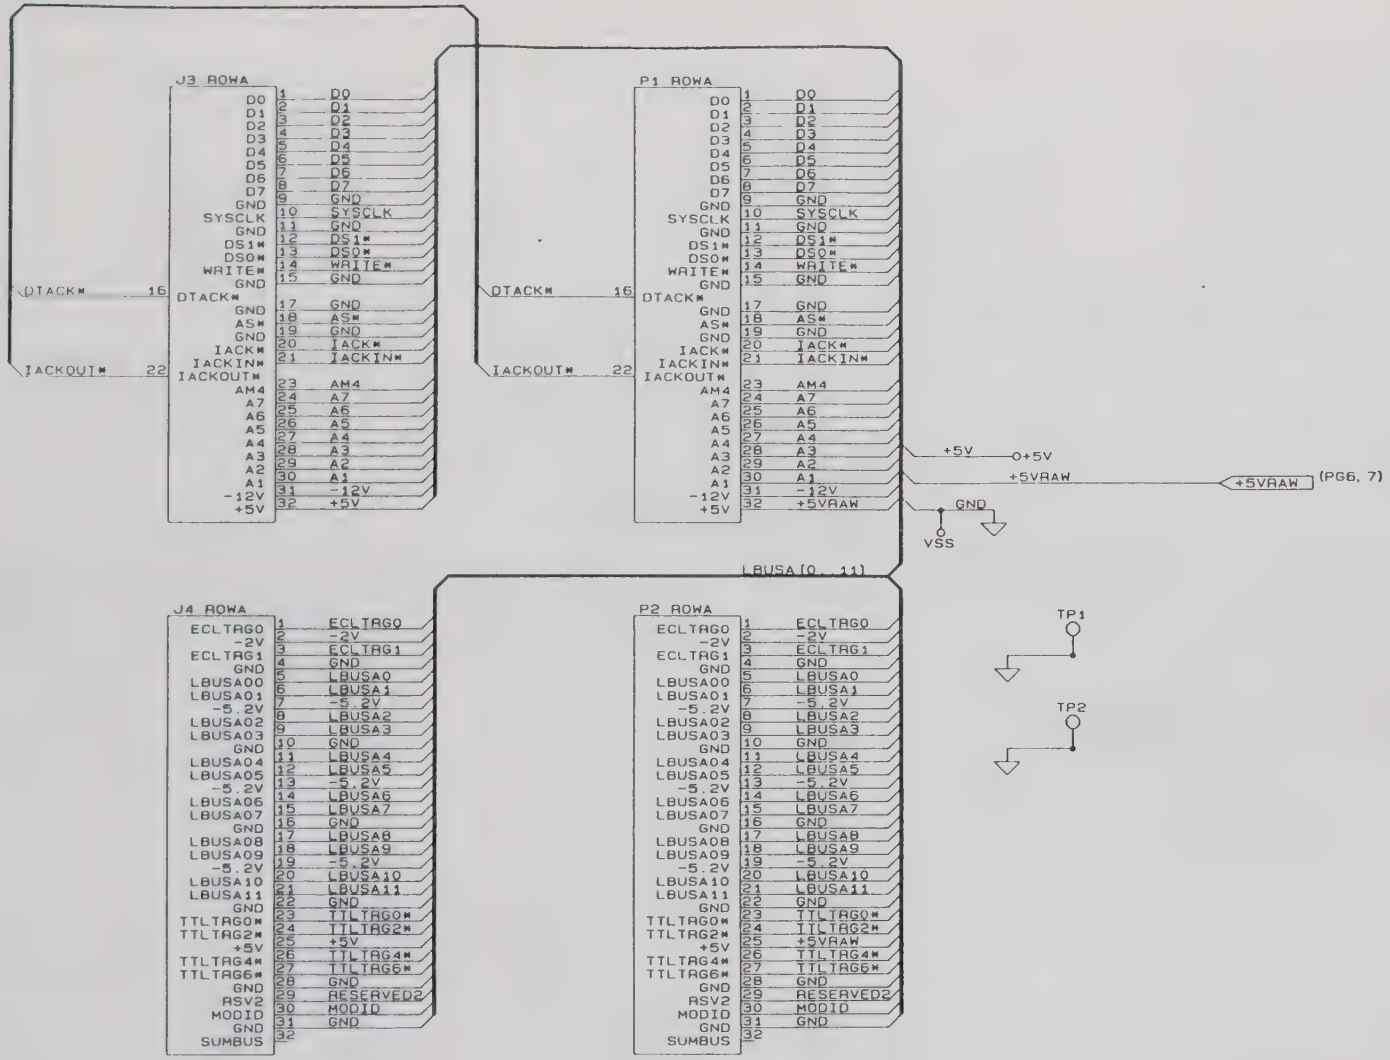

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431919	A
SCALE		SHEET 5 OF 10	

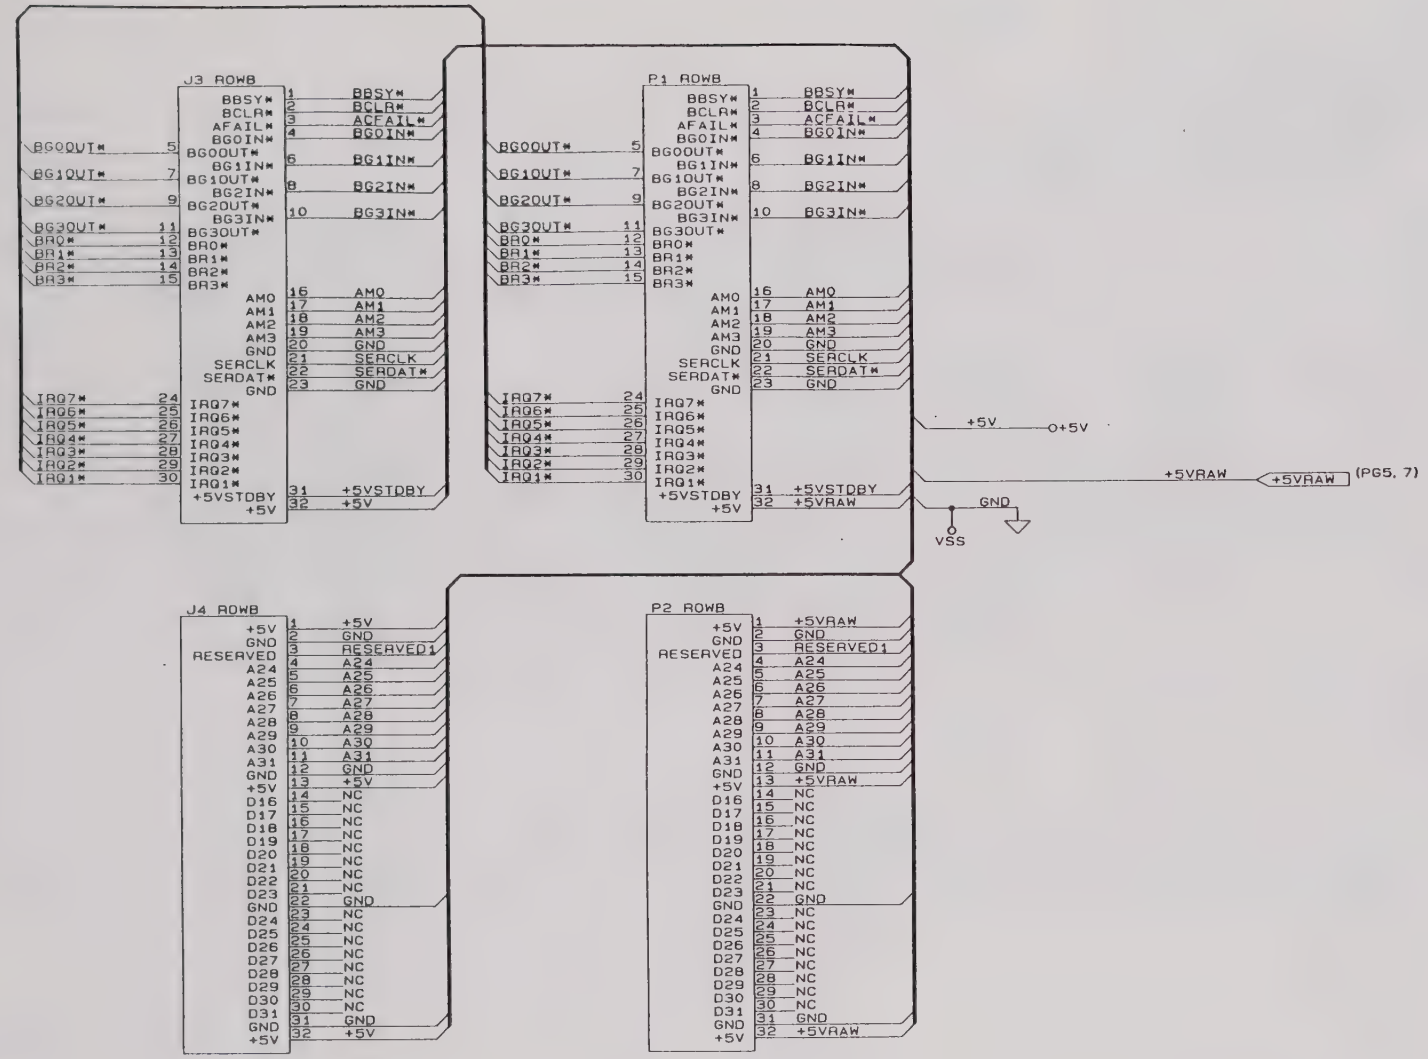

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431919	A
SCALE		SHEET 6 OF 10	

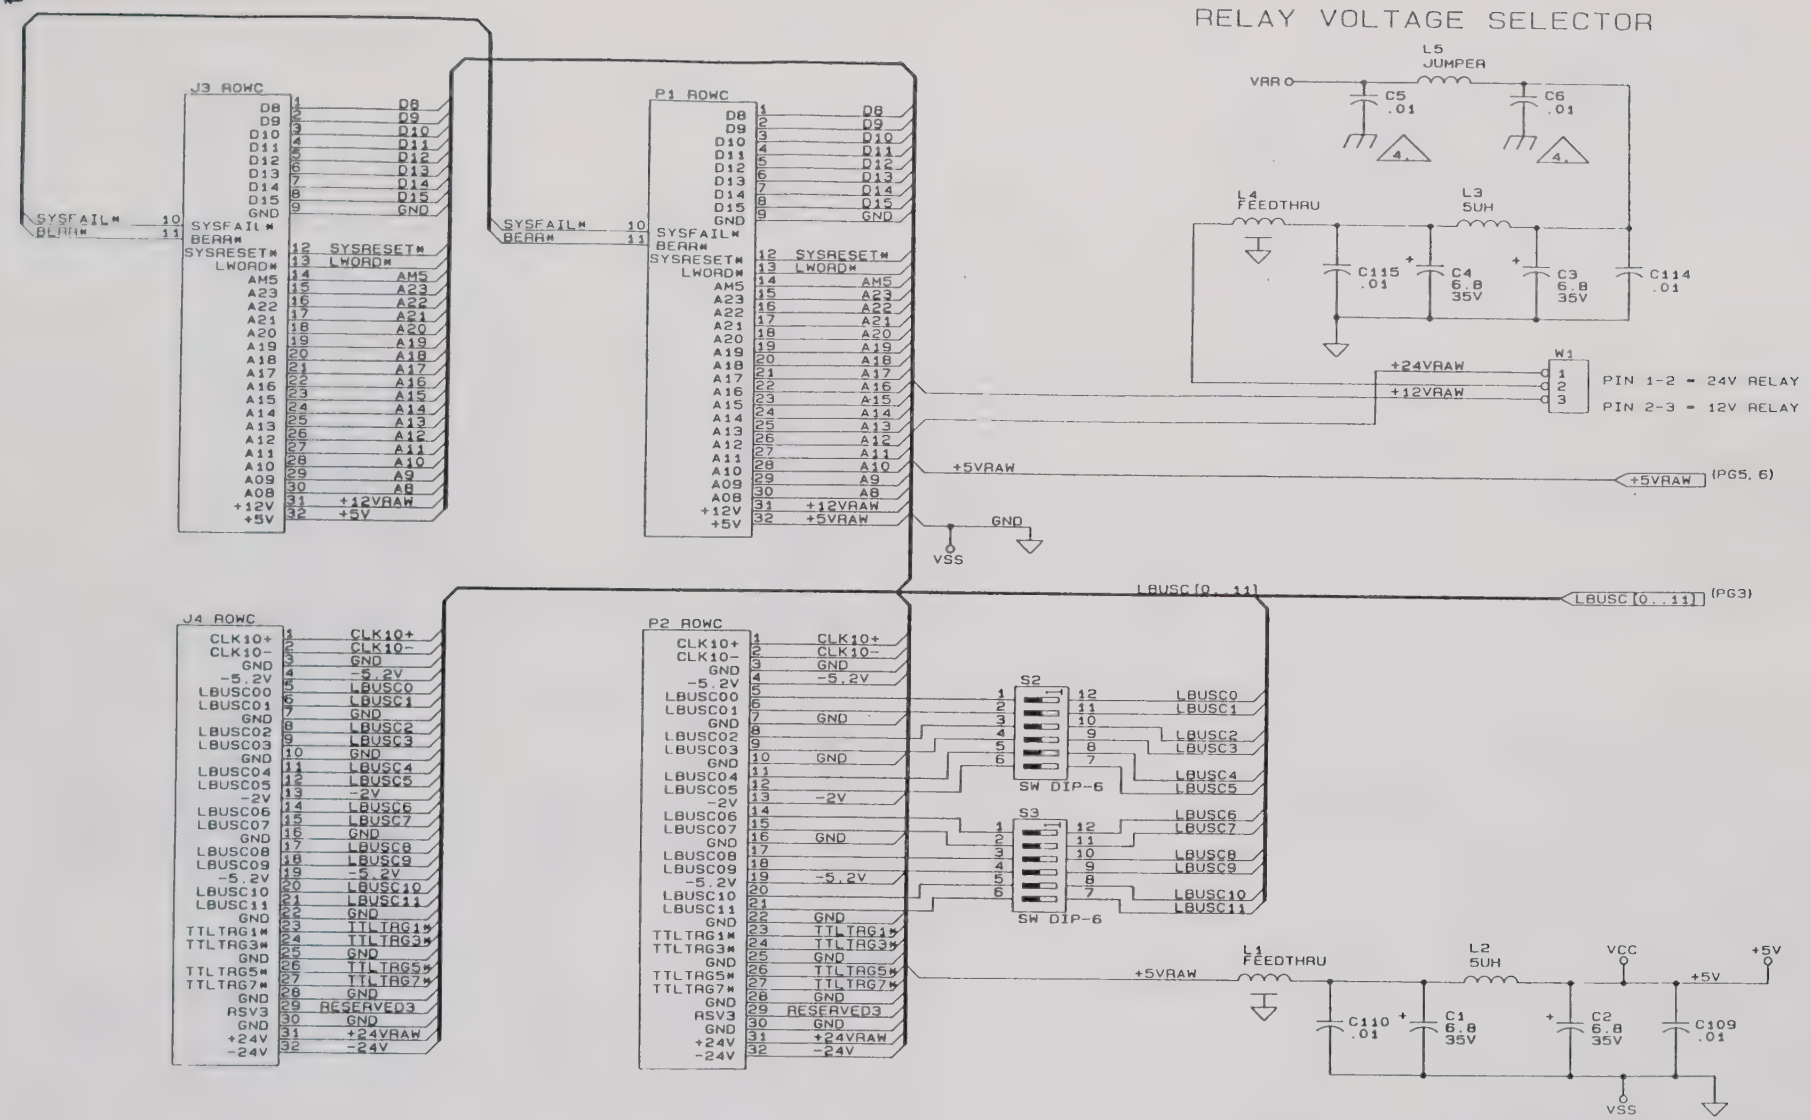

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431919	A
SCALE		SHEET 7 OF 10	

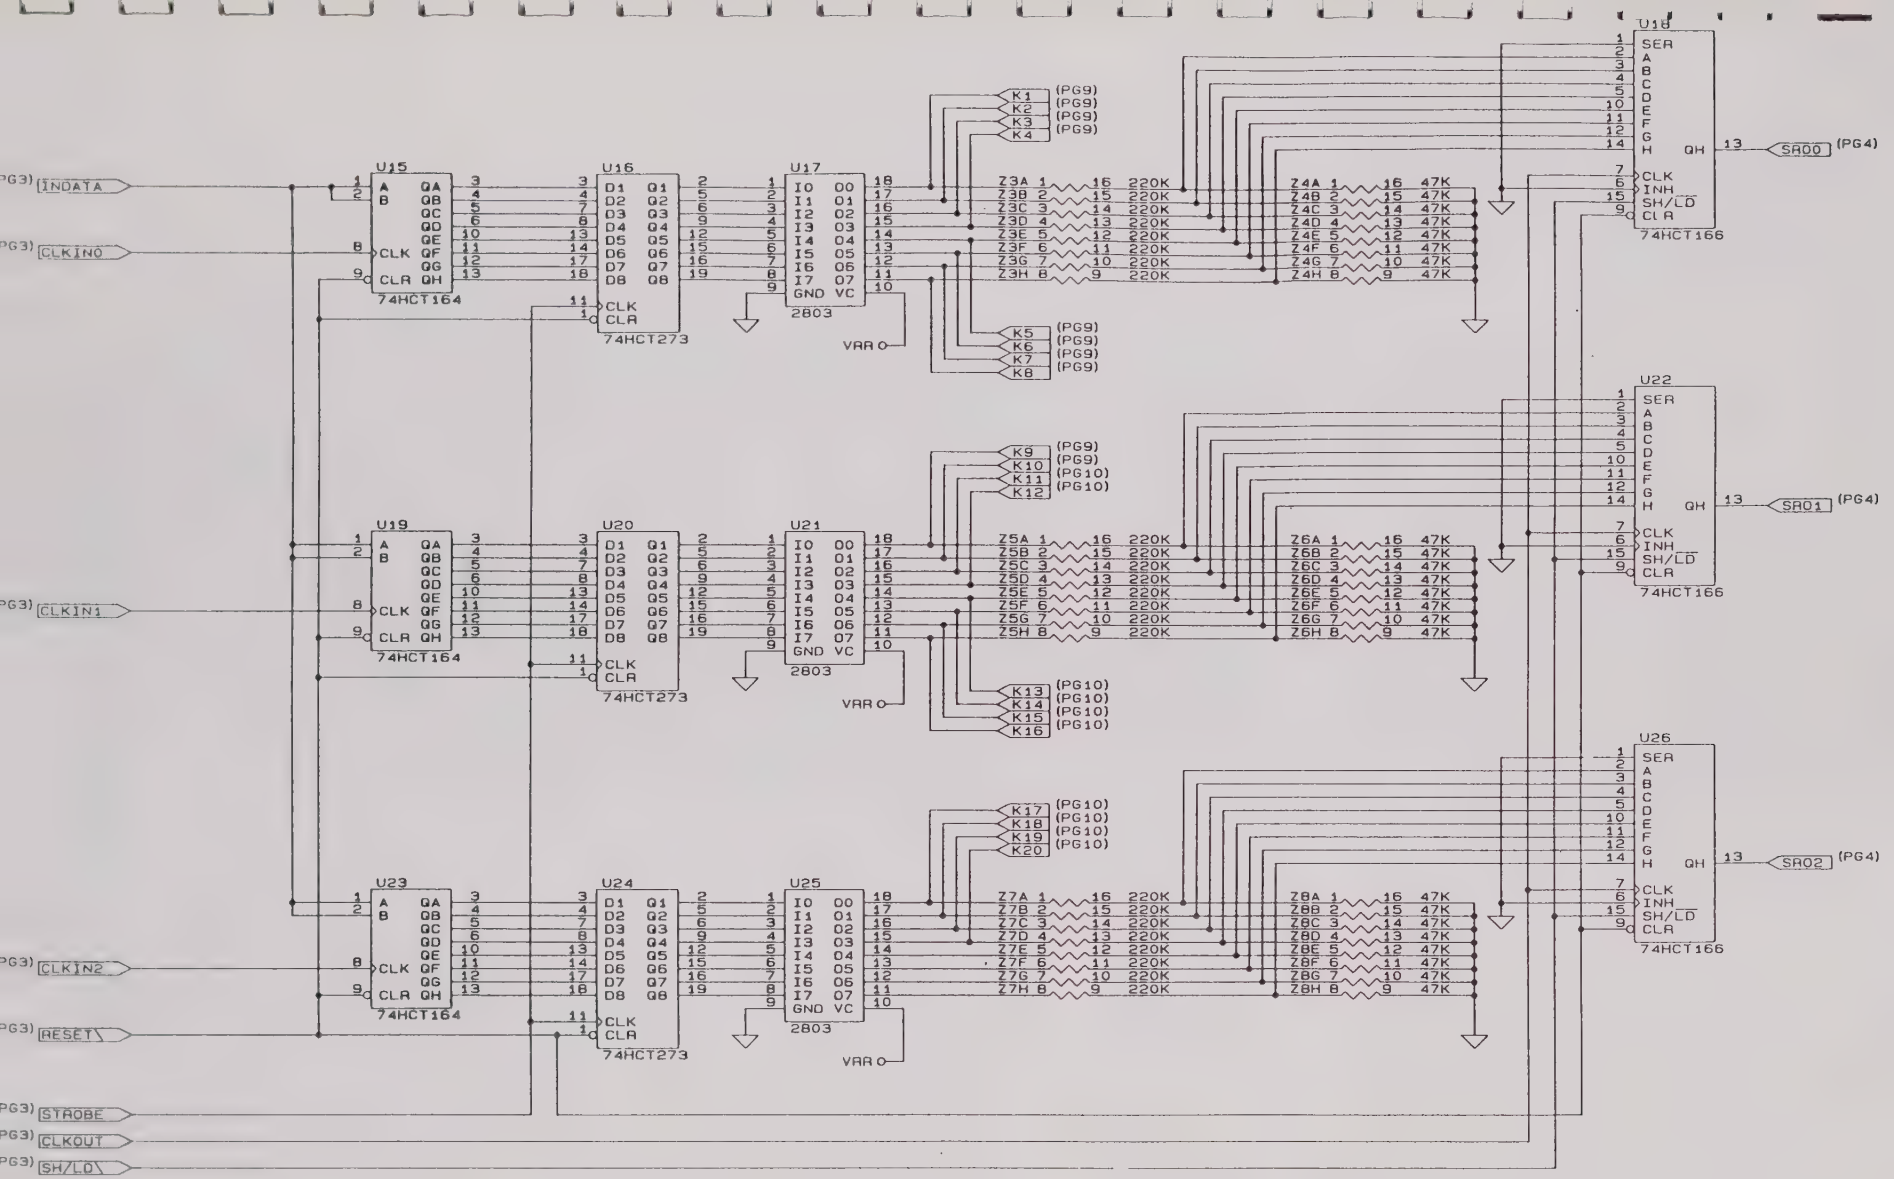

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431919	A
SCALE		SHEET 8 OF 10	

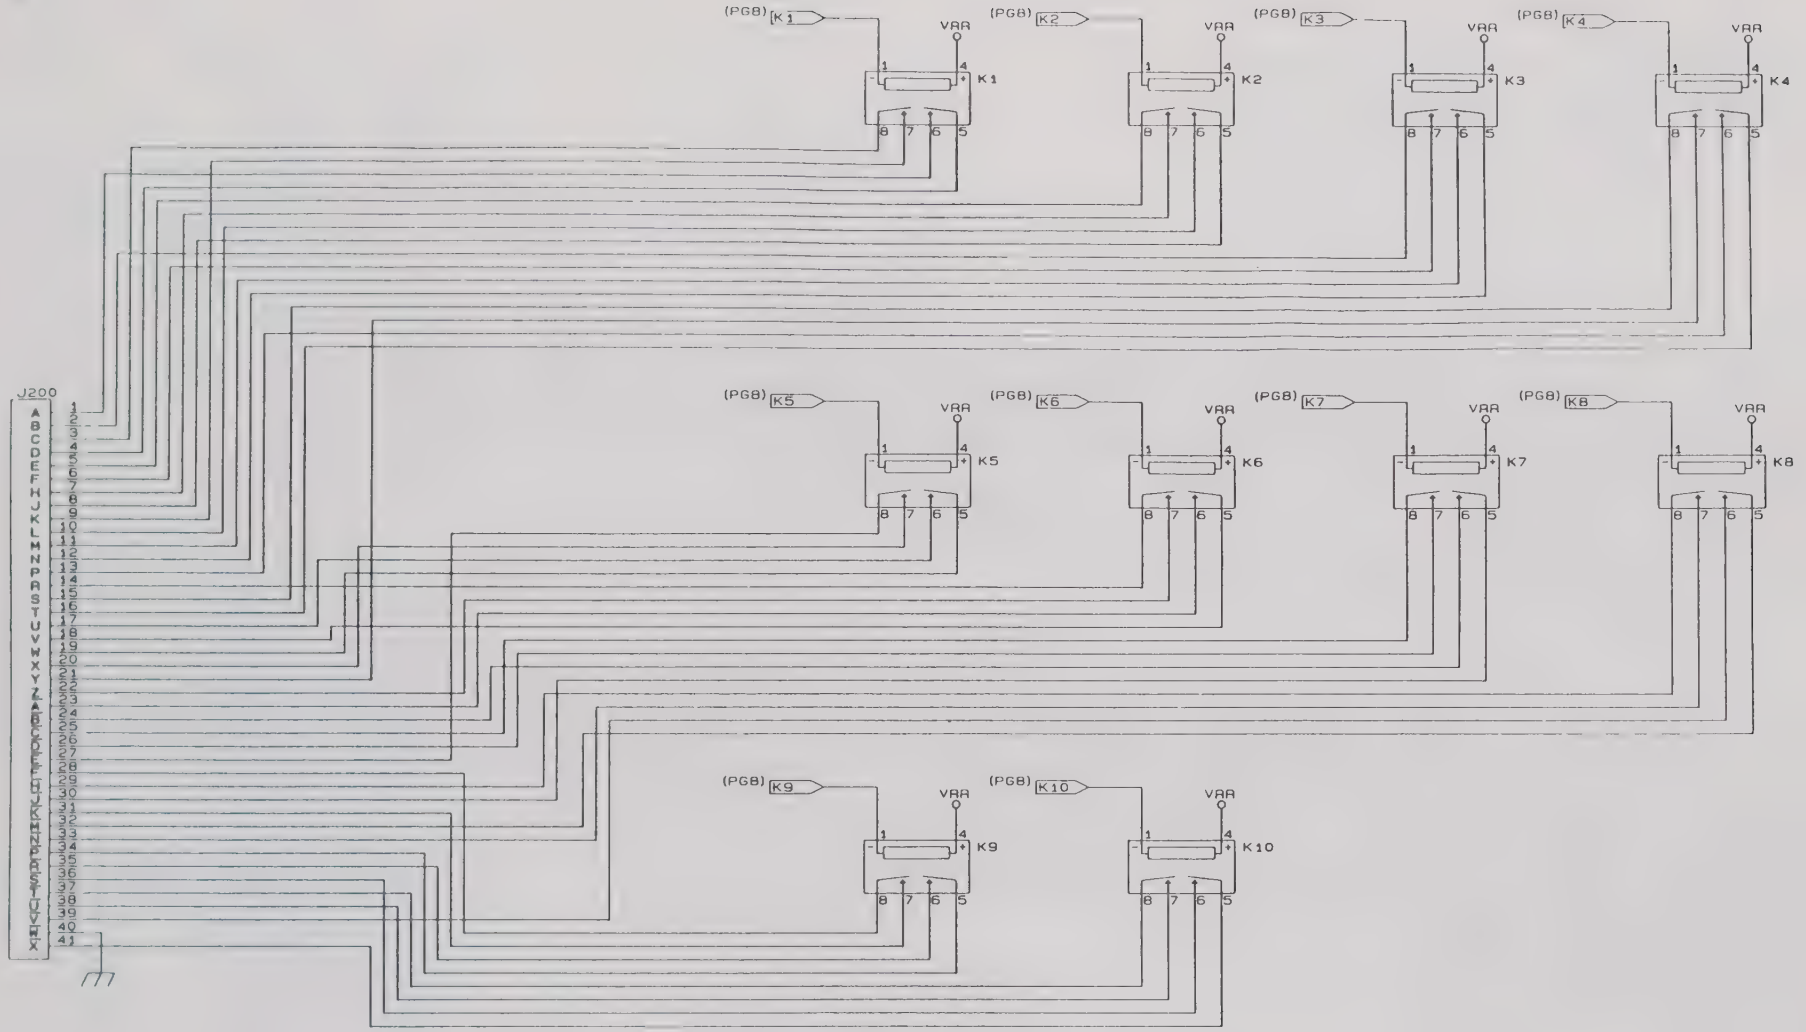

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431919	A
SCALE		SHEET 9 OF 10	

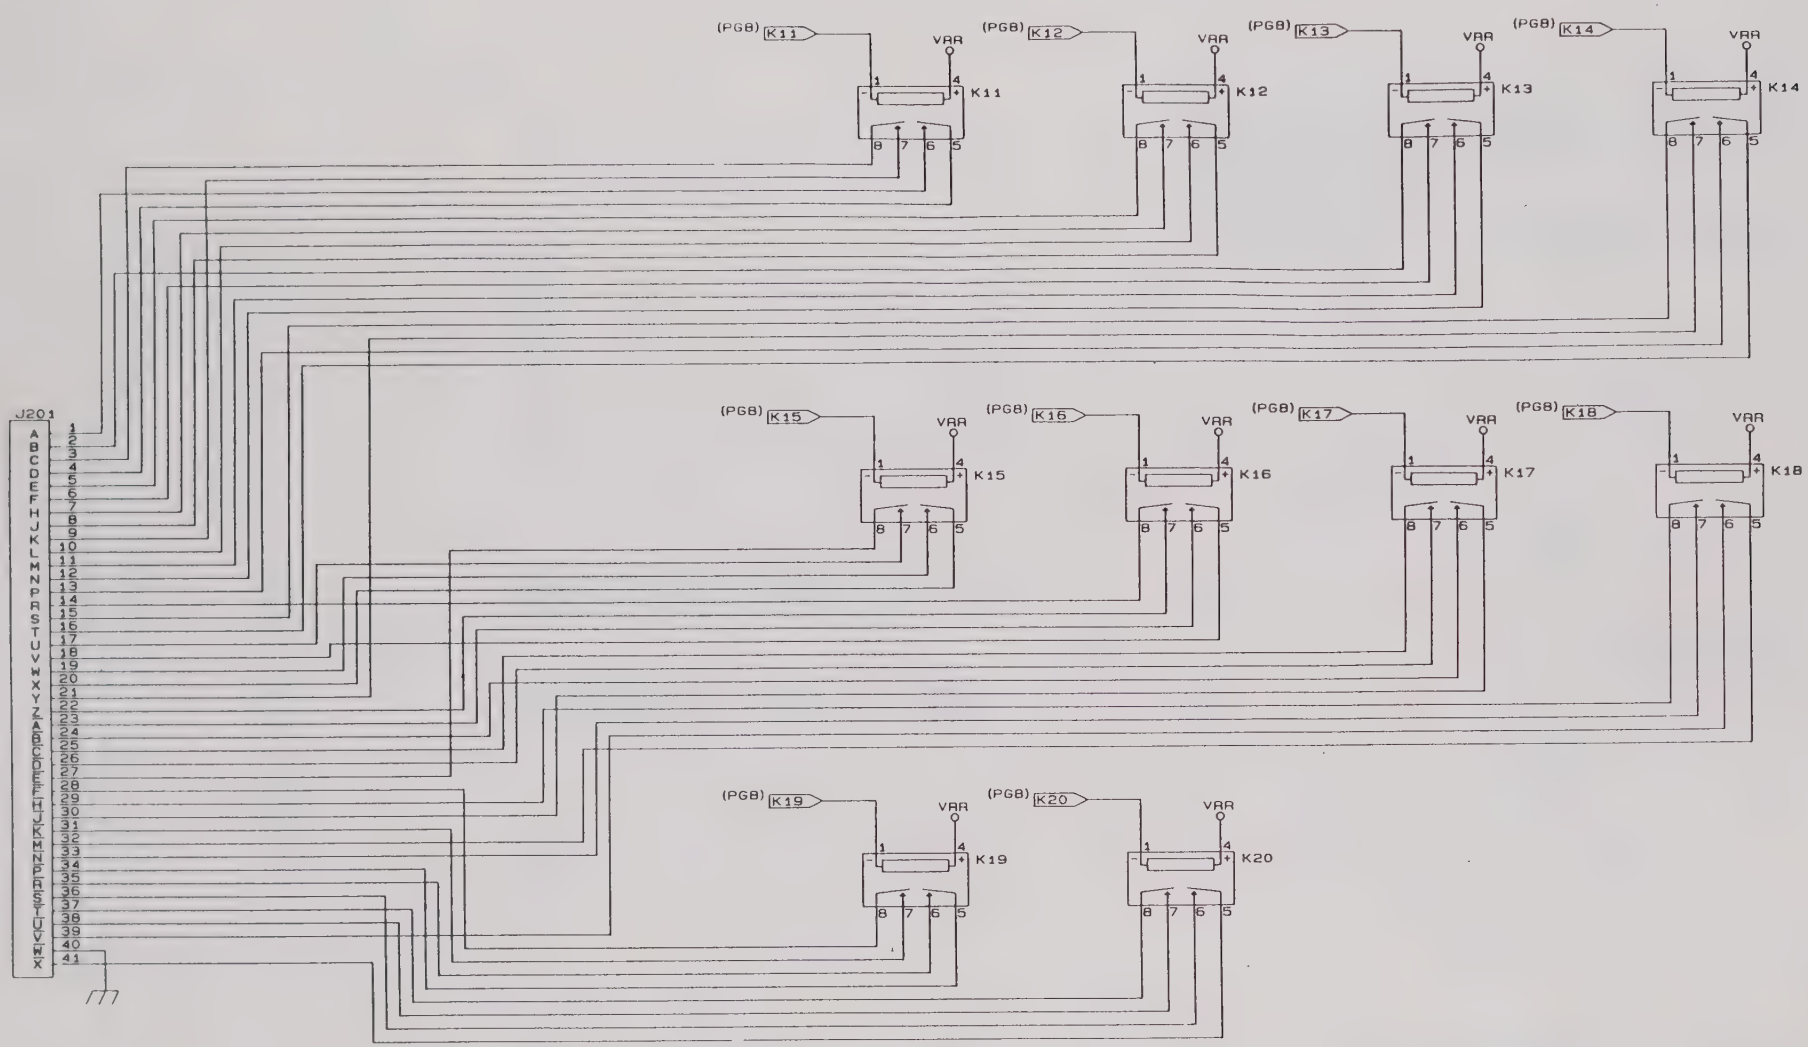

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431919	A
SCALE		SHEET 10 OF 10	

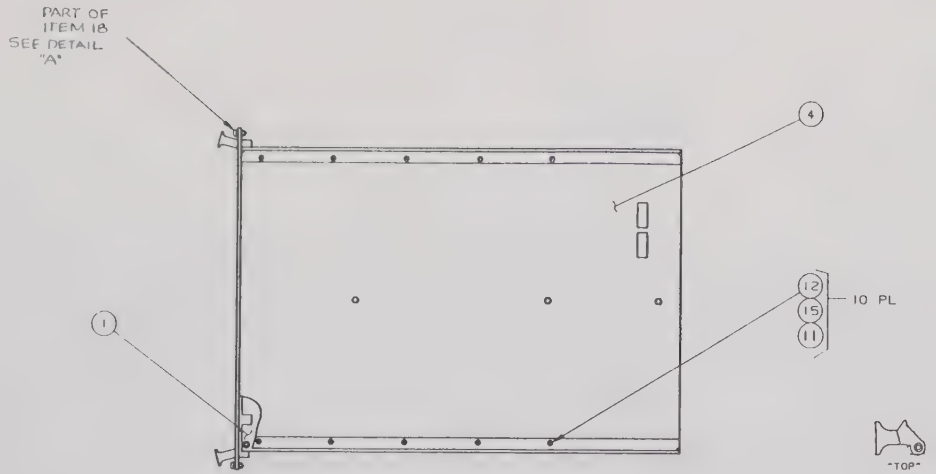

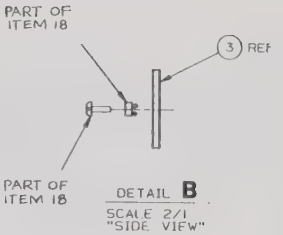

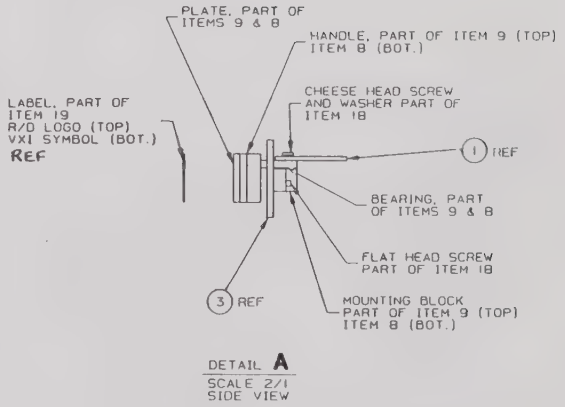

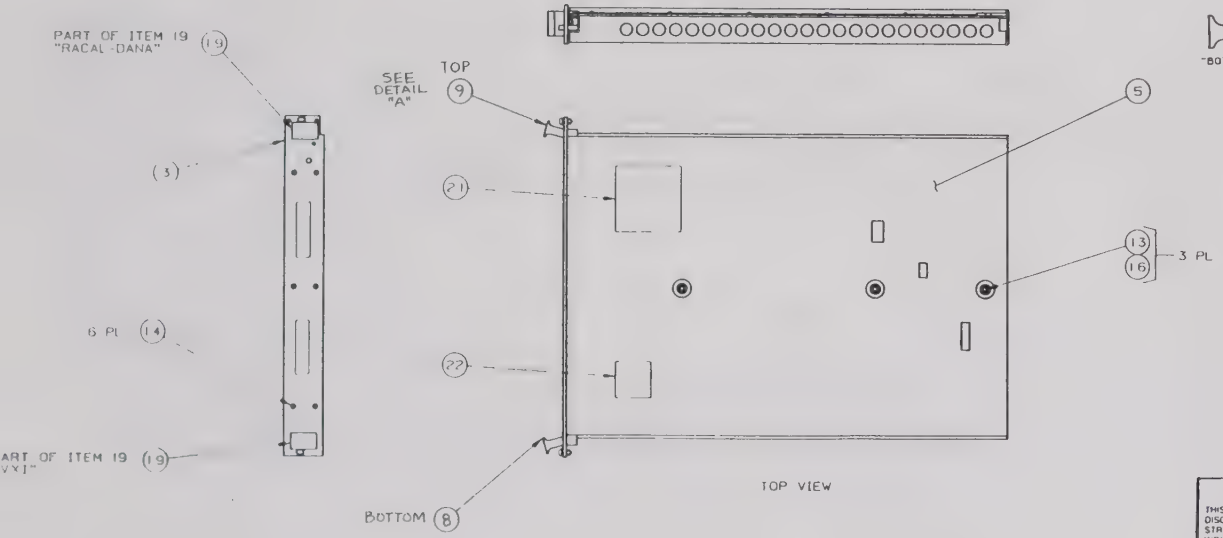

1 SET SWITCH CONFIGURATION FOR SW1:6-OFF, SW1:5-OFF

NOTES:

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.			
4 GOODYEAR, IRVINE, CALIFORNIA 92714			
DOCUMENT TITLE: FINAL ASSY, 1260-30A			
SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	404767-001	B
SCALE/2		SHEET 1 OF 5	

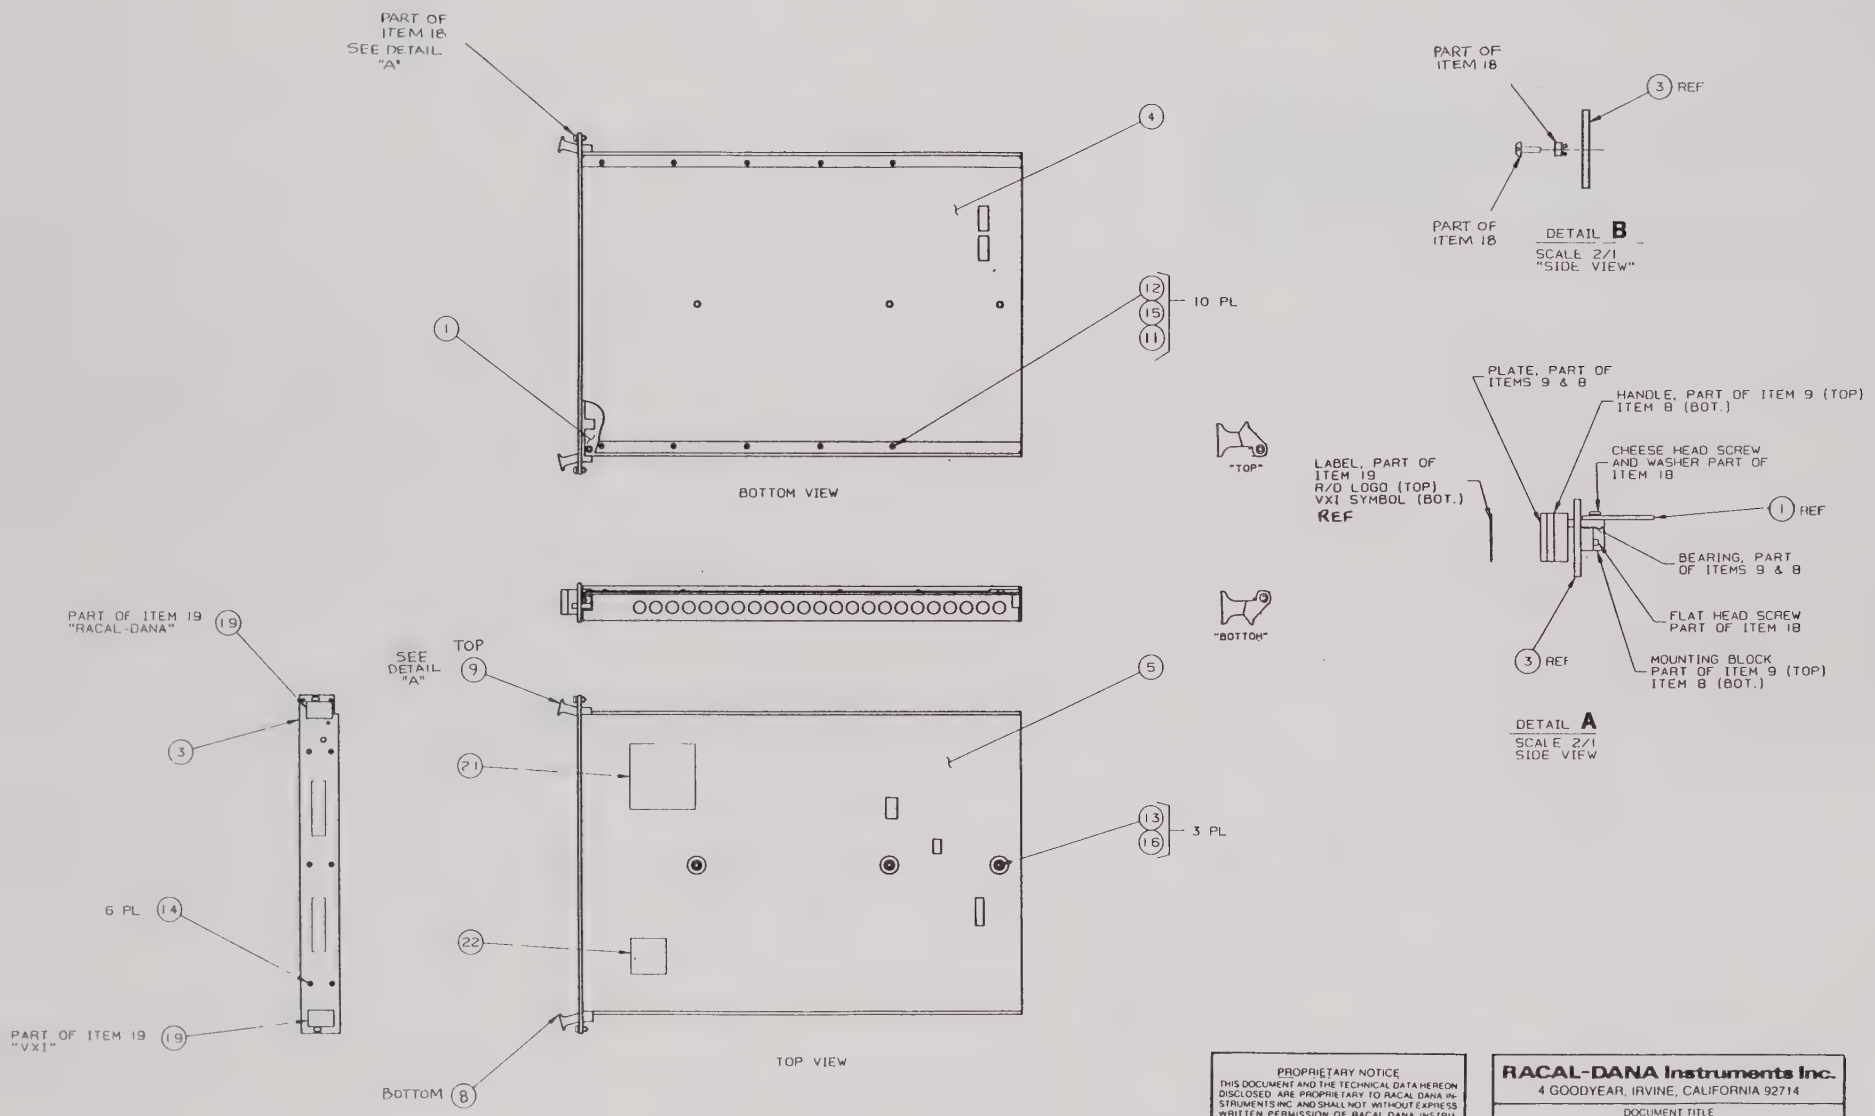

1 SET SWITCH CONFIGURATION FOR SW1:6-OFF, SW1:5-ON

NOTES

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE: FINAL ASSY, 1260-30B

SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	404767-002	B

SCALE/2 | SHEET 1 OF 5

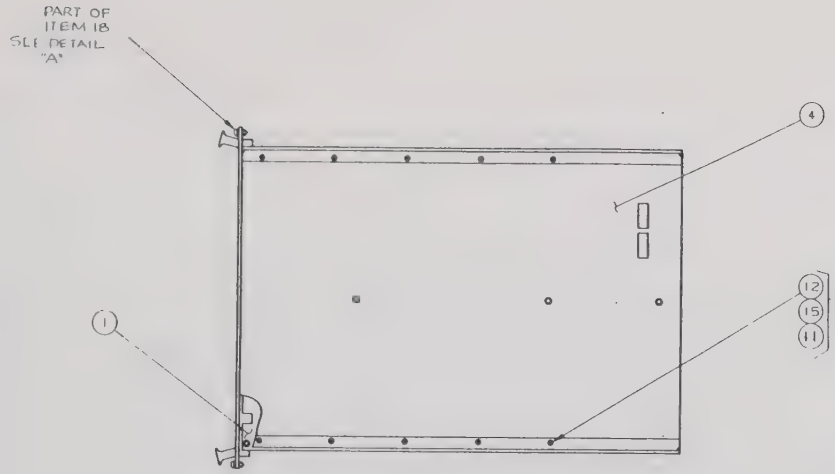

BOTTOM VIEW



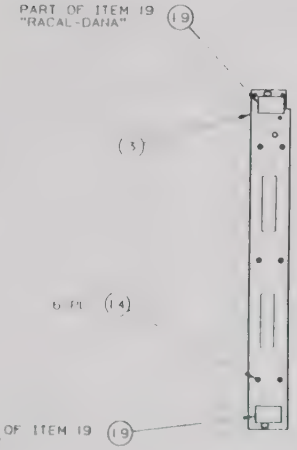

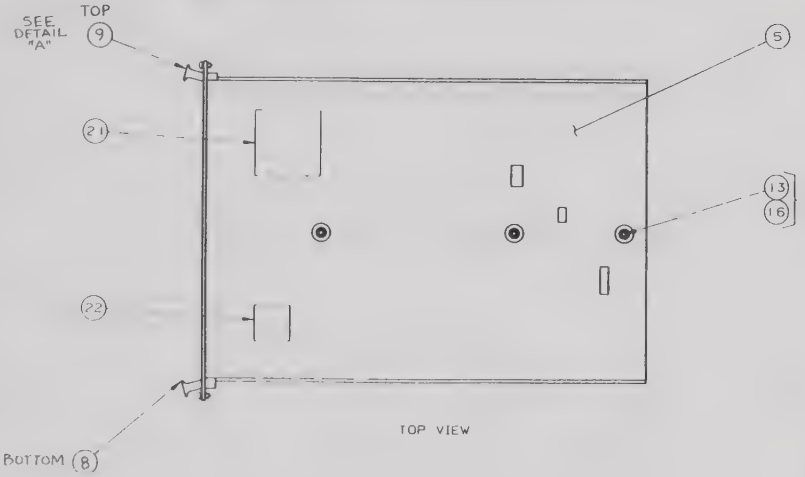

TOP VIEW

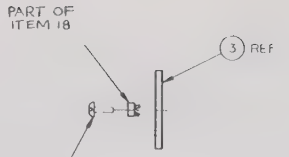

DETAIL **B**
SCALE 2/1
"SIDE VIEW"

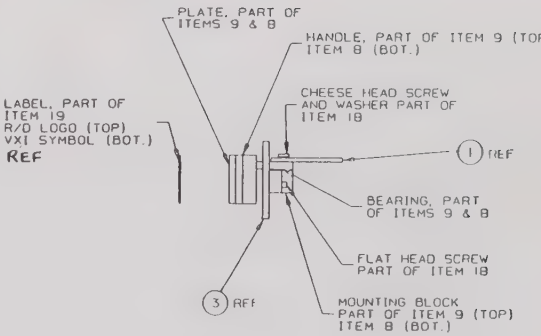

DETAIL **A**
SCALE 2/1
SIDE VIEW

1 SET SWITCH CONFIGURATION FOR SW1:6-ON, SW1:5-OFF
NOTE 5

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE			
FINAL ASSY, 1260-30C			
SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	404767-003	B
SCALE/2		SHEET 1 OF 5	

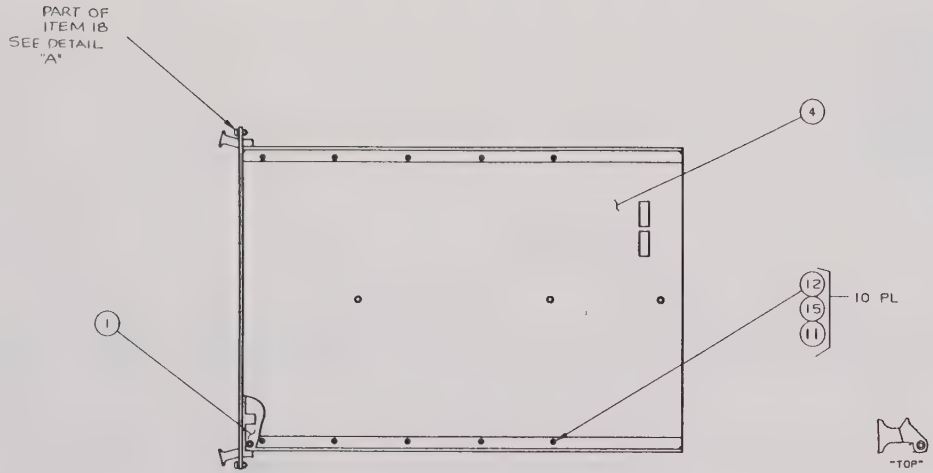

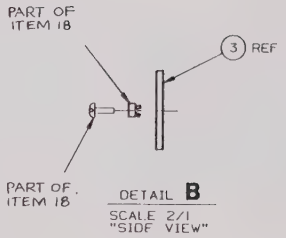

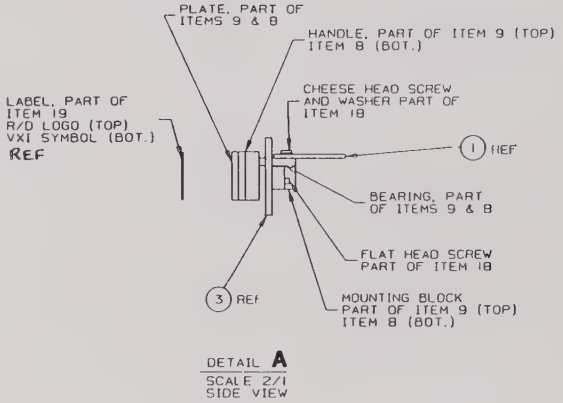

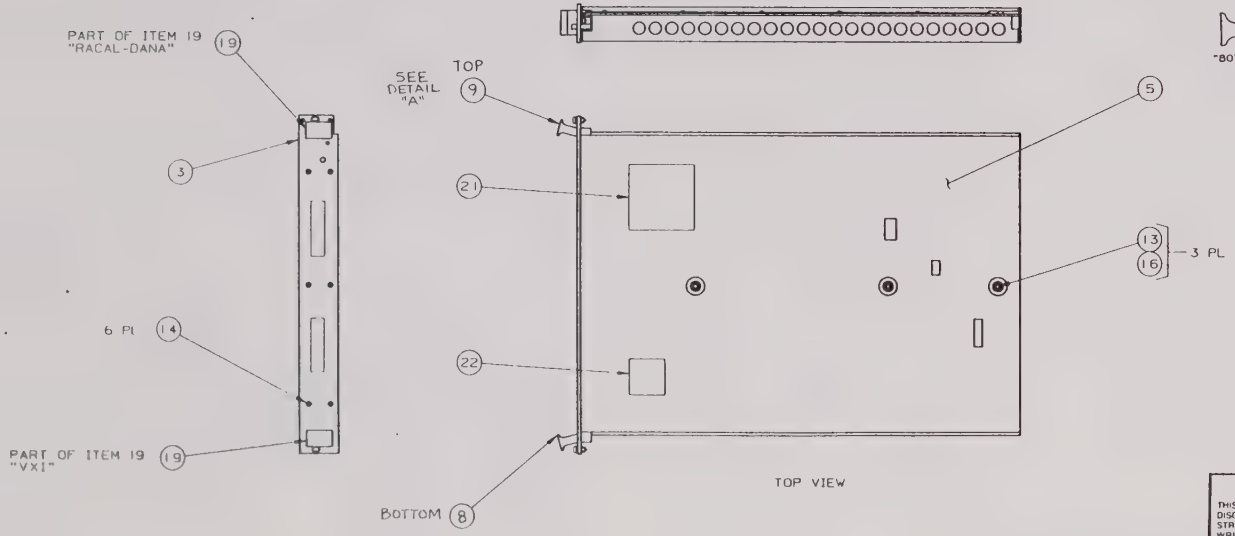

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.			
4 GOODYEAR, IRVINE, CALIFORNIA 92714			
DOCUMENT TITLE			
FINAL ASSY, 1260-30D			
SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	404767-004	B
SCALE/2		SHEET 1 OF 5	

NOTES

1 SET SWITCH CONFIGURATION FOR SW1:6-ON, SW1:5-ON

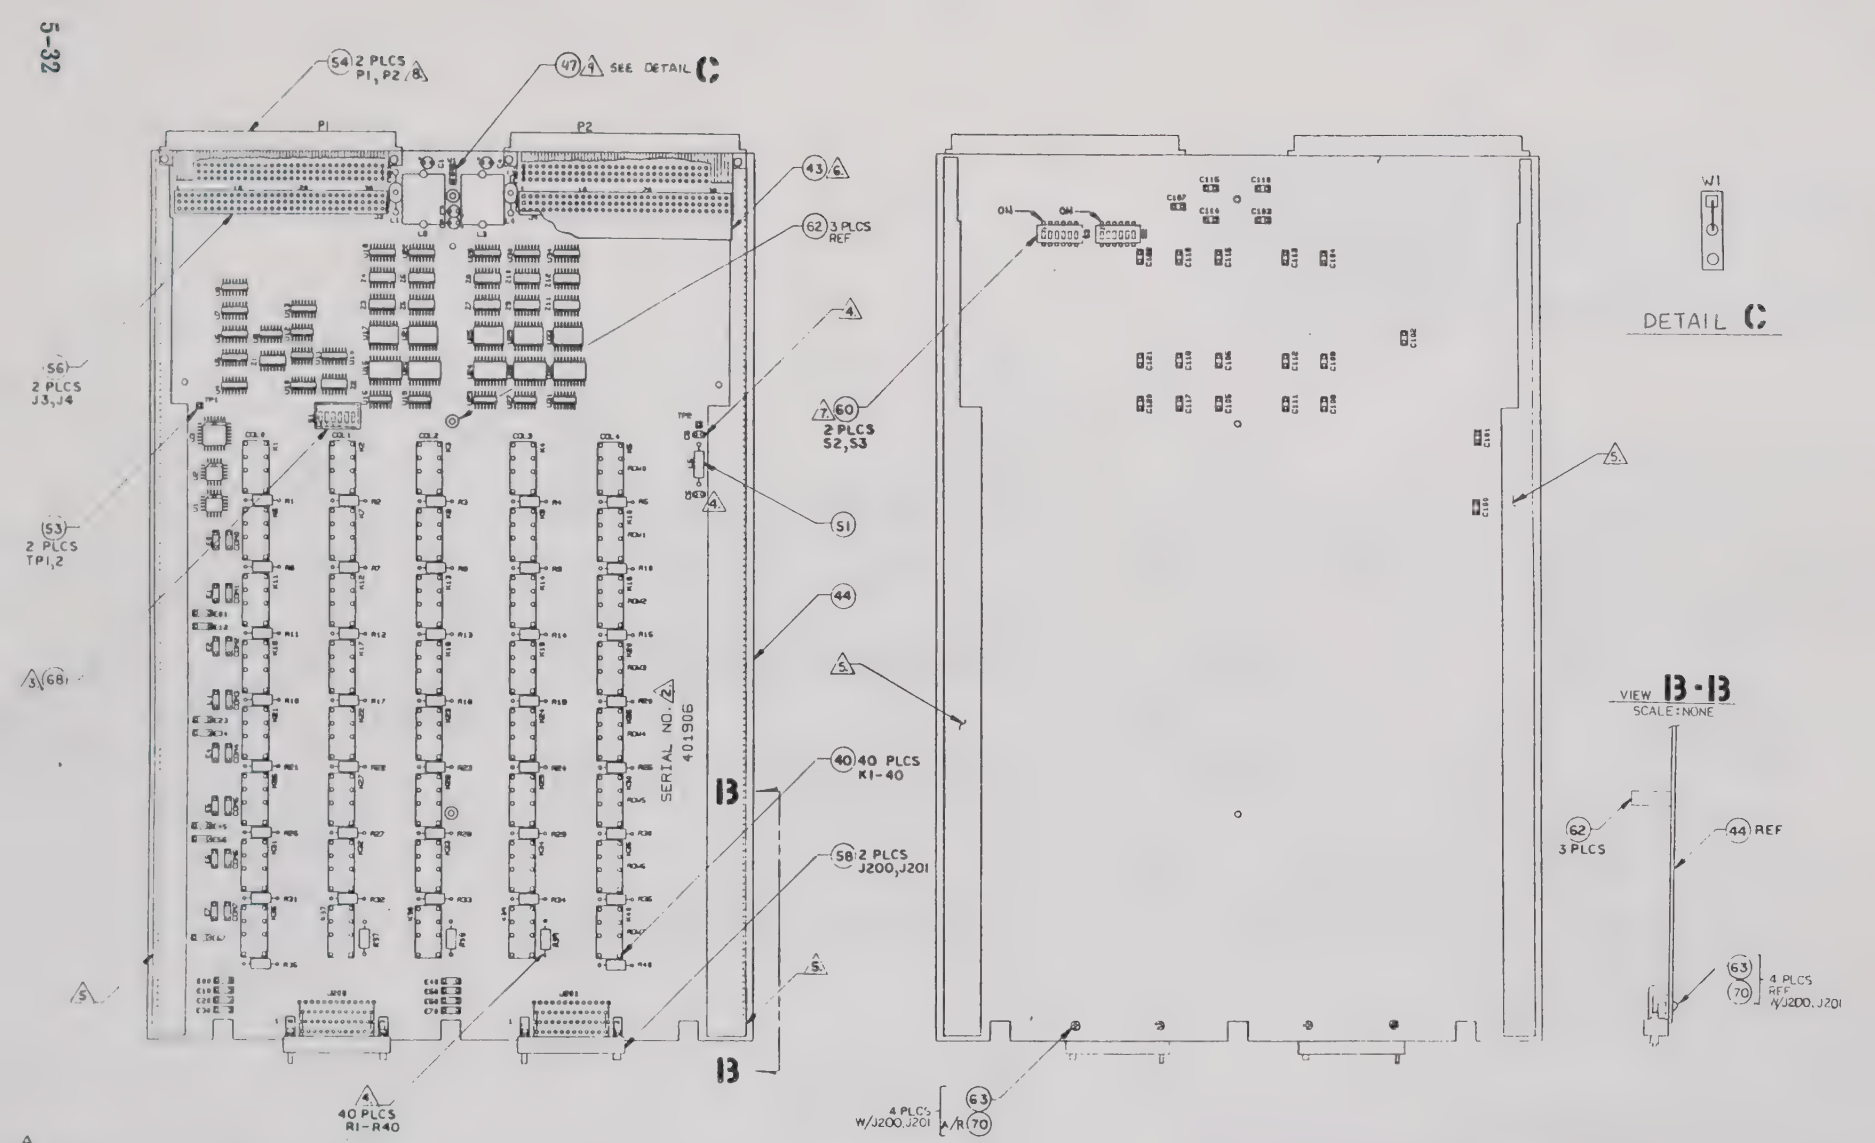

1. INSTALL ITEM 47 BETWEEN W1-1 AND W1-2.
2. P1 AND P2 MUST BE INSTALLED FLUSH AT RIGHT ANGLES TO PC BOARD.
3. SET ALL S2,S3 SWITCHES (ON) OR (CLOSED) OR (1) POSITION. DO NOT WAVE SOLDER.
4. INSTALL (ITEM 43) PCB INTO (ITEM 56) J4.
5. AREAS INDICATED TO BE FLAT AND FREE FROM SOLDER (BOTH SIDES).
6. THE FOLLOWING PARTS ARE NOT INSTALLED C5, C6, R1-R40
7. SET S1 TO LOGICAL ADDRESS 1 PER TABLE 1.
8. INK STAMP SERIAL NUMBER ON COMPONENT SIDE IN INDICATED AREA.

1 REFERENCE SCHEMATIC 431906

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS, INC. AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF EVALUATING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.			
4 GOODYEAR, IRVINE, CALIFORNIA 92714			
DOCUMENT TITLE: PCB ASSY, 1260-30			
SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	401906	C
SCALE 1/1		SHEET 1 OF 4	

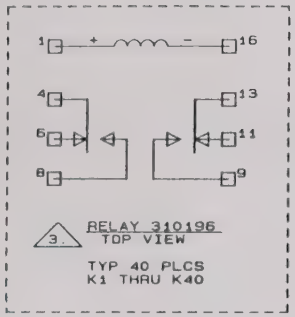

HIGHEST REF. DES.
Z12
W1
U34
S3
R40
P2
L5
K40
J201
E70
C122

REF. DES.	IC TYPE	+5V PIN NO.	GND PIN NO.
U17, 21, 25, 29, 33	2803		9
U16, 20, 24, 28, 32	74HCT273	20	10
U14	74HCT85	16	8
U13	74LS138	16	8
U11, 12, 15, 19, 23, 27, 31	74HCT164	14	7
U10, 18, 22, 26, 30, 34	74HCT166	16	8
U9	LM339	3	12
U7, 8	26LS32	16	8
U6	26LS31	16	8
U4, 5	74HCT253	16	8
U3	231154 (22V10H)	28	14
U2	231153 (16R4)	20	10
U1	231152 (16L8Q)	20	10
IC POWER AND GROUND CONNECTIONS			

NOTES: UNLESS OTHERWISE SPECIFIED

4. C5 AND C6, R1 THRU R40 ARE NOT INSTALLED.
3. RELAYS K1 THRU K40 ARE RACAL DANA P/N 310196.
   ALL RELAYS SHOWN IN DE-ENERGIZED POSITION.
2. RESISTOR NETWORKS ARE IN OHMS.
1. CAPACITOR VALUES ARE IN MICROFARADS, 50V, +/-20% UNLESS OTHERWISE SPECIFIED.

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART, OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL-DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL-DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

SCHEM.,1260-30

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431906	B

SCALE ——— SHEET 1 OF 17

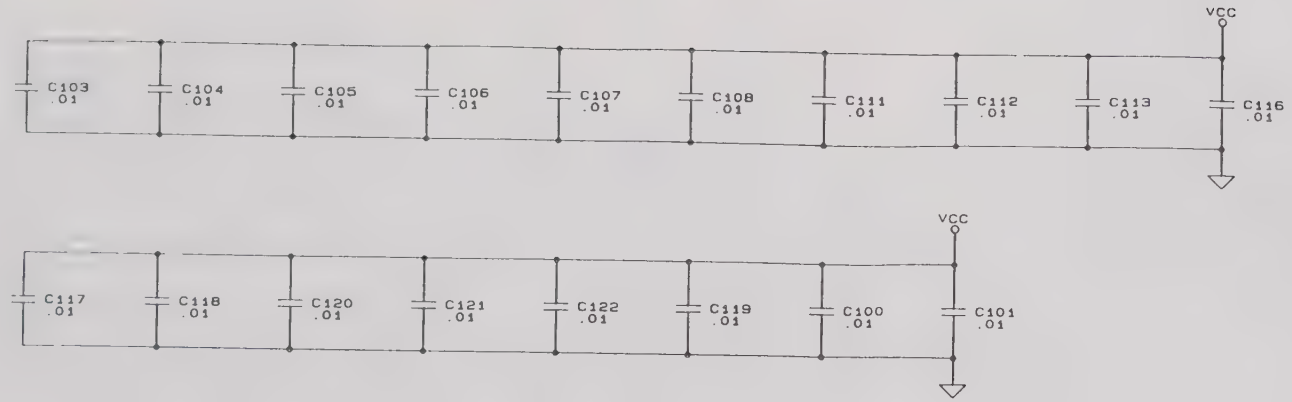

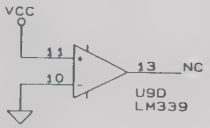

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431906	B
SCALE		SHEET 2 OF 17	

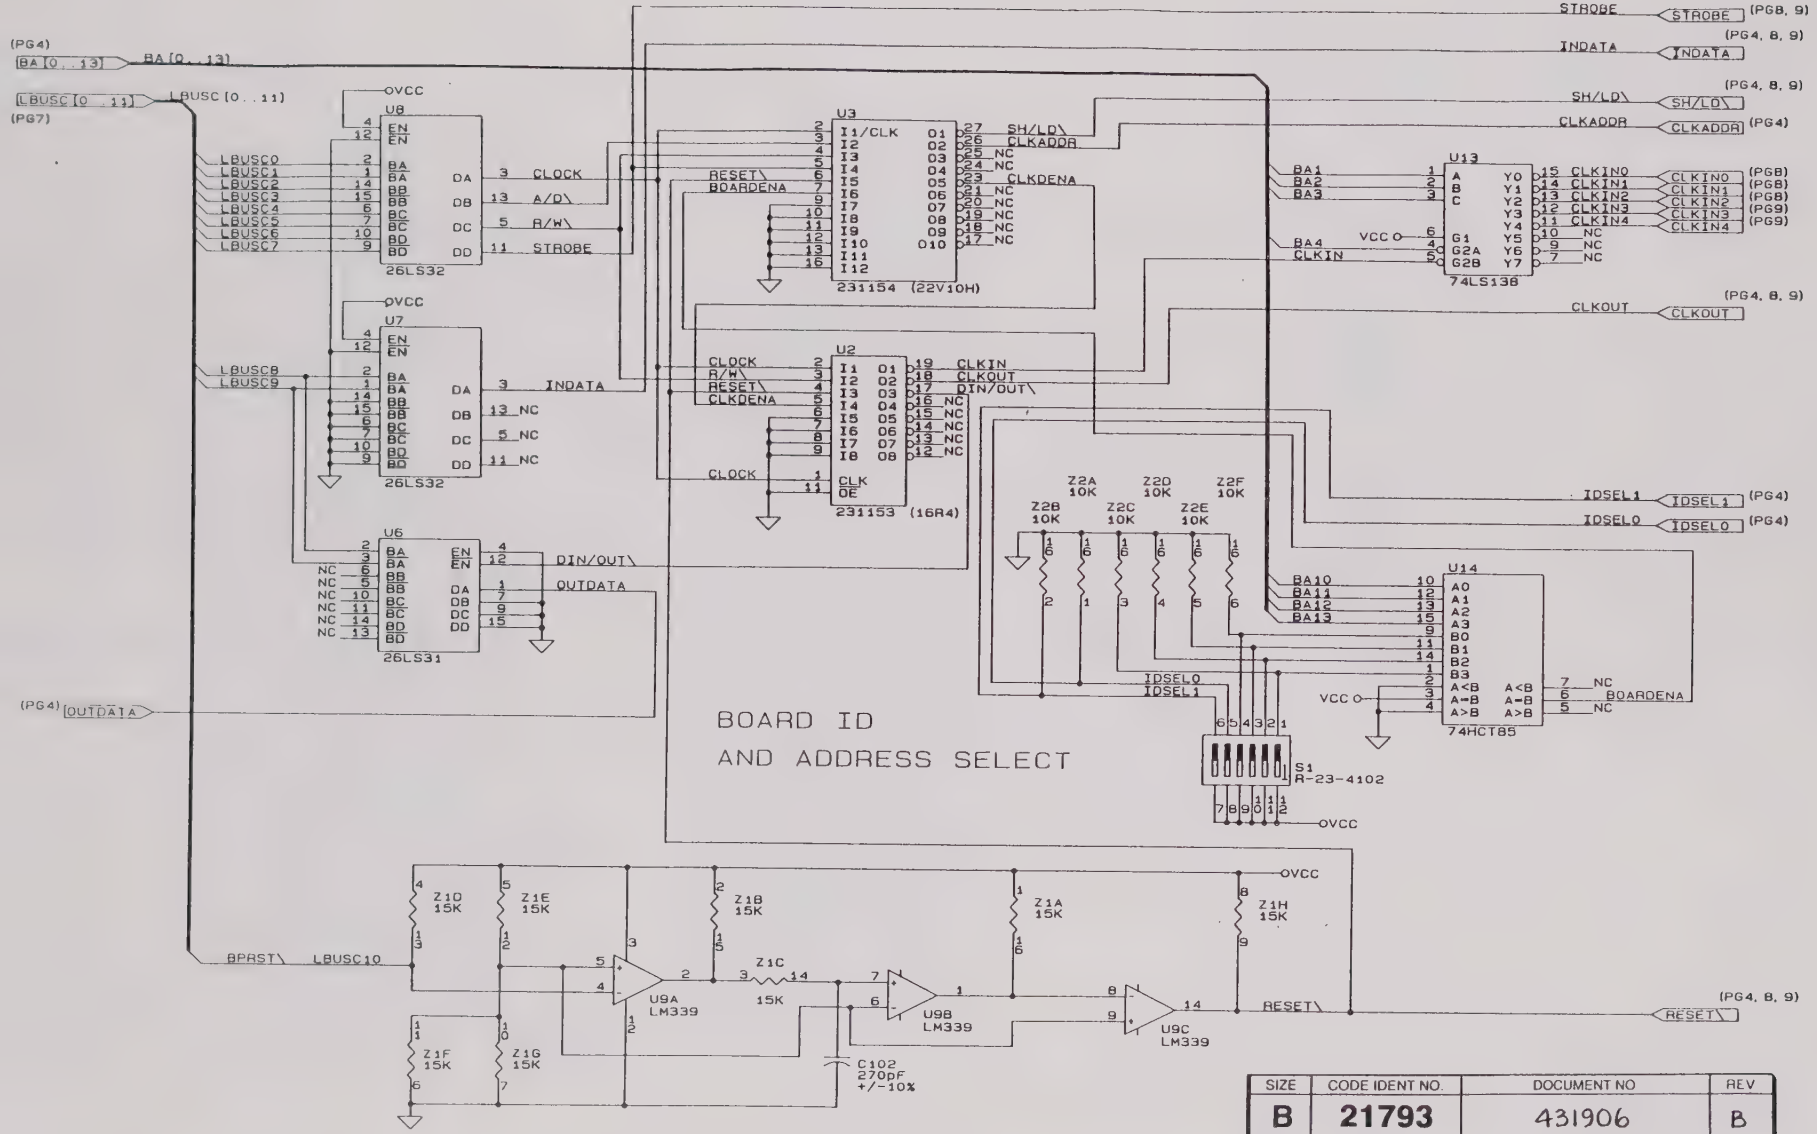

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431906	B
SCALE		SHEET 3 OF 17	

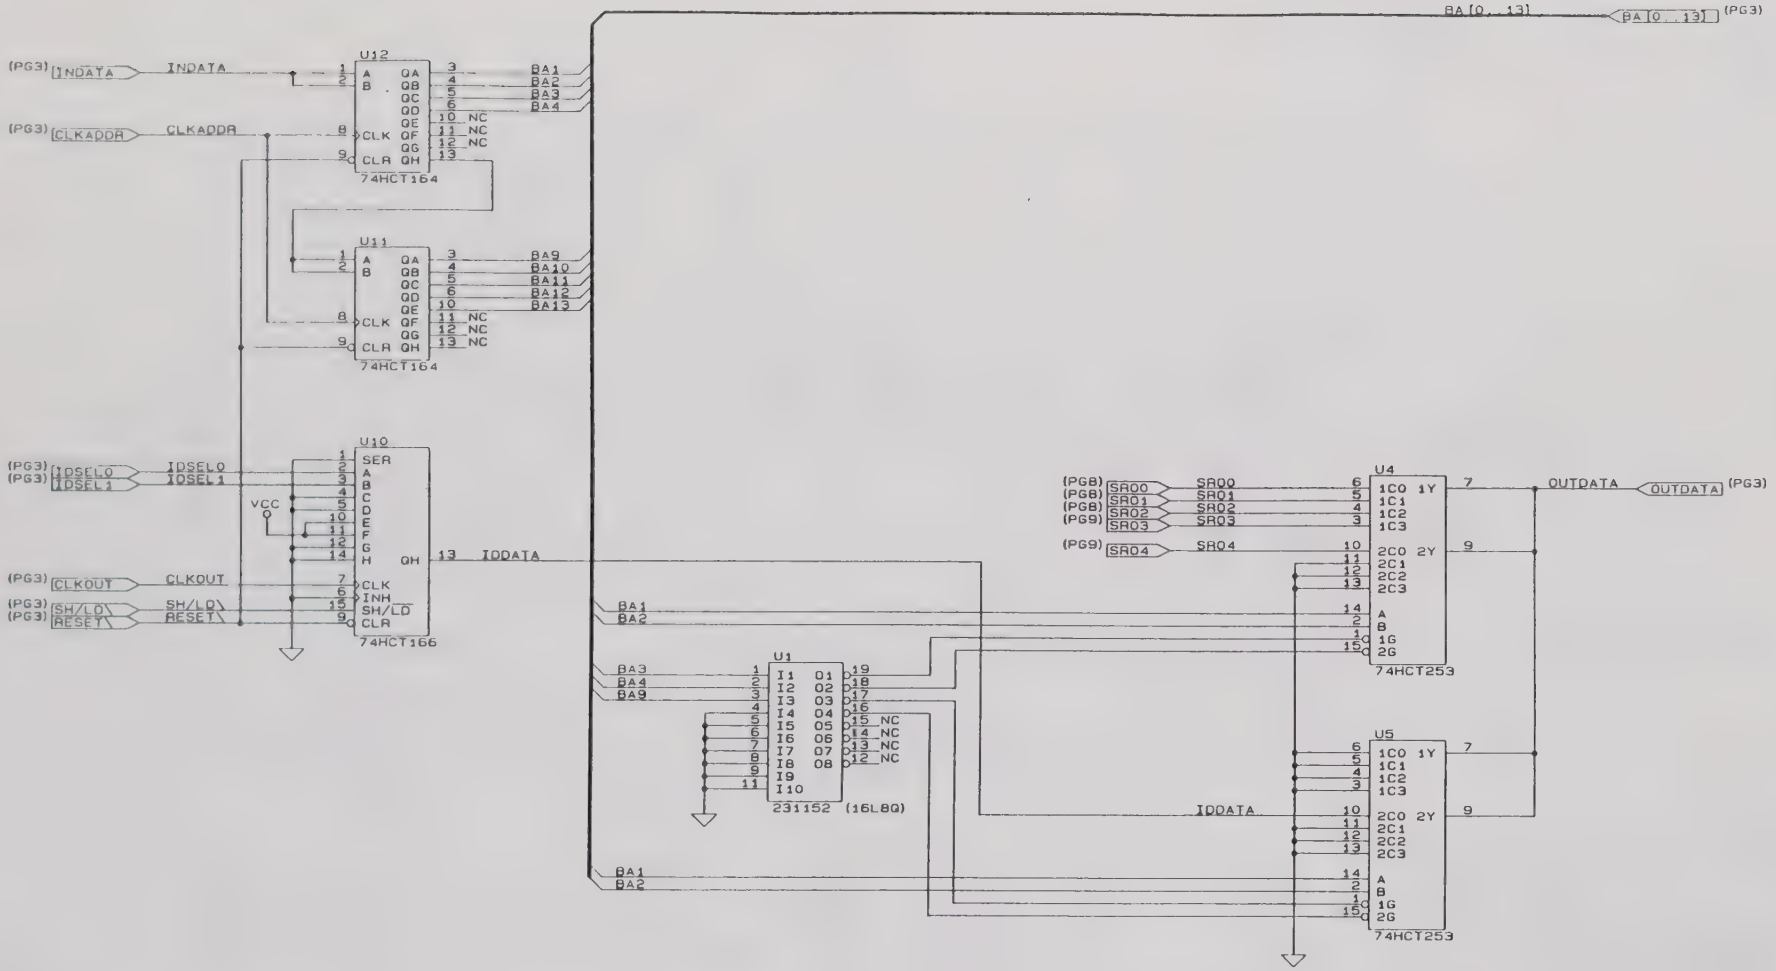

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431906	B
SCALE		SHEET 4 OF 17	

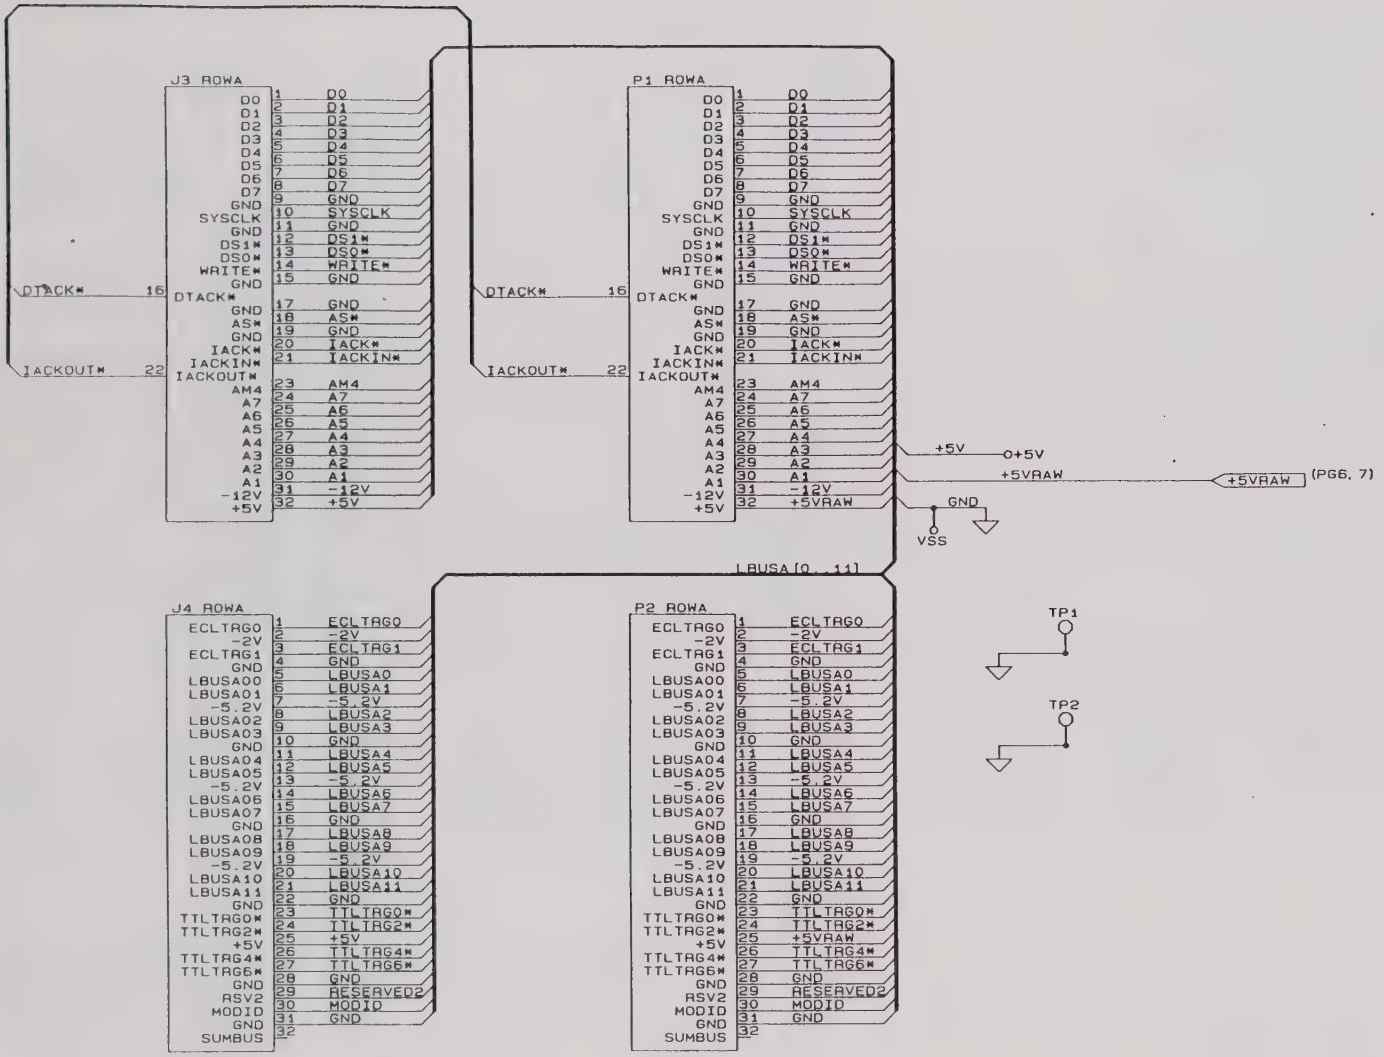

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431906	B
SCALE		SHEET 5 OF 17	

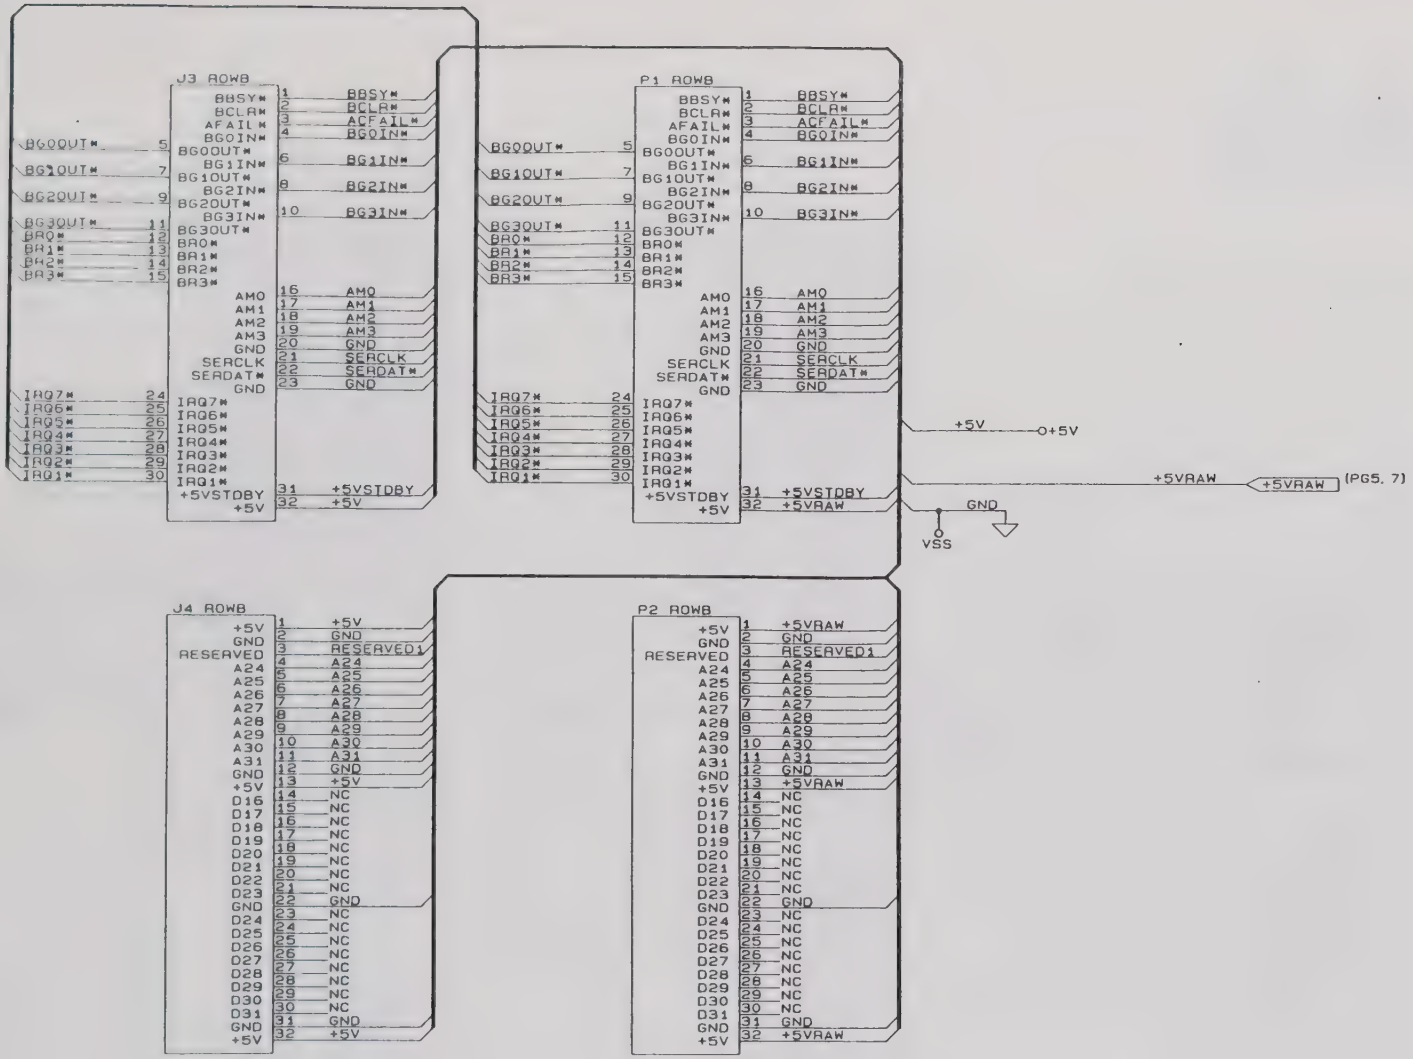

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431906	B
SCALE		SHEET 6 OF 17	

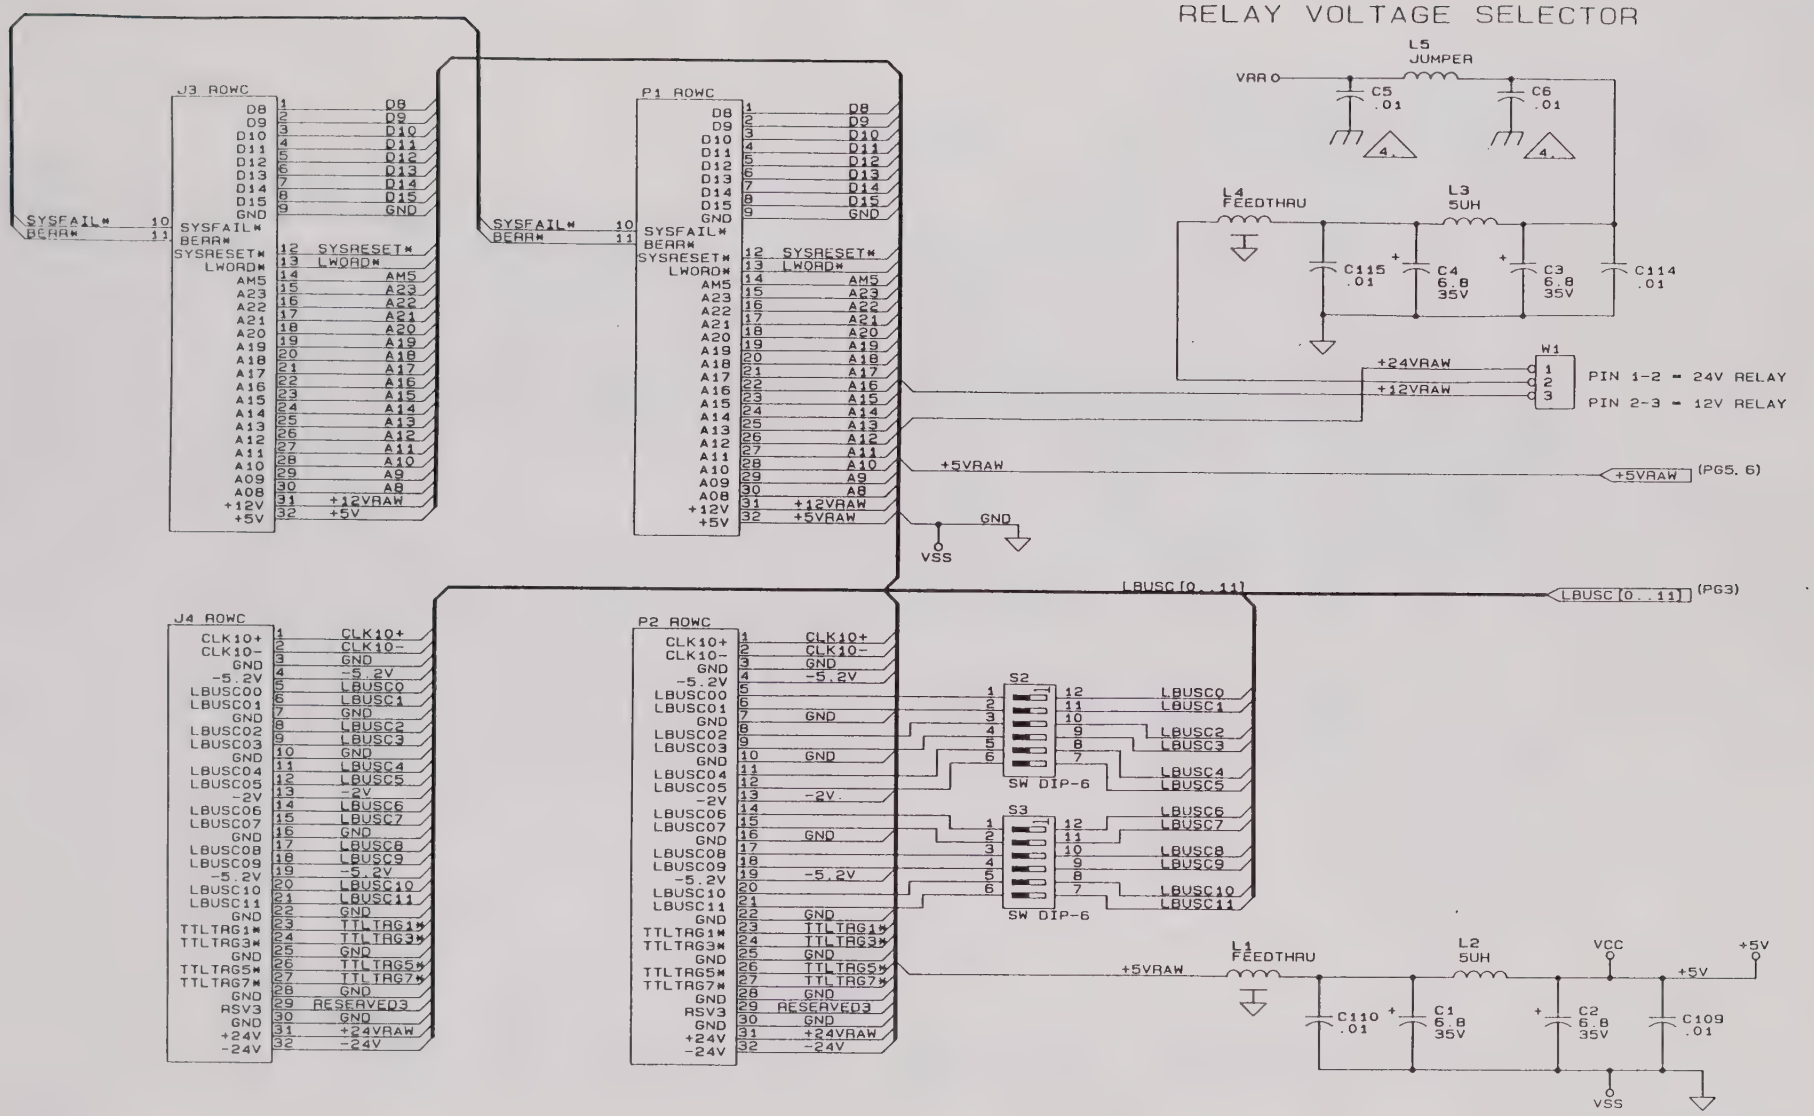

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431906	B
SCALE		SHEET 7 OF 17	

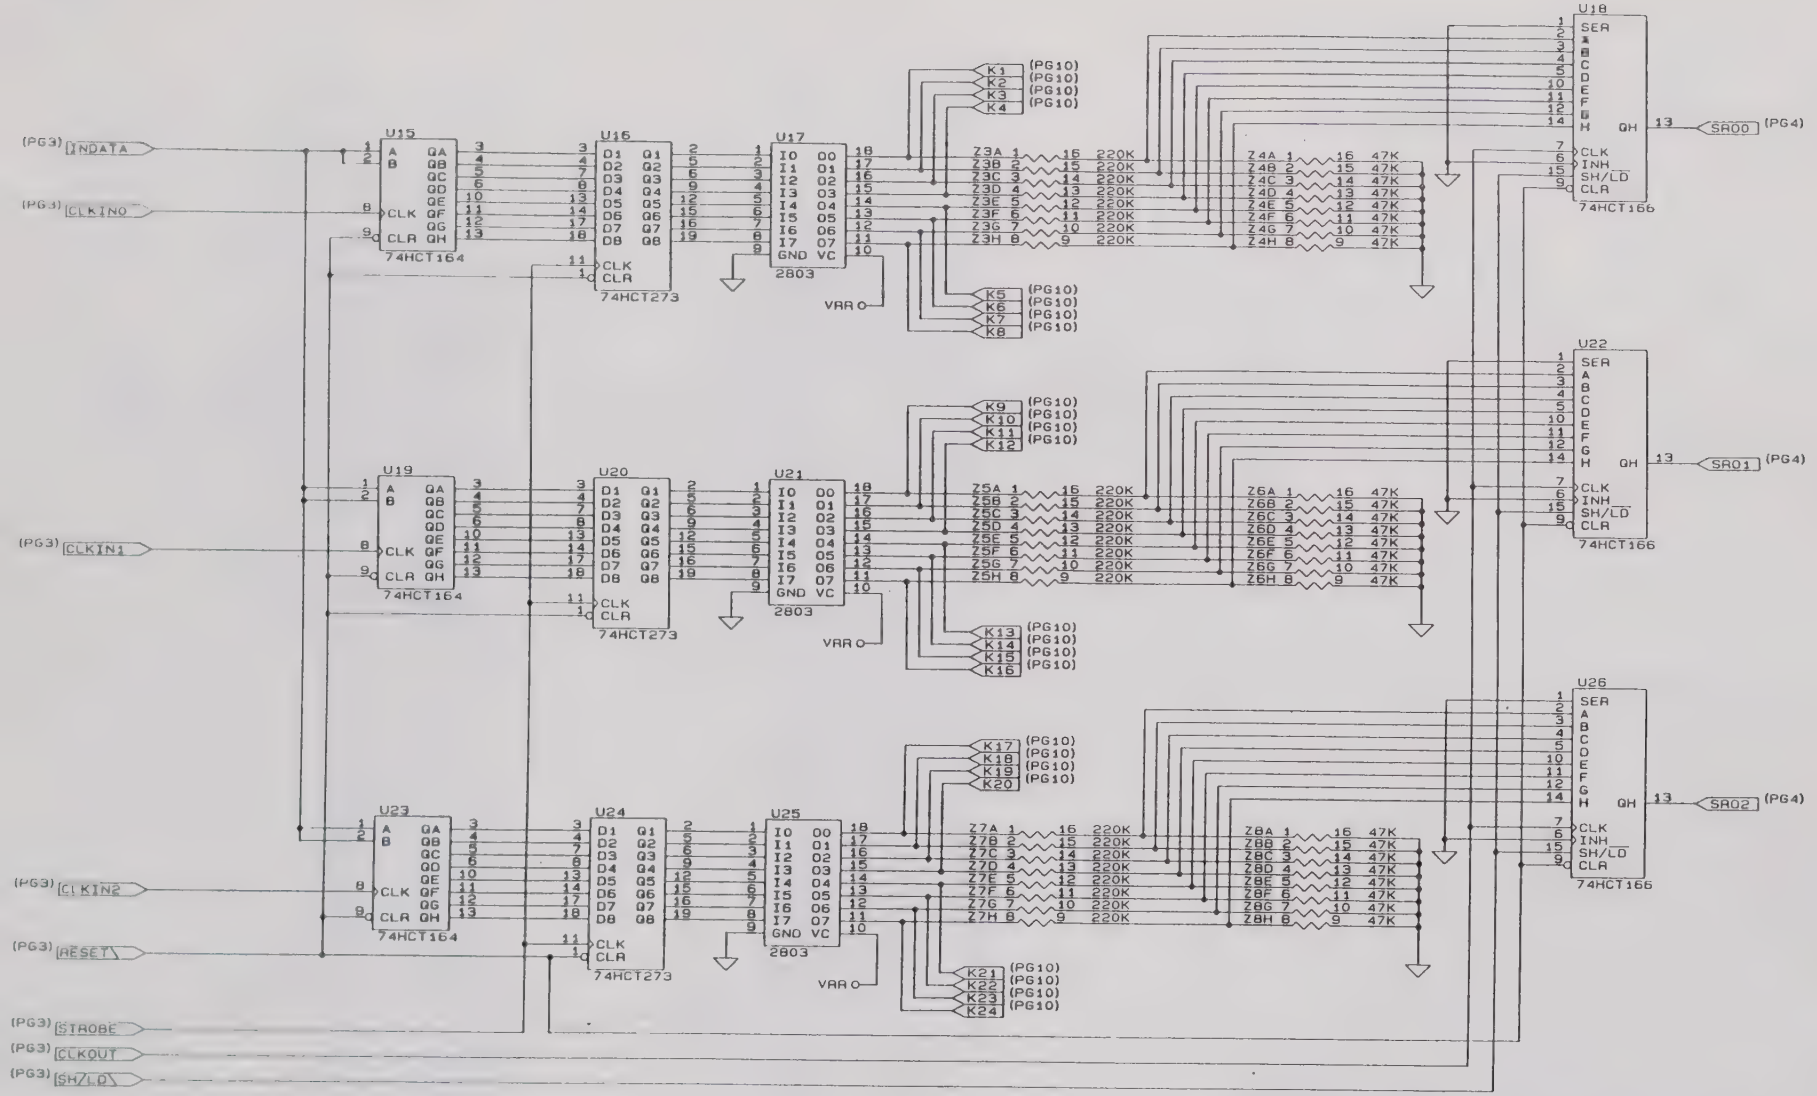

SIZE	CODE IDENT NO.	DOCUMENT NO.	REV
B	21793	431906	B
SCALE		SHEET 8 OF 17	

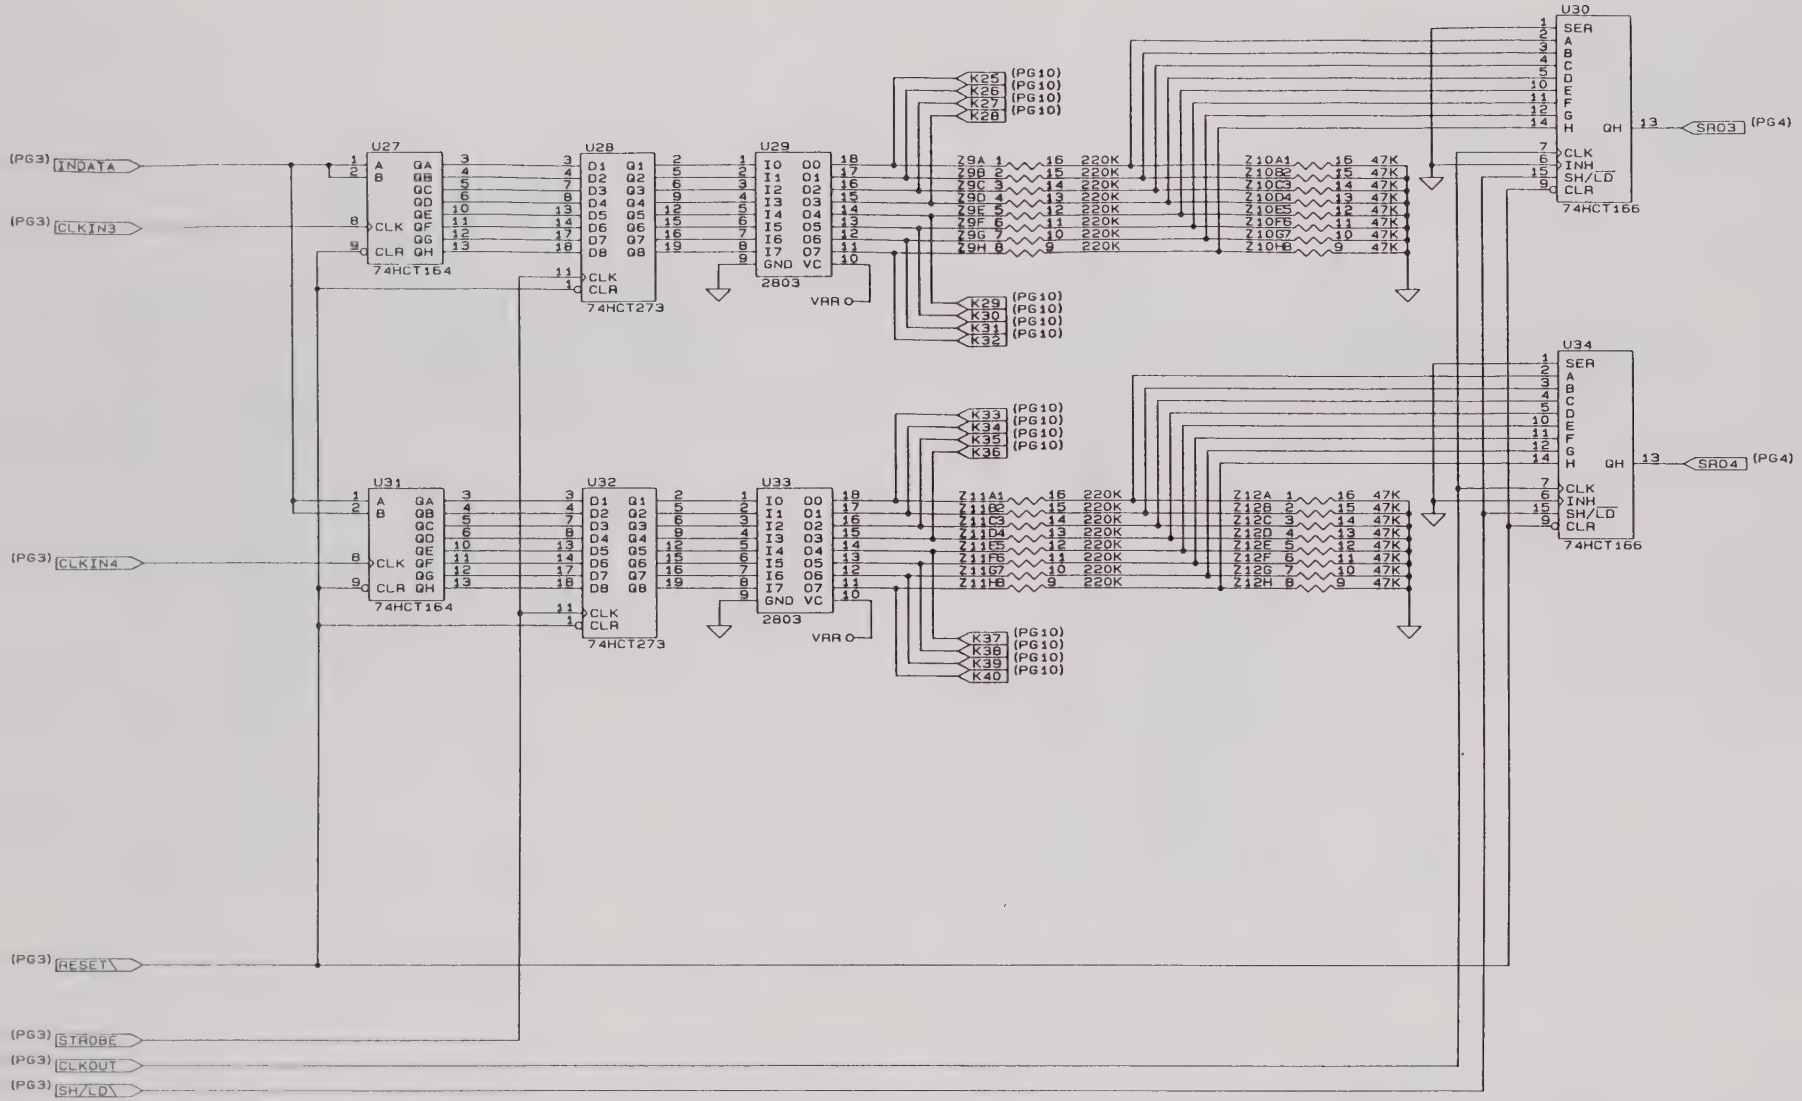

SIZE	CODE IDENT NO.	DOCUMENT NO	REV.
B	21793	431906	B
SCALE		SHEET 9 OF 17	

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431906	B
SCALE		SHEET 10 OF 17	

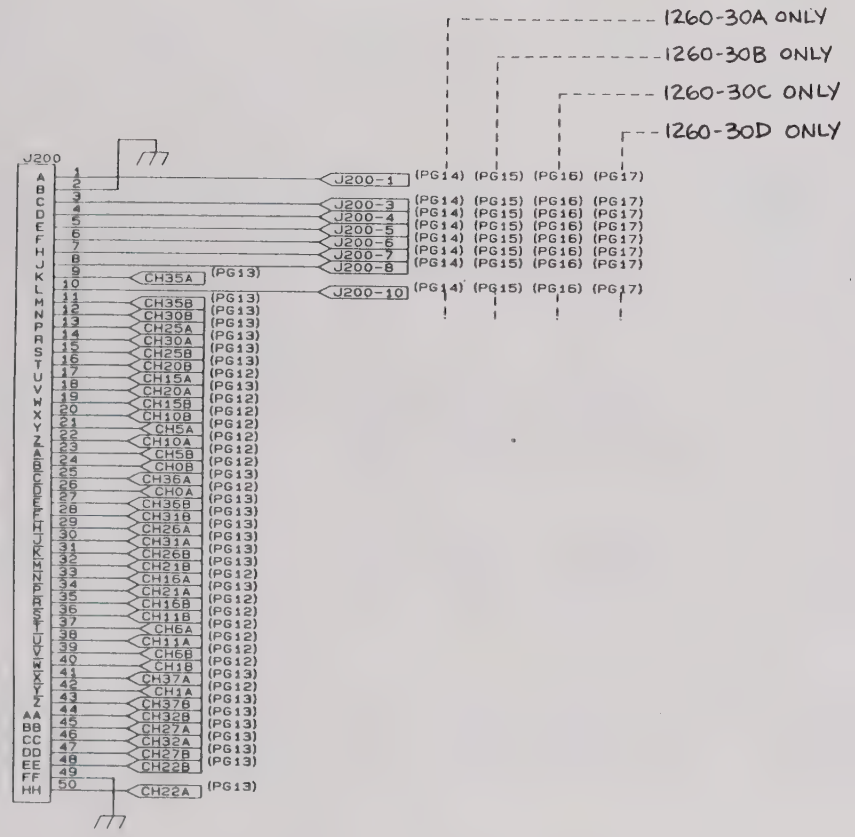

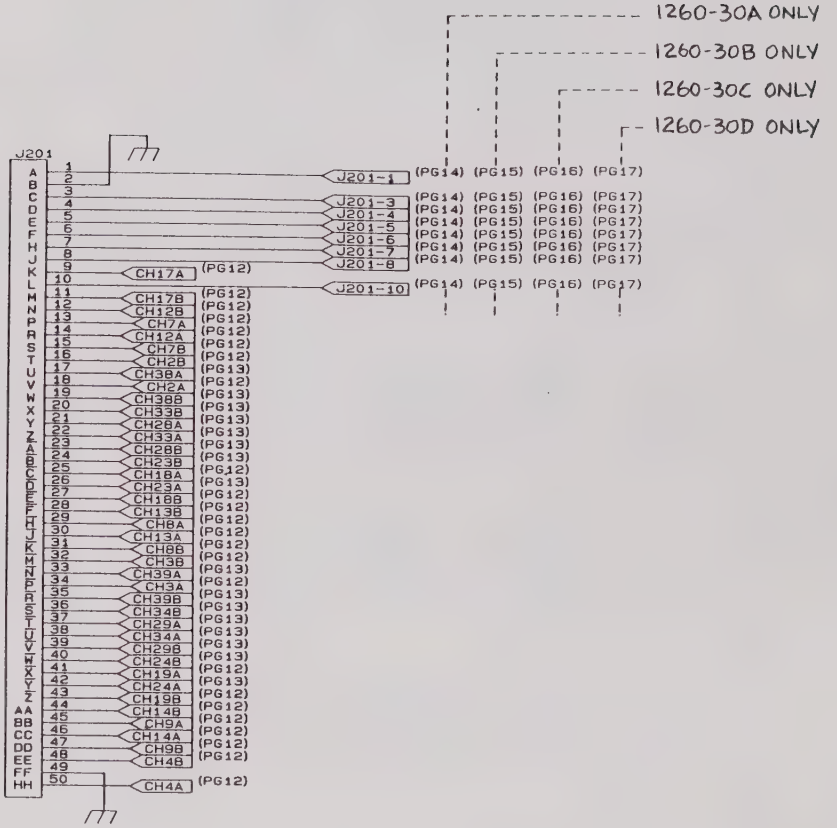

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431906	B
SCALE		SHEET 11 OF 17	

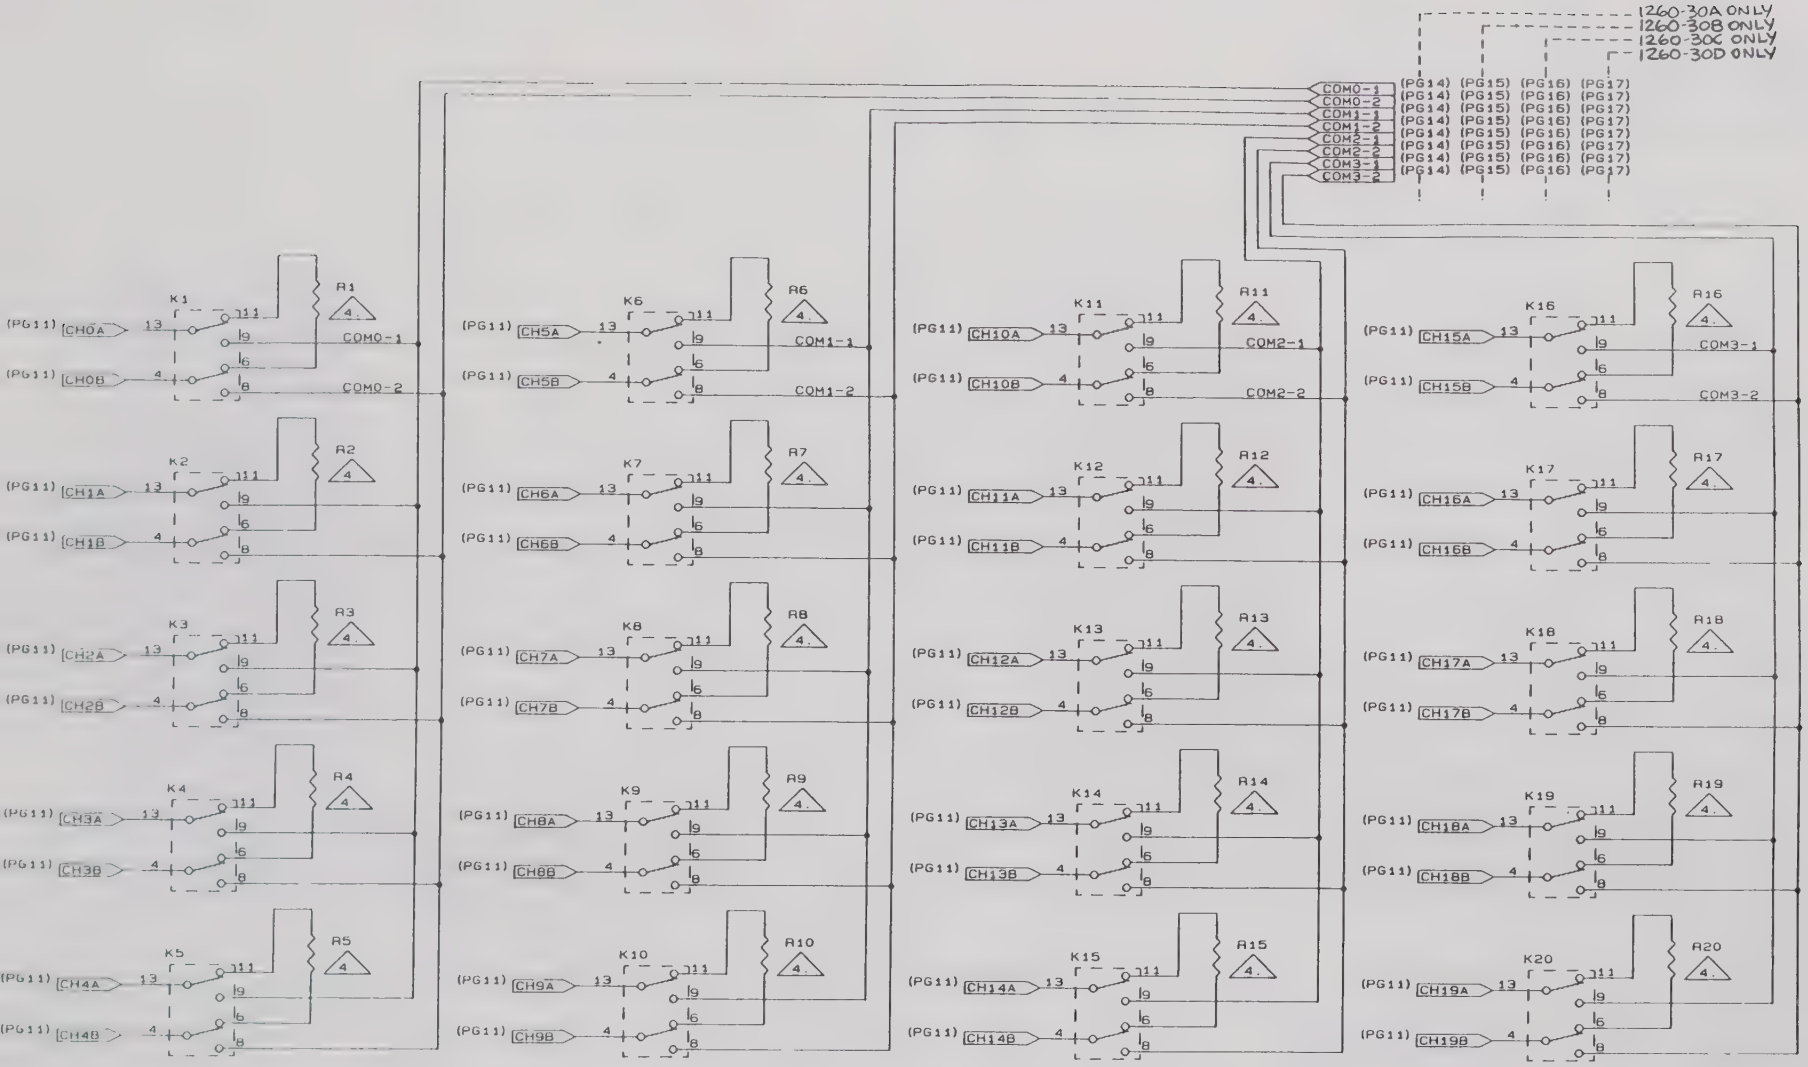

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431906	B
SCALE		SHEET 12 OF 17	

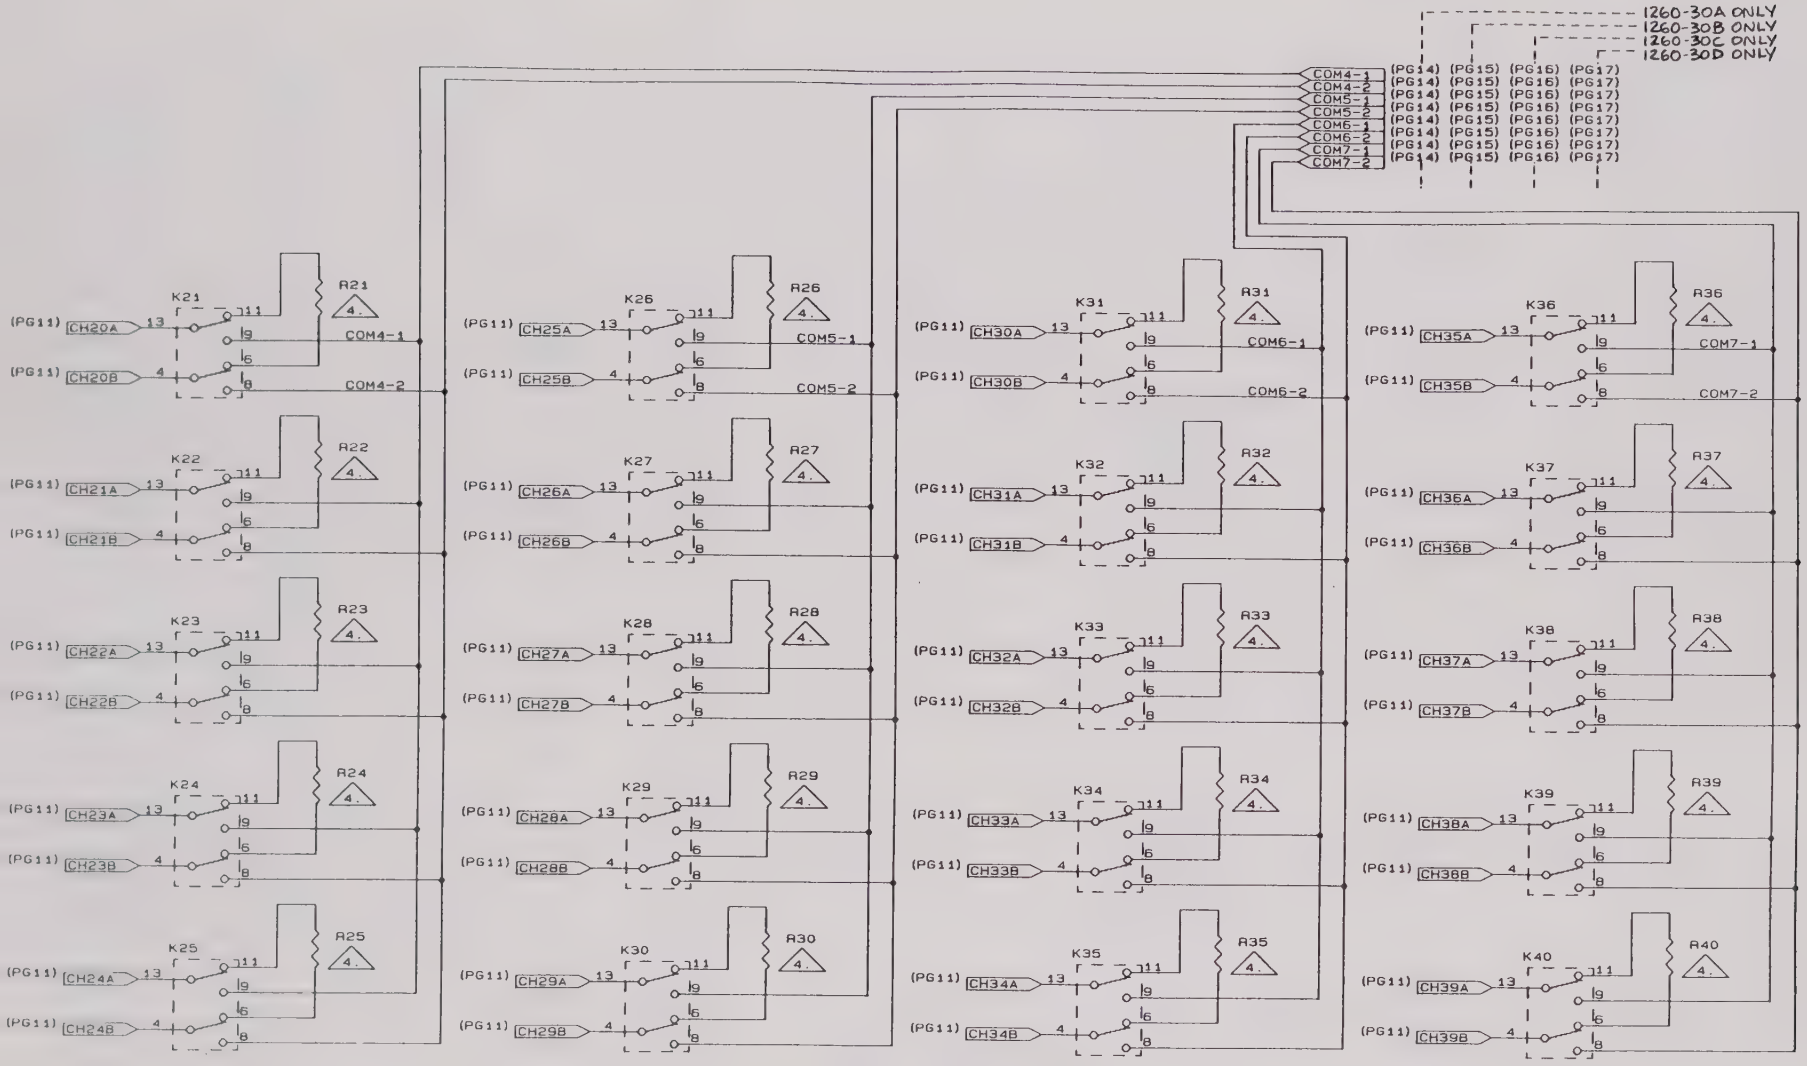

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431906	B
SCALE		SHEET 13 OF 17	

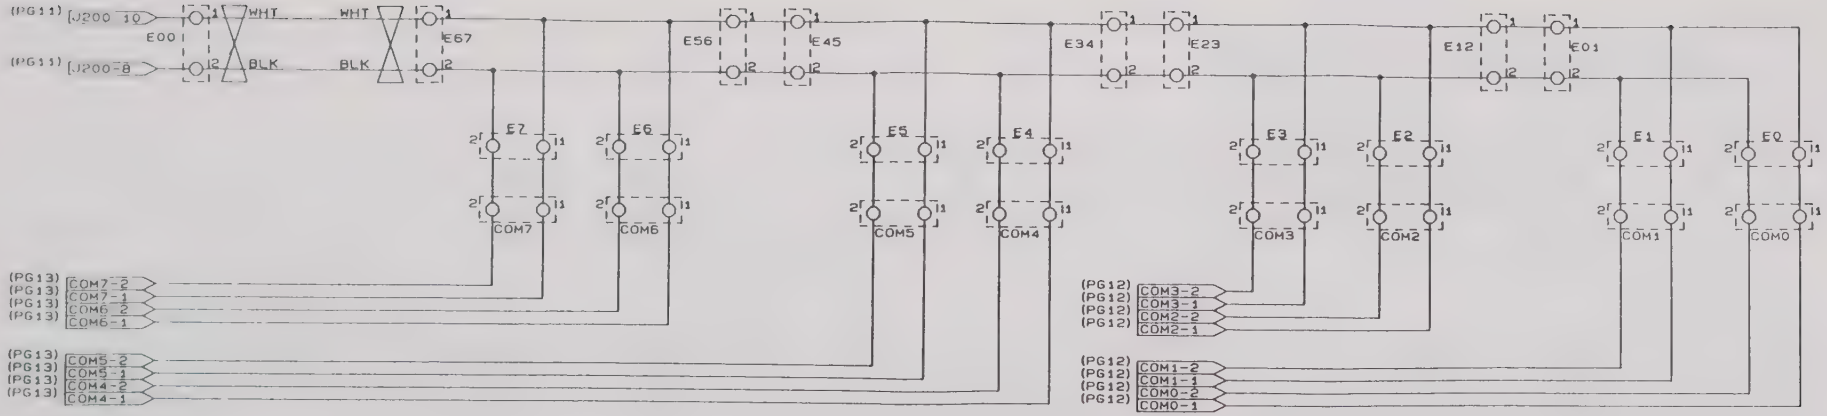

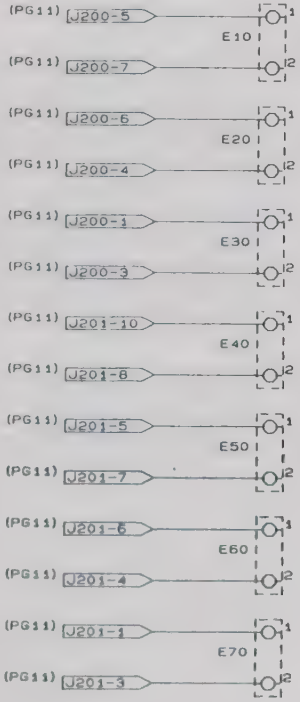

1X40 A

1260-30A ONLY

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431906	B
SCALE ———		SHEET 14 OF 17	

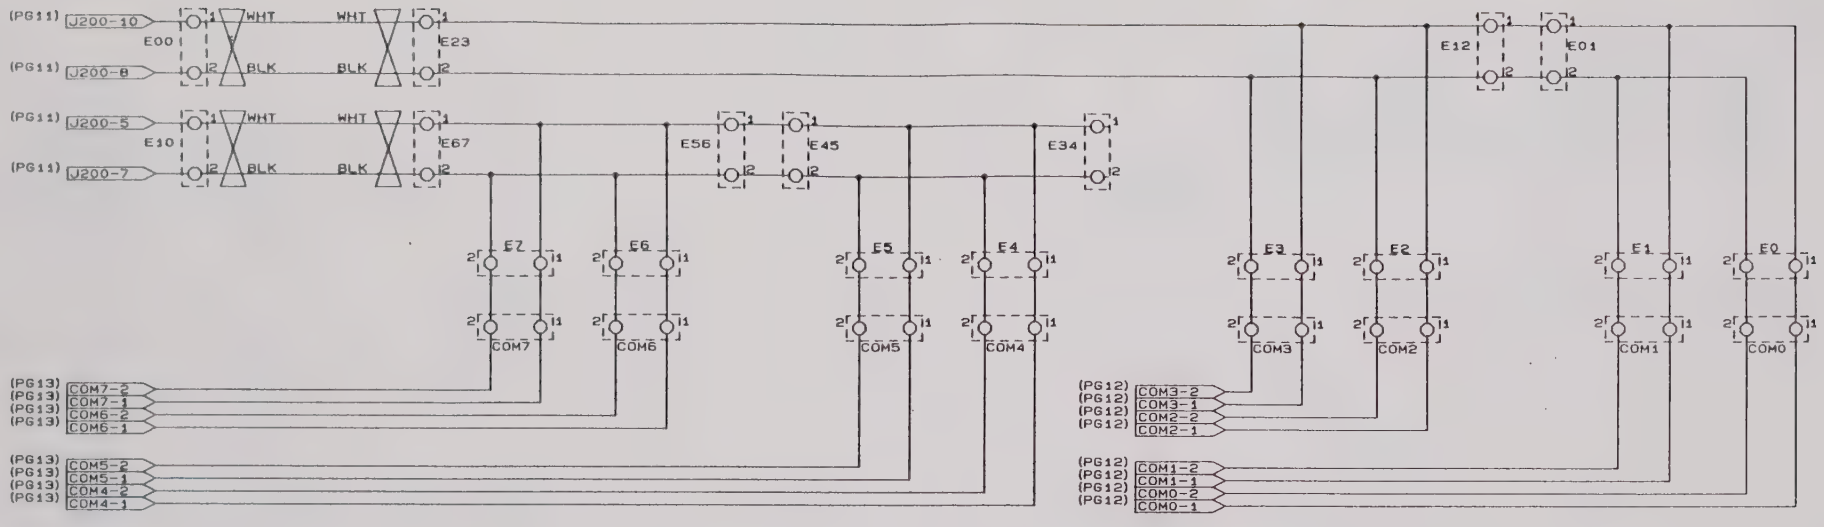

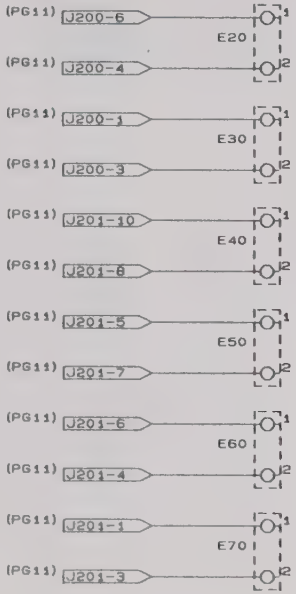

1X20 B

1260-30B ONLY

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431906	B
SCALE ———		SHEET 15	OF 17

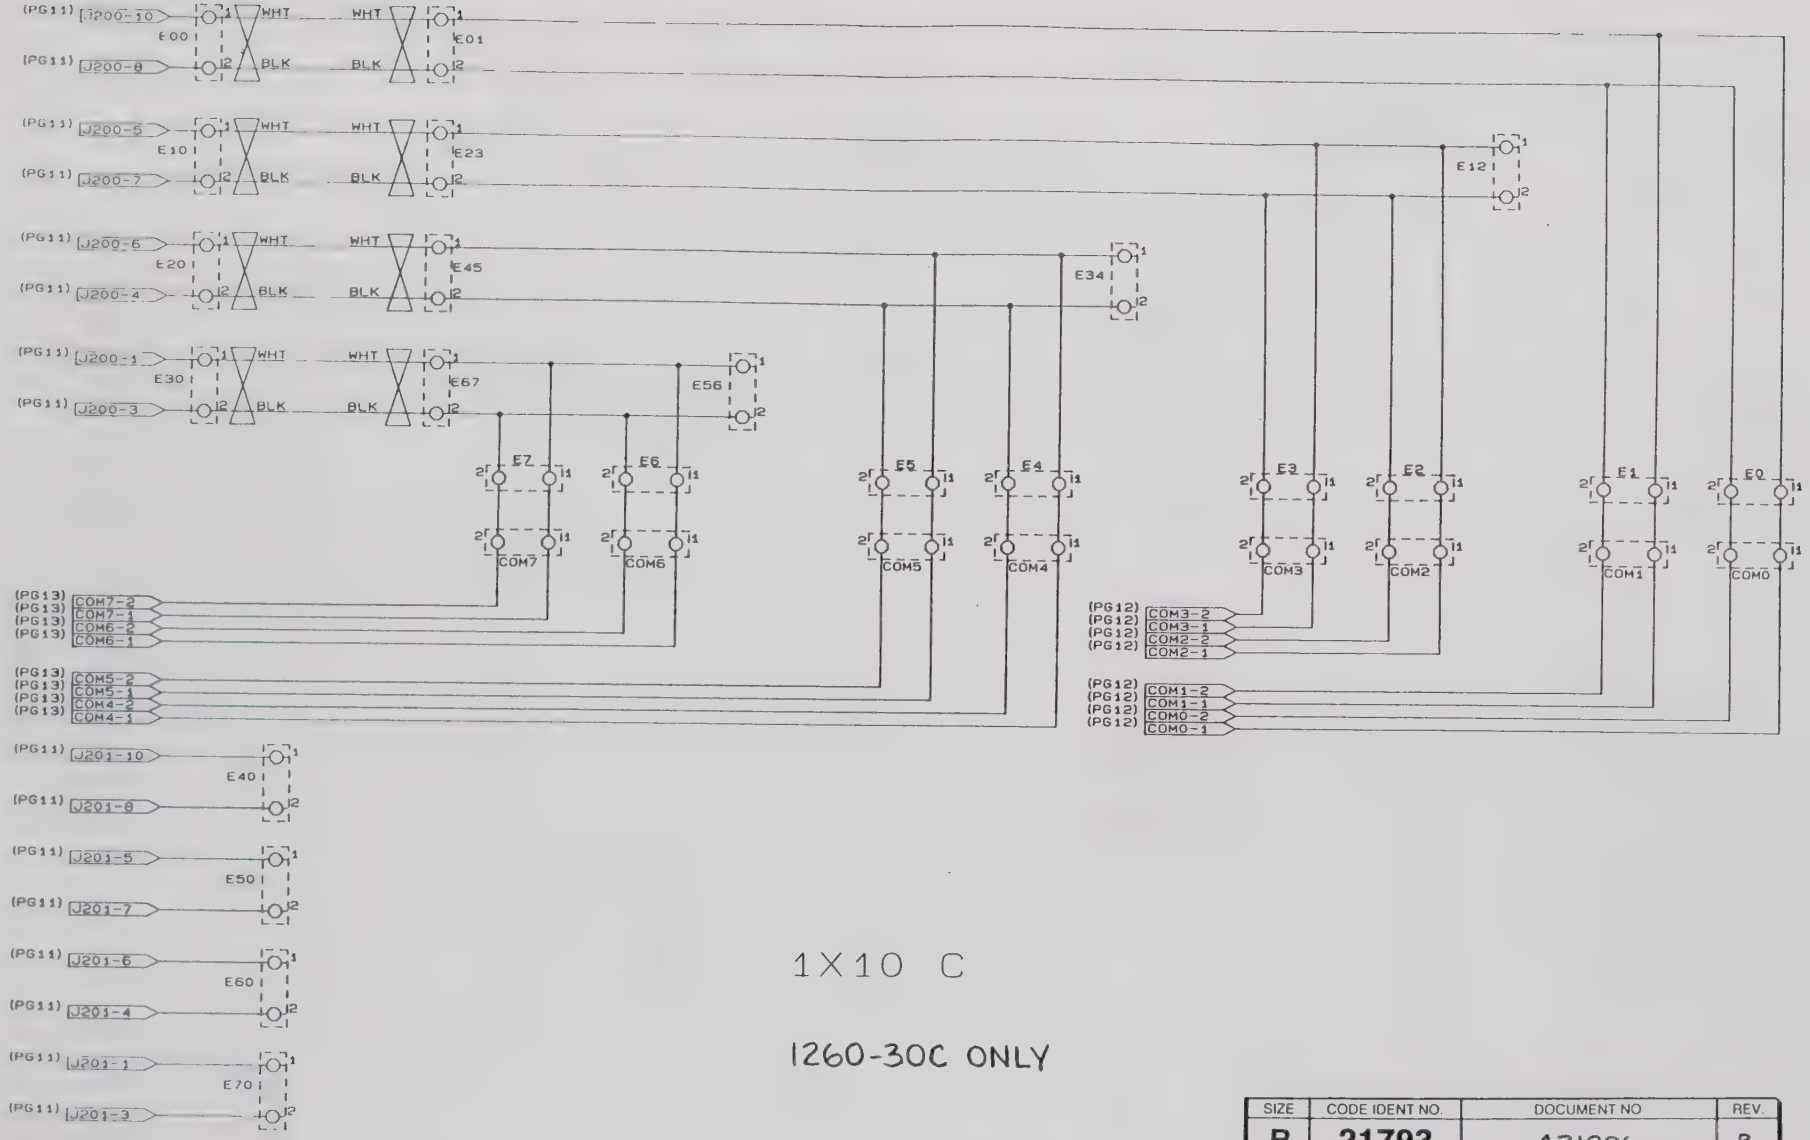

1X10 C

1260-30C ONLY

SIZE	CODE IDENT NO.	DOCUMENT NO	REV.
B	21793	431906	B
SCALE		SHEET 16 OF 17	

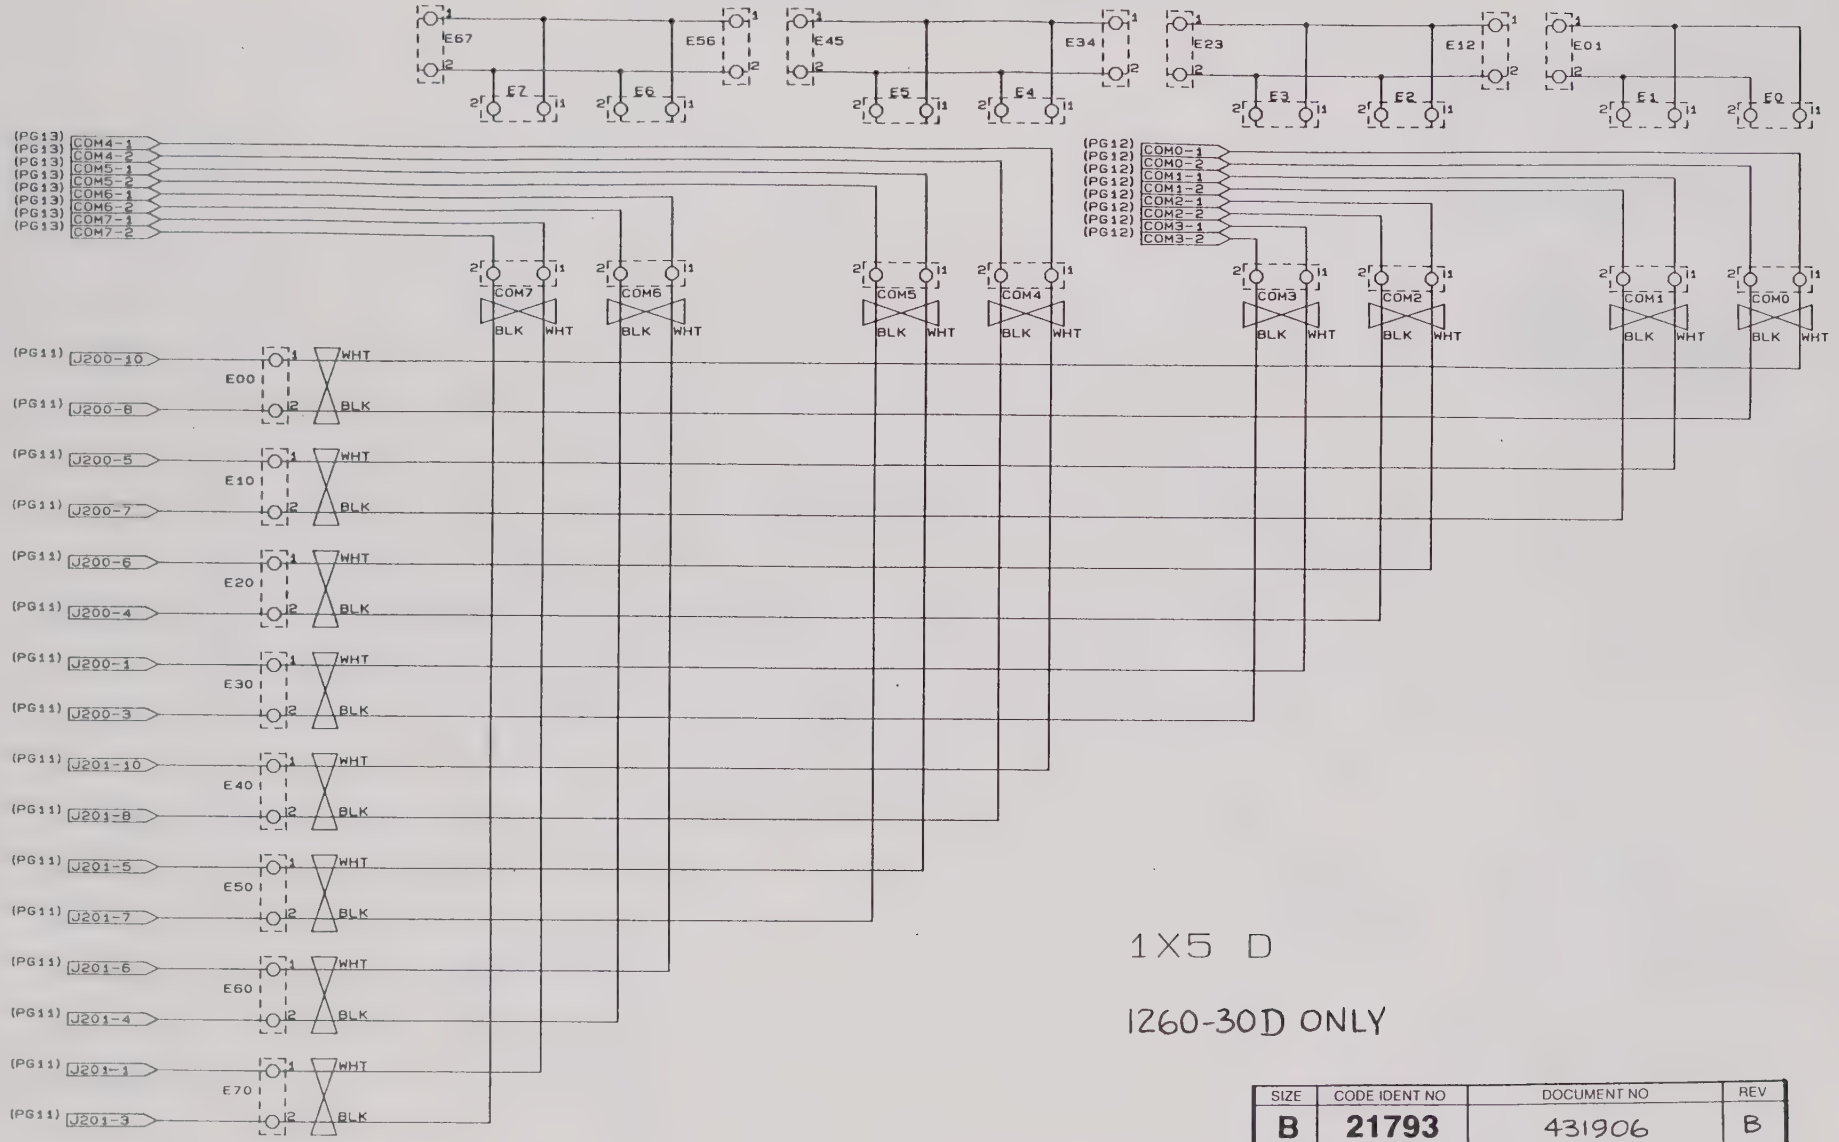

1X5 D

1260-30D ONLY

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431906	B
SCALE ———		SHEET 17 OF 17	

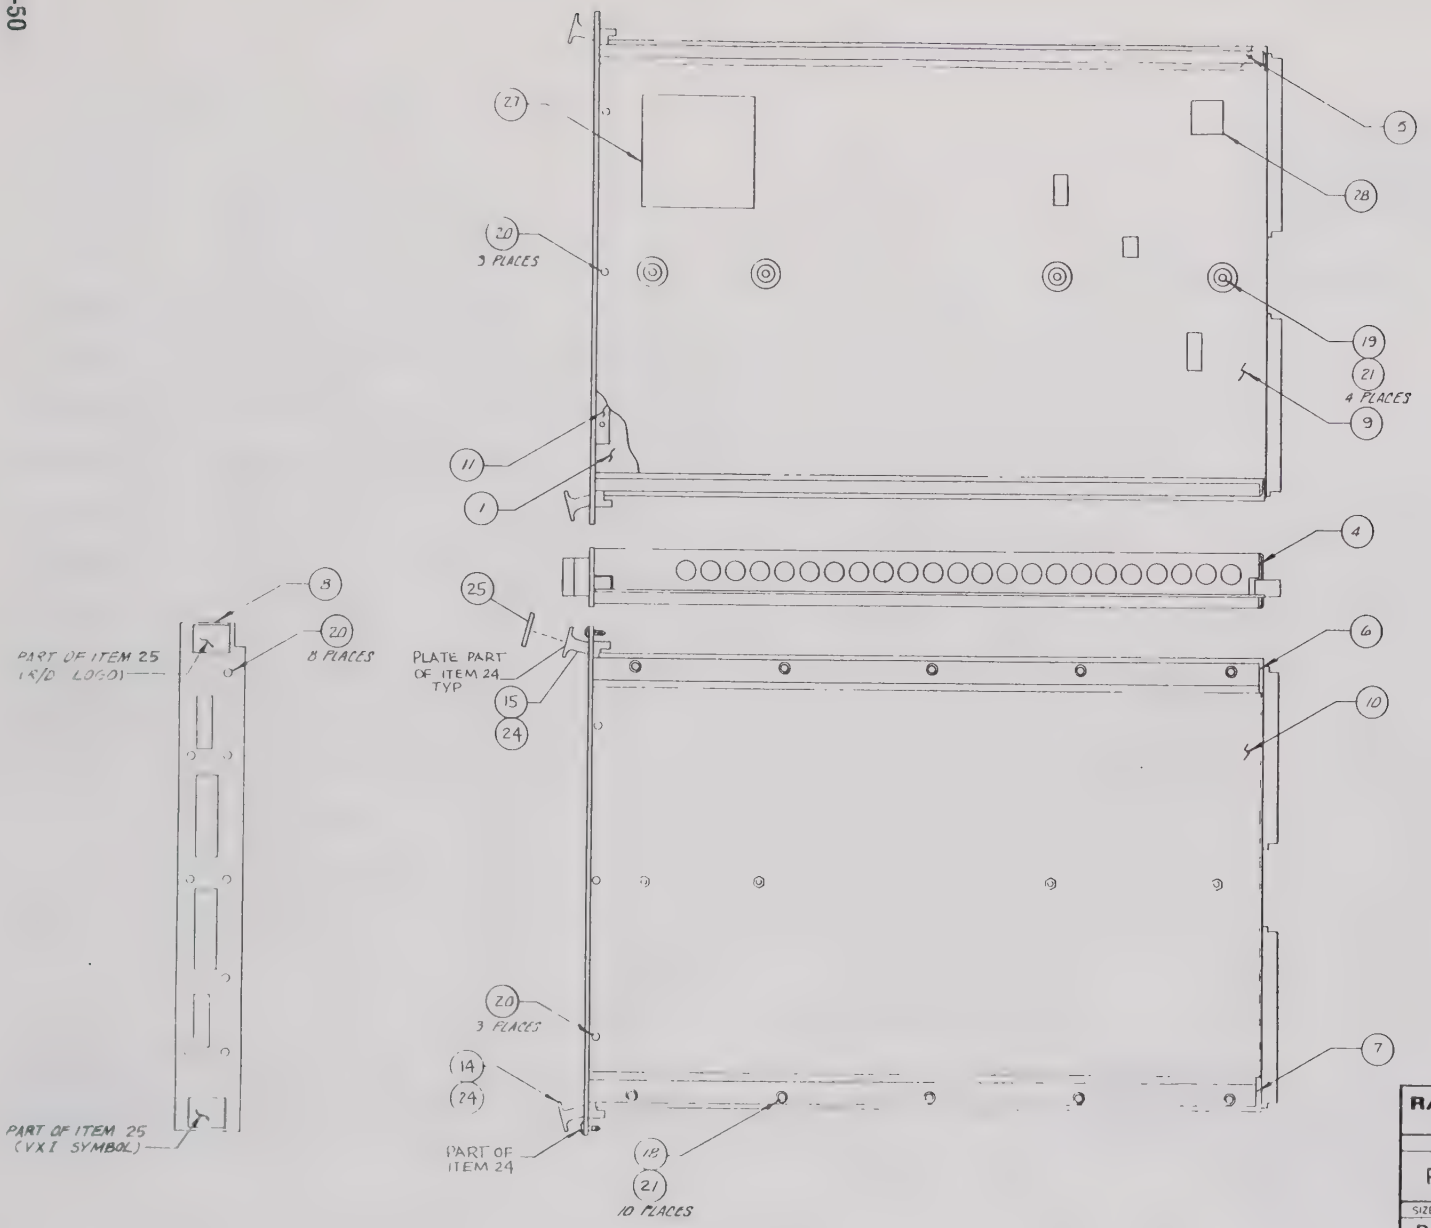

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.			
4 GOODYEAR, IRVINE, CALIFORNIA 92714			
DOCUMENT TITLE			
FINAL ASSY., 1260-40A			
SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	404775-001	B
SCALE		SHEET / OF 4	

1 SET SWITCH CONFIGURATION FOR SW1:6-OFF, SW1:5-OFF

NOTES:

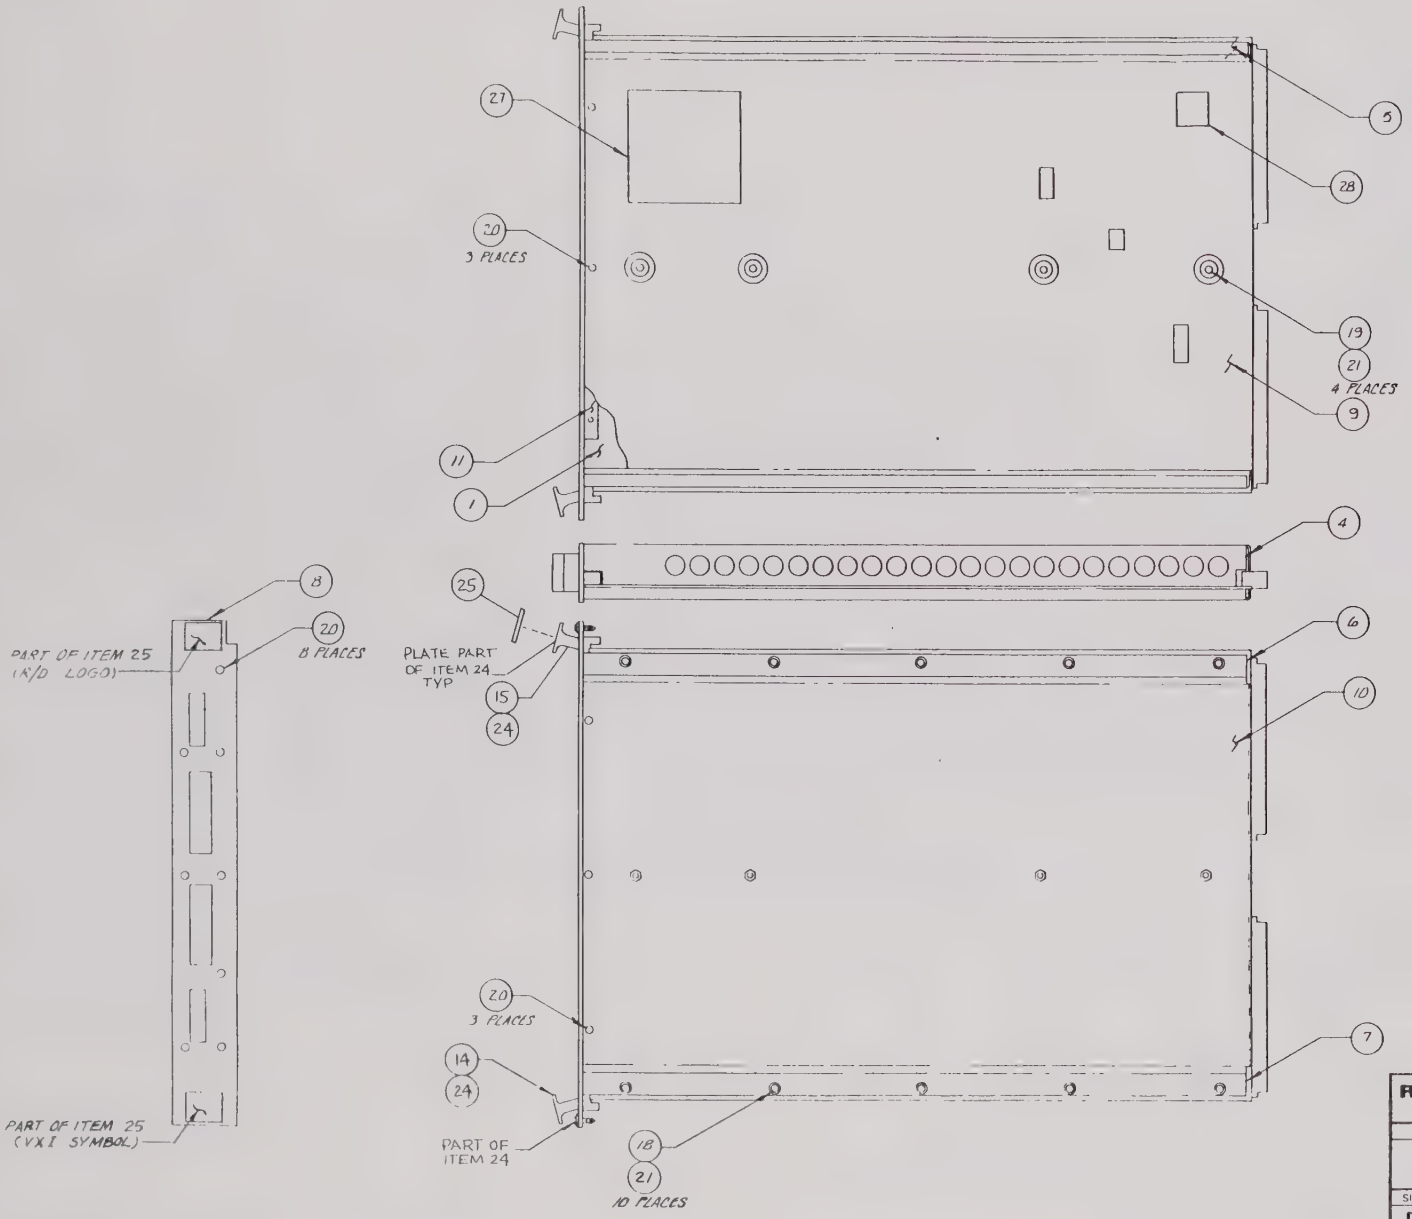

1. SET SWITCH CONFIGURATION FOR SW1:6-OFF, SW1:5-ON

NOTE:

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED, RELEASED OR DISCLOSED IN WHOLE OR IN PART, OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC.

RACAL-DANA Instruments Inc.			
4 GOODYEAR, IRVINE, CALIFORNIA 92714			
DOCUMENT TITLE			
FINAL ASSY., 1260-40B			
SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	404775-002	B
SCALE 1/2		SHEET 1 OF 4	

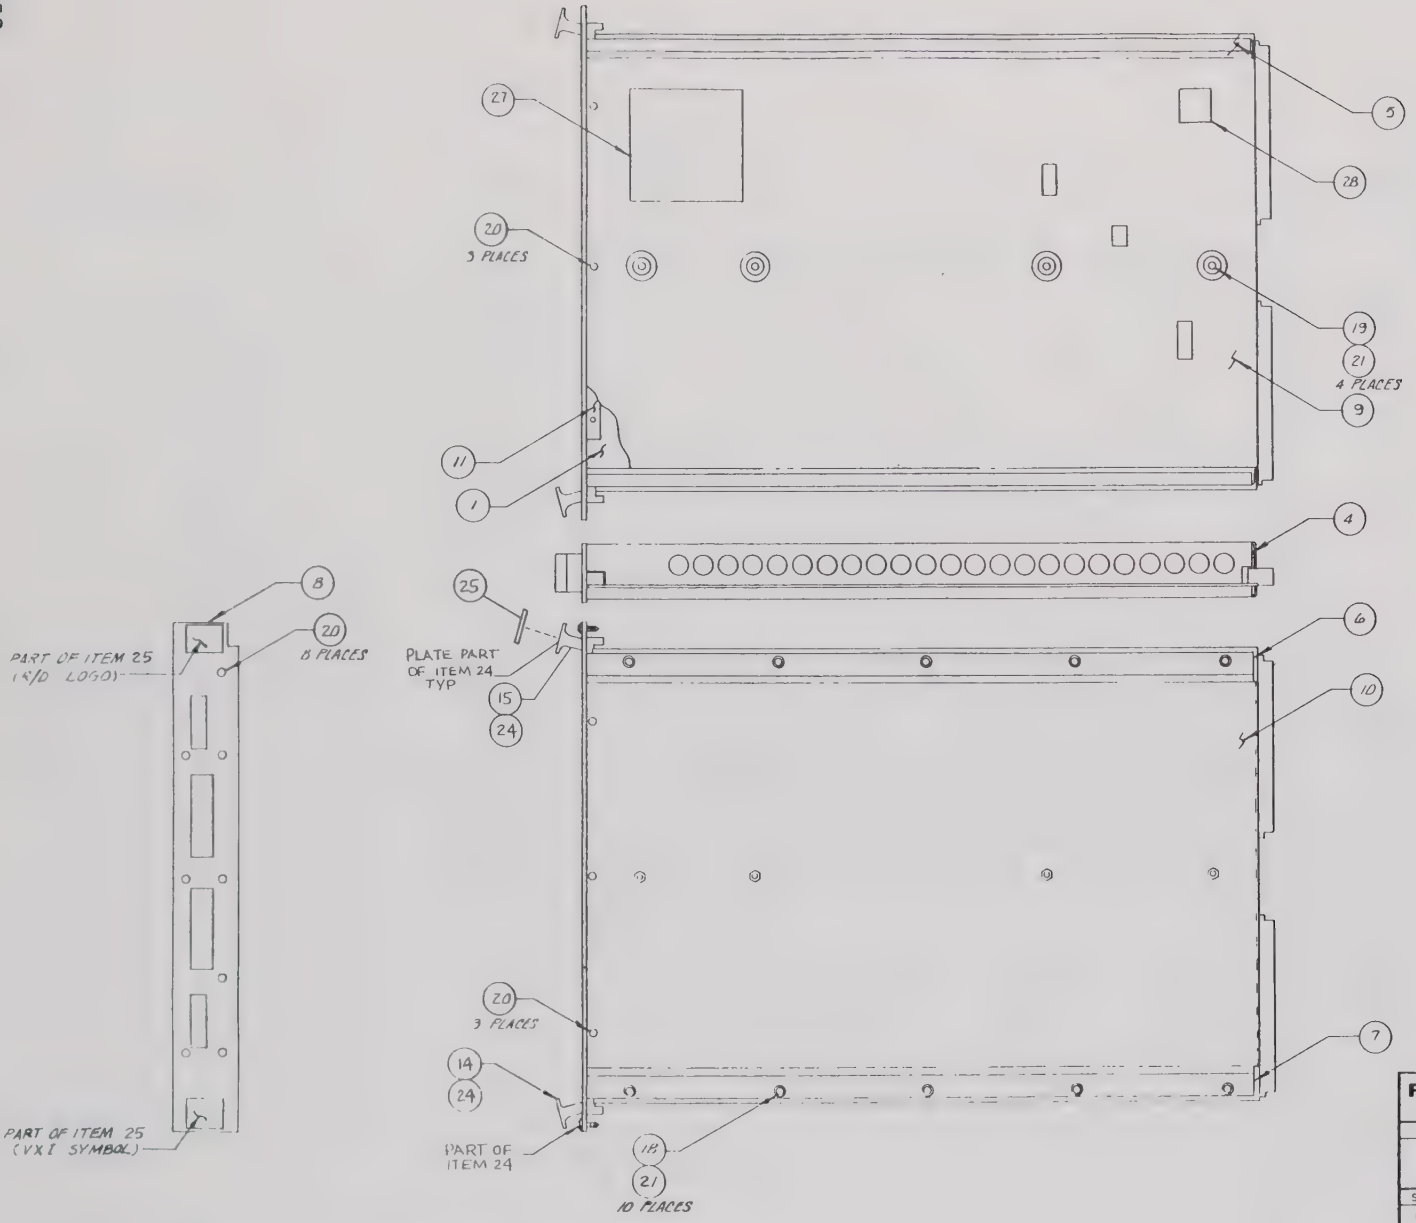

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.			
4 GOODYEAR, IRVINE, CALIFORNIA 92714			
DOCUMENT TITLE			
FINAL ASSY., 1260-40C			
SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	404775-003	B
SCALE		SHEET 1 OF 4	

1. SET SWITCH CONFIGURATION FOR SW1:6-ON, SW1:5-OFF

NOTE:

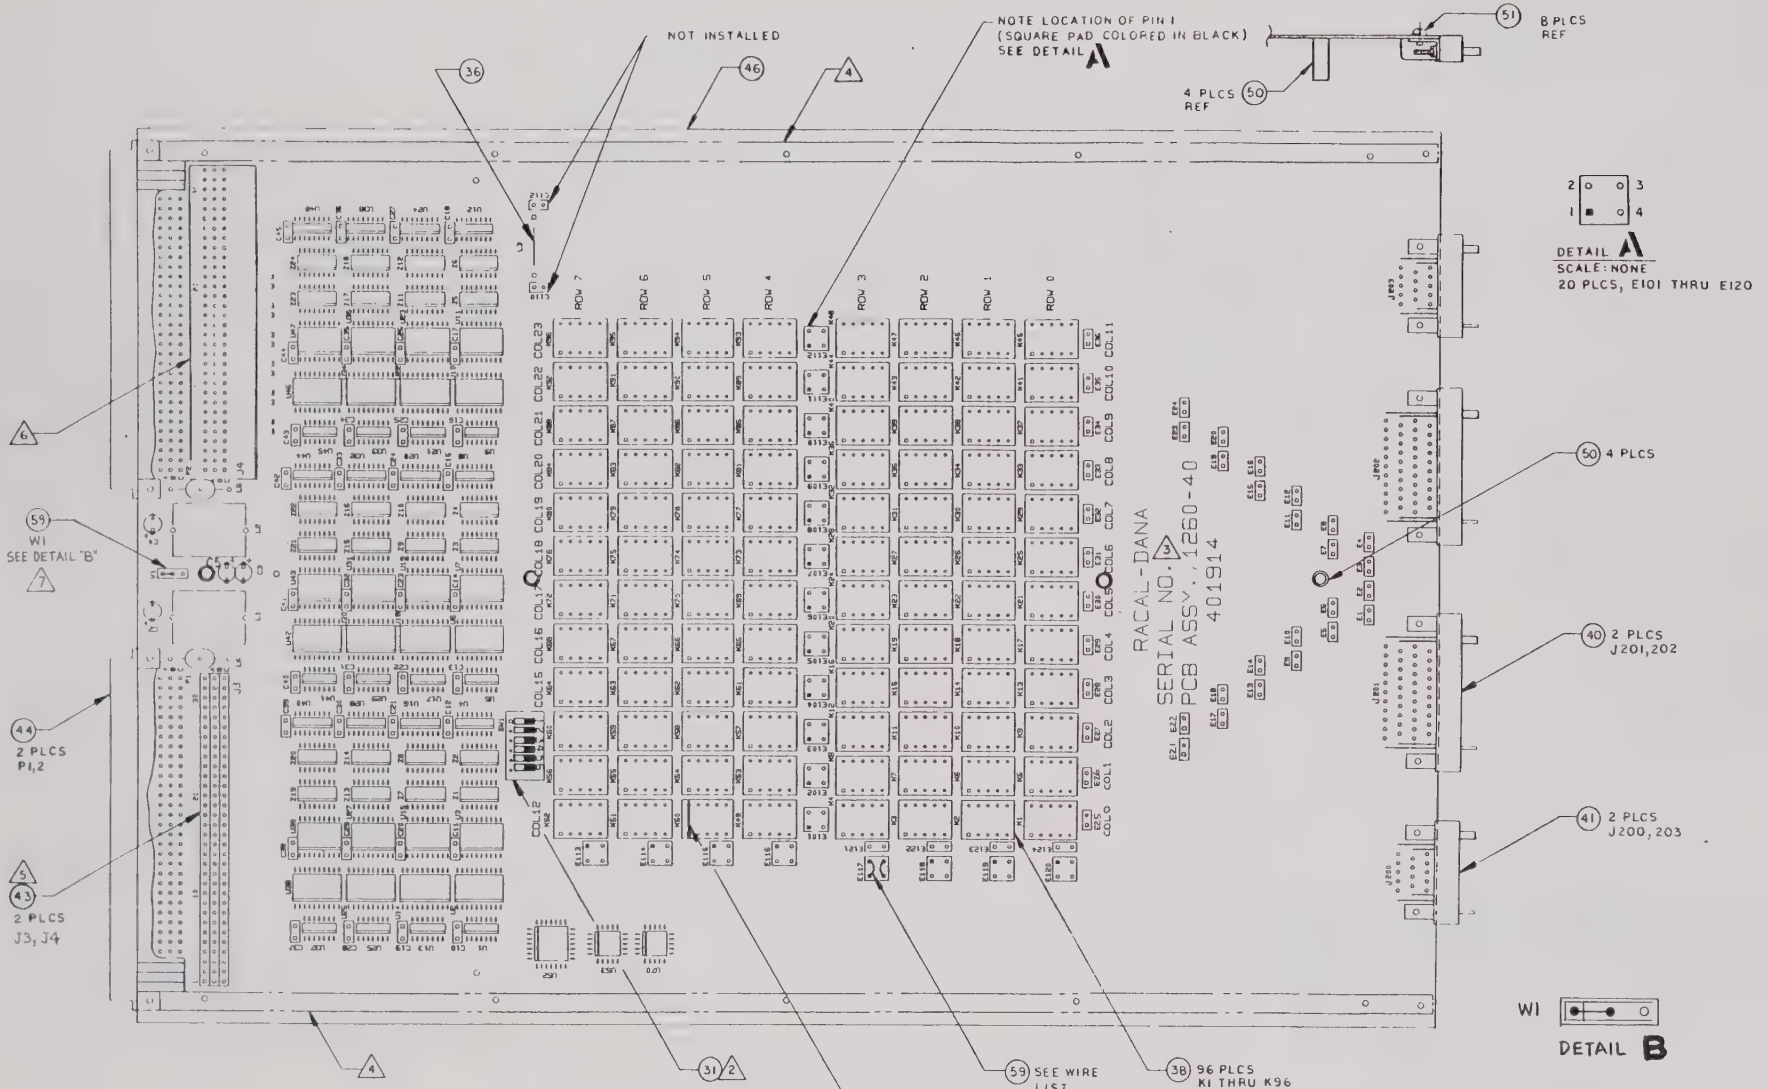

7. INSTALL ITEM 59 BETWEEN W1-1 AND W1-2.
6. INSTALL (ITEM 57) PCB, INTO (ITEM 43) P4.
5. SET ALL S2, S3 SWITCHES TO (ON) OR (CLOSED) OR (1) POSITION. DO NOT WAVE SOLDER.
4. AREAS INDICATED TO BE FLAT AND FREE FROM SOLDER.
3. INK STAMP SERIAL NUMBER APPROX WHERE SHOWN, COMPONENT SIDE.
2. SET SW1 TO LOGICAL ADDRESS 1 PER TABLE 1
1. REFERENCE SCHEMATIC 431914

UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE: PCB ASSY, 1260-40

SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	401914	D

SCALE 1.5 | SHEET 1 OF 18

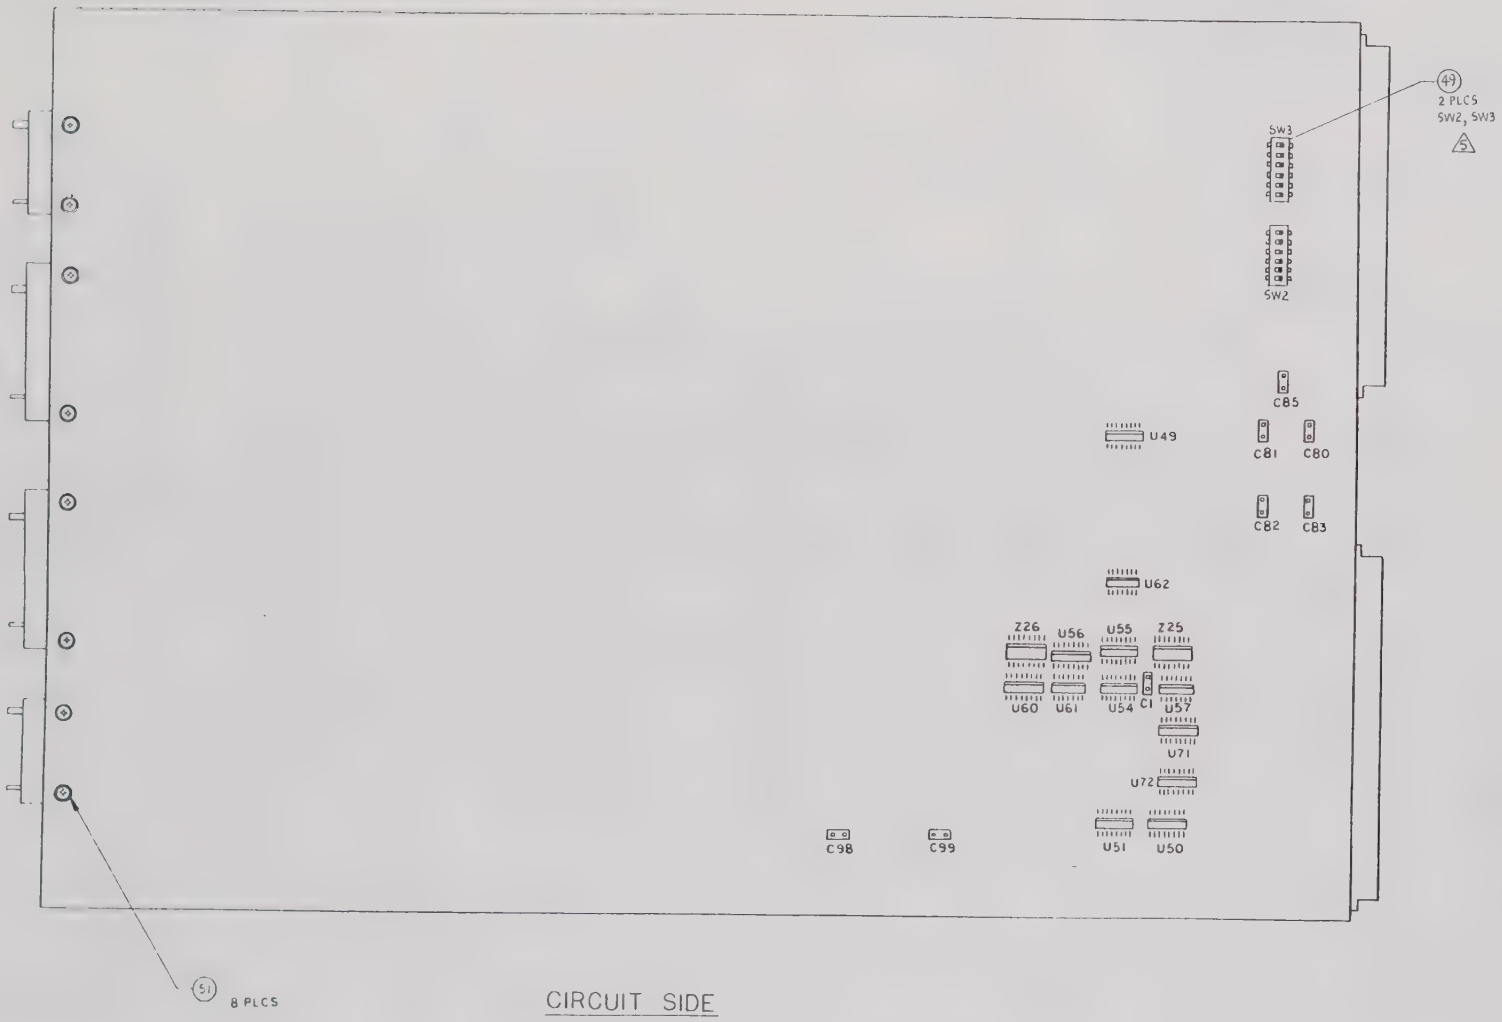

CIRCUIT SIDE

SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	401914	D
SCALE 1.5/1		SHEET 2 OF 18	

REF. DES.	IC TYPE	+5V PIN NO.	GND PIN NO.
U71, 72	74HCT253	16	8
U70	231152 (16L8Q)	20	10
U57	LM339	3	12
U56	74HCT85	16	8
U54, 55	74LS138	16	8
U53	231153 (16R4)	20	10
U52	231154 (22V10H)	28	14
U51	26LS31	16	8
U49, 50	26LS32	16	8
U4, 8, 12, 16, 20, 24, U28, 32, 36, 40, 44, 48, 60	74HCT166	16	8
U3, 7, 11, 15, 19, 23, U27, 31, 35, 39, 43, 47	2803	NC	9
U2, 6, 10, 14, 18, 22, U26, 30, 34, 38, 42, 46	74HCT273	20	10
U1, 5, 9, 13, 17, 21, 25, U29, 33, 37, 41, 45, 61, 62	74HCT164	14	7

IC POWER AND GROUND CONNECTIONS

HIGHEST REF. DES.
C112
E136
K96
L6
J203
SW1
U72
W1
Z26

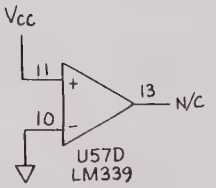

RACAL DANA P/N	TITLE
431914	SCHEM., 1260-40C
431914	SCHEM., 1260-40B
431914	SCHEM., 1260-40A

5. FOR 1260-40A AND 1260-40C JUMPERS ARE NOT INSTALLED IN E101 THRU E112.

4. C110 AND C112 ARE NOT INSTALLED.

3. RELAYS K1 THRU K96 ARE RACAL DANA P/N 310197. ALL RELAYS SHOWN IN DE-ENERGIZED POSITION.

2. RESISTOR NETWORKS ARE IN OHMS.

1. CAPACITOR VALUES ARE IN MICROFARADS, 50V, +/-20% UNLESS OTHERWISE SPECIFIED.

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL-DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL-DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE: SCHEM., 1260-40

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431914	C

SCALE —— SHEET 1 OF 19

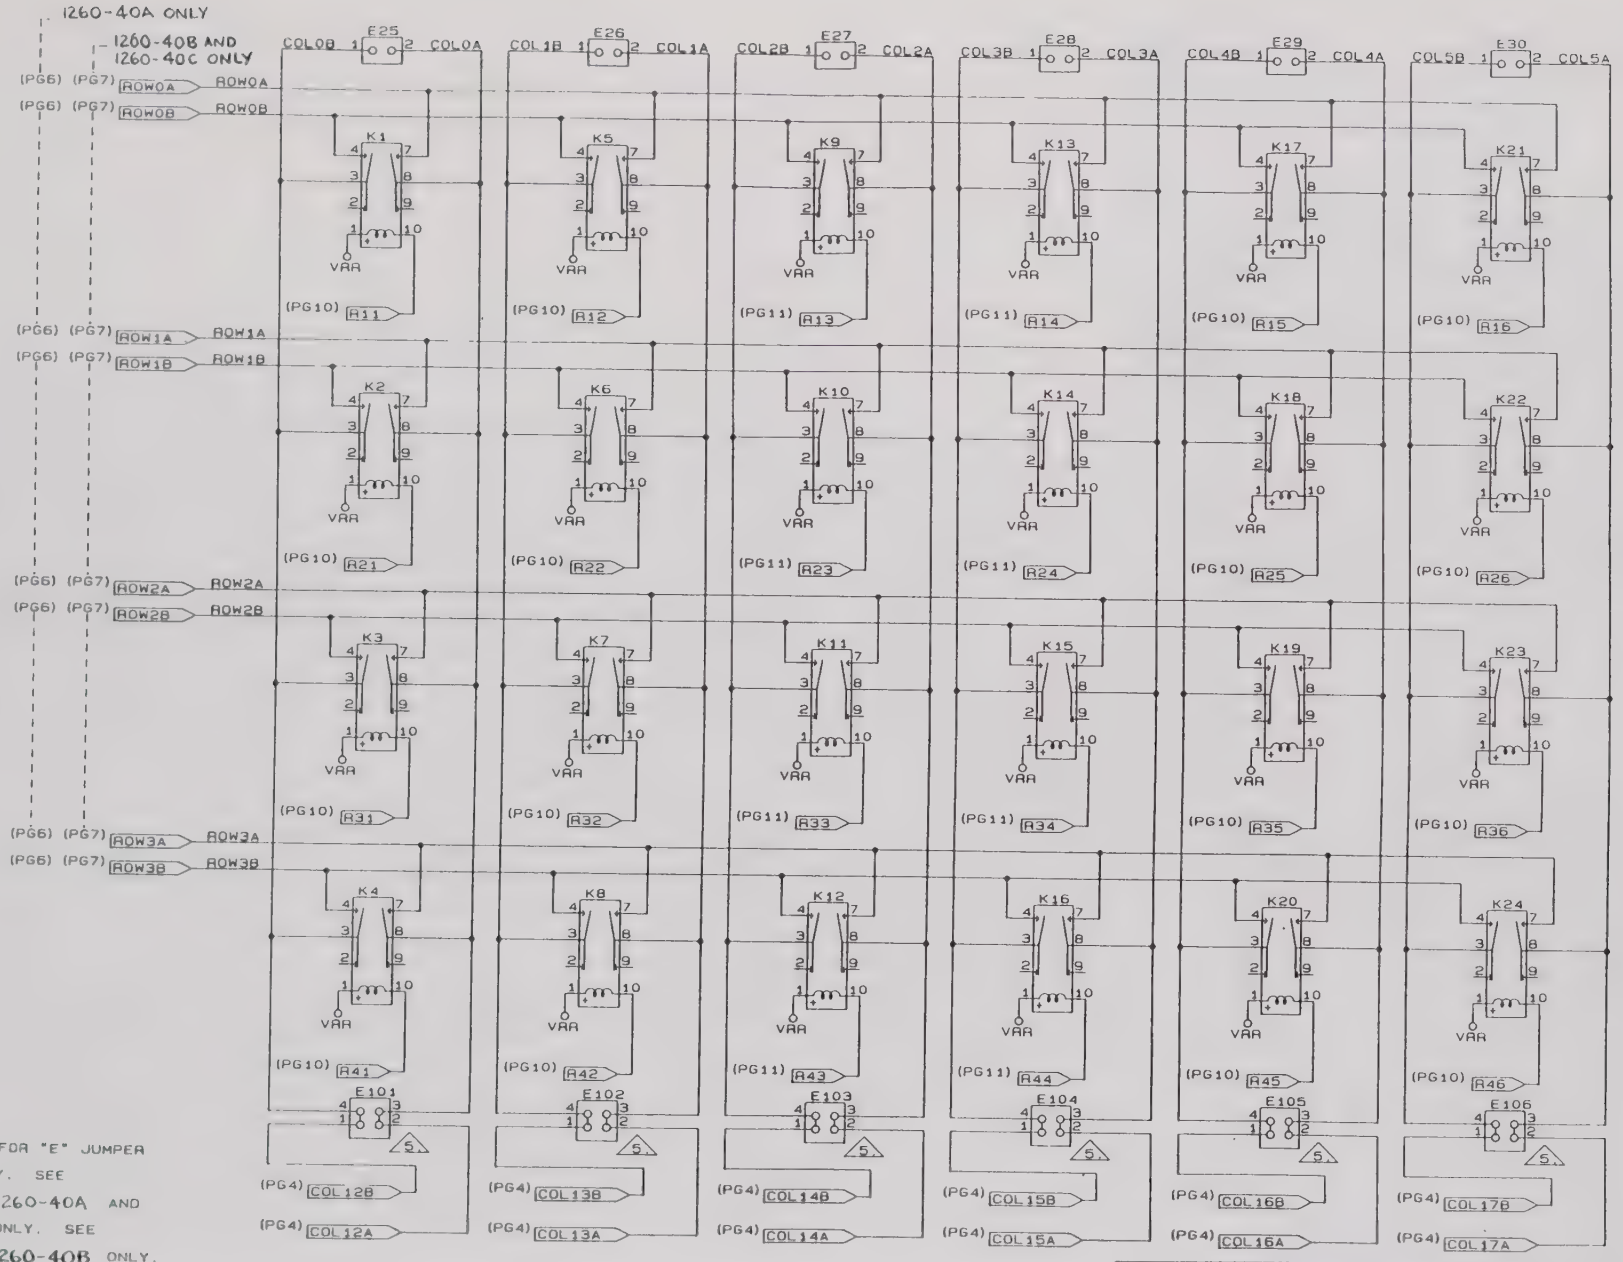

NOTE: FOR "E" JUMPER CONNECTIVITY. SEE PAGE 8 FOR 1260-40A AND 1260-40C ONLY. SEE PAGE 9 FOR 1260-40B ONLY.

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431914	C

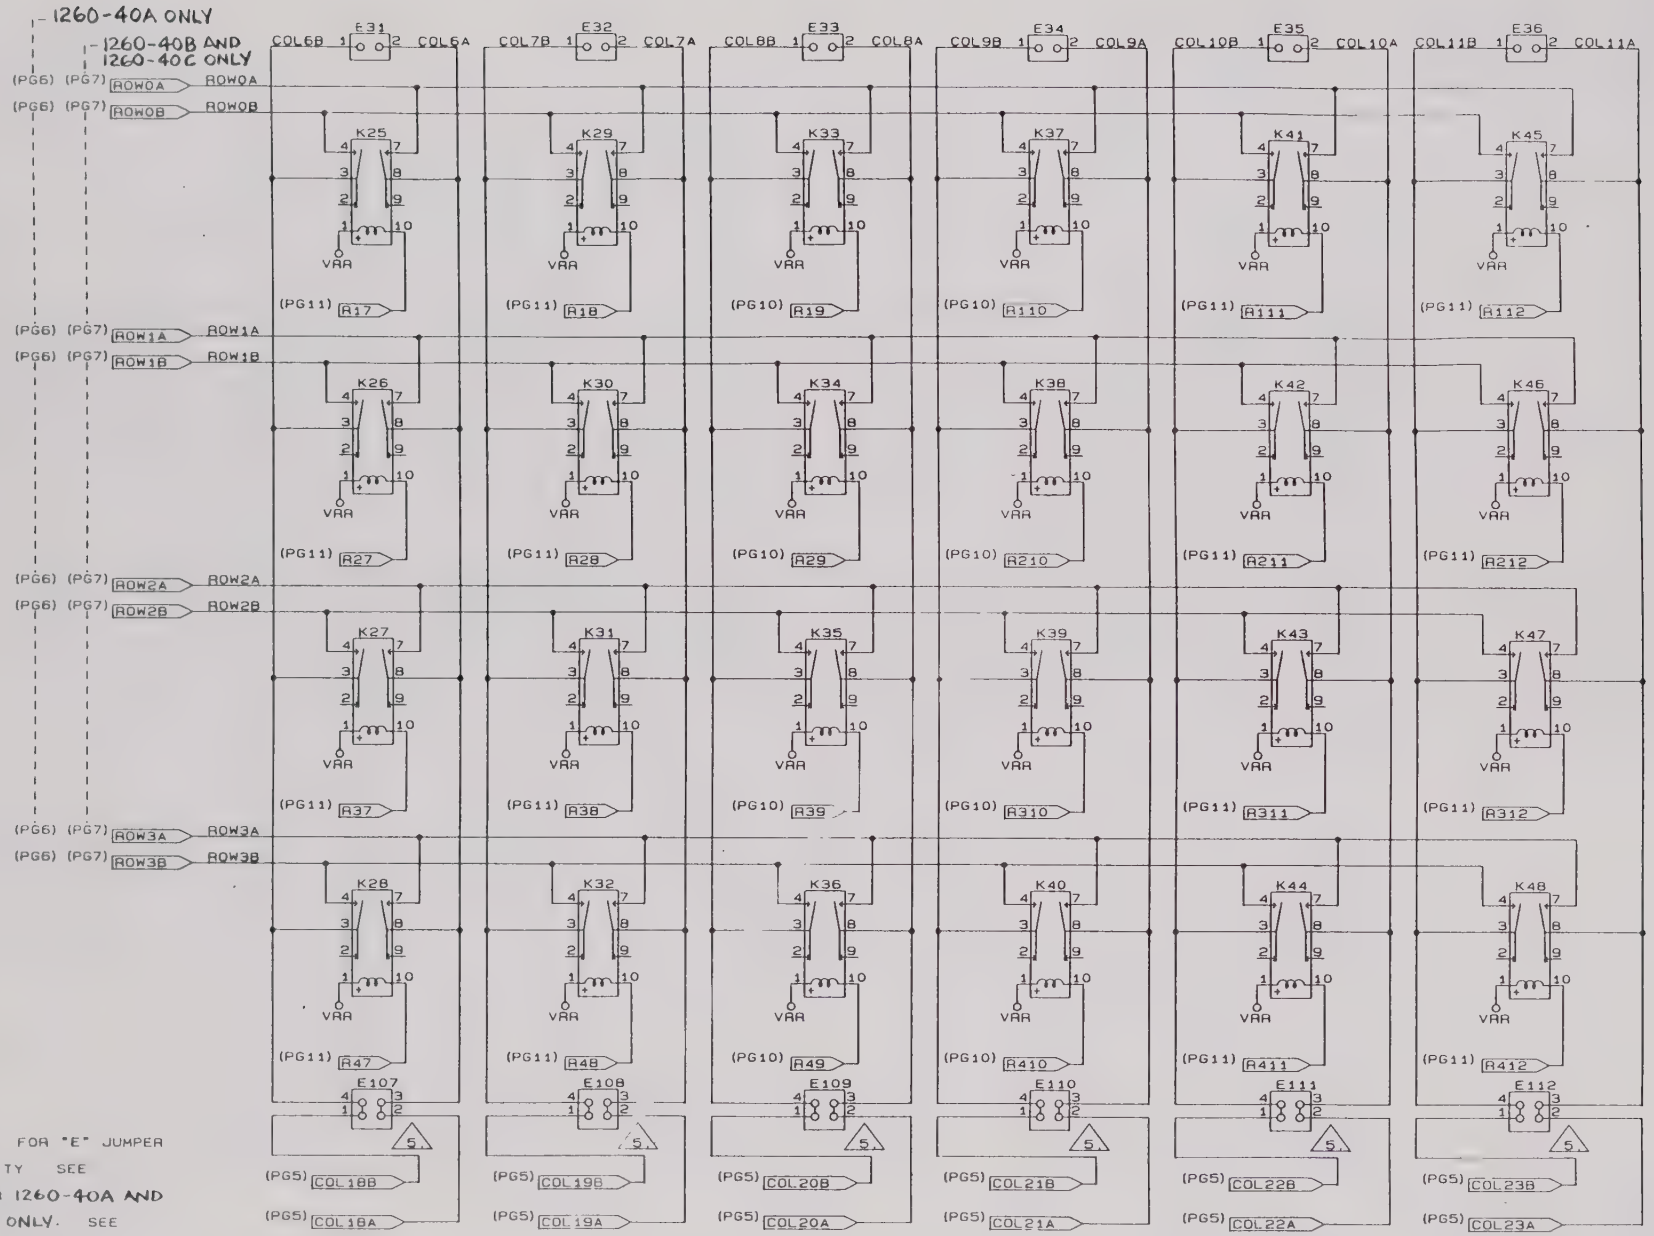

NOTE: FOR "E" JUMPER CONNECTIVITY SEE PAGE 8 FOR 1260-40A AND 1260-40C ONLY. SEE PAGE 9 FOR 1260-40B ONLY.

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431914	C
SCALE —		SHEET 3 OF 19	

- 1260-40A ONLY
- 1260-40B AND 1260-40C ONLY.

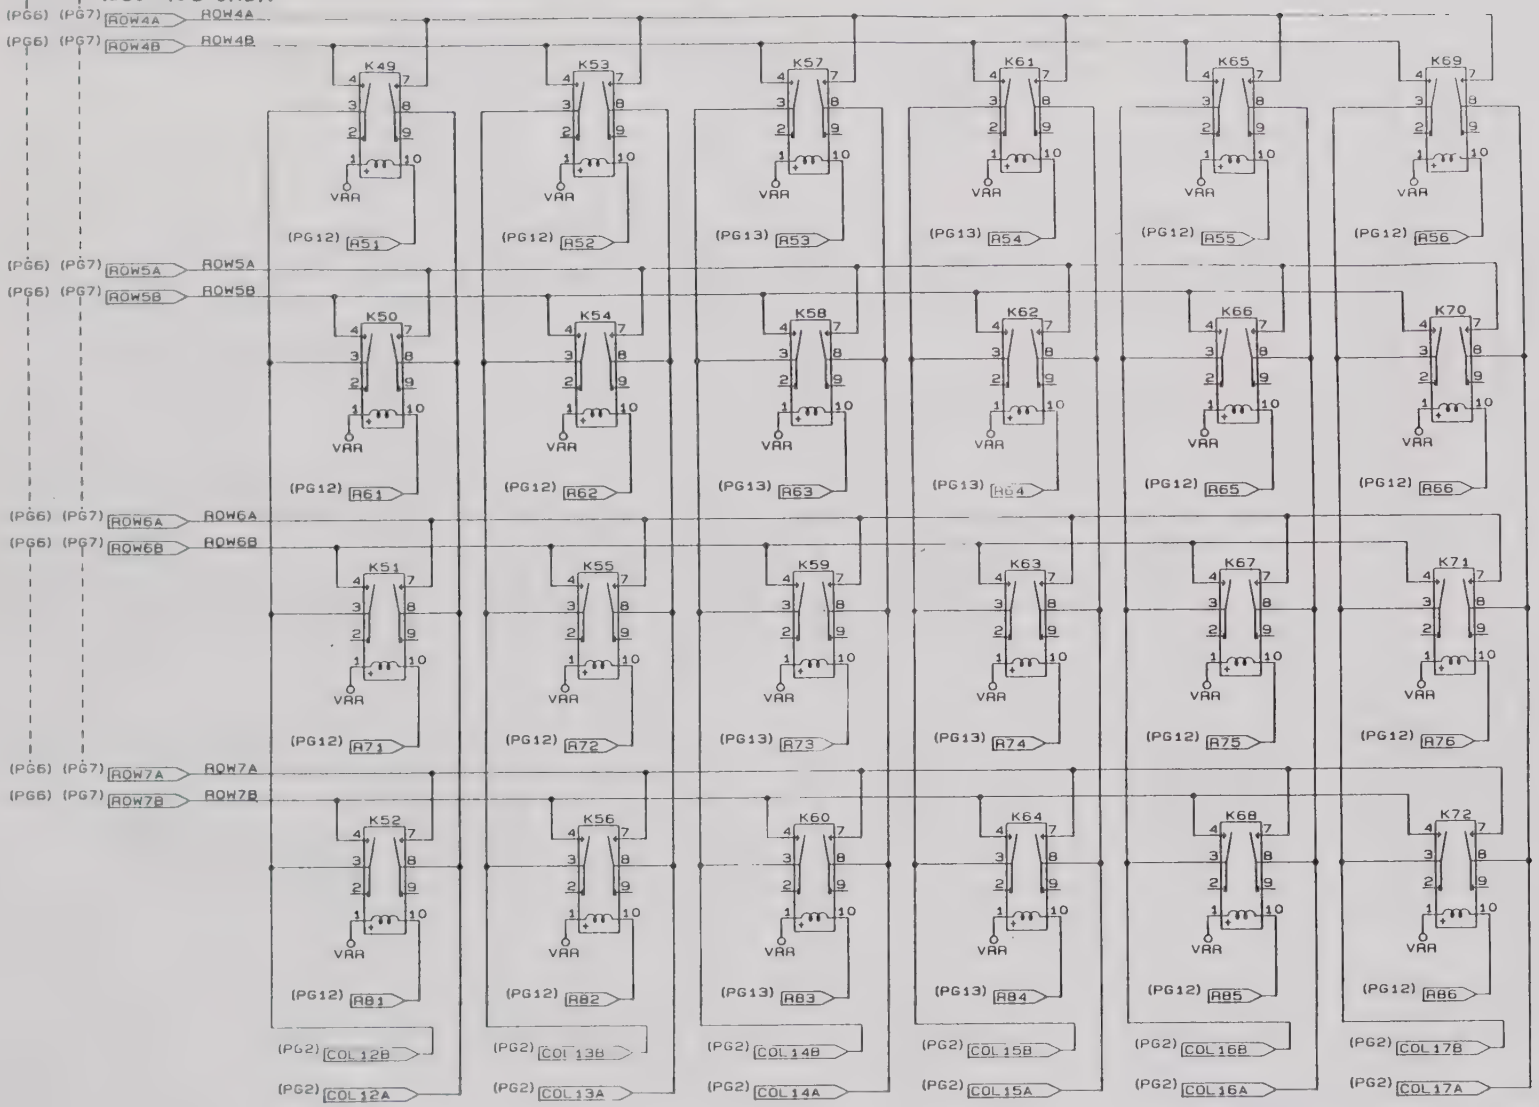

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431914	C
SCALE ———		SHEET 4 OF 19	

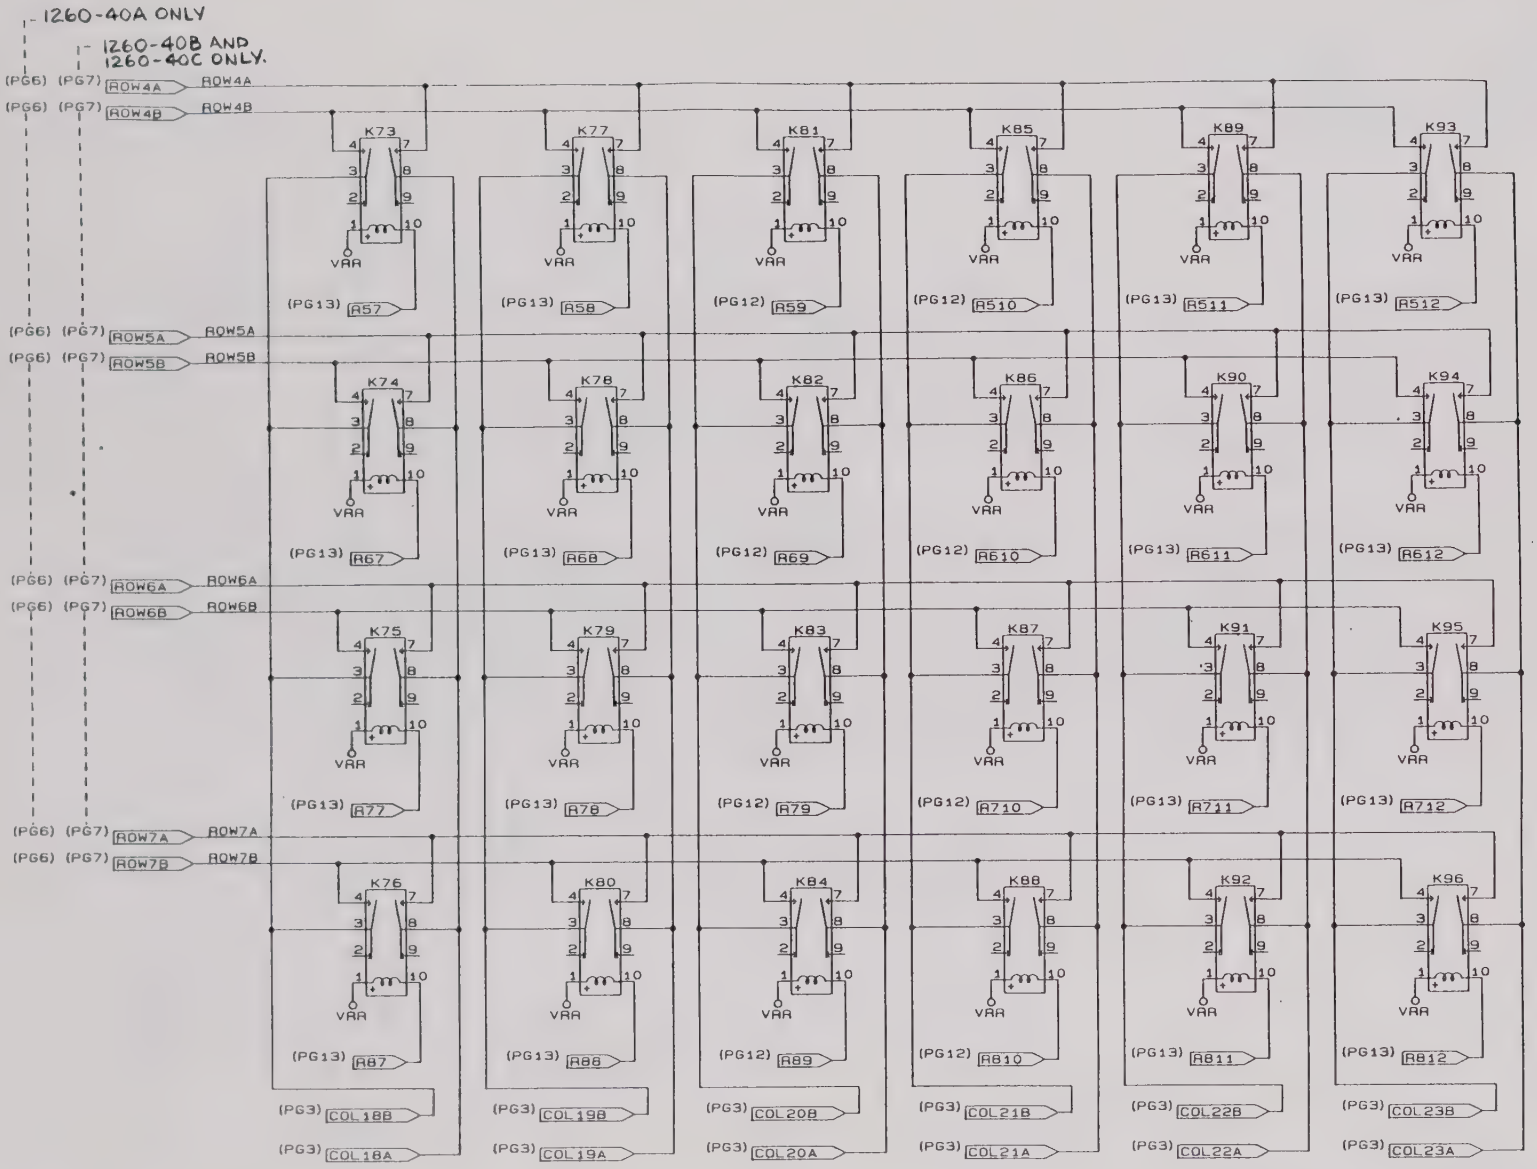

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431914	C
SCALE ———		SHEET 5 OF 19	

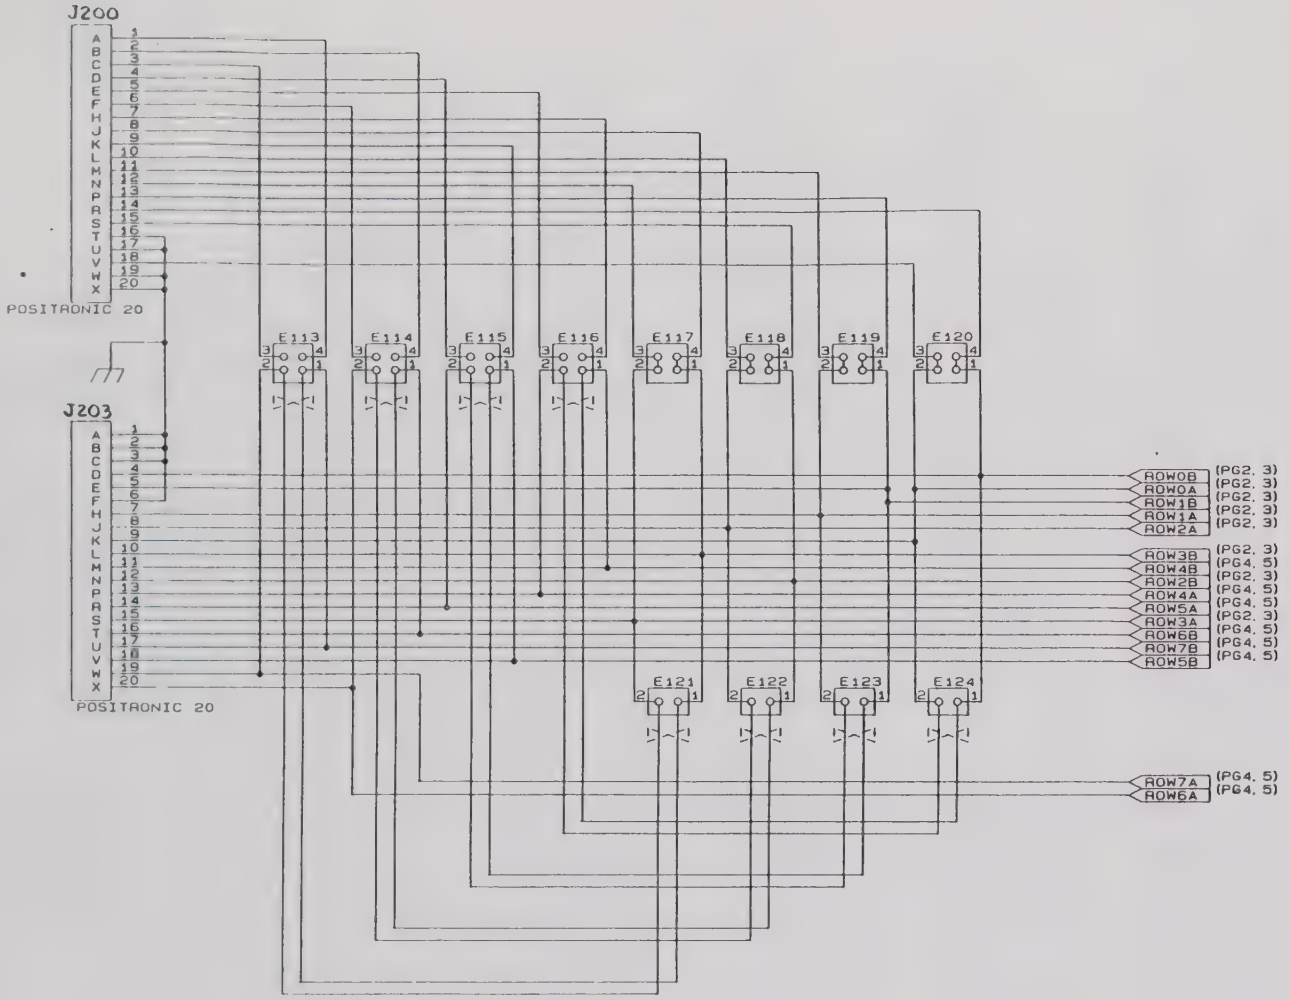

1260-40A ONLY

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431914	C
SCALE ———		SHEET 6 OF 19	

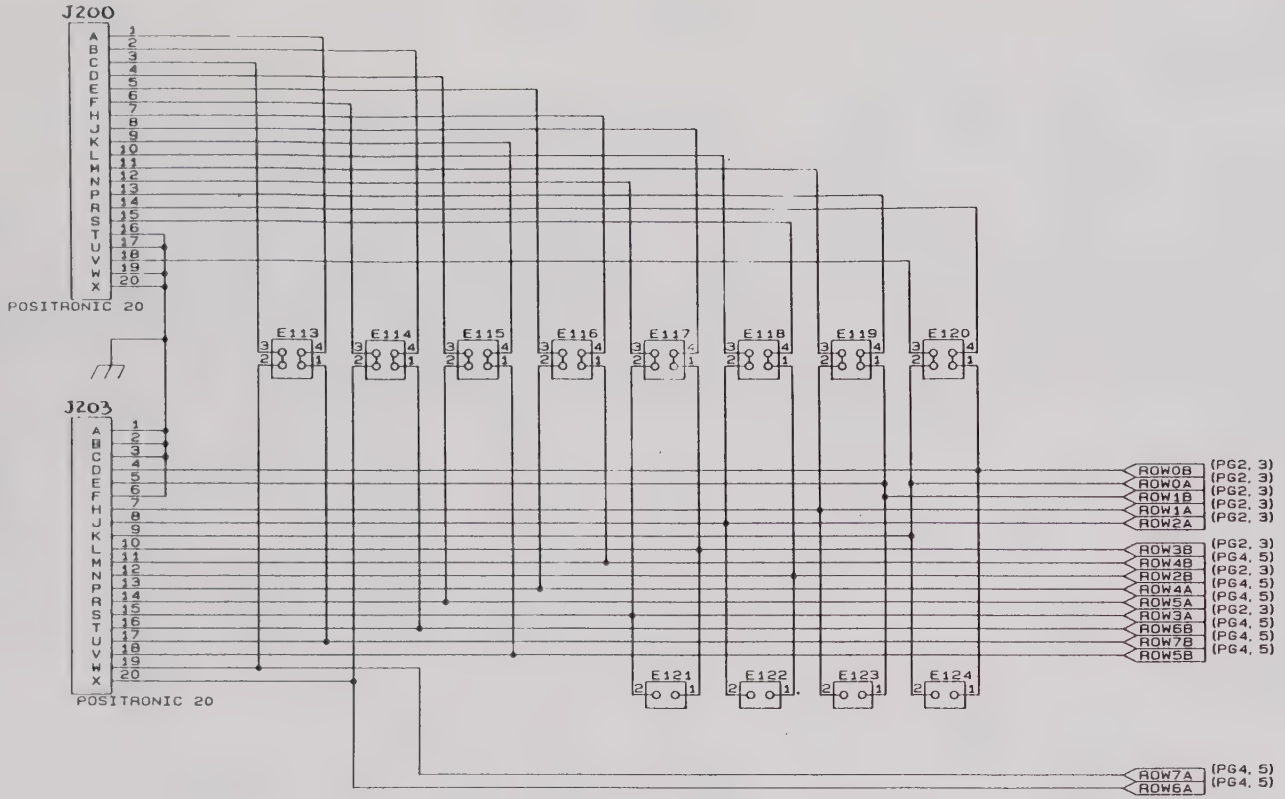

1260-40B AND 1260-40C ONLY

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431914	C
SCALE ———		SHEET 7 OF 19	

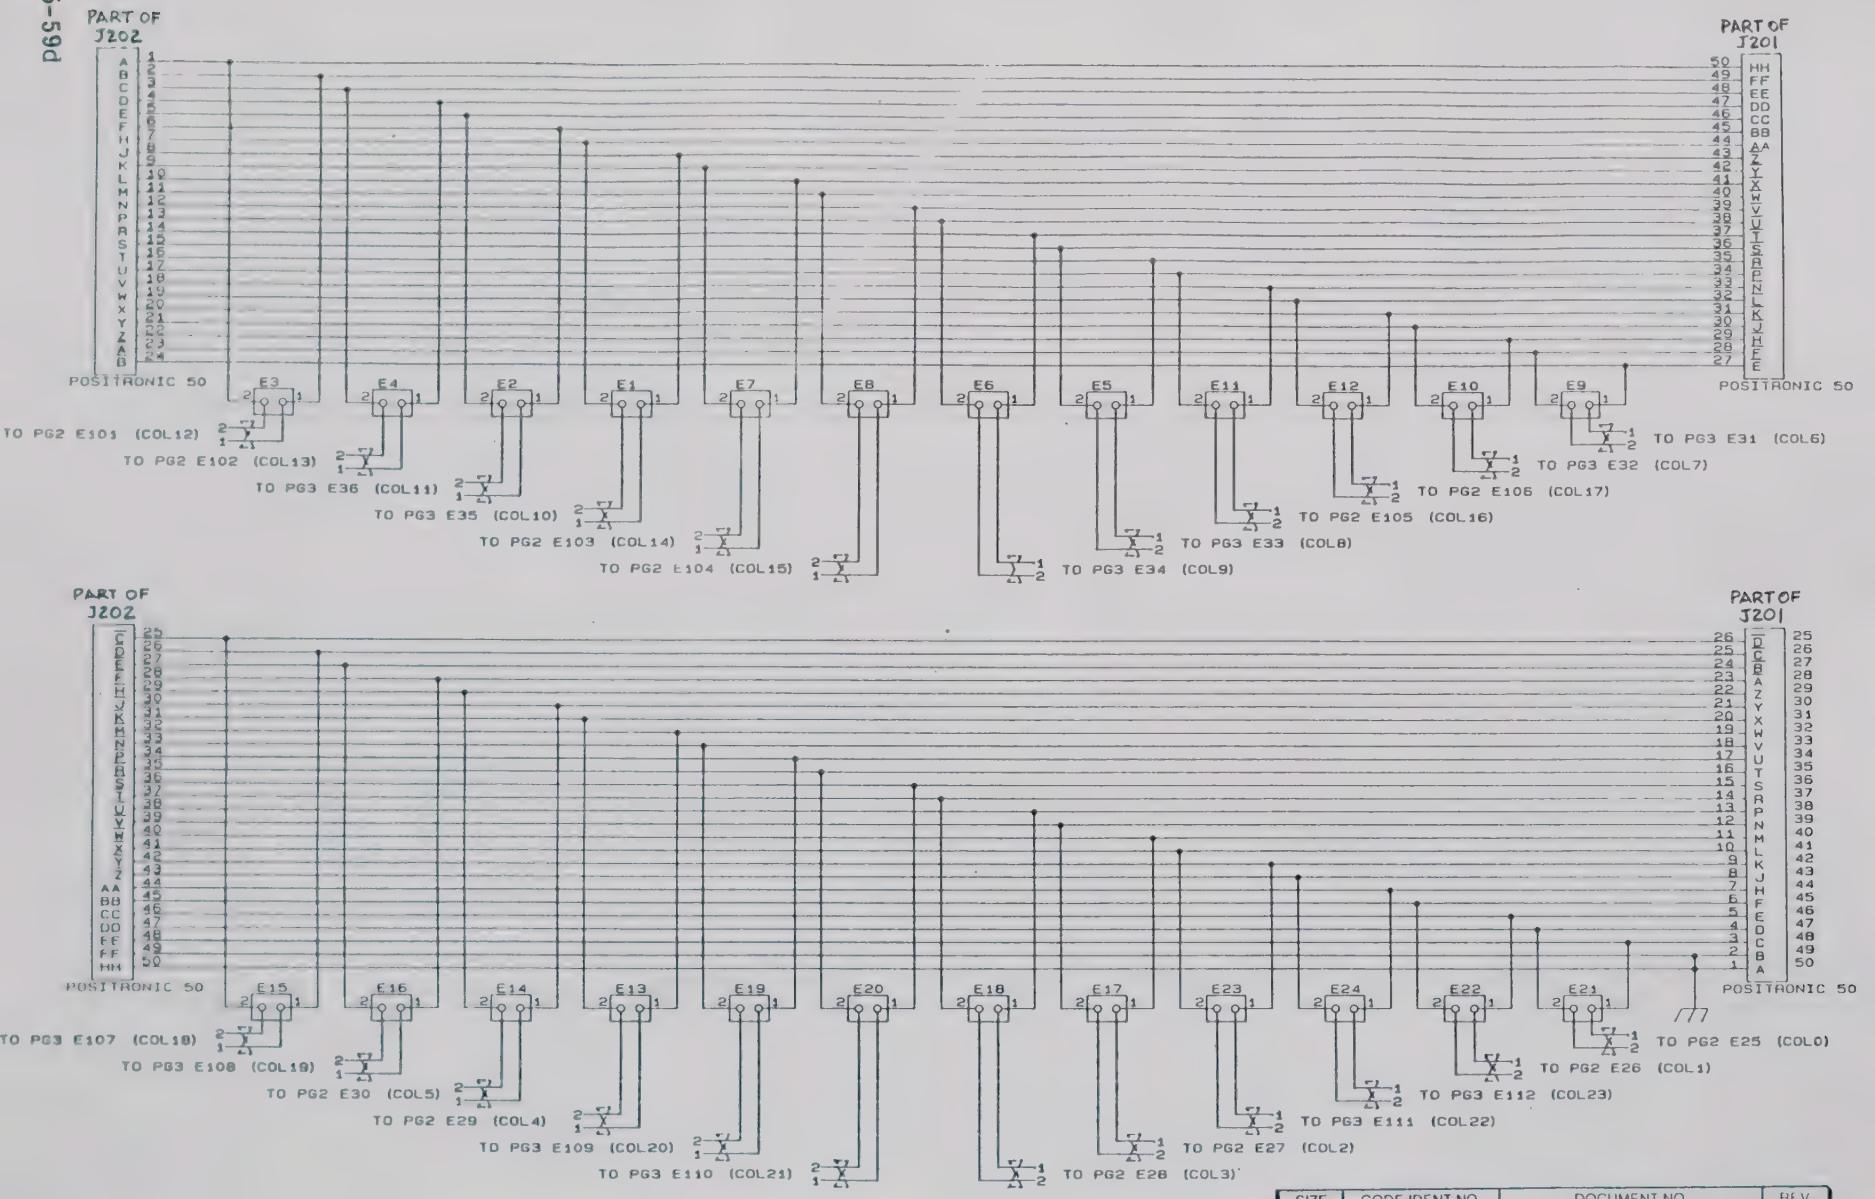

1260-40A AND 1260-40C ONLY

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431914	C
SCALE		SHEET 8 OF 19	

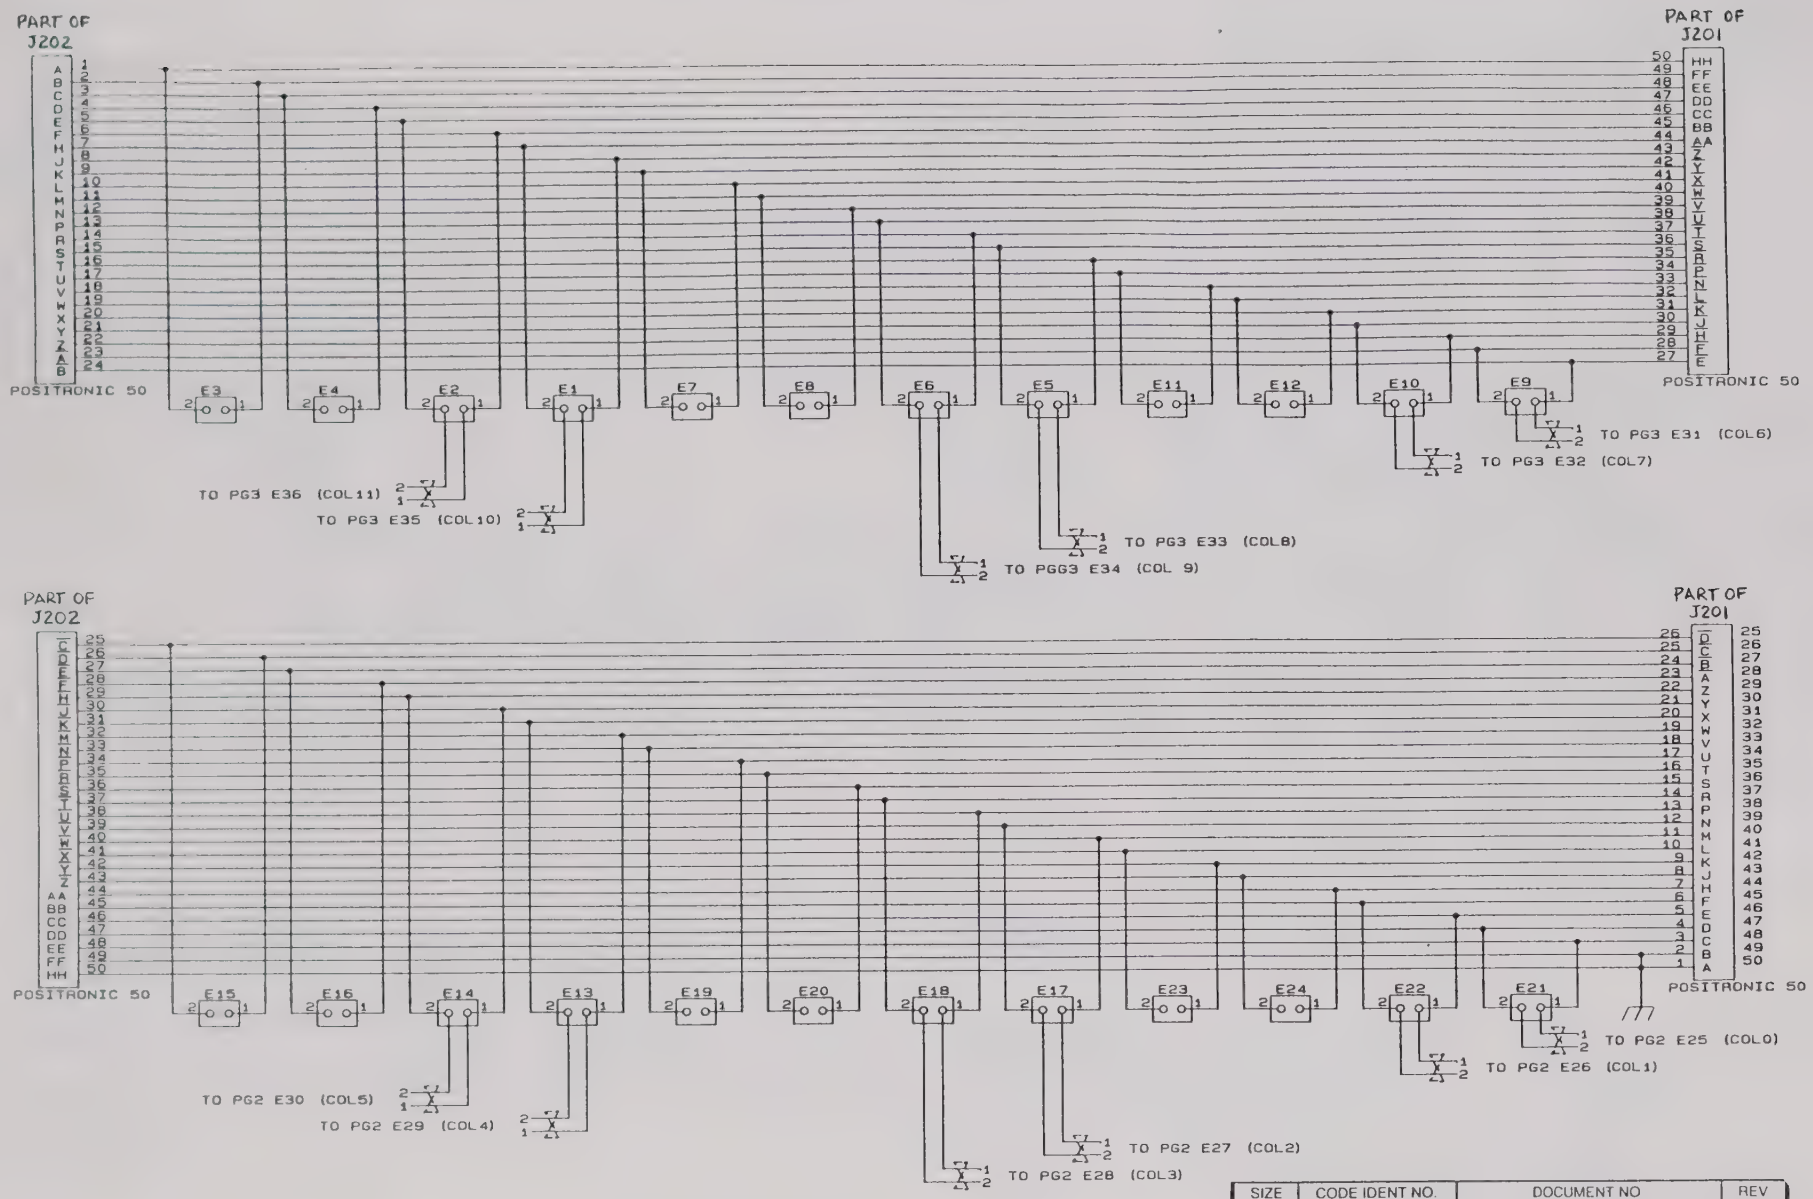

1260-40B ONLY

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431914	C
SCALE ———		SHEET 9 OF 19	

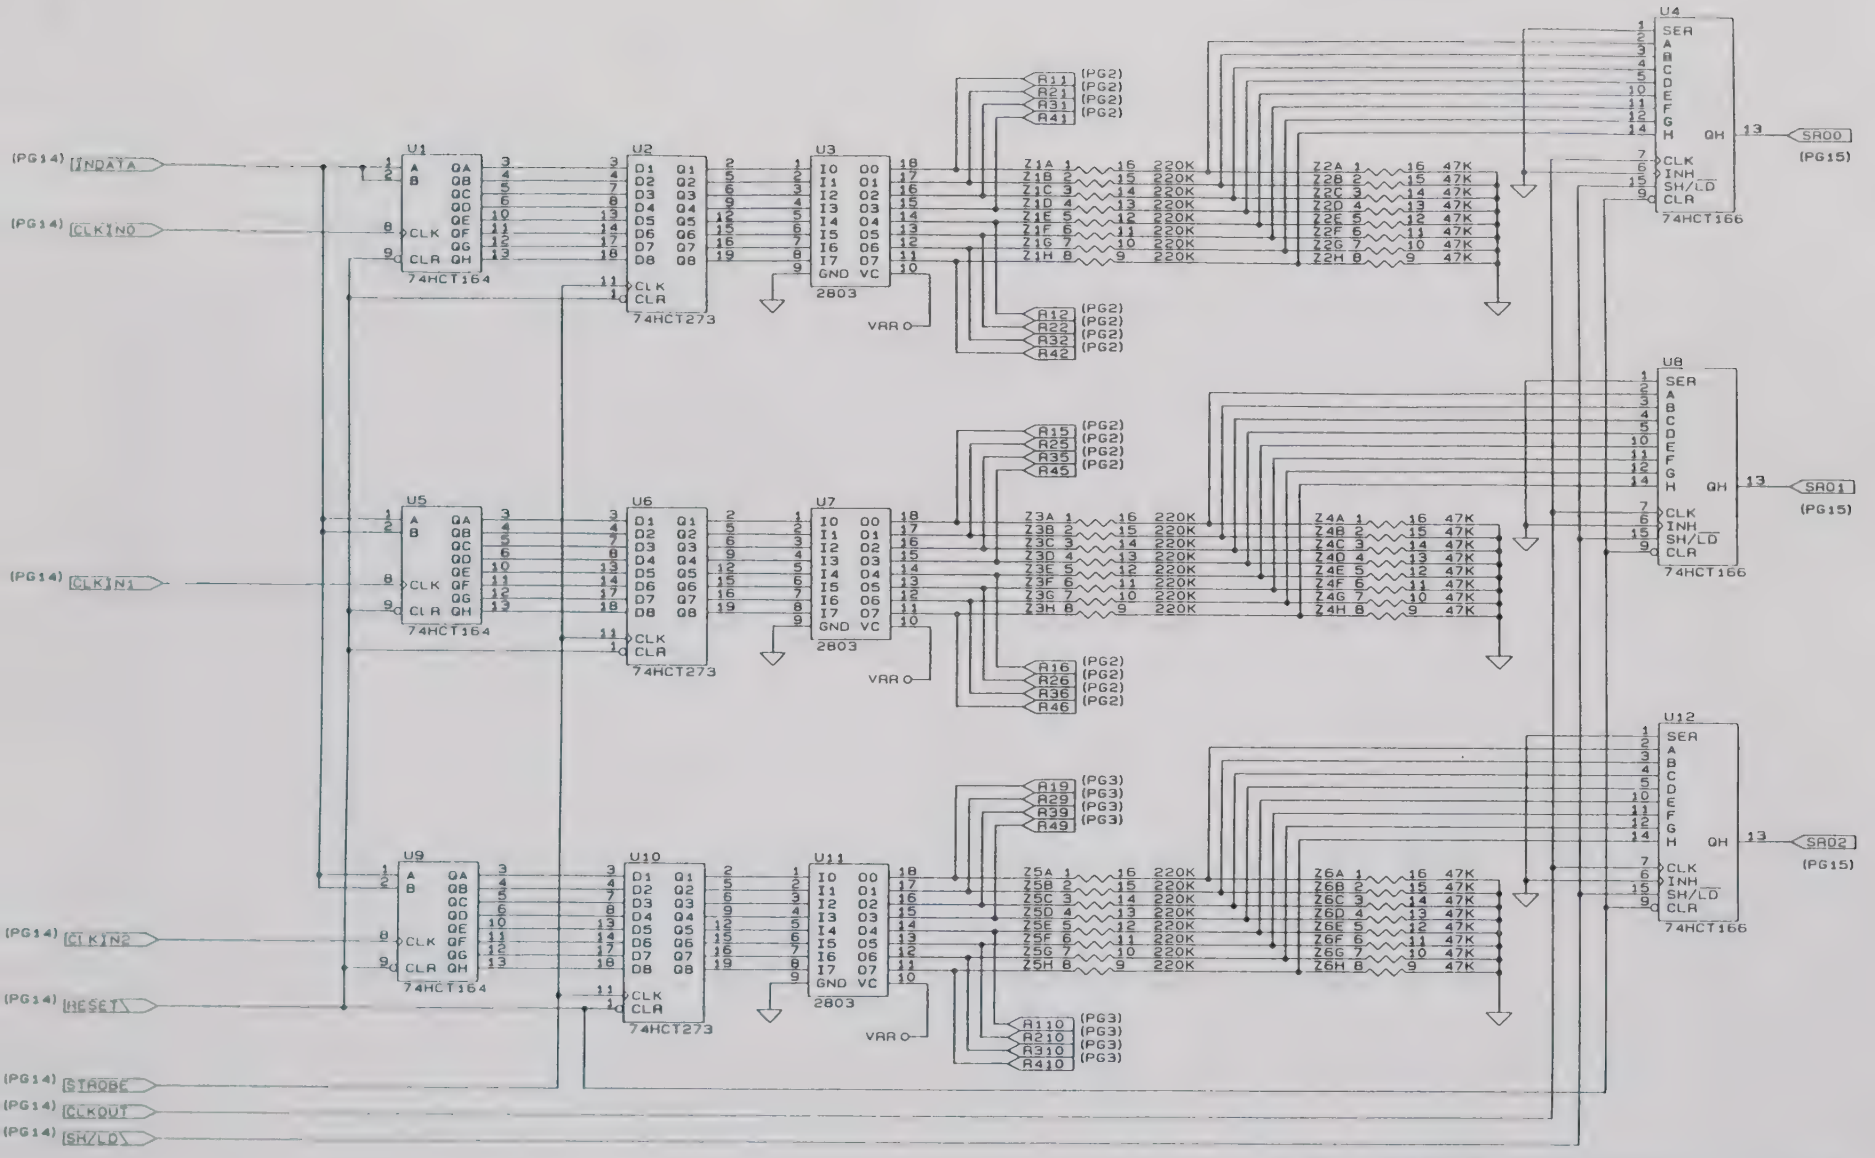

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431914	C
SCALE		SHEET 10 OF 19	

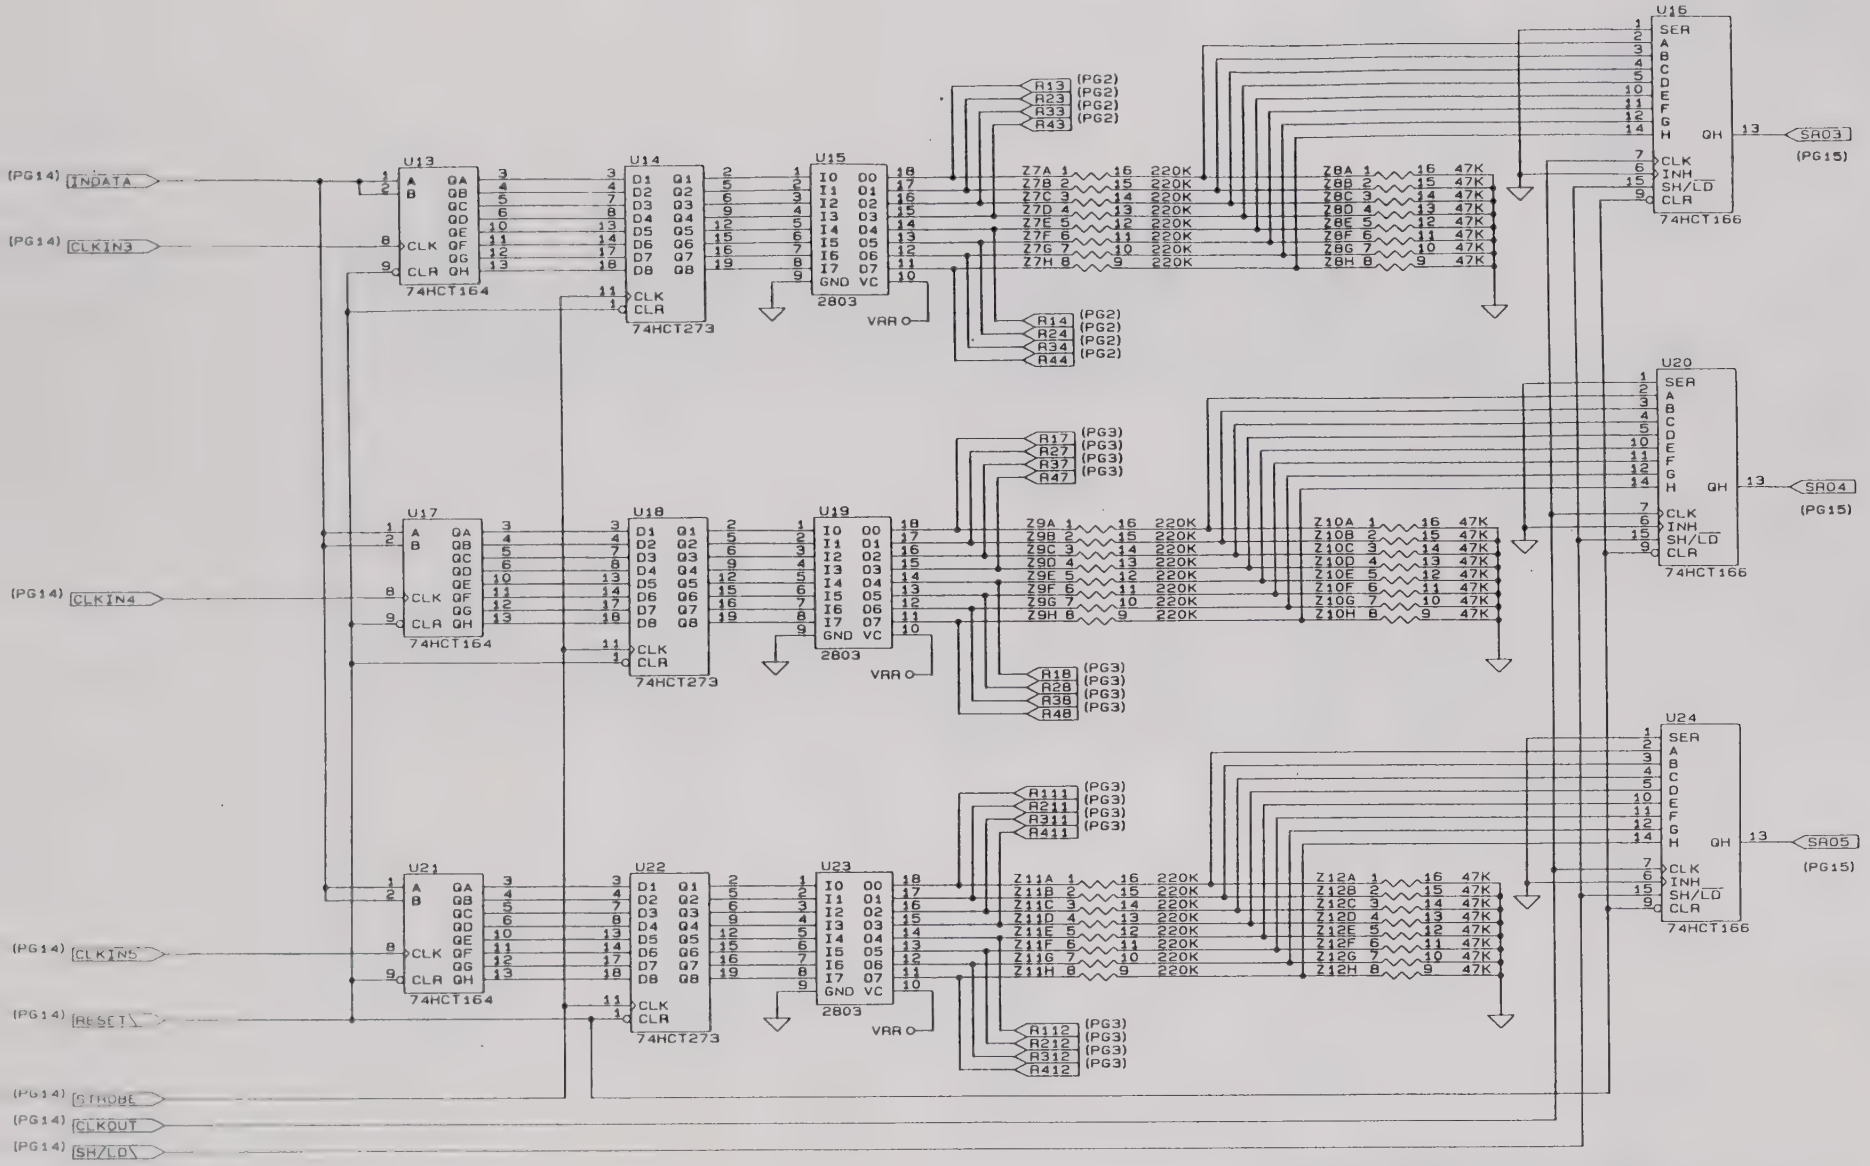

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431914	C
SCALE		SHEET 11 OF 19	

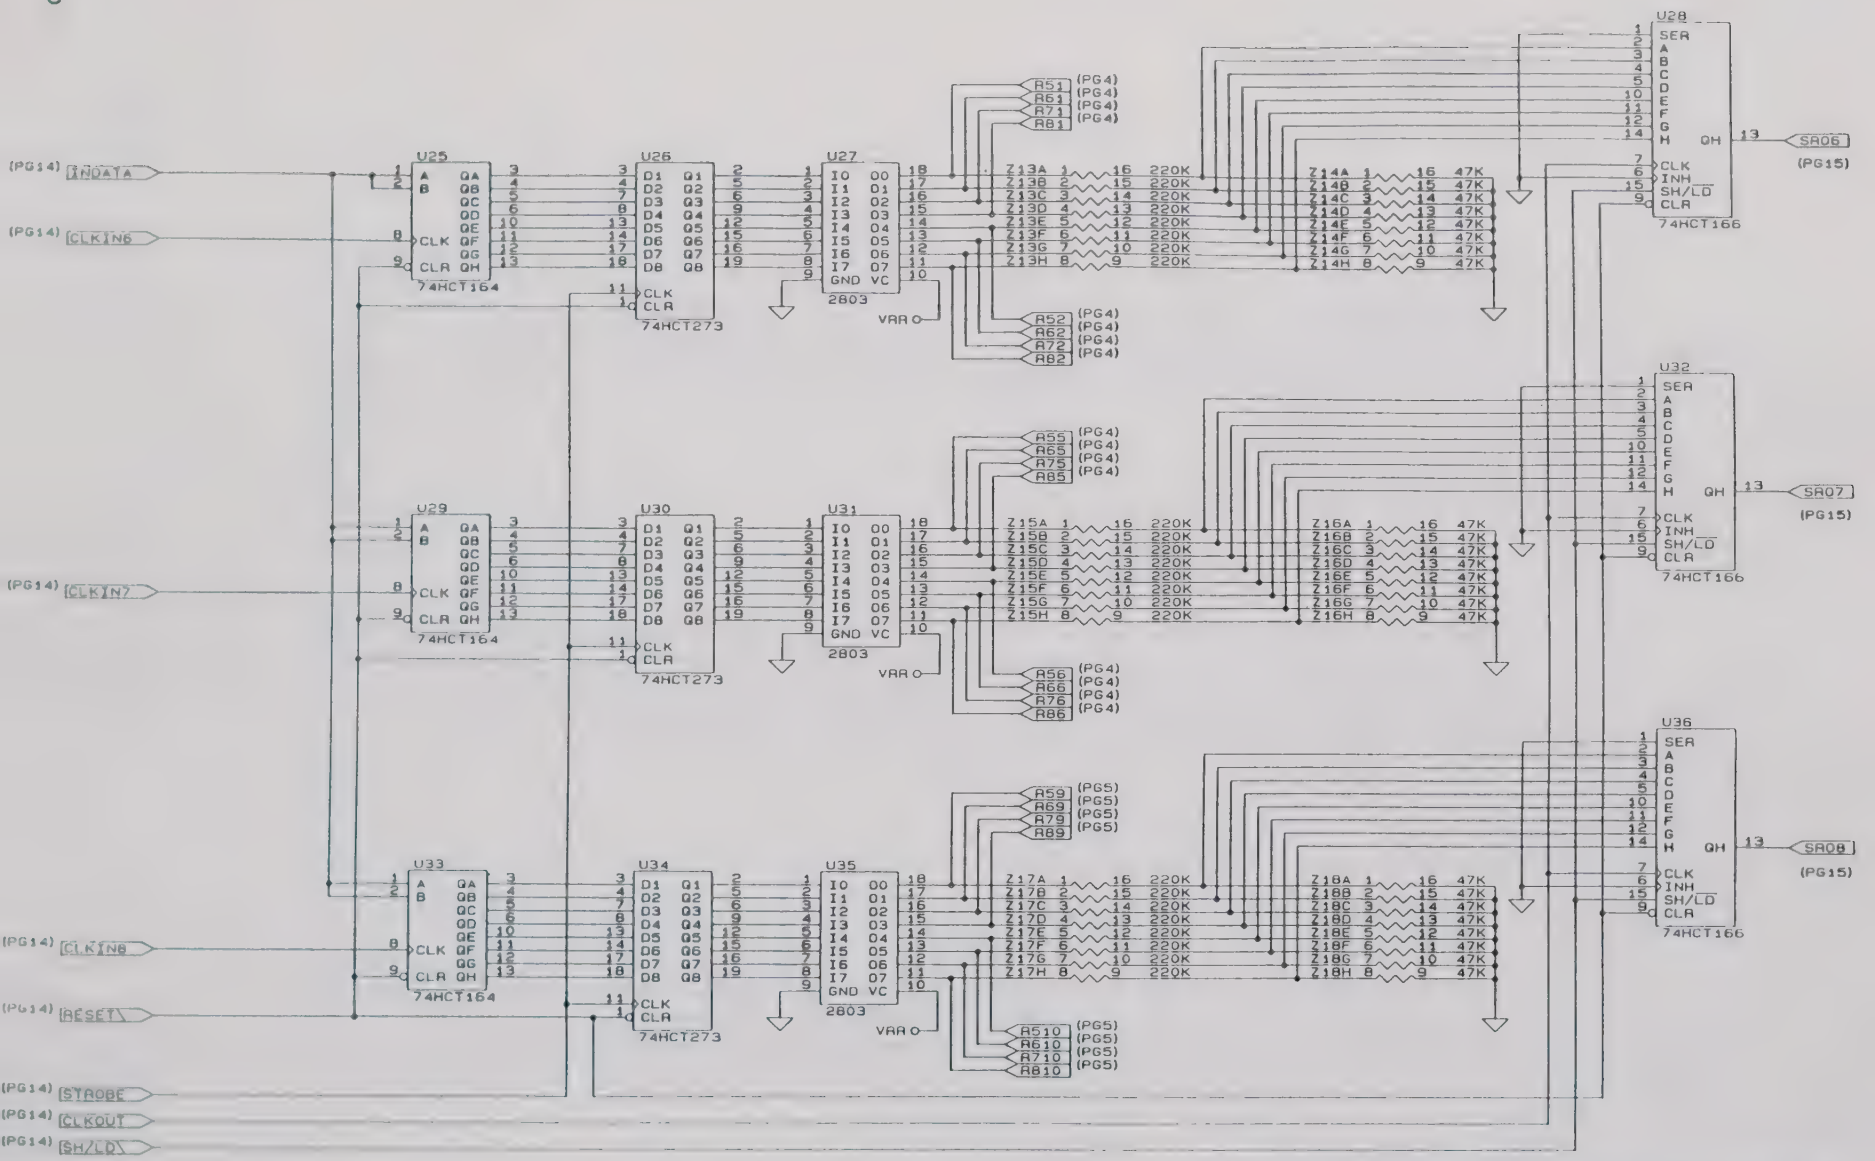

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431914	C
SCALE		SHEET 12 OF 19	

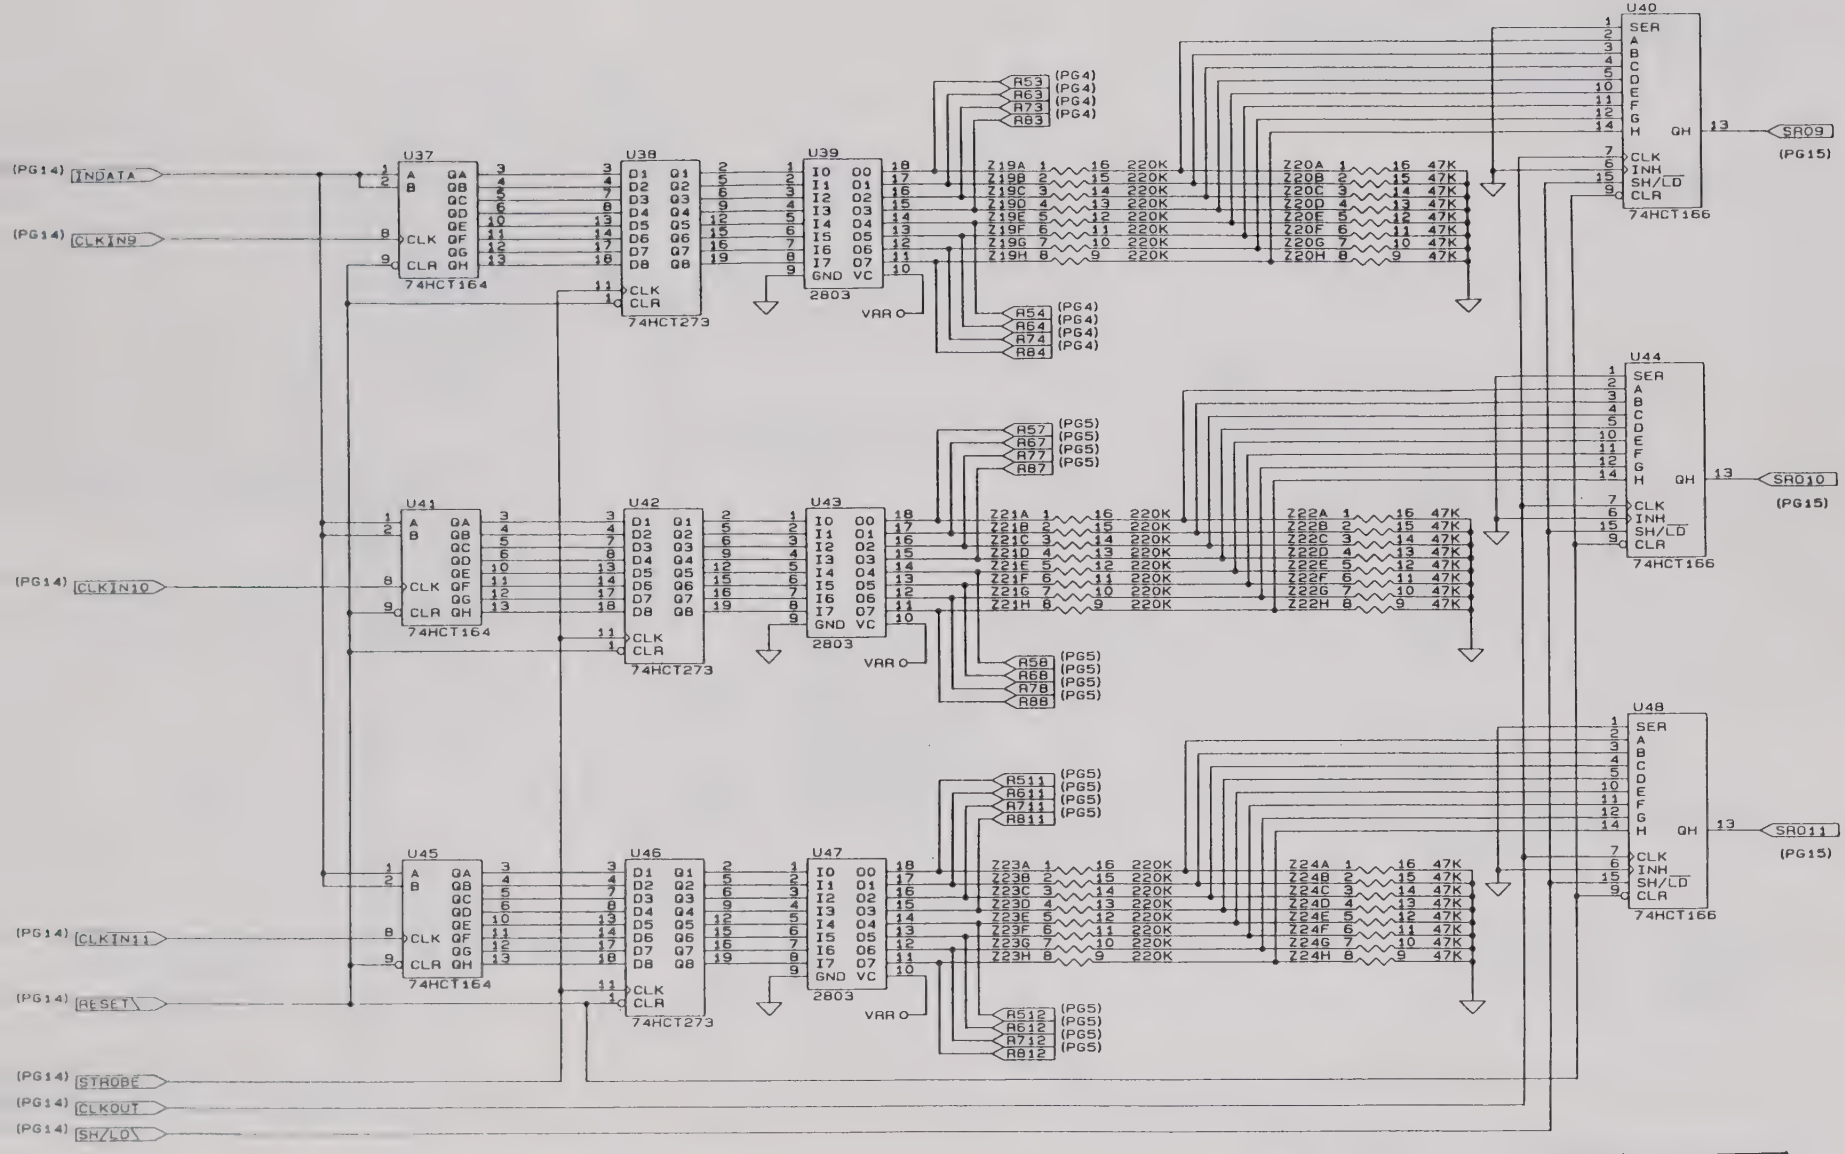

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431914	C
SCALE		SHEET 13 OF 19	

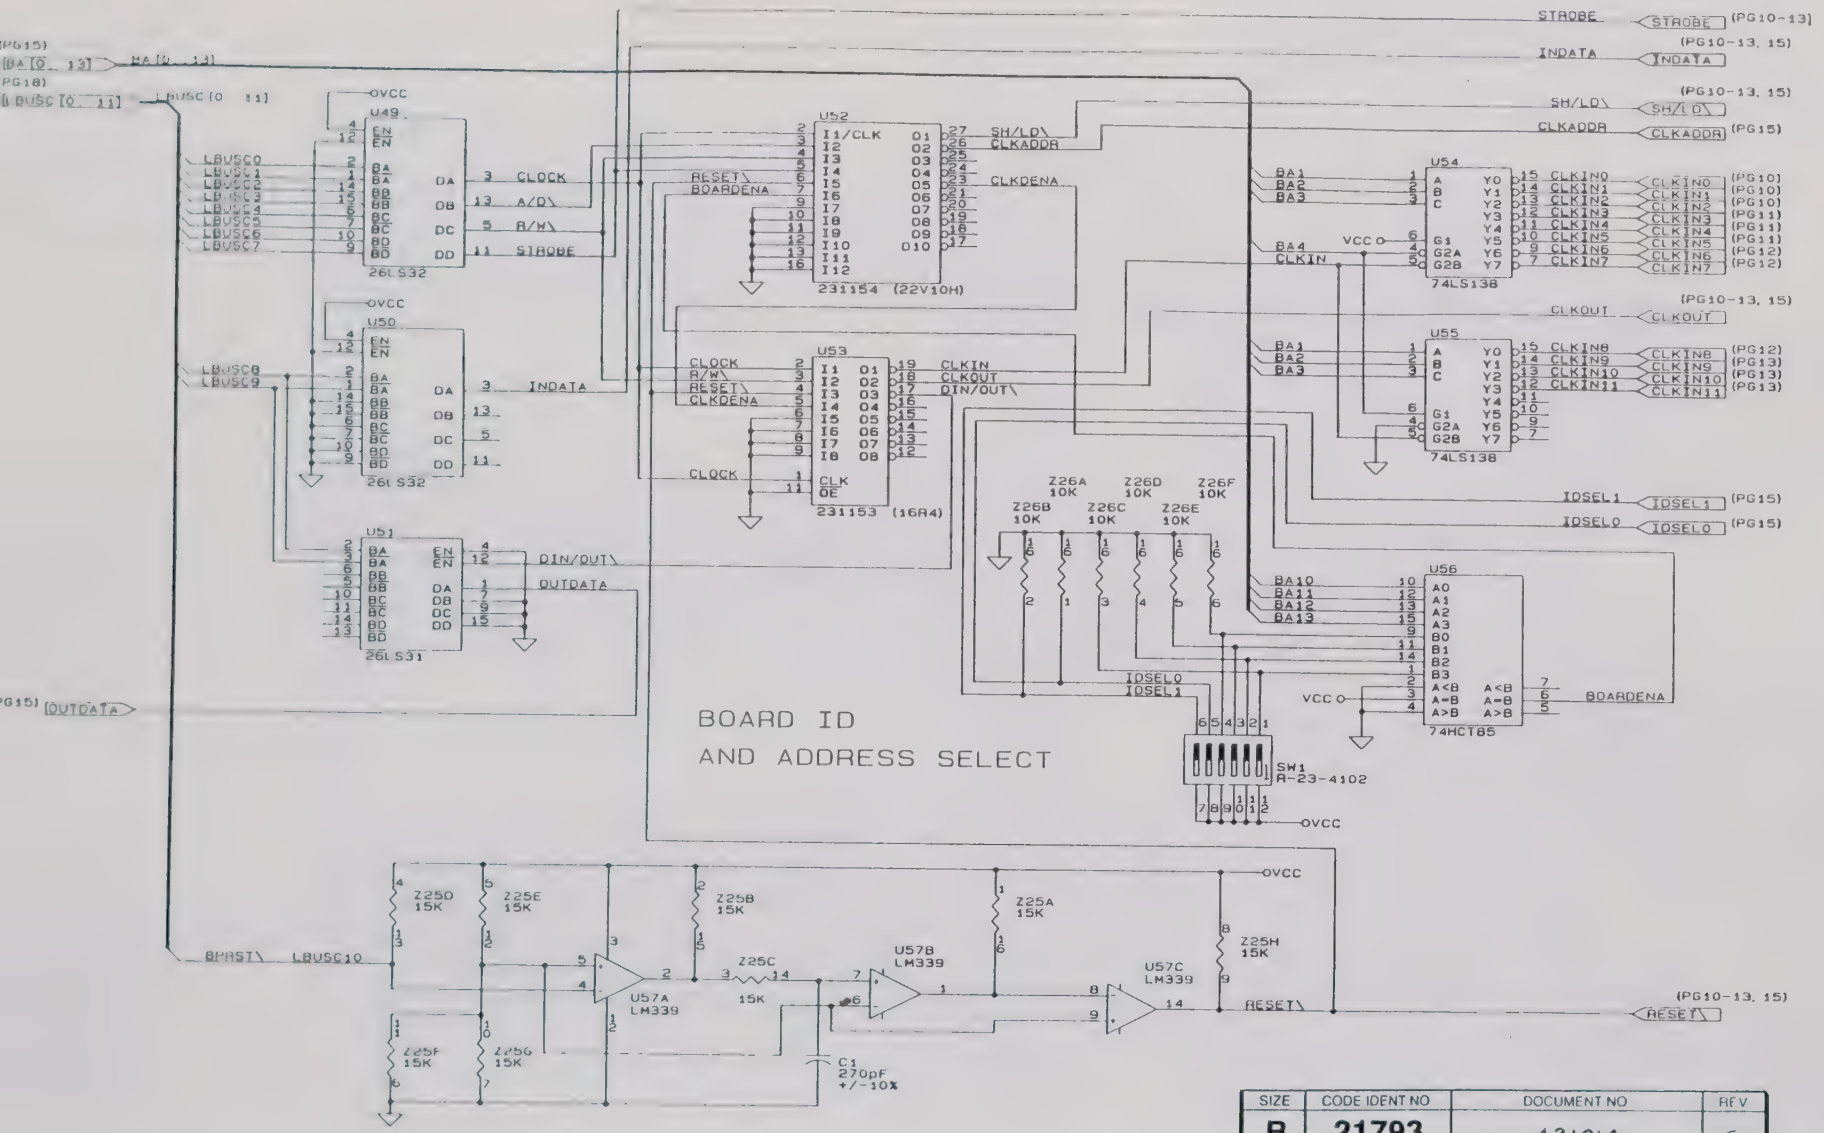

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431914	C
SCALE		SHEET 14 OF 19	

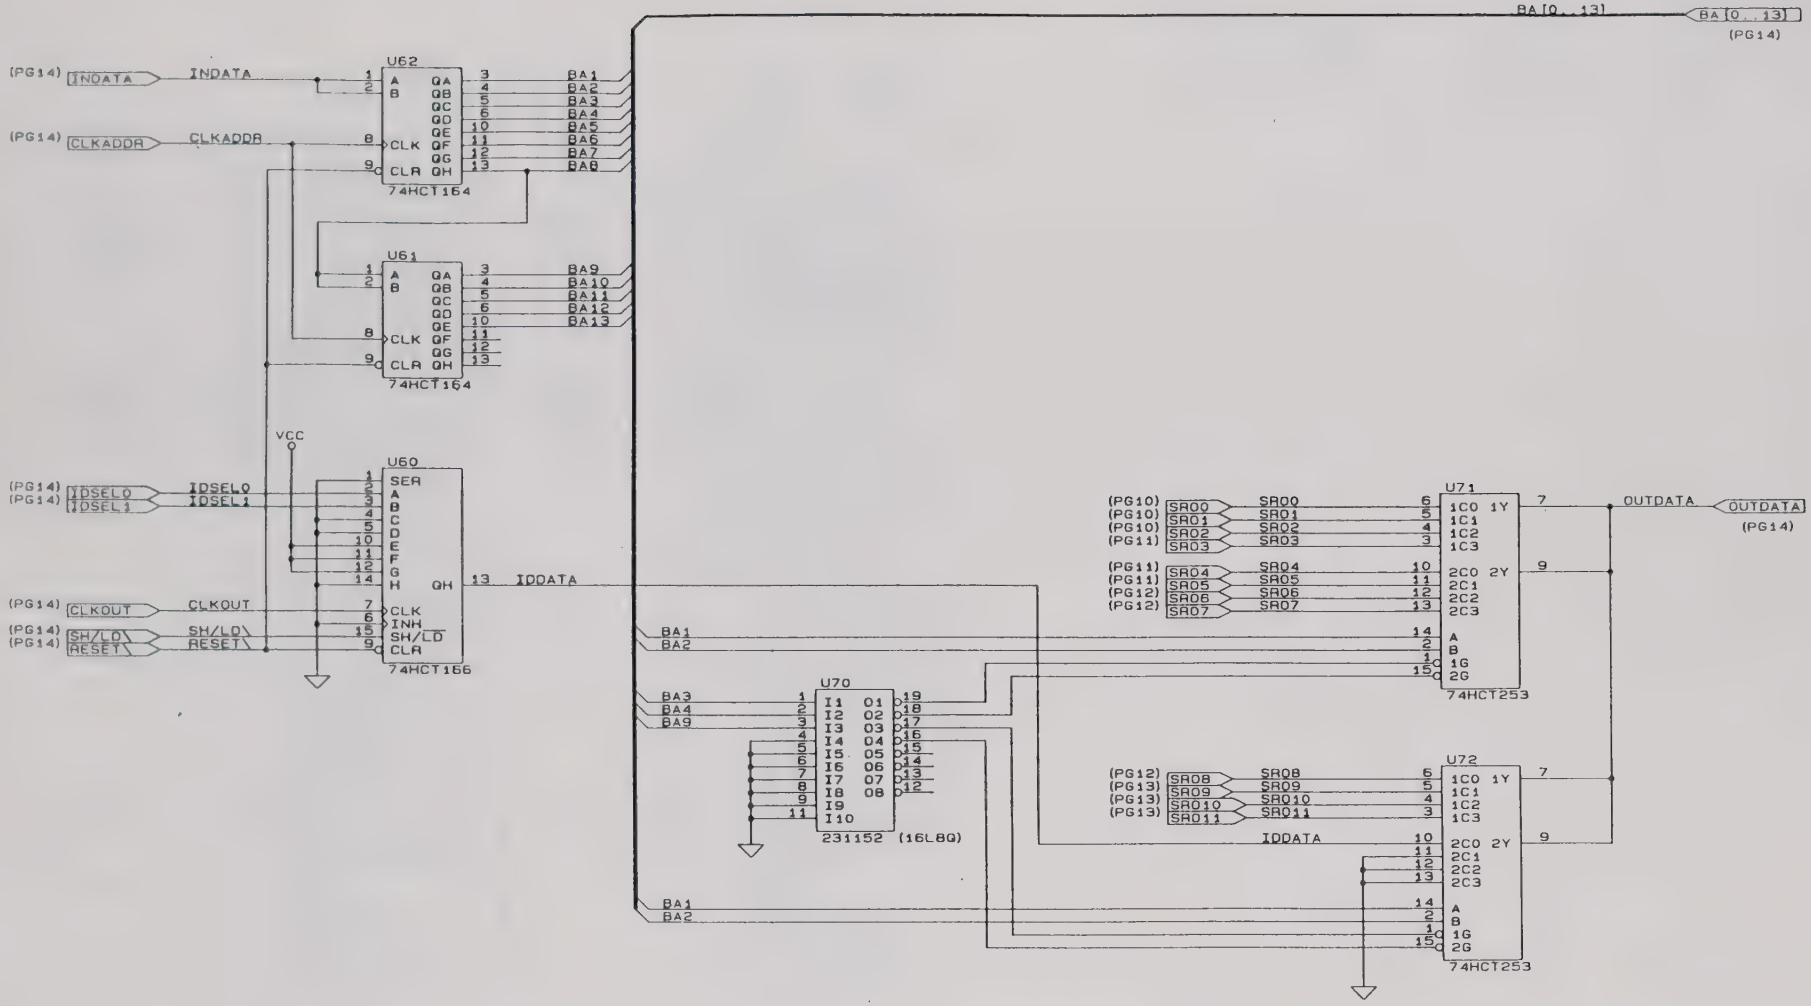

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431914	C
SCALE		SHEET 15 OF 19	

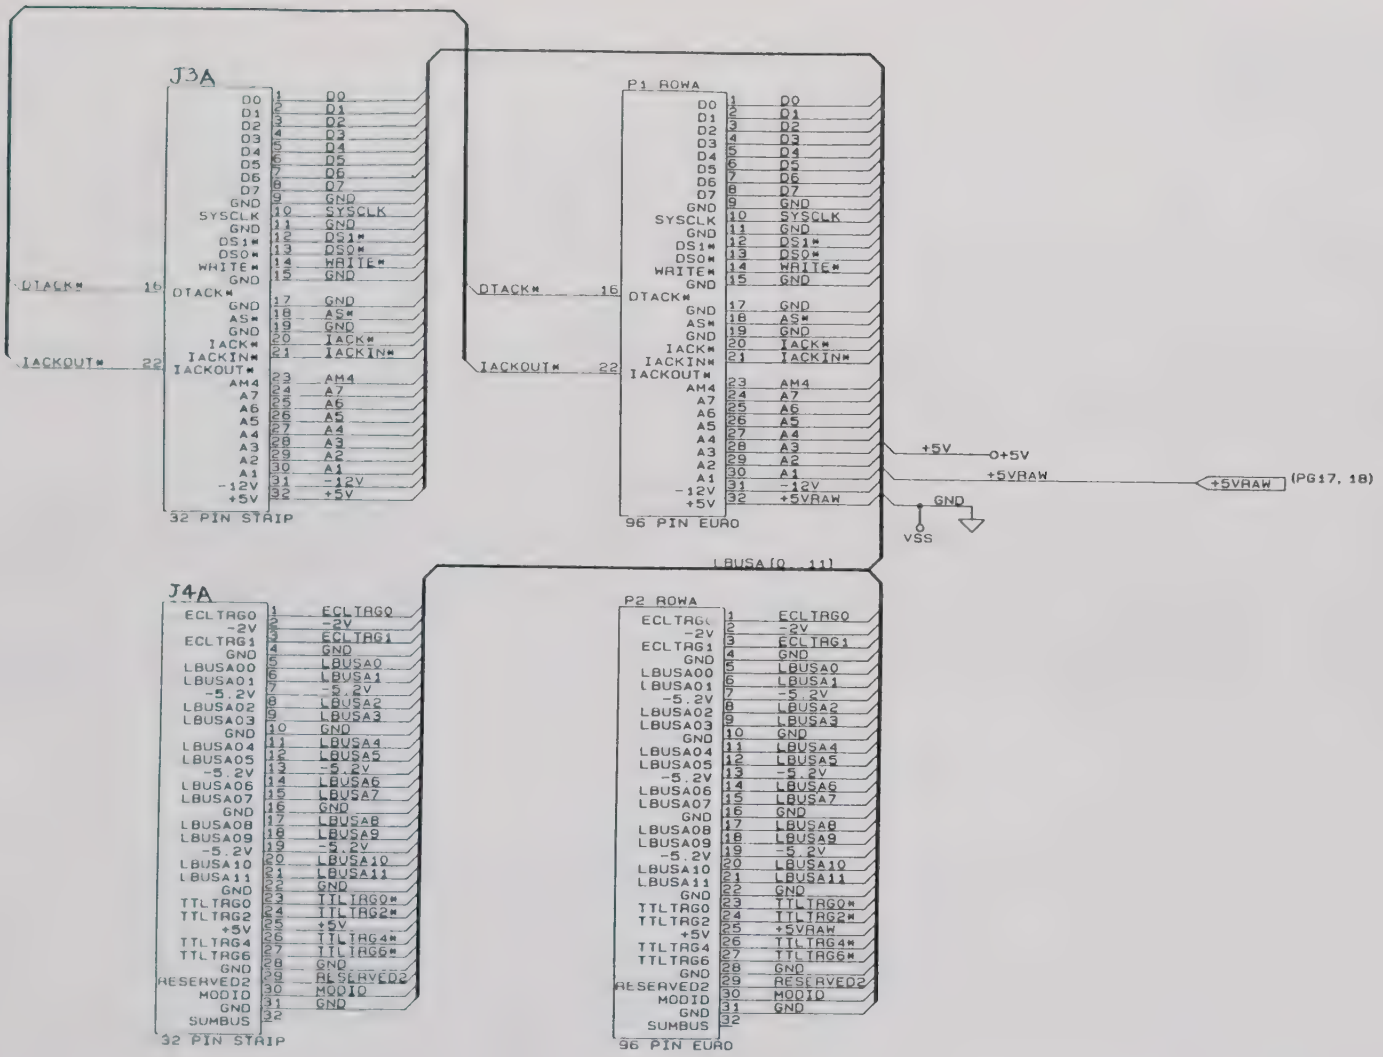

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431914	C
SCALE		SHEET 16 OF 19	

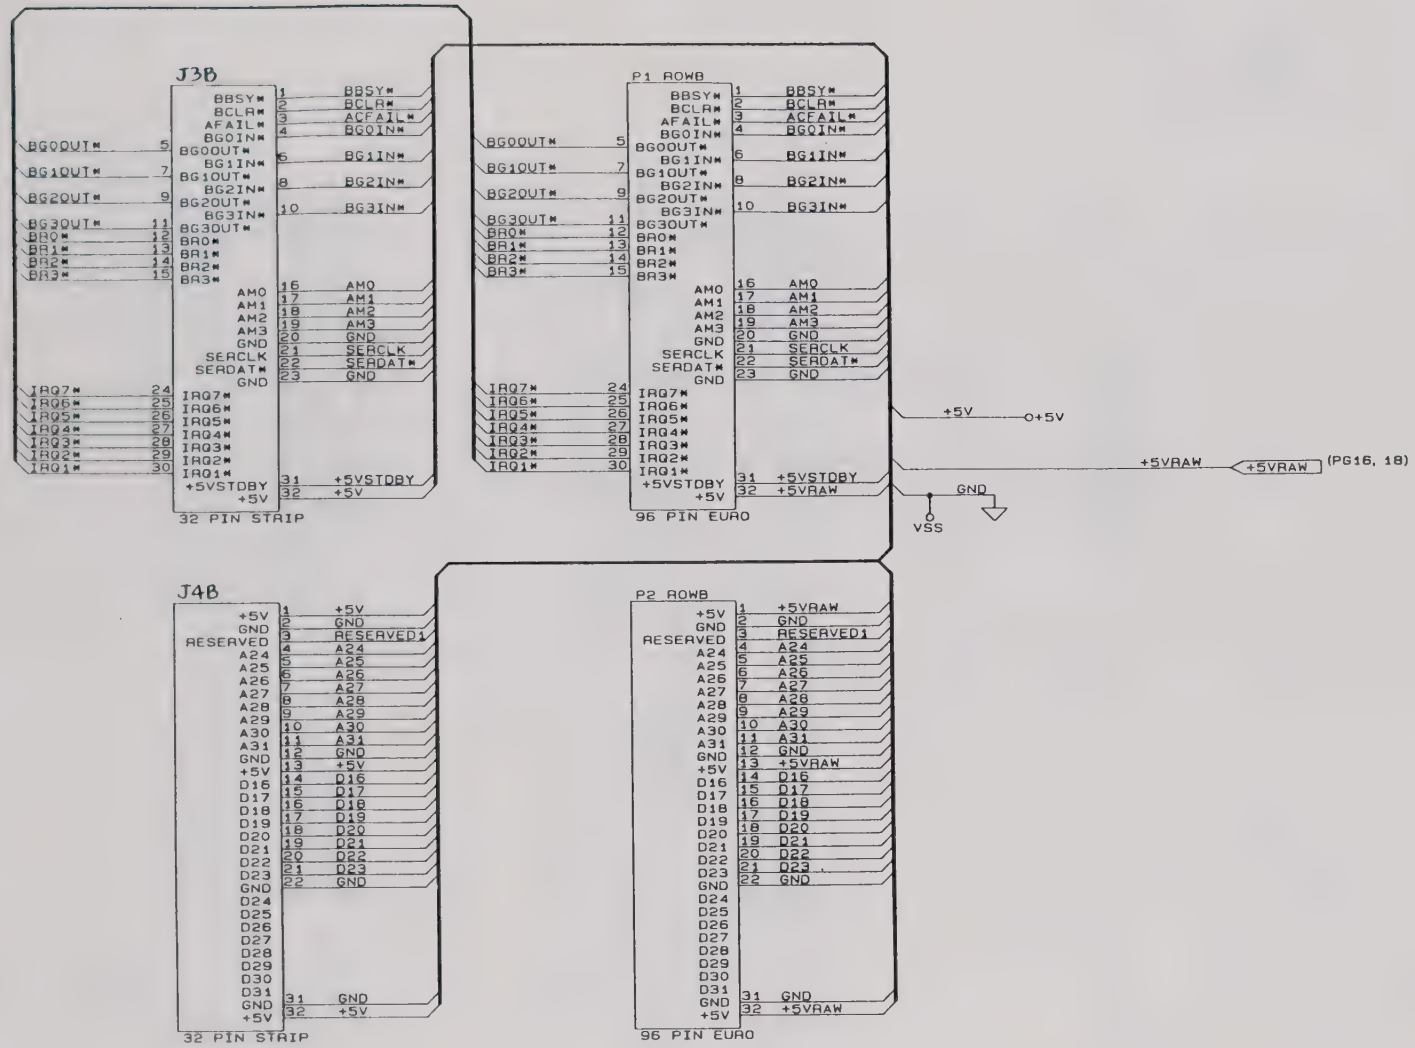

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431914	C
SCALE ———		SHEET 17 OF 19	

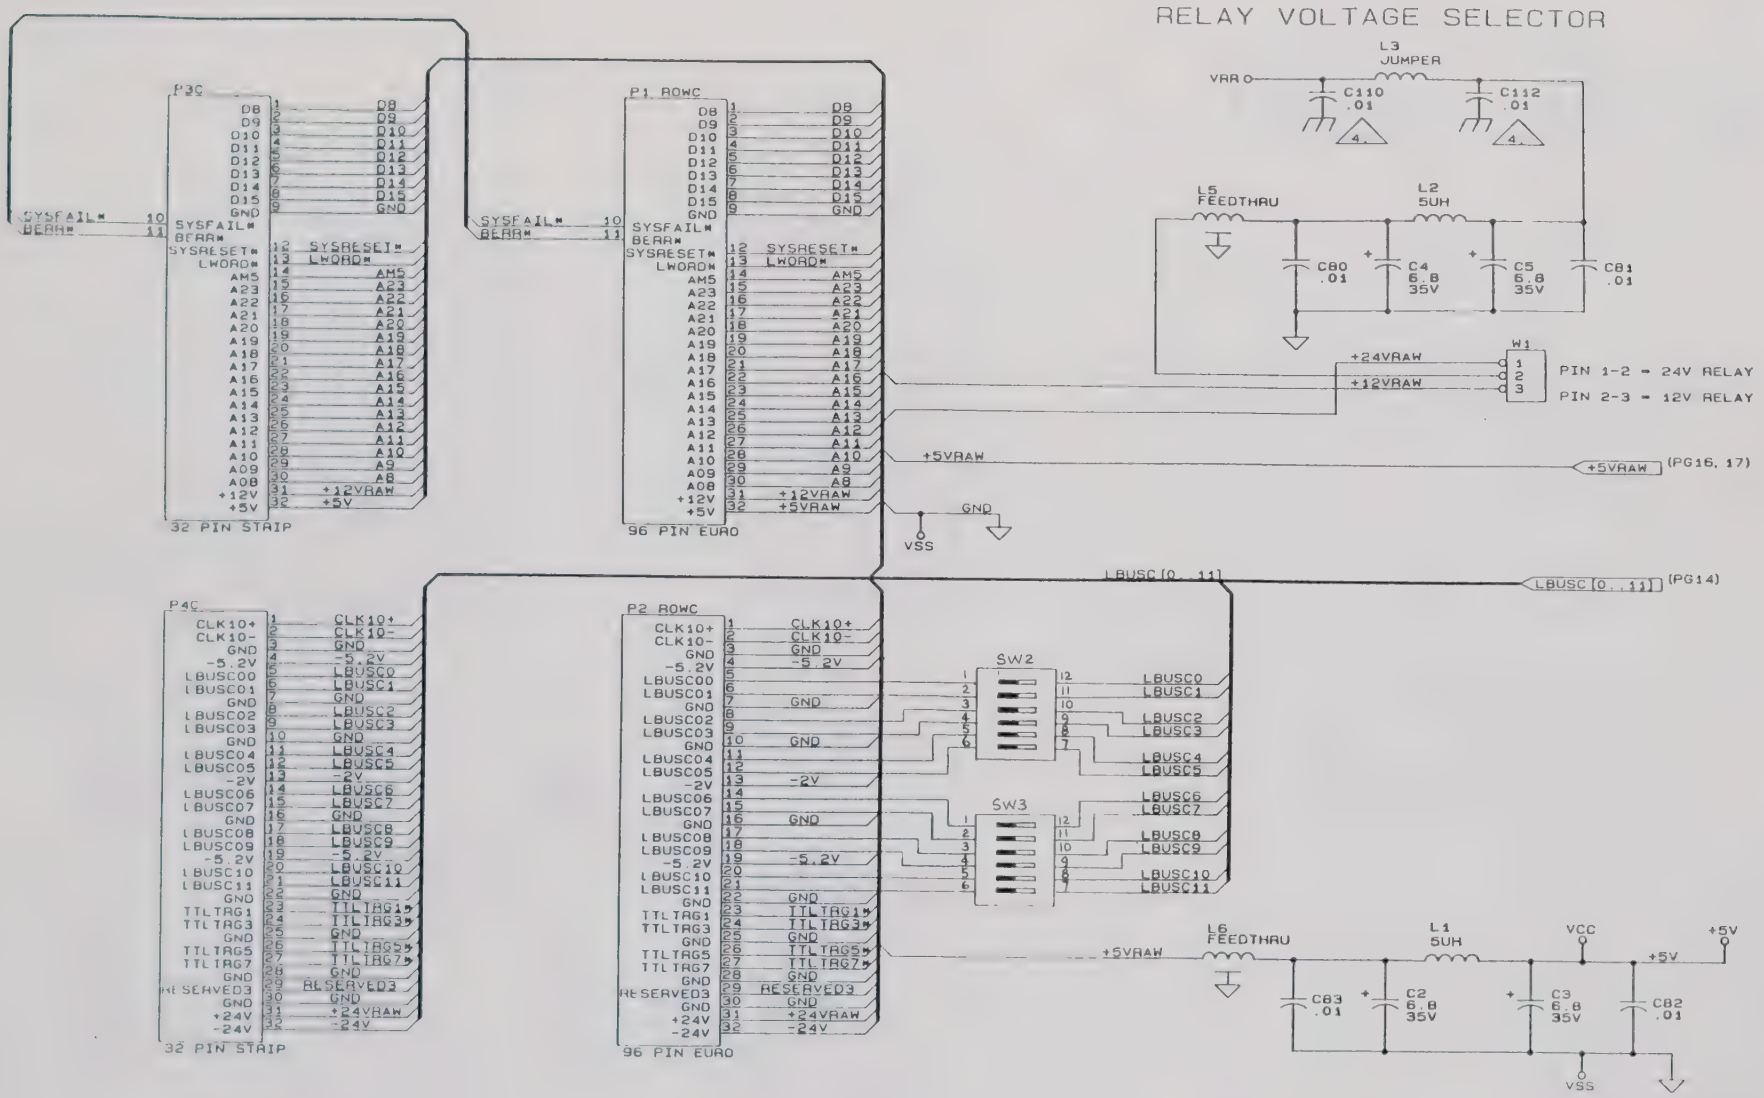

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431914	C
SCALE		SHEET 18 OF 19	

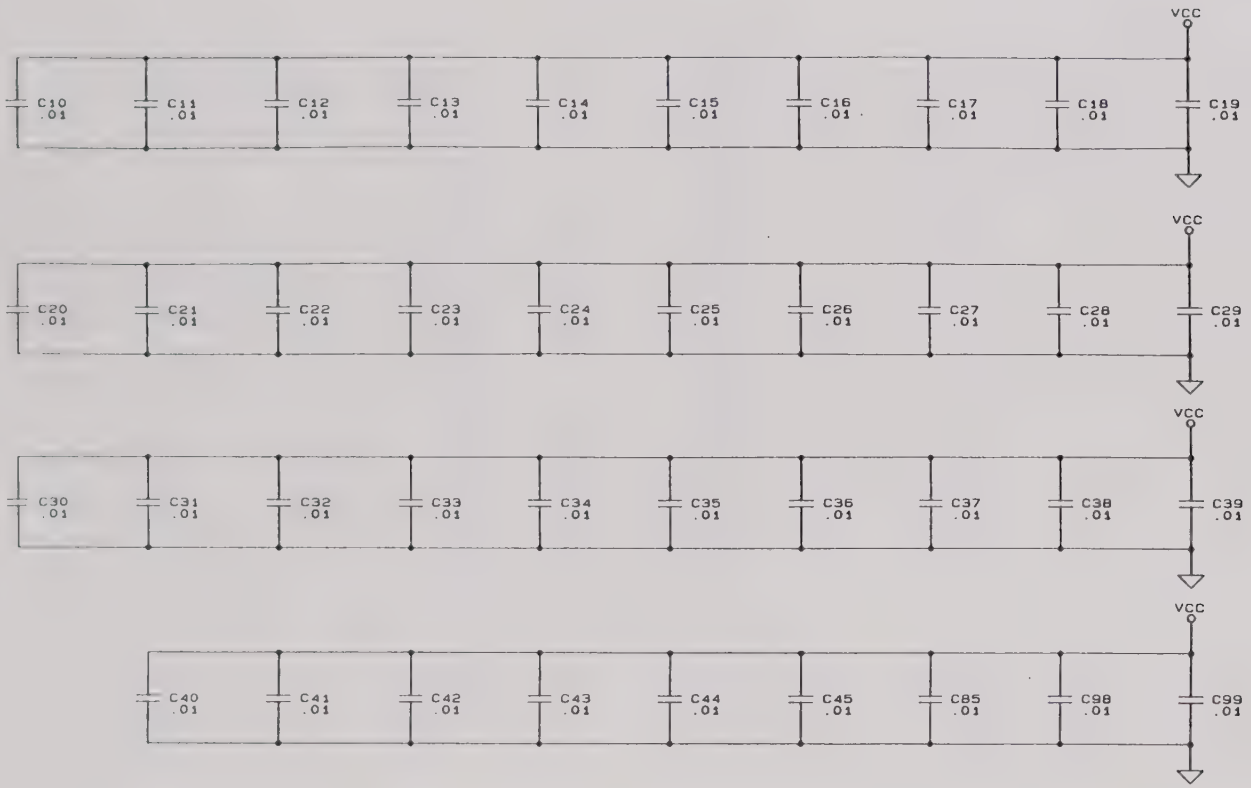

SIZE	CODE IDENT NO.	DOCUMENT NO.	REV
B	21793	431914	C
SCALE		SHEET 19 OF 19	

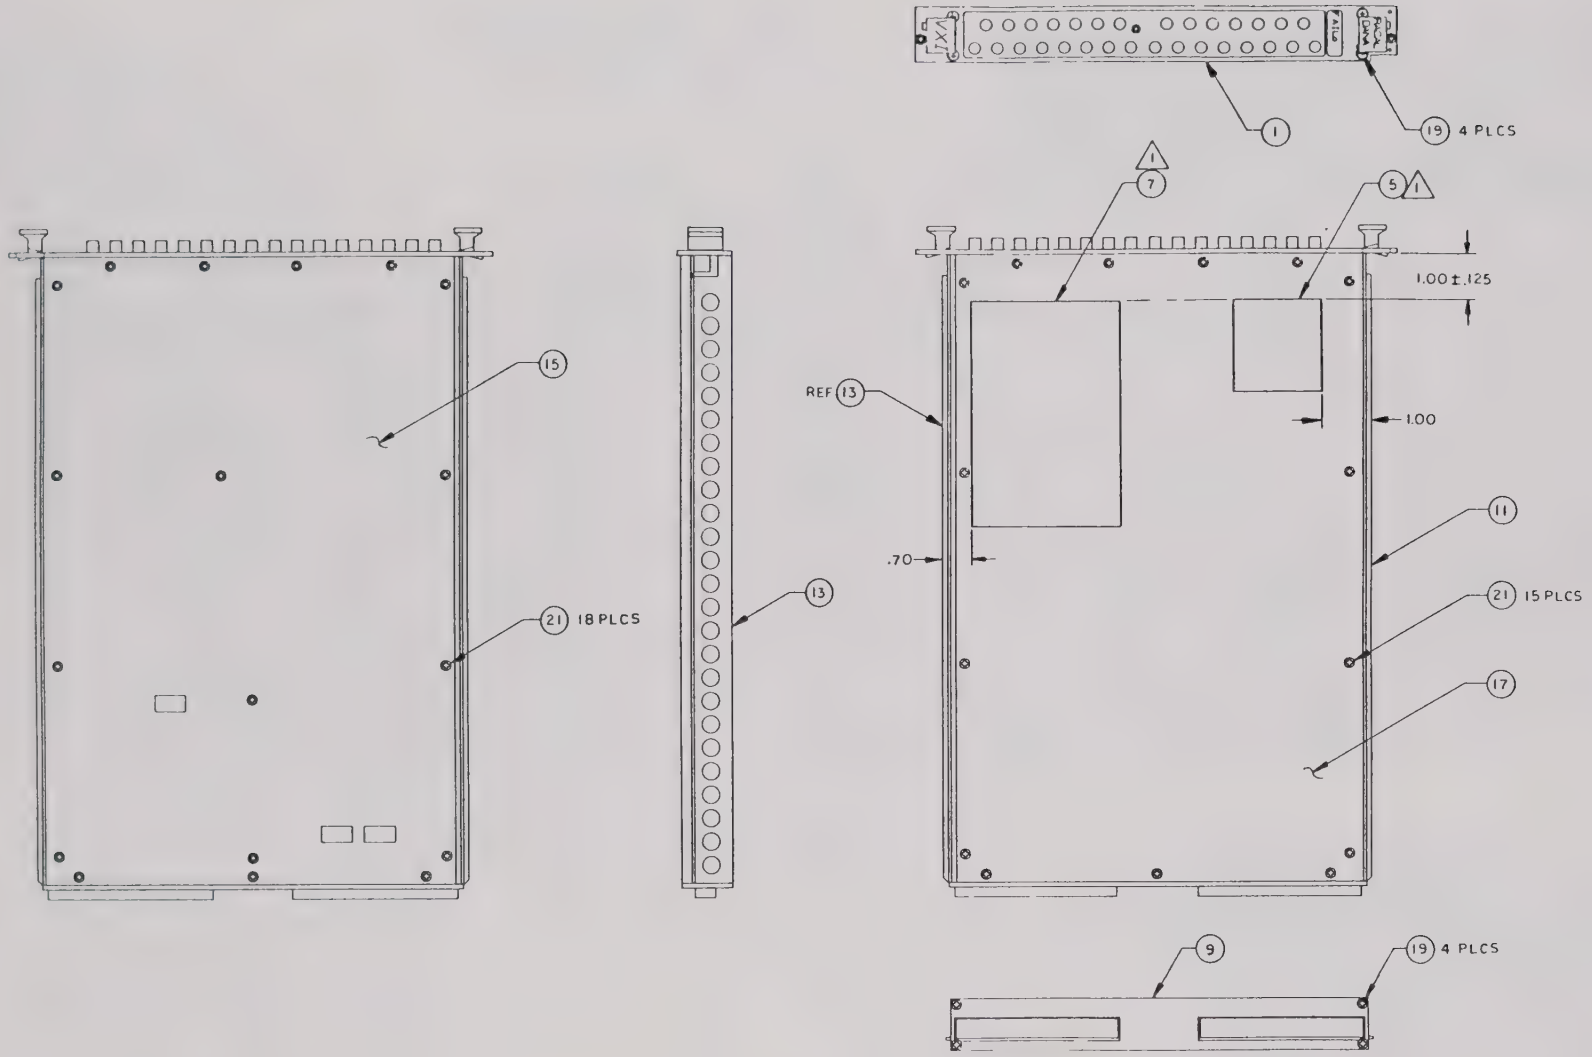

2. INCLUDE ITEM 3 (SHIPPING KIT) IN BOX WITH ASSY.

⚠ LOCATE LABELS WHERE SHOWN.

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

FINAL ASSY, 1260-54

SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	404768	A

SCALE — | SHEET 1 OF 2

1. ITEM 69 CONSISTS OF MOUNTING HARDWARE FOR HANDLES, AND ASSOCIATED PARTS AND ANY UNUSED HARDWARE SUPPLIED WITH ITEM 69
2. INSTALL ITEM 70 (RACAL-DANA VXI LABELS) RIGHT-READING WITH ITEM 41
3. RELAYS (ITEM 32) TO BE INSTALLED .007MIN/.020MAX ABOVE PCB
4. P1 & P2 MUST BE INSTALLED FLUSH AT RIGHT ANGLE TO PCB
5. INSTALL (ITEM 35) PCB INTO (ITEM 55) J4
6. INK STAMP SERIAL NUMBER AND CURRENT REVISION ON COMPONENT SIDE IN INDICATED AREA.
7. REFERENCE SCHEMATIC 431908
8. ITEM 62 CONSISTS OF 1 BOTTOM HANDLE, MOUNTING BLOCK AND ASSOCIATED PARTS ITEM 65 IS THE SAME (AS ITEM 62) BUT THE HANDLE IS FOR THE TOP
9. SET ALL S2,S3 TO (ON) OR (CLOSED) OR (1) POSITION DO NOT WAVE SOLDER
10. SET S1 TO LOGICAL ADDRESS 1 PER TABLE 1 DO NOT WAVE SOLDER

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC. AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC. BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC.

RACAL-DANA Instruments Inc.			
4 GOODYEAR, IRVINE, CALIFORNIA 92714			
DOCUMENT TITLE			
PCB ASSY, 1260-54			
SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	401908	A
SCALE 1/1		SHEET 1 OF 6	

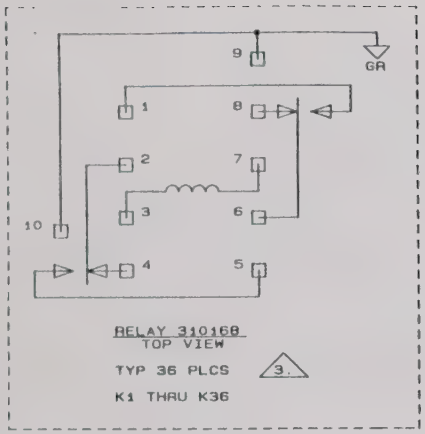

RELAY 310168
TOP VIEW

TYP 36 PLCS △3.
K1 THRU K36

REF. DES.	IC TYPE	+5V PIN NO.	GND PIN NO.
U17, 21, 25, 29, 33	2803		9
U16, 20, 24, 28, 32	74HCT273	20	10
U14	74HCT85	16	8
U13	74LS138	16	8
U11, 12, 15, 19, 23, 27, 31	74HCT164	14	7
U10, 18, 22, 26 , 30, 34	74HCT166	16	8
U9	LM339	3	12
U7, 8	26LS32	16	8
U6	26LS31	16	8
U4, 5	74HCT253D	16	8
U3	231154 (22V10H)	28	14
U2	231153 (16R4)	20	10
U1	231152 (16L8Q)	20	10

IC POWER AND GROUND CONNECTIONS

HIGHEST REF. DES.
Z12
W1
U34
TP2
SW3
RV1
P2
L5
K36
J123
E30
C279

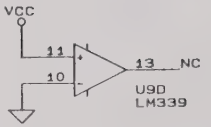



△6. REFER TO SHEET 12 FOR CONNECTIONS.

5. ▽ REFERS TO LOGIC GROUND. GR ▽ REFERS TO SIGNAL GROUND.

△4. C5 AND C6 ARE NOT INSTALLED.

△3. RELAYS K1 THRU K36 ARE RACAL DANA P/N 310168.
ALL RELAYS SHOWN IN DE-ENERGIZED POSITION.

2 RESISTOR NETWORKS ARE IN OHMS, ±2%

1. CAPACITOR VALUES ARE IN MICROFARADS, 50V, +/-20% UNLESS OTHERWISE SPECIFIED.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL-DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE
SCH, 1260-54

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431908	A

SCALE —— SHEET 1 OF 12

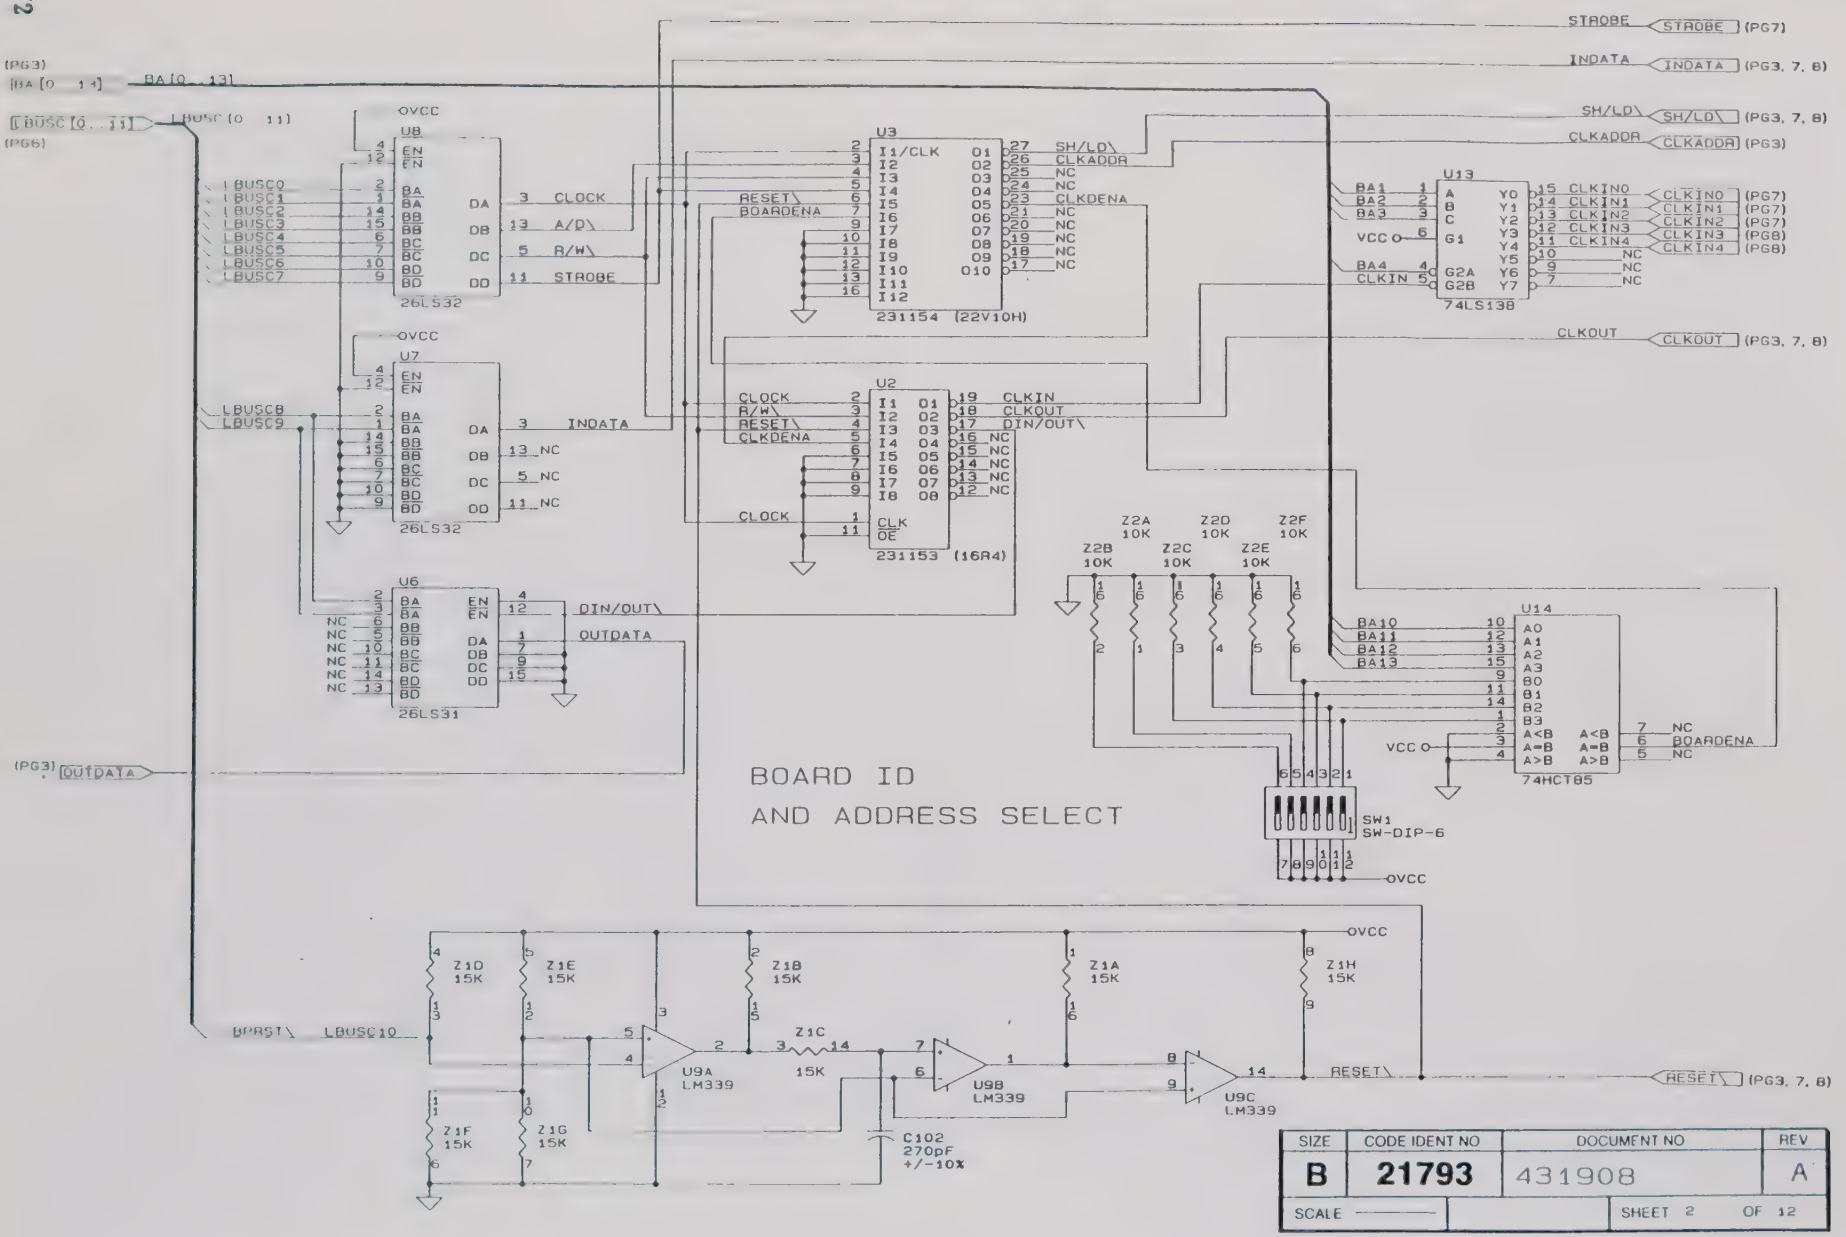

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431908	A
SCALE		SHEET 2 OF 12	

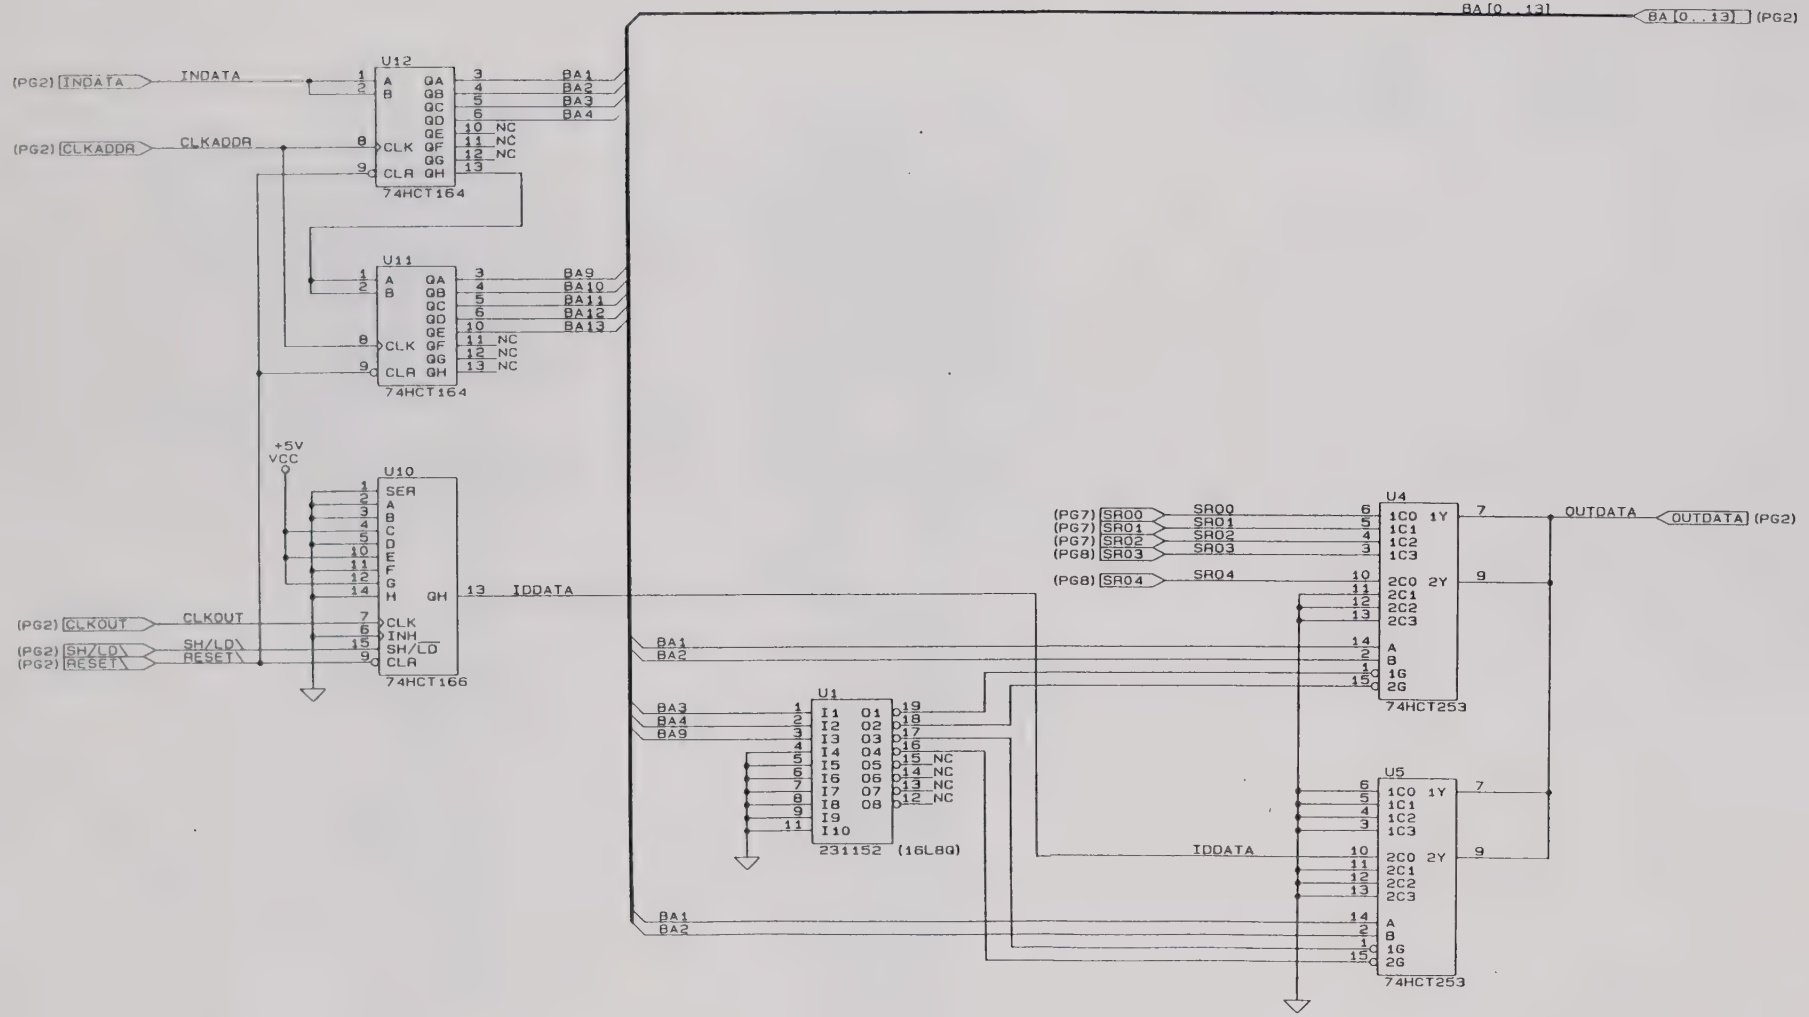

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431908	A
SCALE		SHEET 3 OF 12	

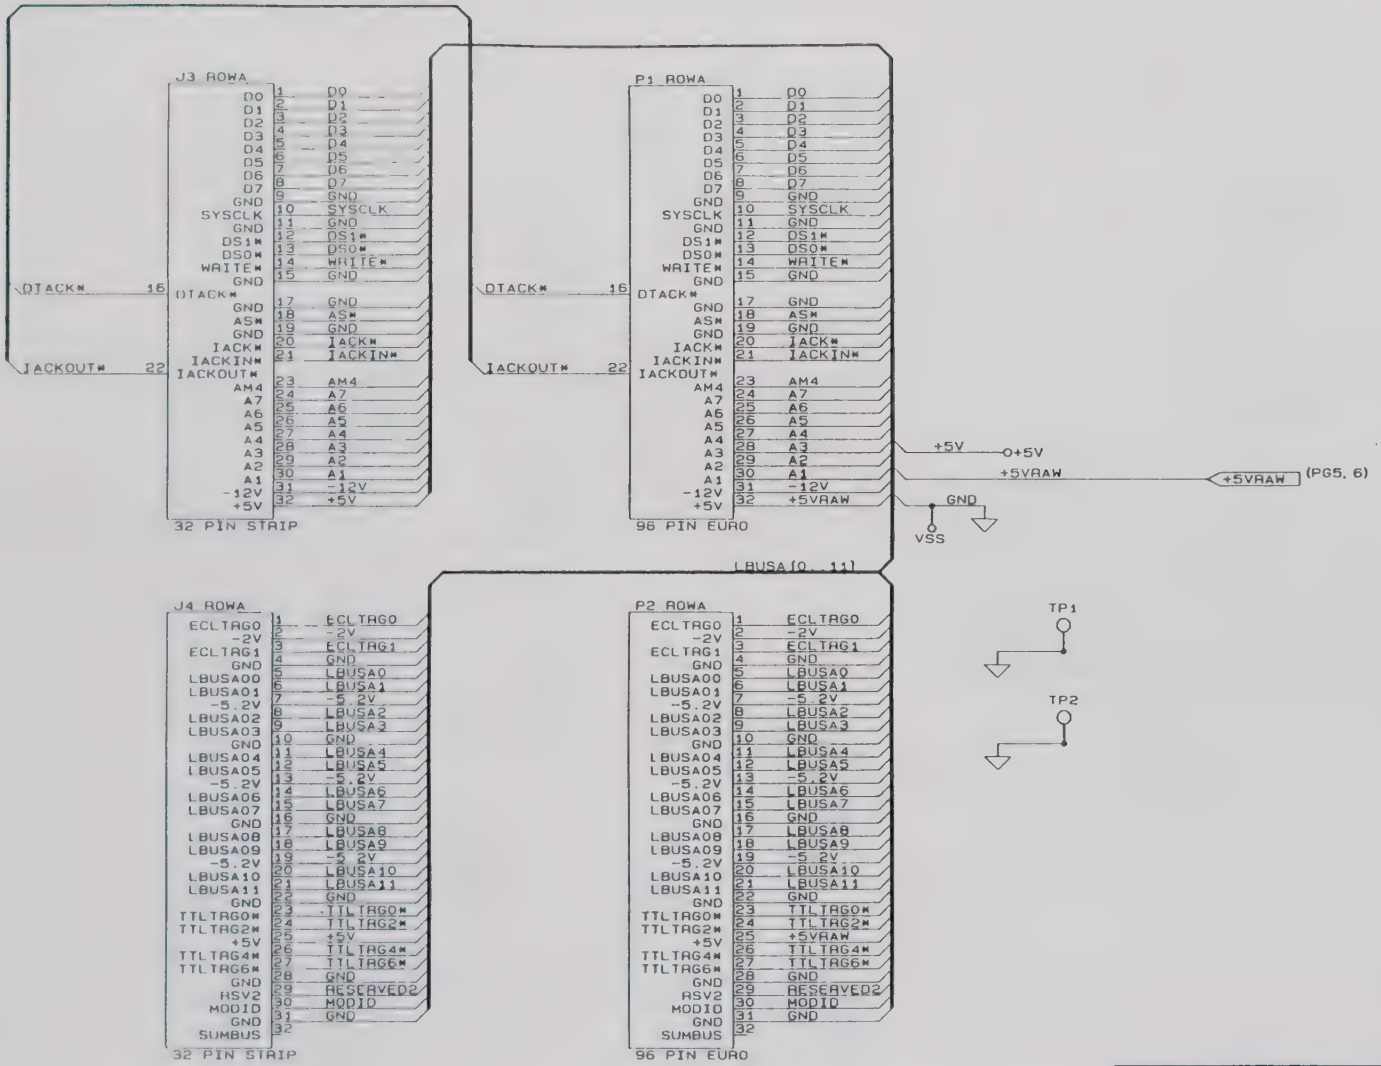

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431908	A
SCALE		SHEET 4 OF 12	

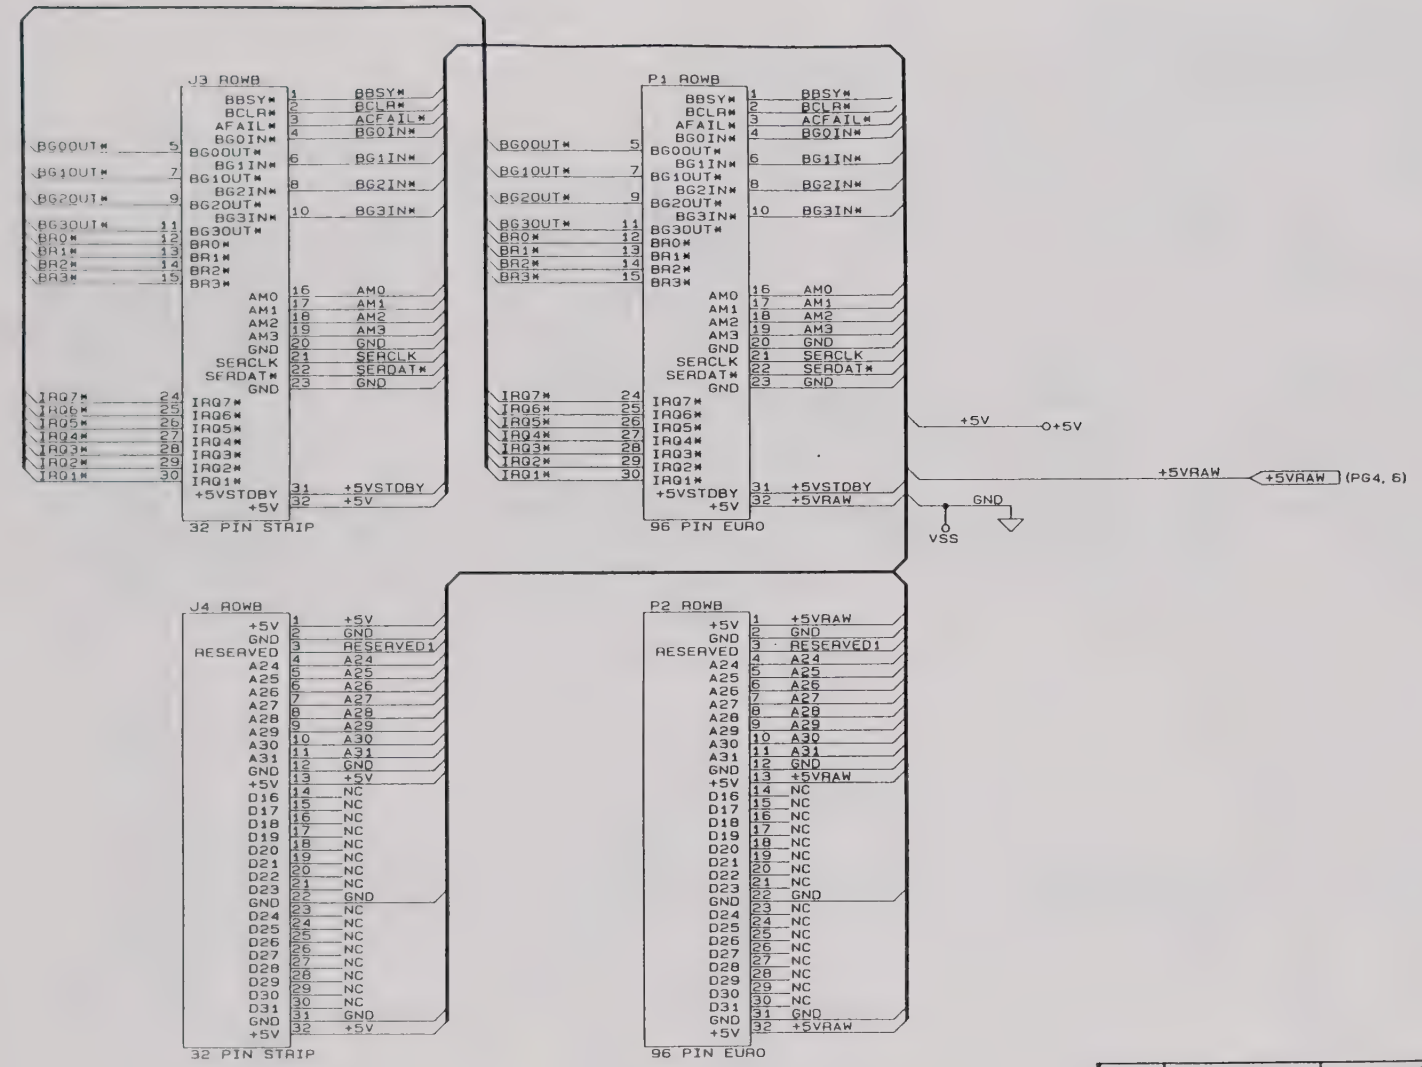

SIZE	CODE IDENT NO	DOCUMENT NO	REV.
B	21793	431908	A
SCALE ————		SHEET 5 OF 12	

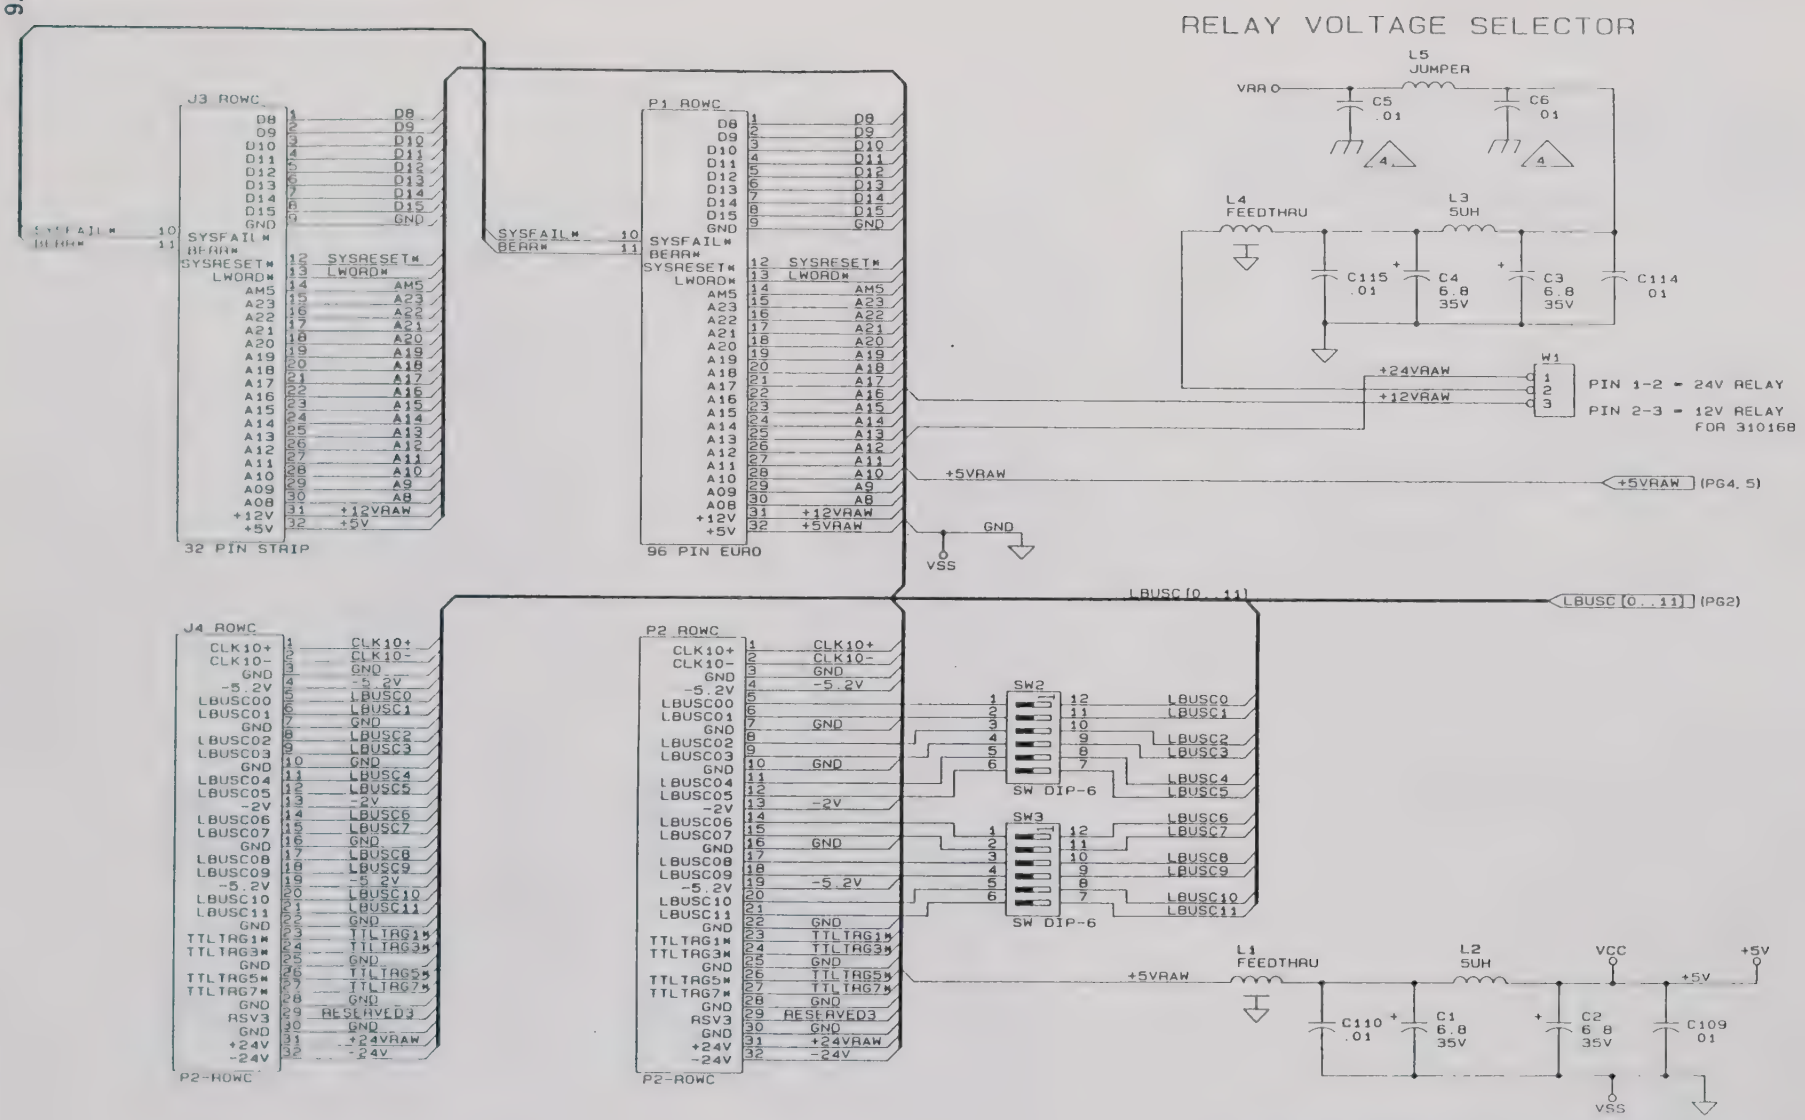

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431908	A
SCALE		SHEET 6 OF 12	

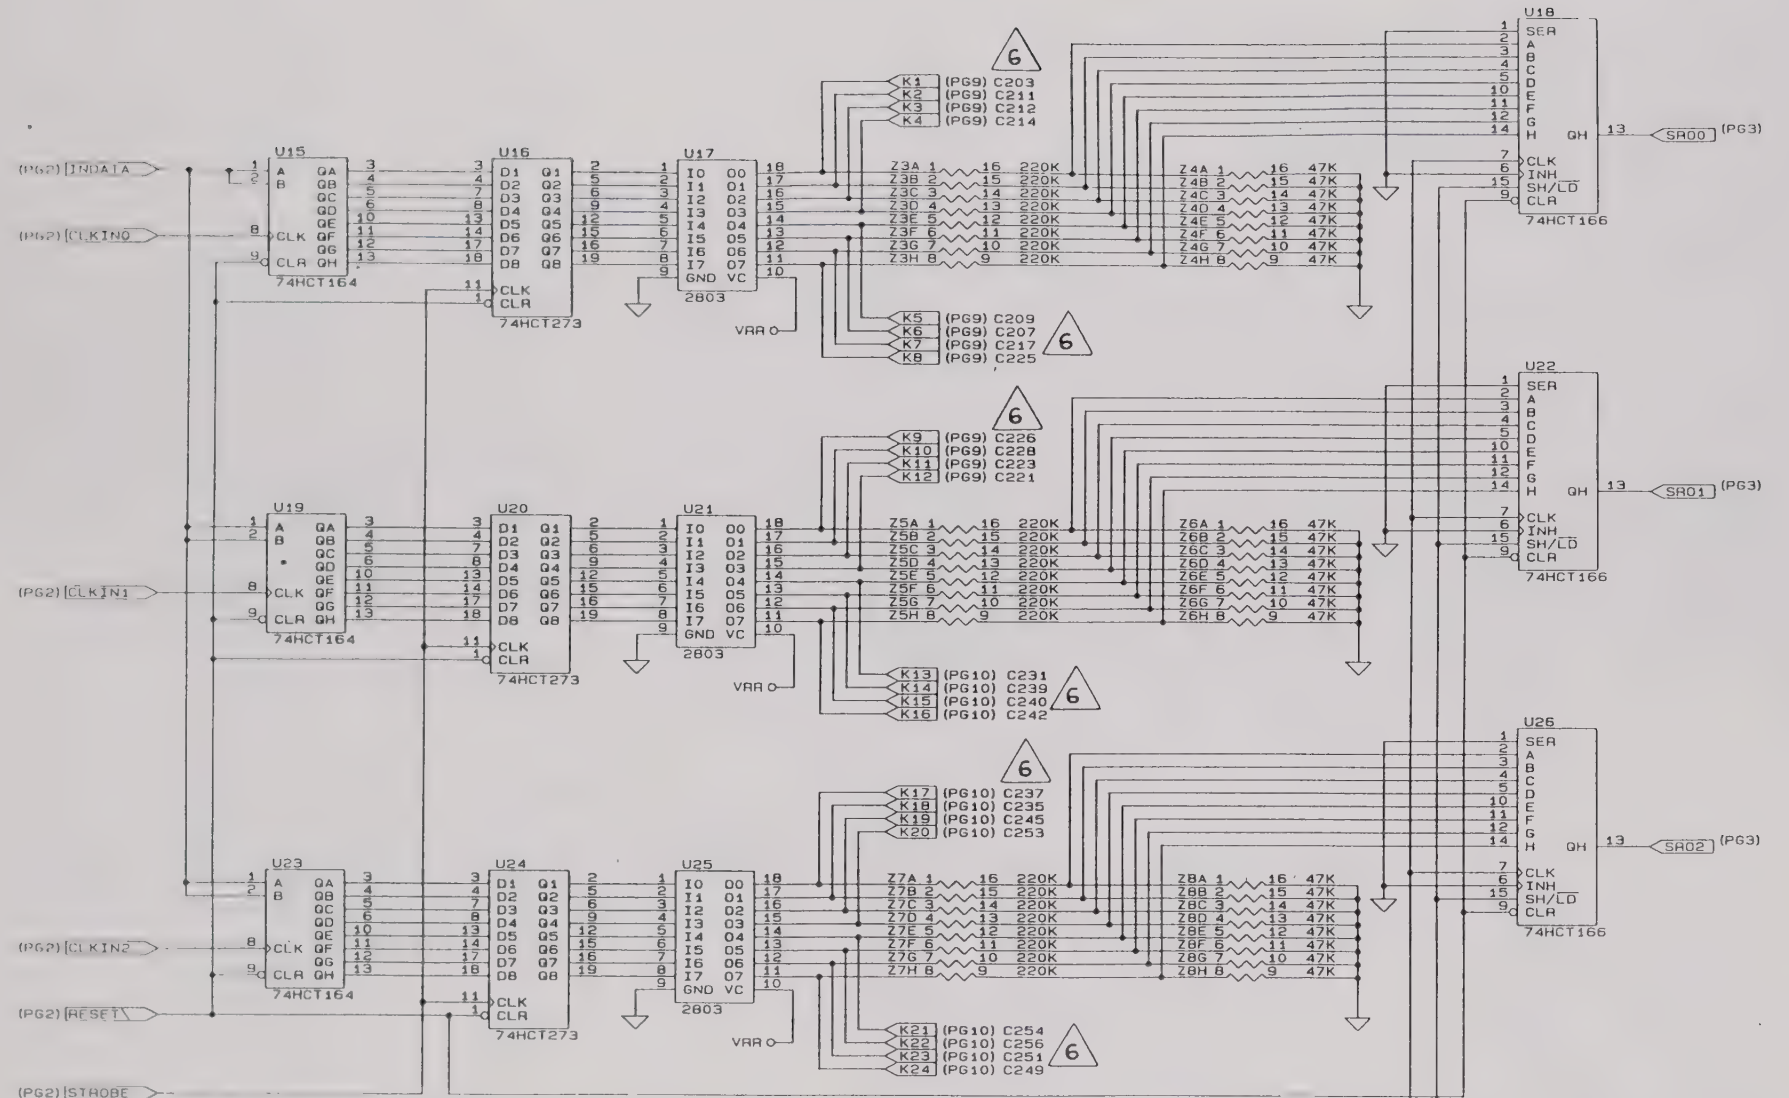

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431908	A
SCALE		SHEET 7 OF 12	

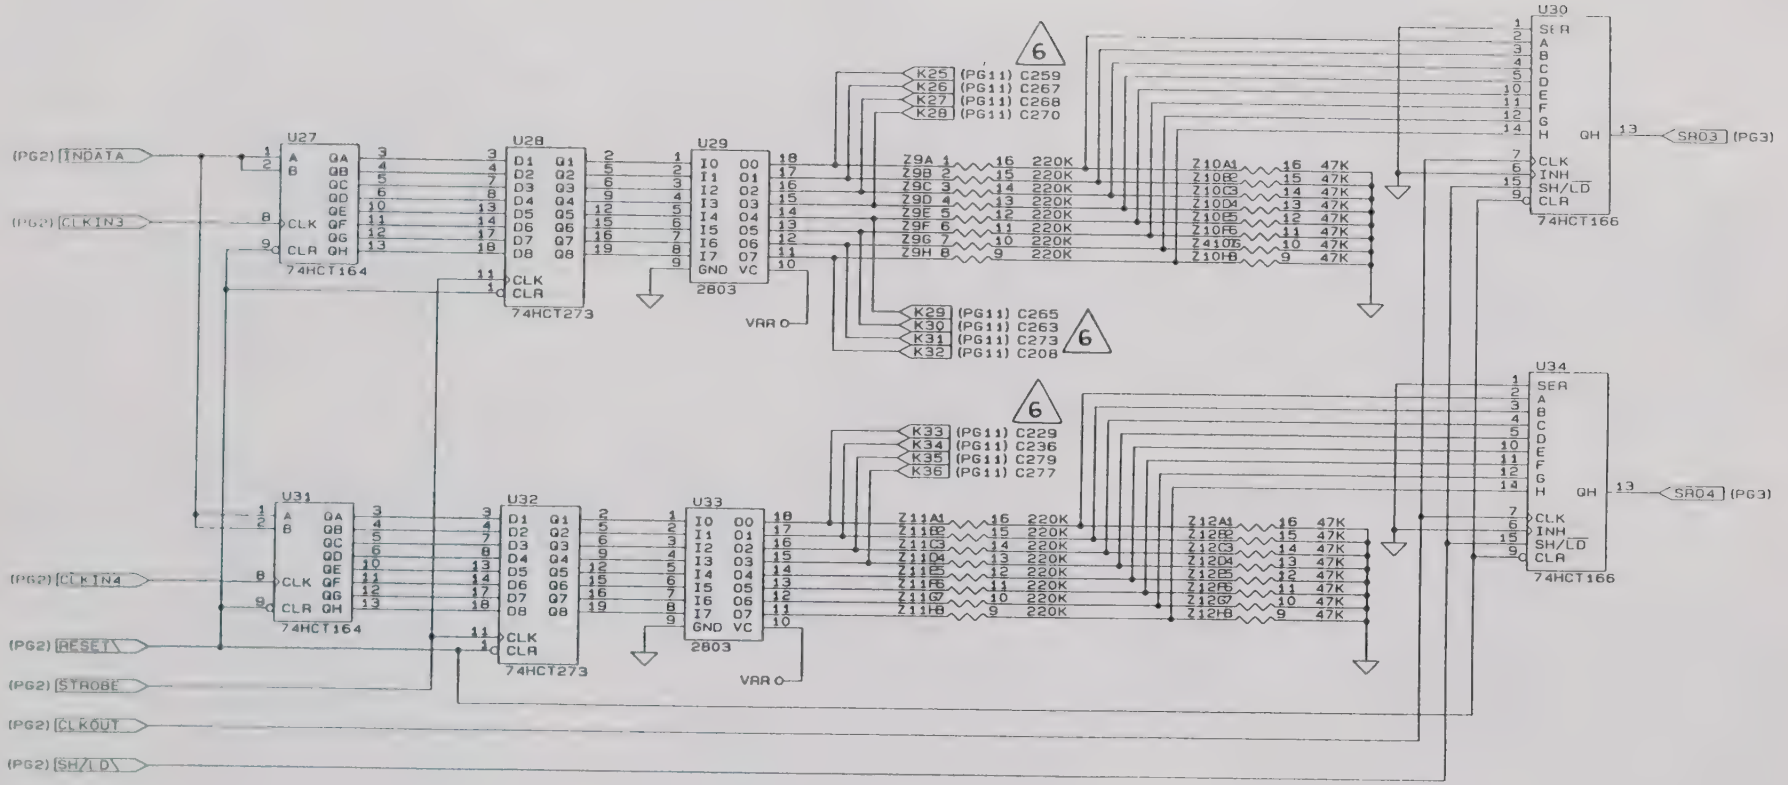

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431908	A
SCALE		SHEET 8 OF 12	

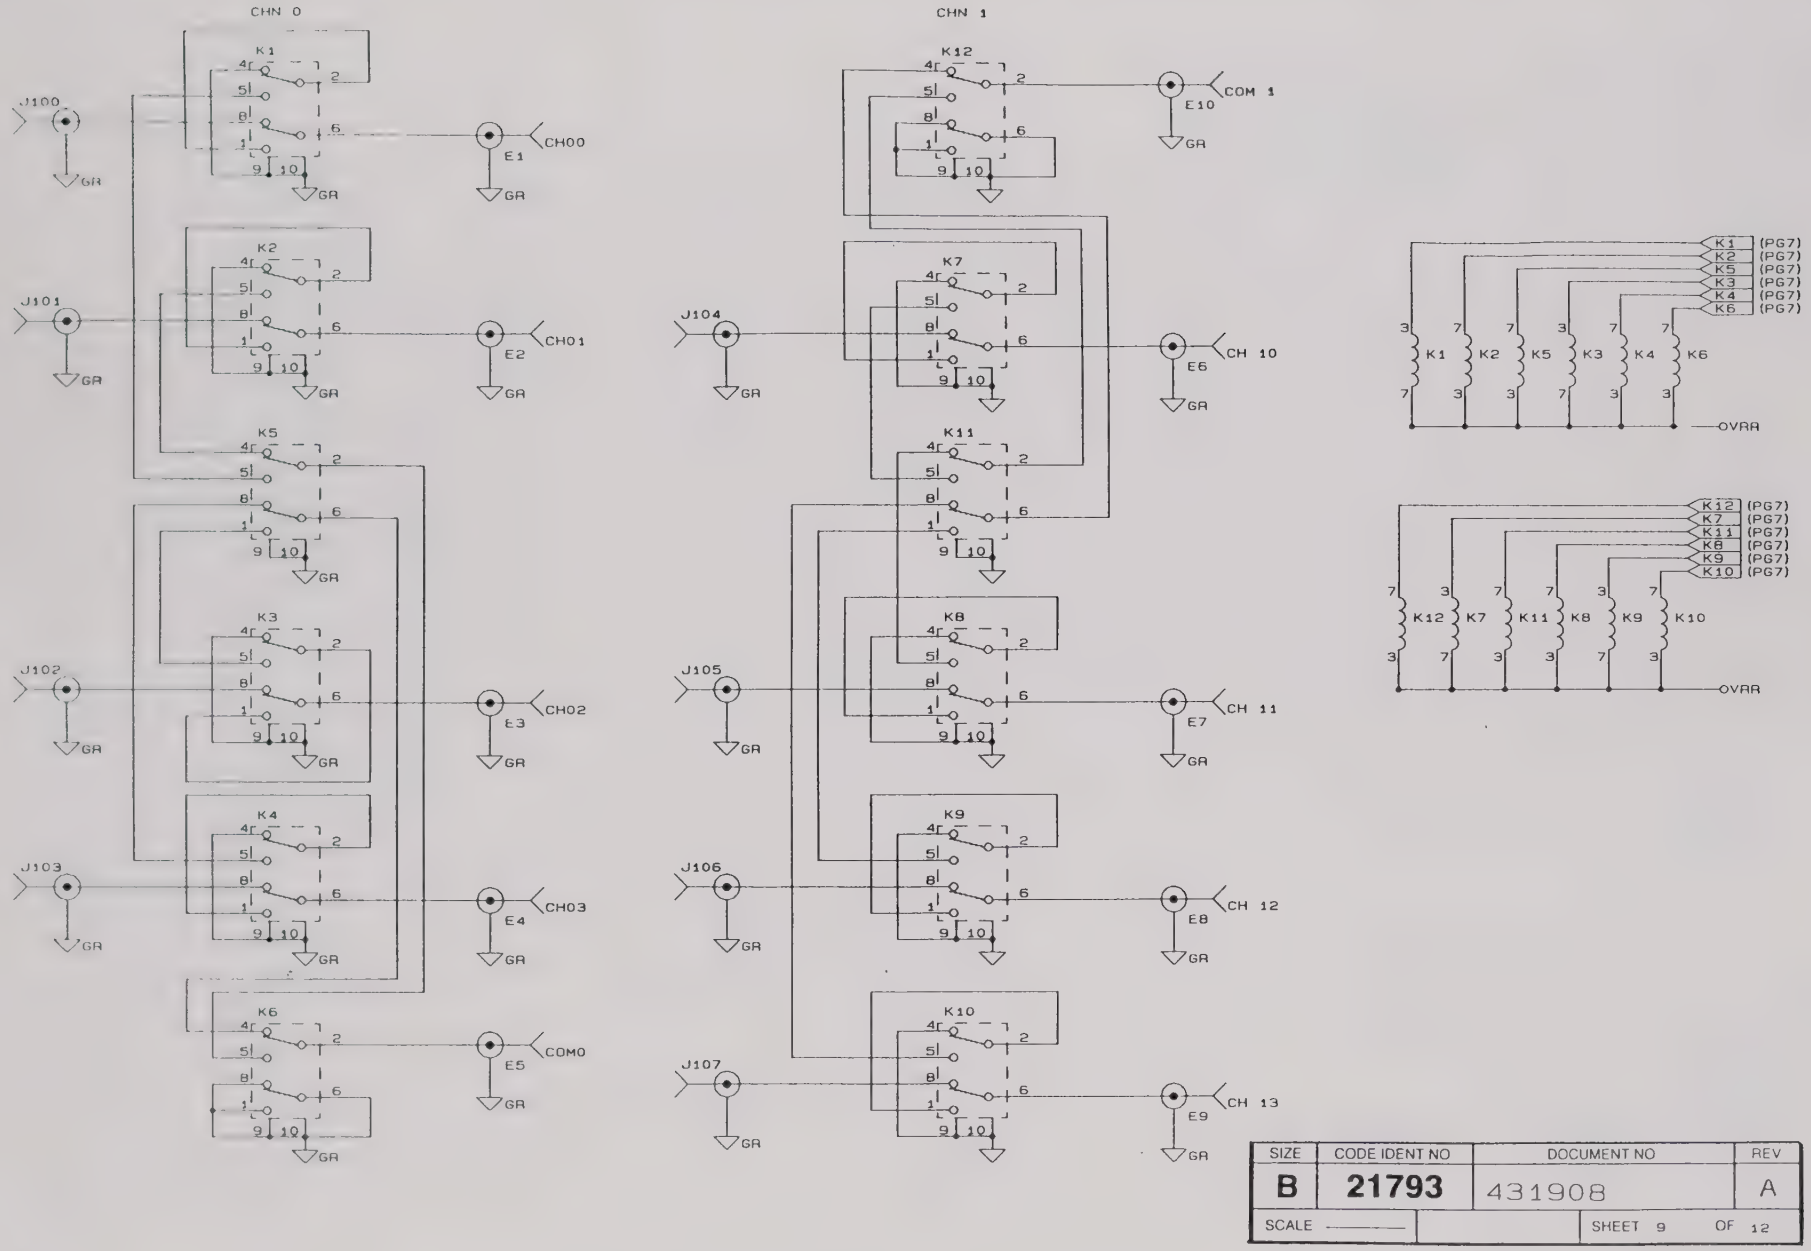

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431908	A
SCALE ———		SHEET 9 OF 12	

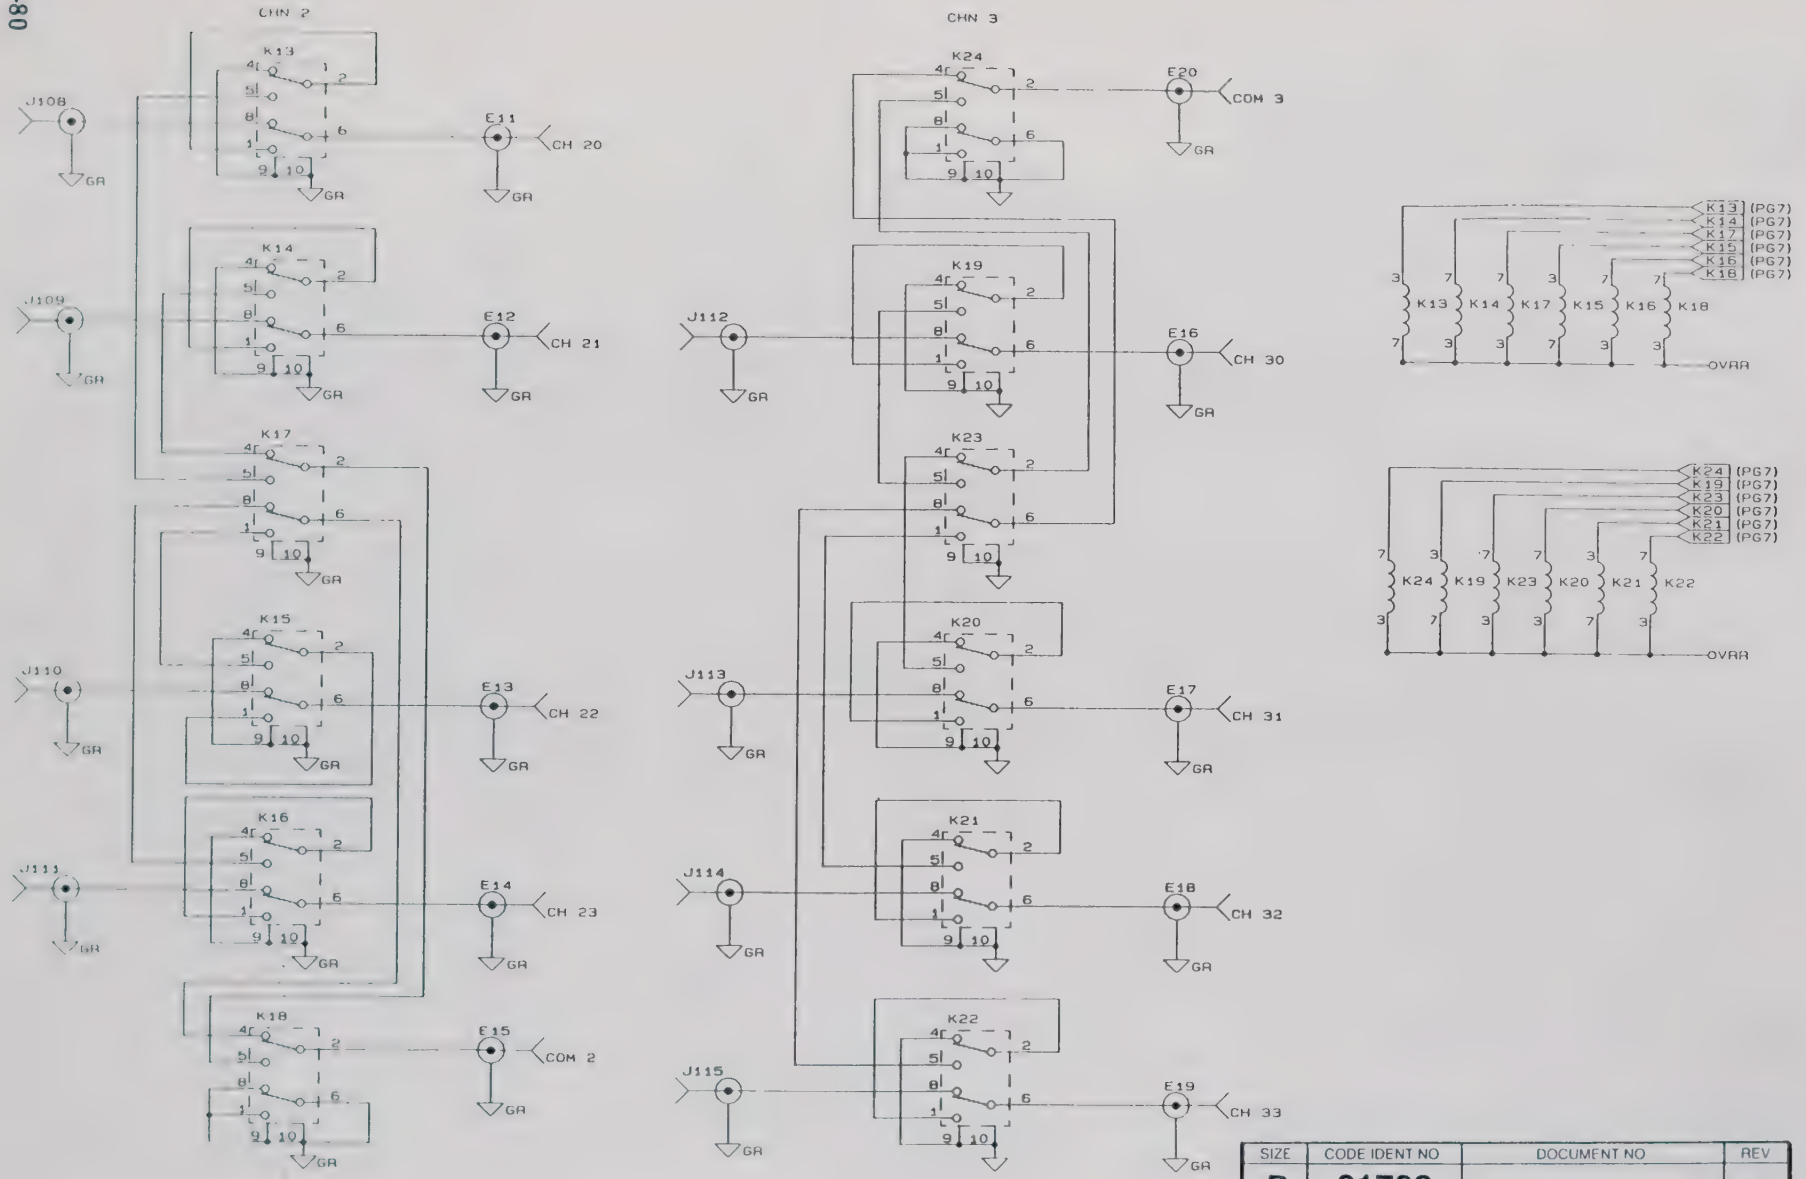

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431908	A
SCALE		SHEET 10 OF 12	

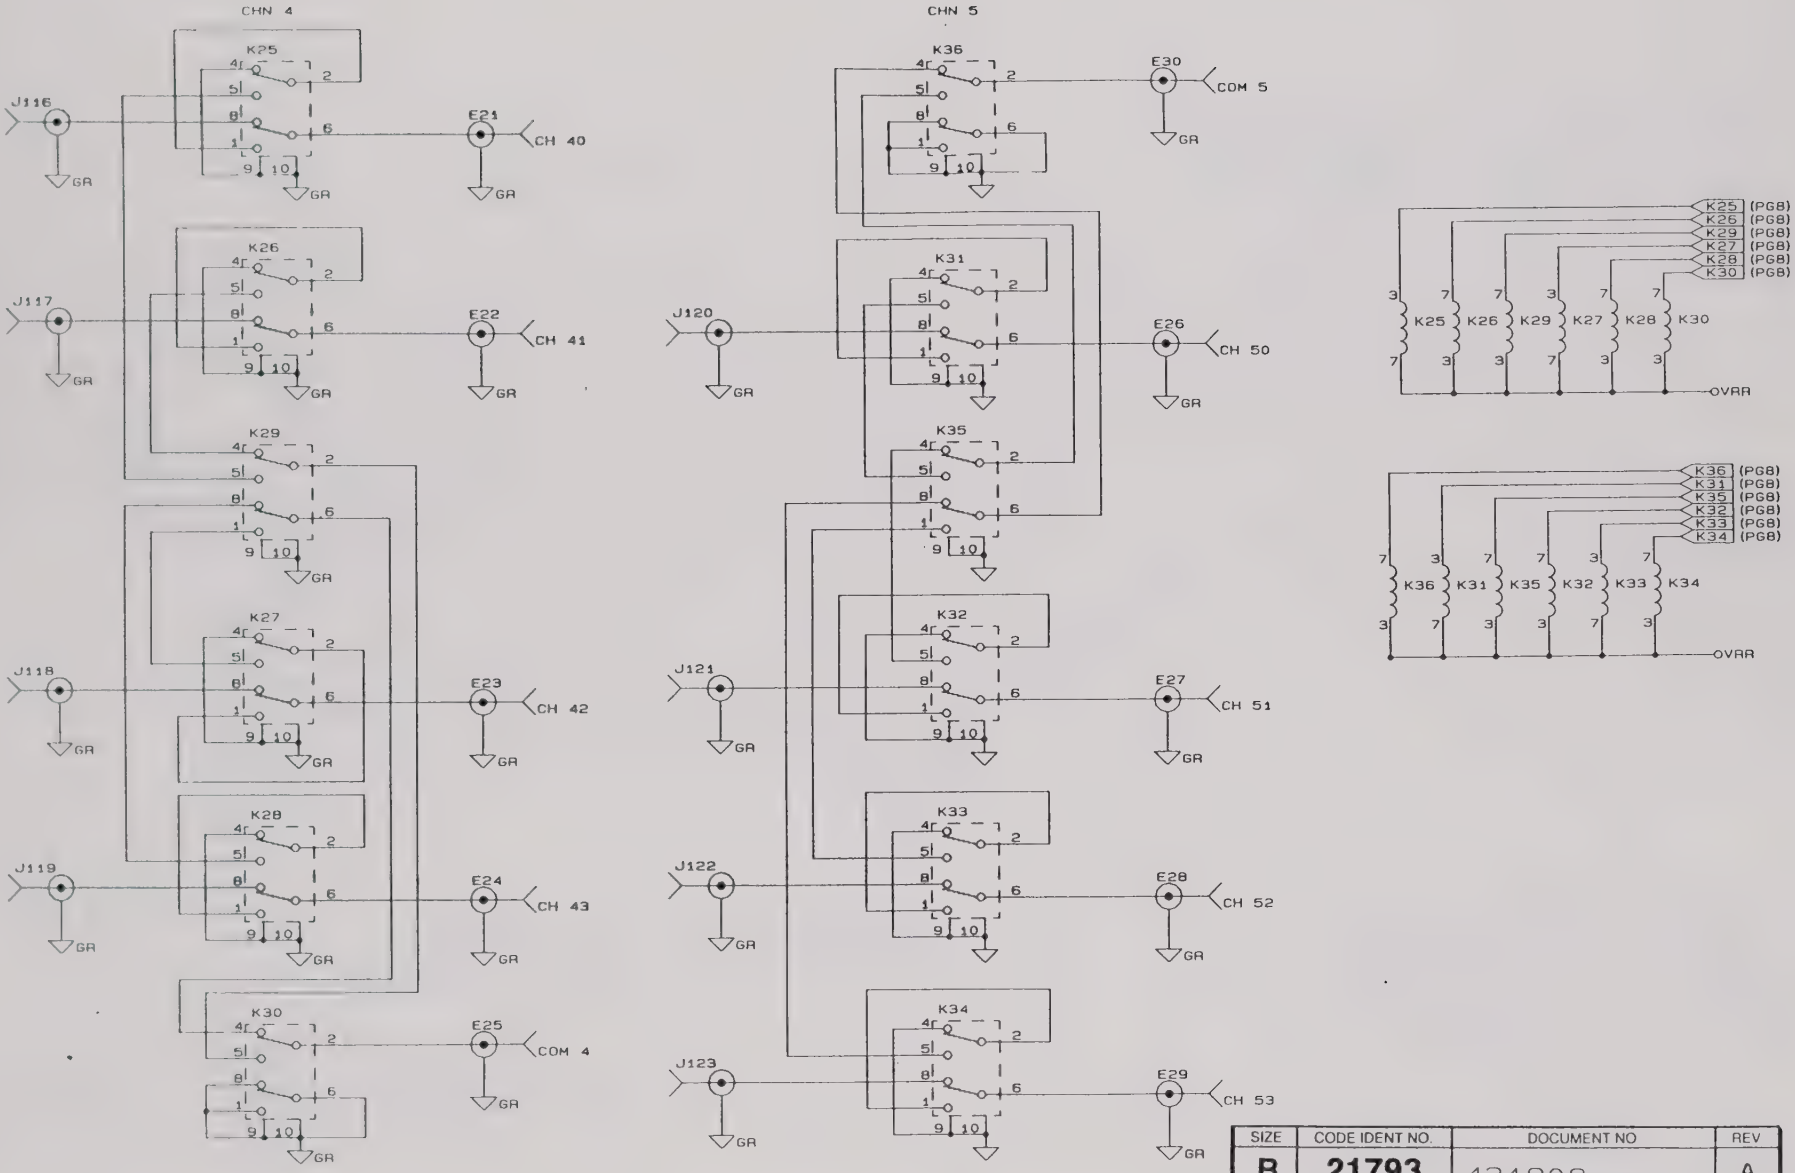

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431908	A
SCALE ———		SHEET 11 OF 12	

DRIVER SIDE OF COIL: CDRV
203, 207, 208, 209, 211, 212, 214, 217, 221, 223, 225, 226,
228, 229, 231, 235, 236, 237, 239, 240, 242, 245, 249,
251, 253, 254, 256, 259, 263, 265, 267, 268,
270, 273, 277, 279

VAR SIDE OF COIL: CVAR
200, 201, 202, 204, 205, 206, 210, 213, 215, 216, 218, 219, 220, 222,
224, 227, 230, 232, 233, 234, 238, 241, 243, 244, 246, 247, 248,
250, 252, 255, 257, 258, 260, 261, 262, 264, 266, 269, 271,
272, 274, 275, 276, 278



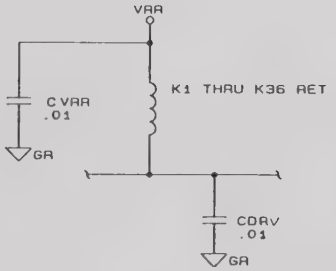

TOTAL NO. OF CAPS 80
C200-C279

SIZE	CODE IDENT NO.	DOCUMENT NO	REV.
B	21793	431908	A
SCALE		SHEET 12 OF 12	

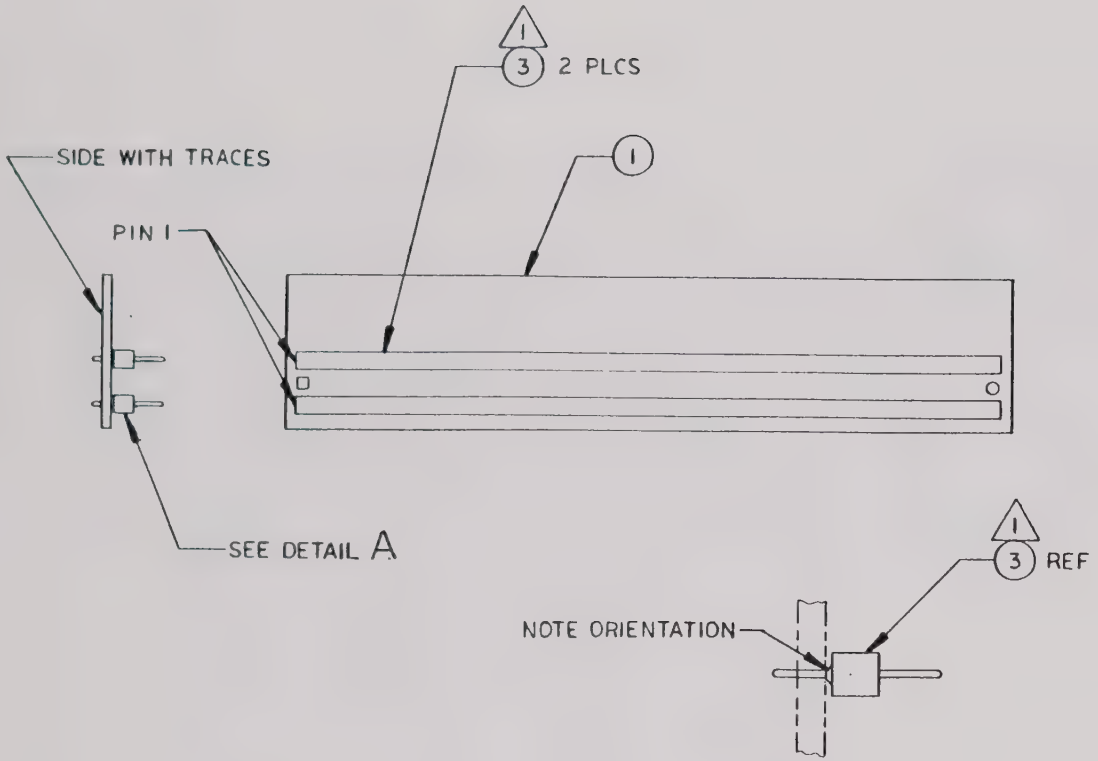

DETAIL A
SCALE 4:1

1 INSTALL ITEM 3 WITH SHORT LEADS IN PCB PERPENDICULAR AND FIRMLY SEATED ON PCB AFTER SOLDERING.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREIN HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

PCB ASSY, L-BUS JUMPER

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	401951	A

SCALE 2:1 SHEET 1 OF 2

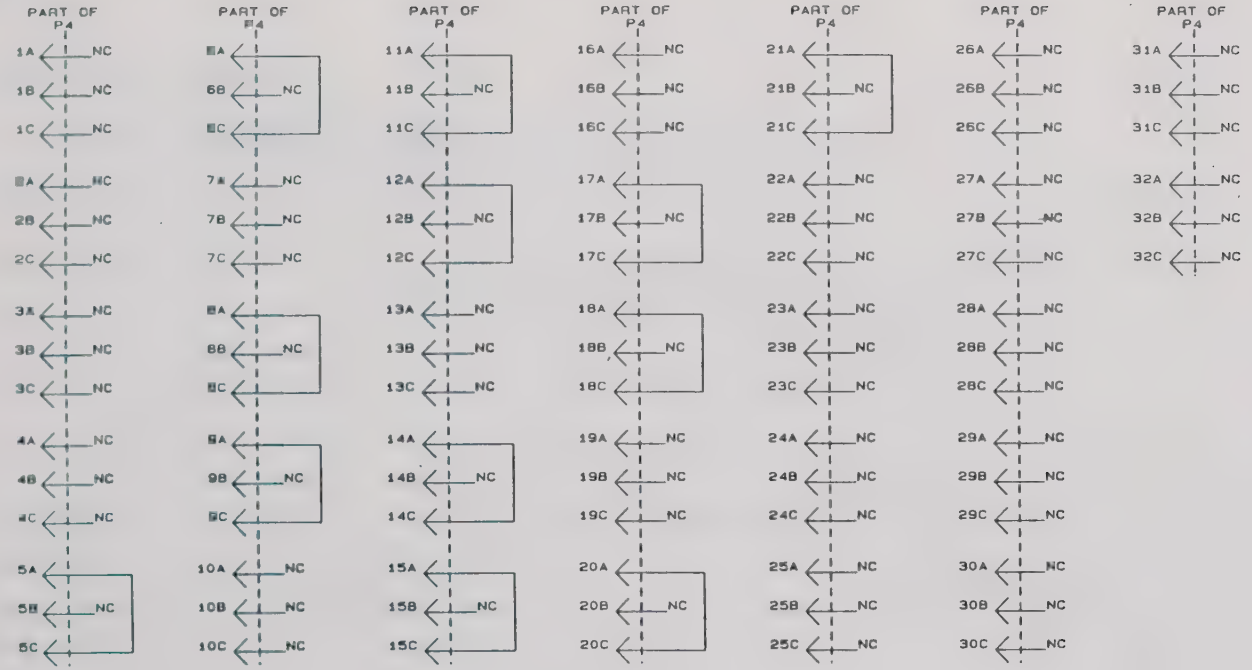

COMPONENT SIDE OF 401951
SCALE: NONE

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

SCHEM., LBUS JUMPER

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	4-31951	A

SCALE ——— SHEET 1 OF 1

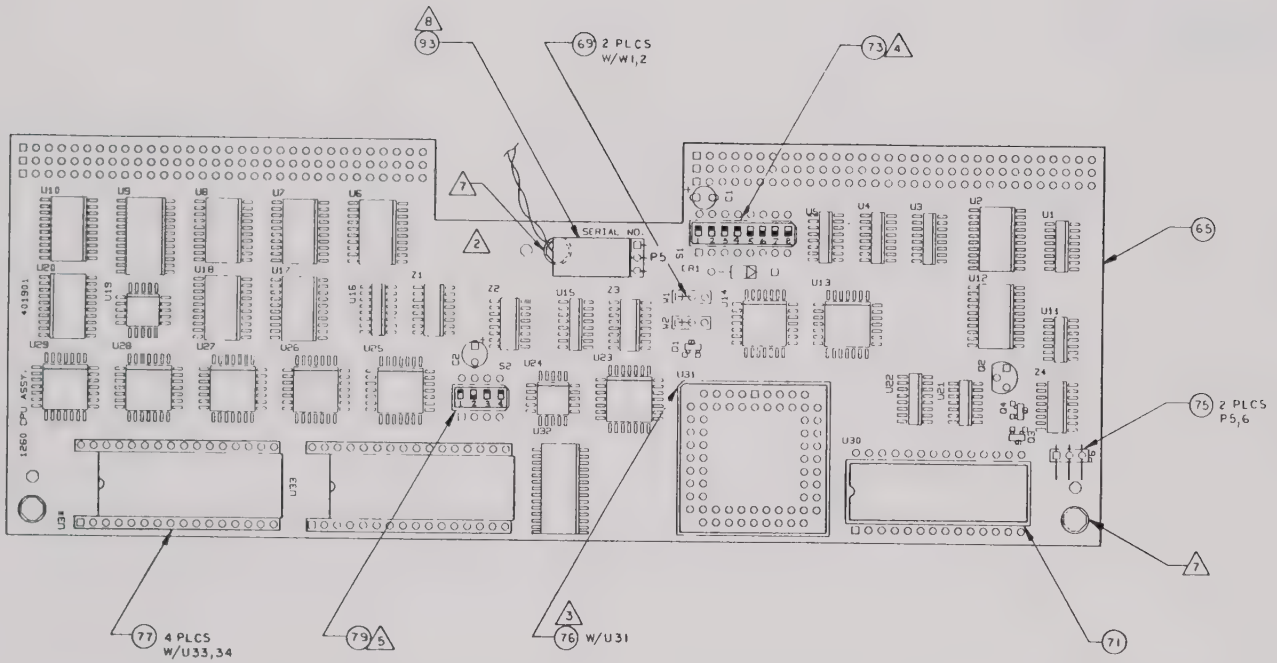

COMPONENT SIDE

8. INSTALL CABLE ASSY (ITEM 93) INTO P5 (ITEM 75).
7. INSTALL STANDOFF (ITEM 92) BEFORE P5,6 (ITEM 75).
6. REFERENCE DESIGNATORS RANGE FROM 1 TO 99 FOR THE COMPONENT SIDE AND FROM 100 TO 199 FOR THE SOLDER SIDE OF THE PCB.

5. ITEM 79, S2, SWITCHES 1,3,4 ARE "ON" POSITION, SWITCH 2 IS "OFF" POSITION.
4. ITEM 73, S1, SWITCHES 1,2,3,4 ARE "ON" POSITION, SWITCHES 5,6,7,8 ARE "OFF" POSITION.
3. NOTE POSITION OF ANGLE ON SOCKET OF U31.
2. INK STAMP SERIAL NUMBER ON COMPONENT SIDE IN INDICATED AREA.
1. REFERENCE SCHEMATIC 431901.

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.			
4 GOODYEAR, IRVINE, CALIFORNIA 92714			
DOCUMENT TITLE			
PCB ASSY, 1260 MASTER CPU			
SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	401901	A
SCALE 2:1		SHEET 1 OF 4	

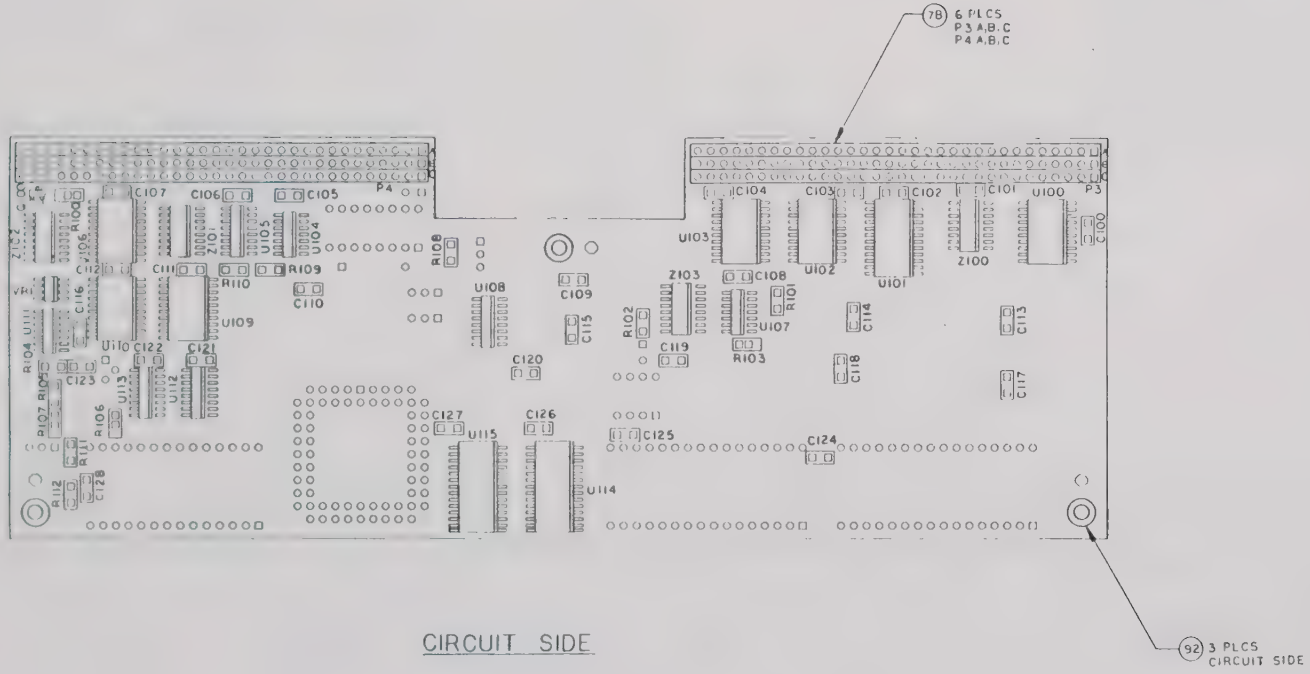

CIRCUIT SIDE

SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	401901	A
SCALE 2 1		SHEET 2 OF 4	

REF DES	IC TYPE	+5V PIN NO.	GND PIN NO.
U114, 115	62256	28	14
U108	74LS148	16	8
U107	74S38	14	7
U105	26LS32	16	8
U104	74LS74	14	7
U34	231167 (27512)	30, 32	16
U33	231166 (27512)	30, 32	16
U32	58C65	28	14
U31	MC68000CP-8	14, 52	16, 17, 56, 57
U30	6840P	14	1
U29	231155 (20RA10)	28	15
U28	231156 (20RA10)	28	15
U27	231157 (22V10)	28	14
U26	231158 (22V10)	28	14
U25	231159 (22V10)	28	14
U24	231160 (16L8)	20	10
U23	231161 (22V10)	28	14

IC POWER CONNECTIONS

REF. DES.	IC TYPE	+5V PIN NO.	GND PIN NO.
U22, 112	74HCT166	16	8
U21	74HC32	14	7
U20, 106, 109	74LS374	20	10
U19	231162 (16L8)	20	10
U15	74F109	16	8
U14	231163 (22V10)	28	14
U13	231164 (22V10)	28	14
U12	74HCT299	20	10
U11, 111	LM339	3	12
U10, 100	74ALS645A-1	20	10
U9, 101	74LS652	24	12
U8, 17, 102, 110	74LS244	20	10
U7, 18, 103	74F521	20	10
U4, 5	26LS31	16	8
U3	74LS151	16	8
U2, 6	74LS641-1	20	10
U1, 16, 113	74LS138	16	8

IC POWER CONNECTIONS

HIGHEST REF. DES.
Z4, 103
W2
VR1
S2
U34, 115
R112
Q4, 100
P6
CR1
C2, 128

4 REFERENCE DESIGNATORS RANGE FROM 1 TO 99 FOR THE COMPONENT SIDE AND FROM 100 TO 199 FOR THE SOLDER SIDE OF THE PCB.

3 RESISTOR VALUES ARE IN OHMS.

2 CAPACITOR VALUES ARE IN MICROFARADS, +/-20%, 50V UNLESS OTHERWISE SPECIFIED.

1 RESISTOR NETWORKS ARE IN OHMS, +/-2%.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL-DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

SCHEM.,1260 MASTER

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431901	A

SCALE ——— SHEET 1 OF 13

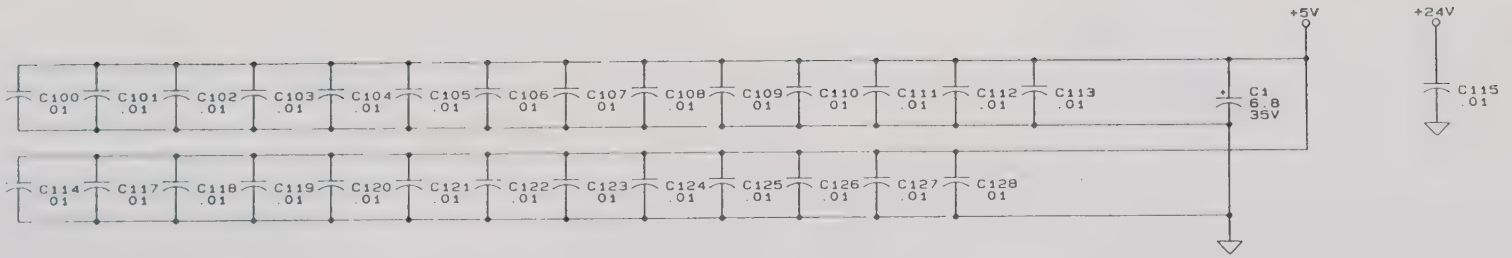

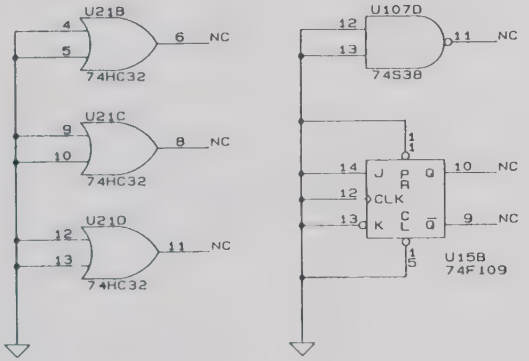

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431901	A
SCALE		SHEET 2 OF 13	

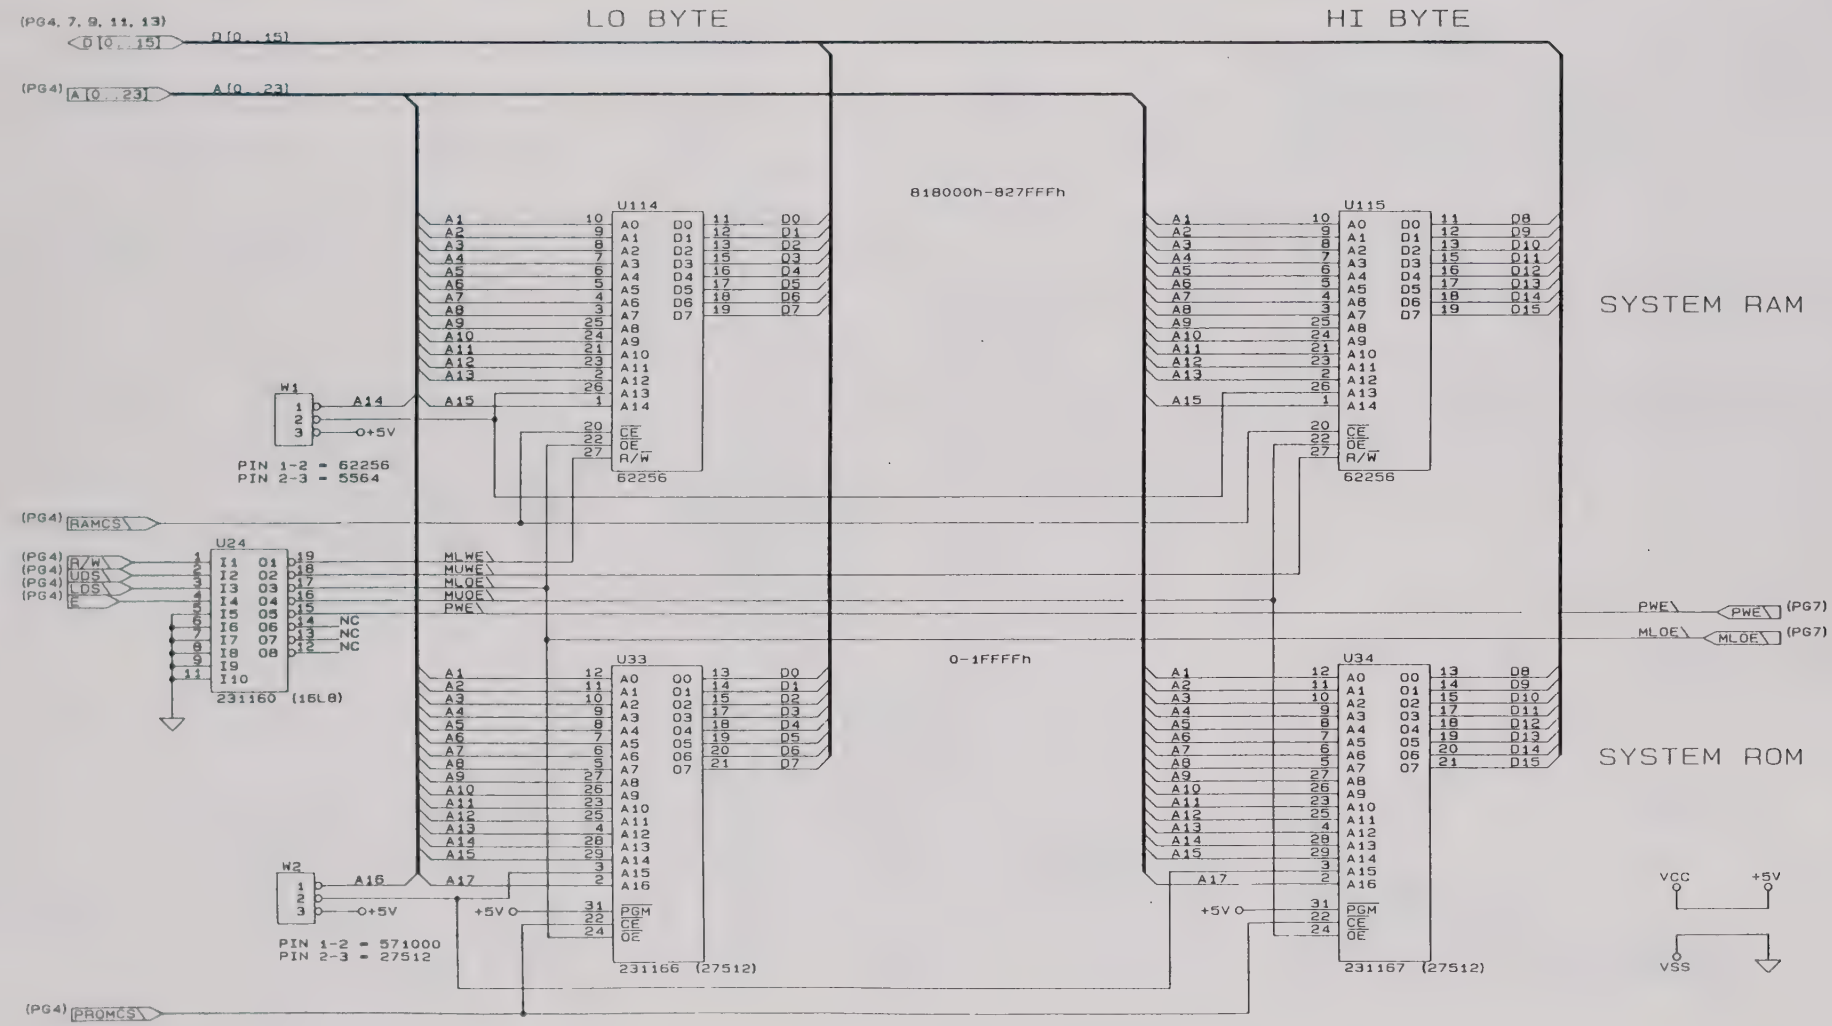

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431901	A
SCALE		SHEET 3 OF 13	

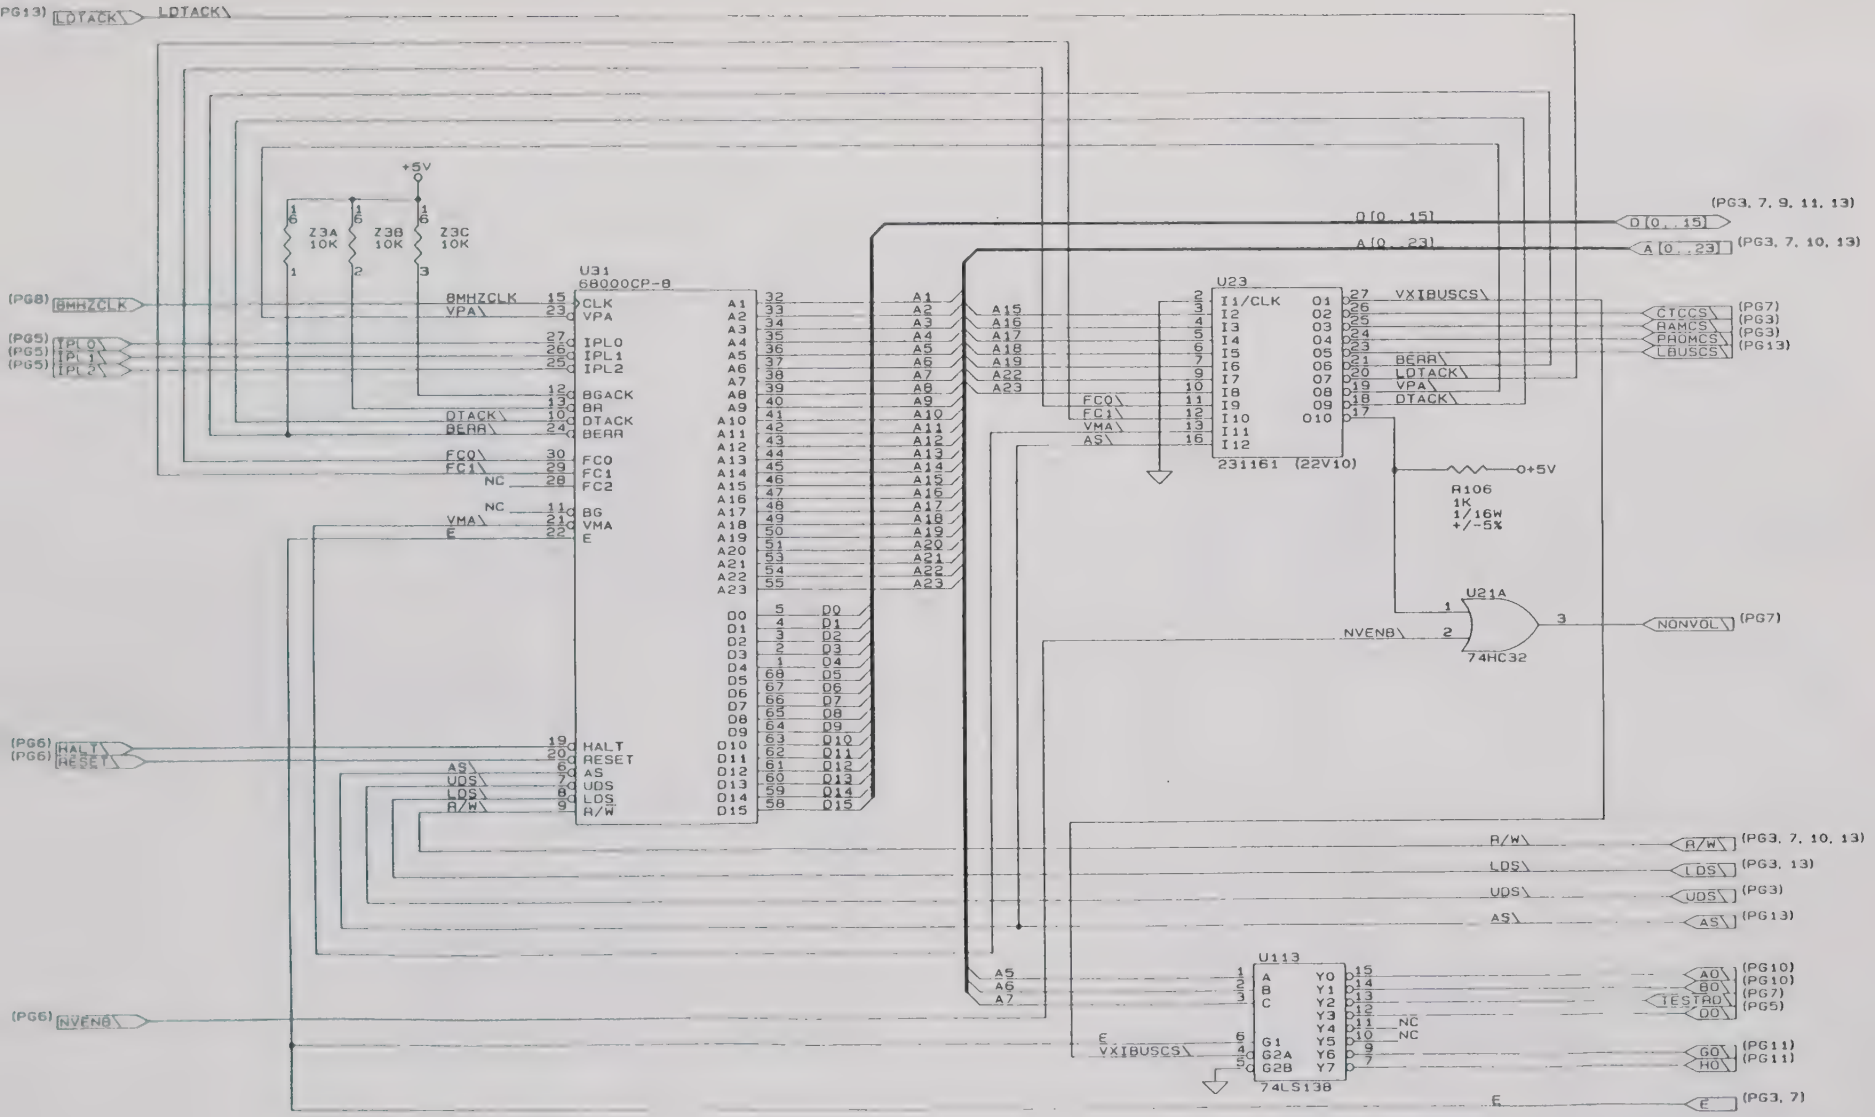

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431901	A
SCALE		SHEET 4 OF 13	

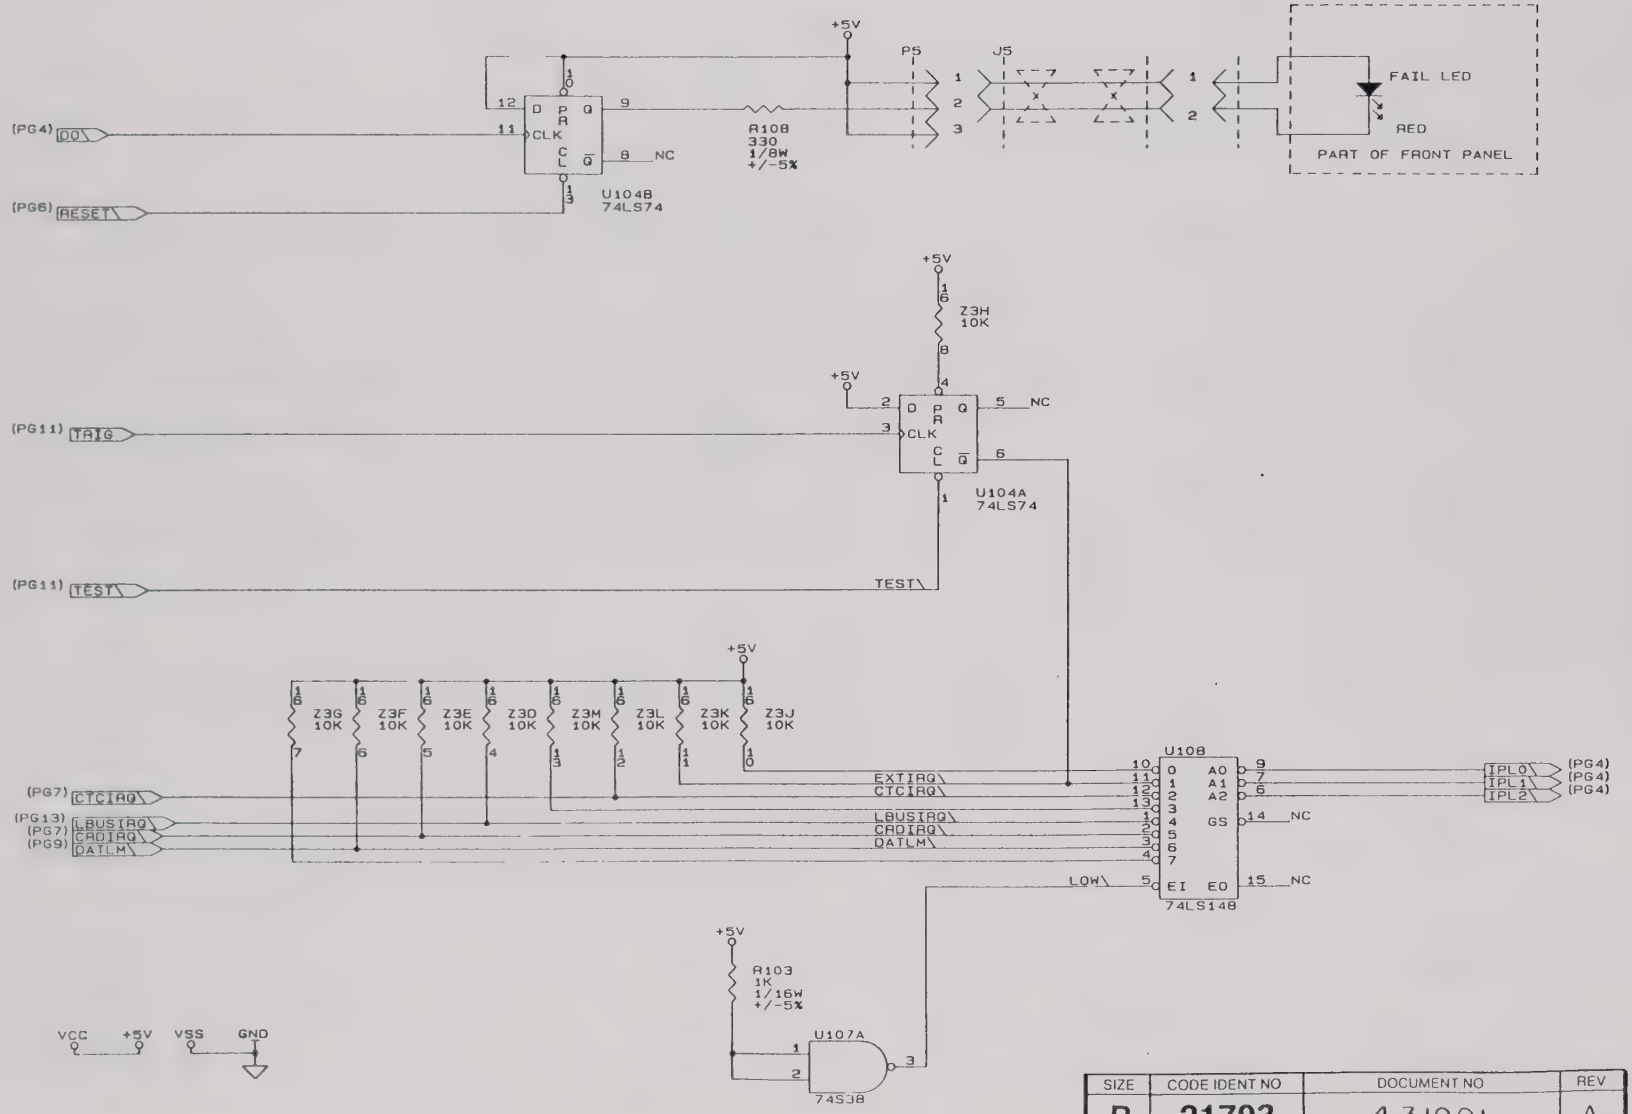

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431901	A
SCALE		SHEET 5 OF 13	

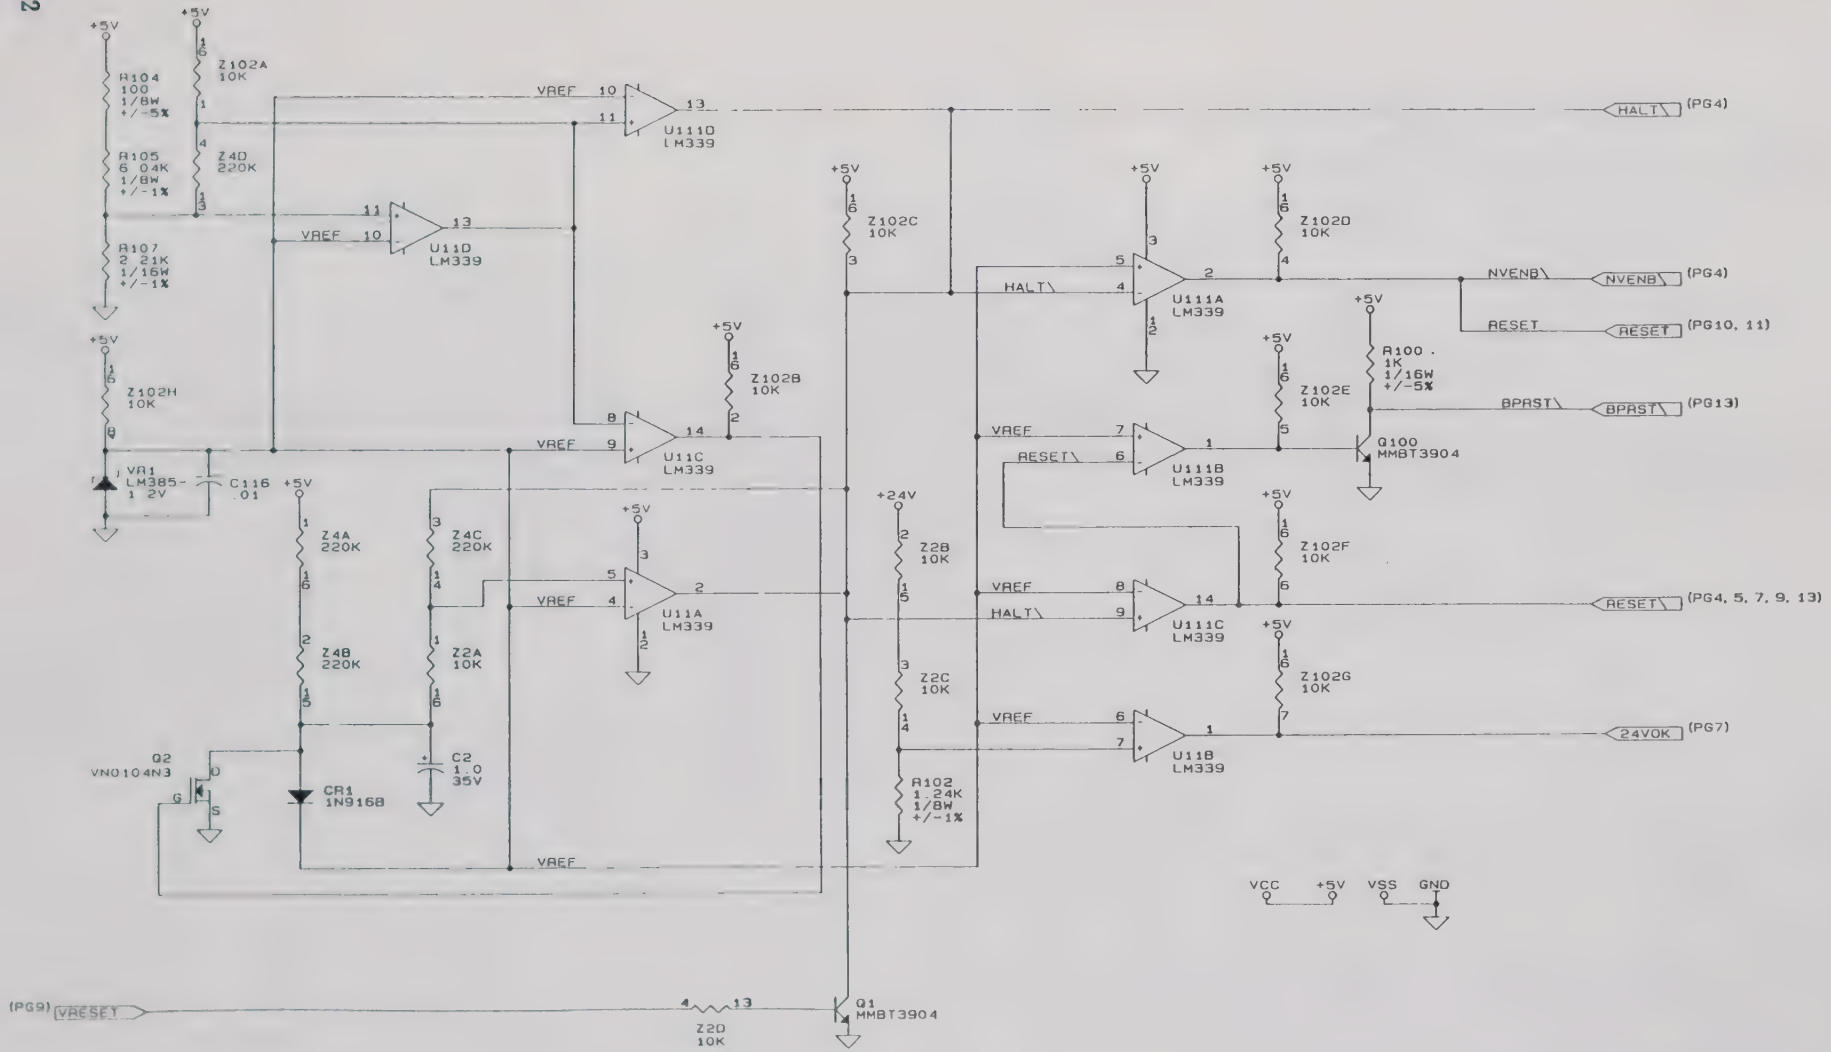

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431901	A
SCALE		SHEET 6 OF 13	

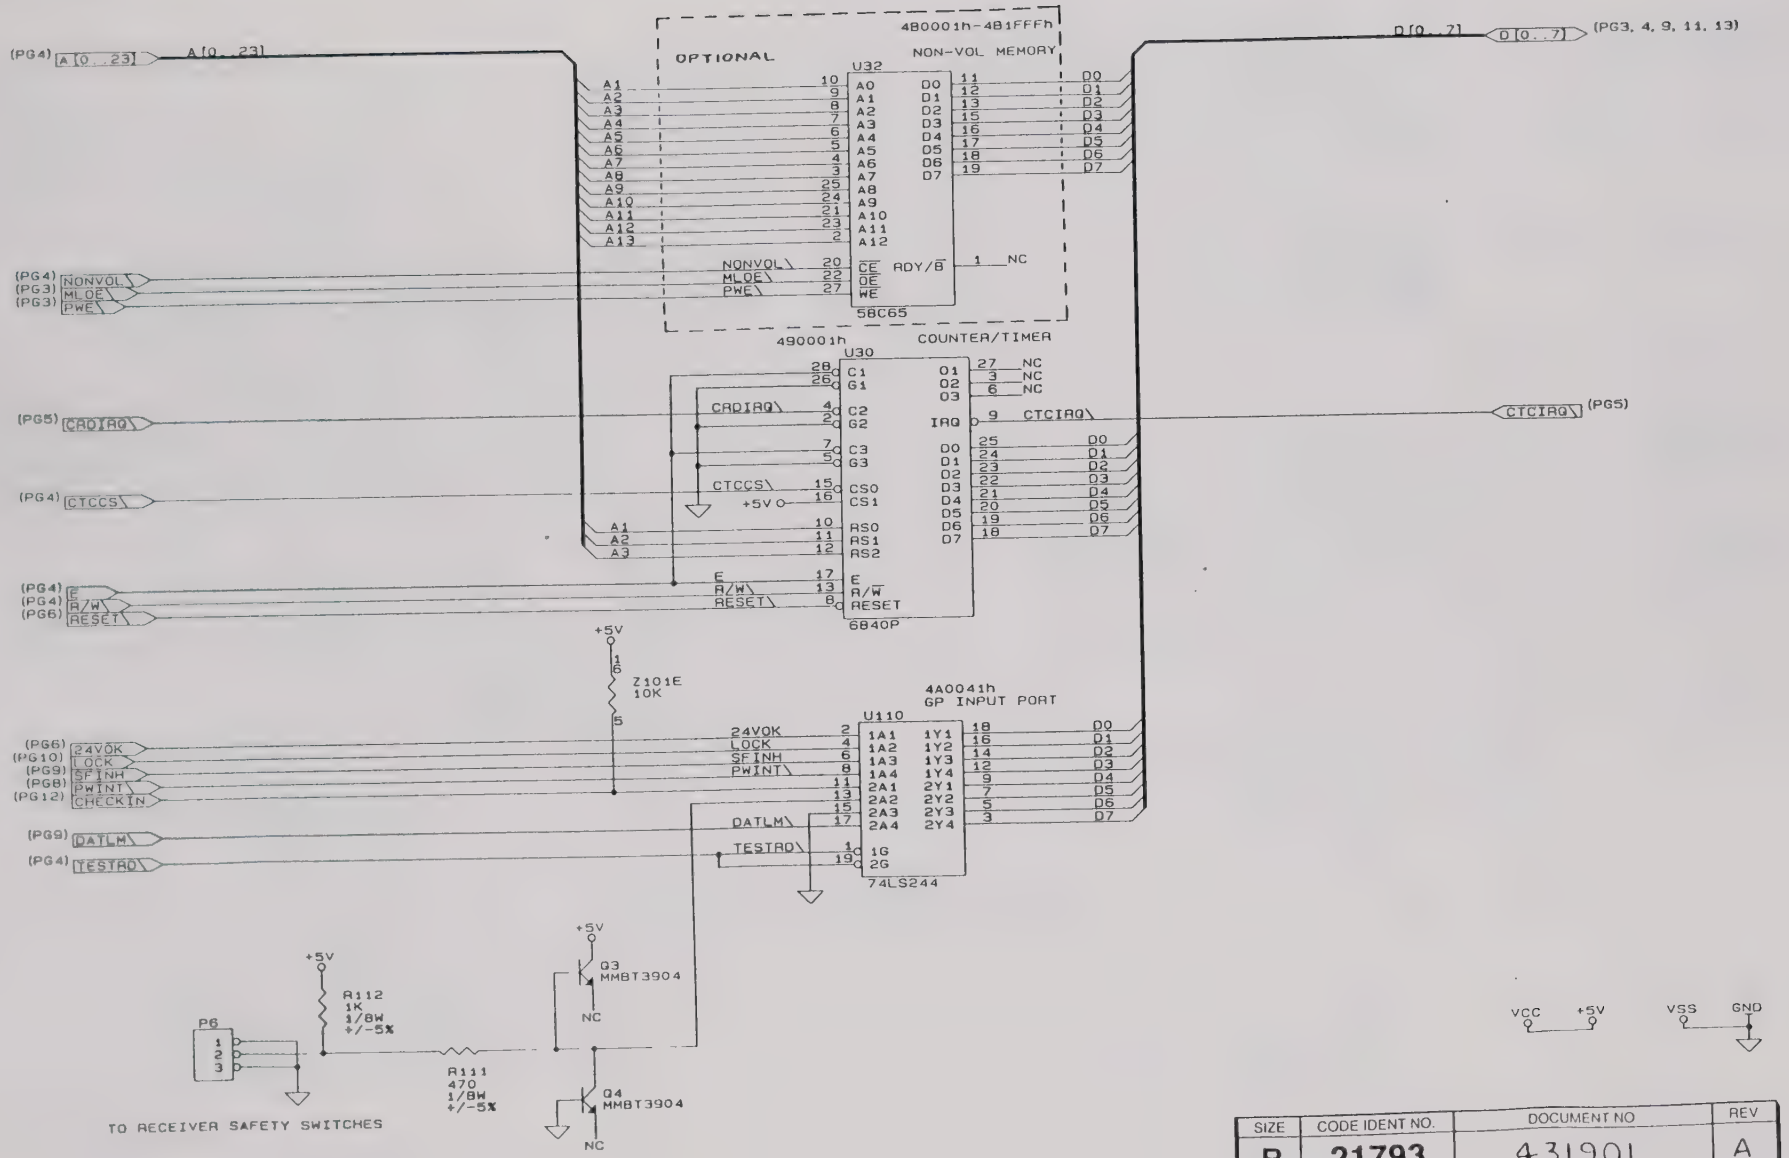

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431901	A
SCALE		SHEET 7 OF 13	

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431901	A
SCALE		SHEET 8 OF 13	

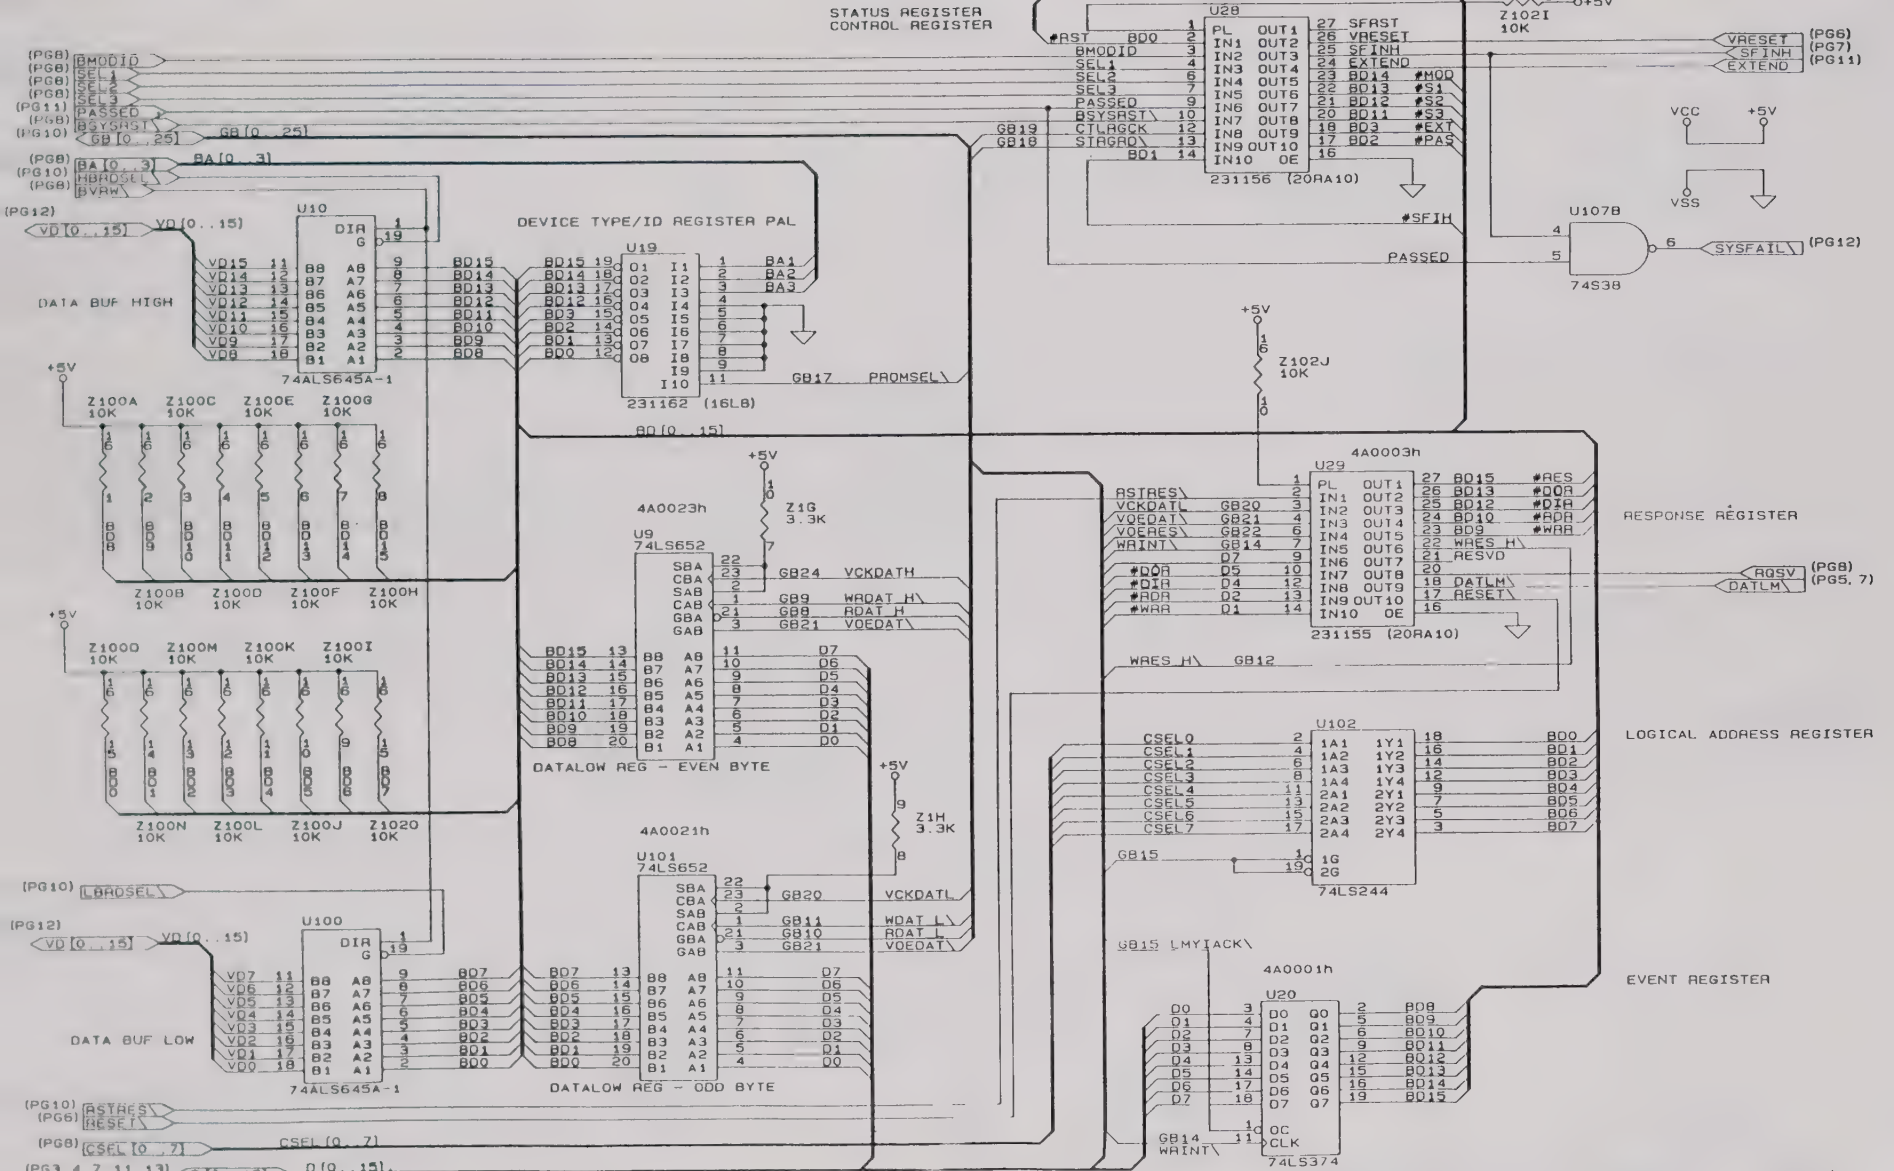

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431901	A
SCALE		SHEET 9 OF 13	

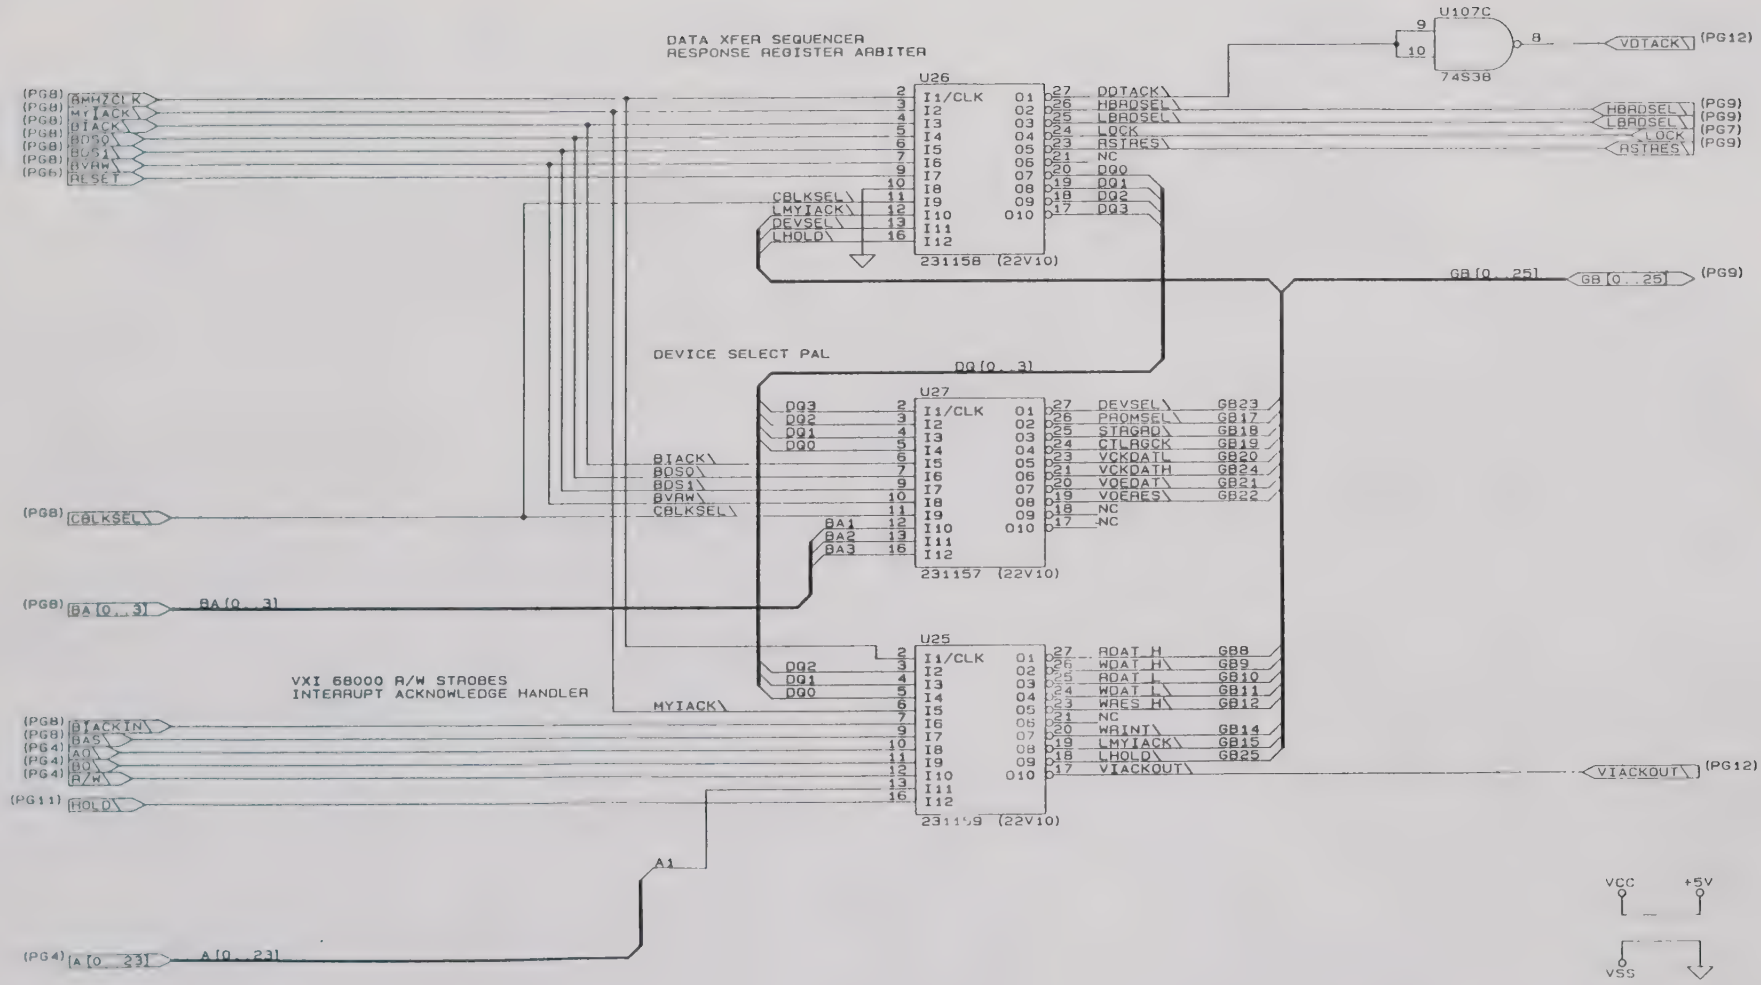

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431901	A
SCALE		SHEET 10 OF 13	

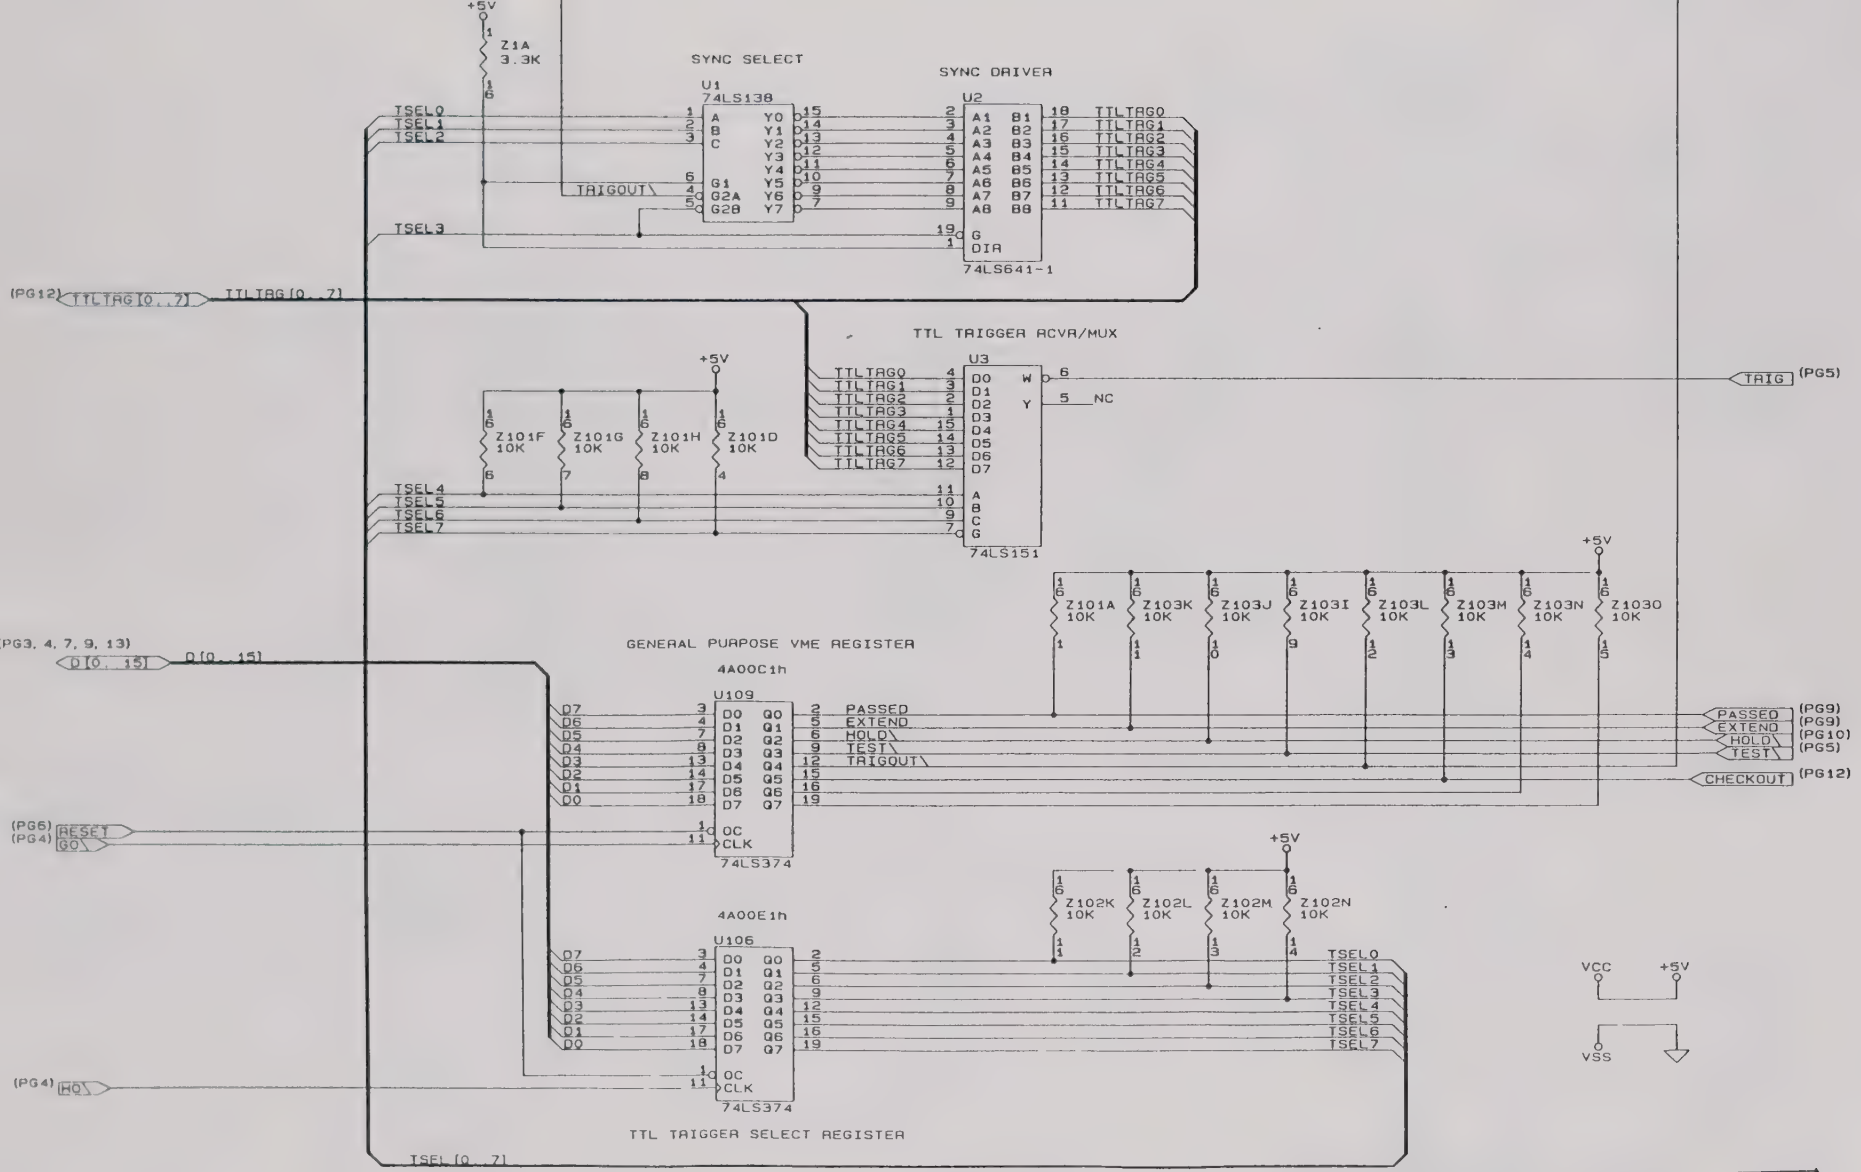

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431901	A
SCALE		SHEET 11 OF 13	

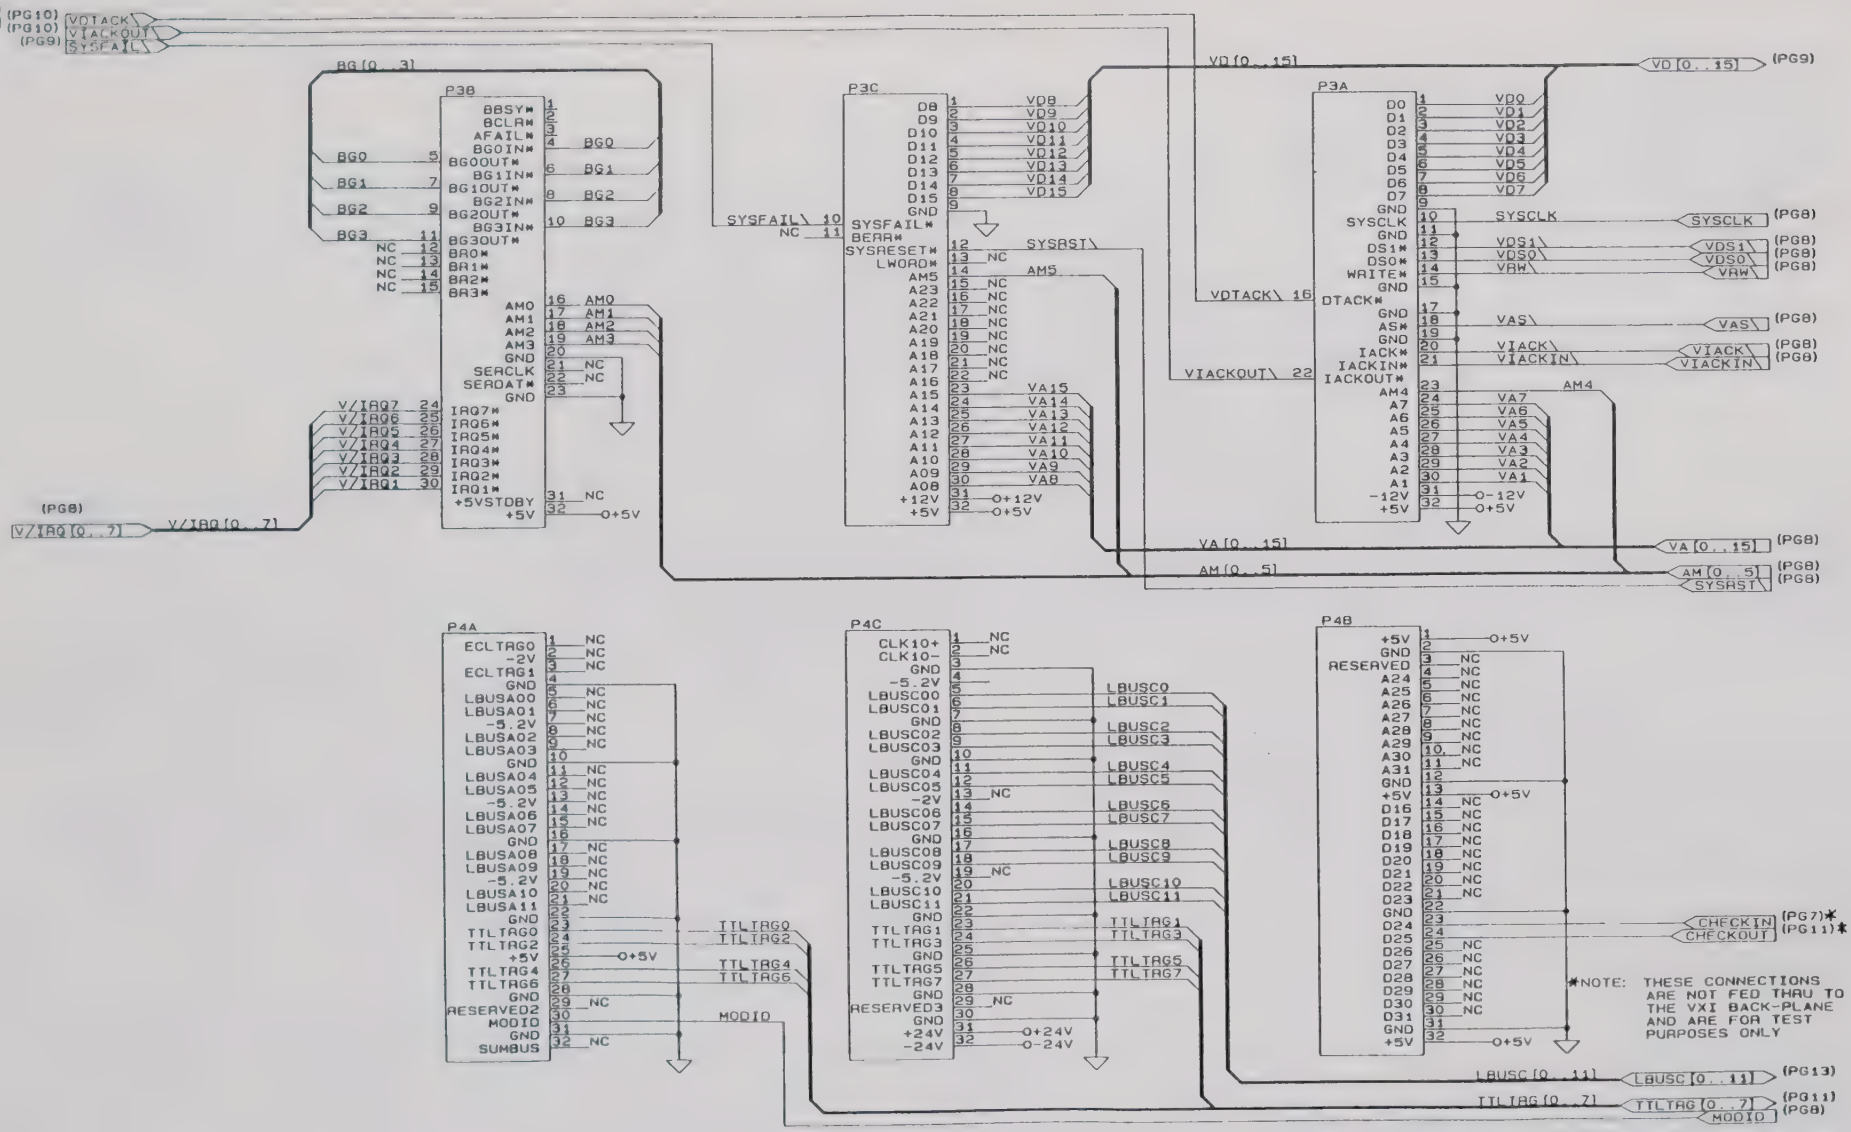

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431901	A
SCALE		SHEET 12 OF 13	

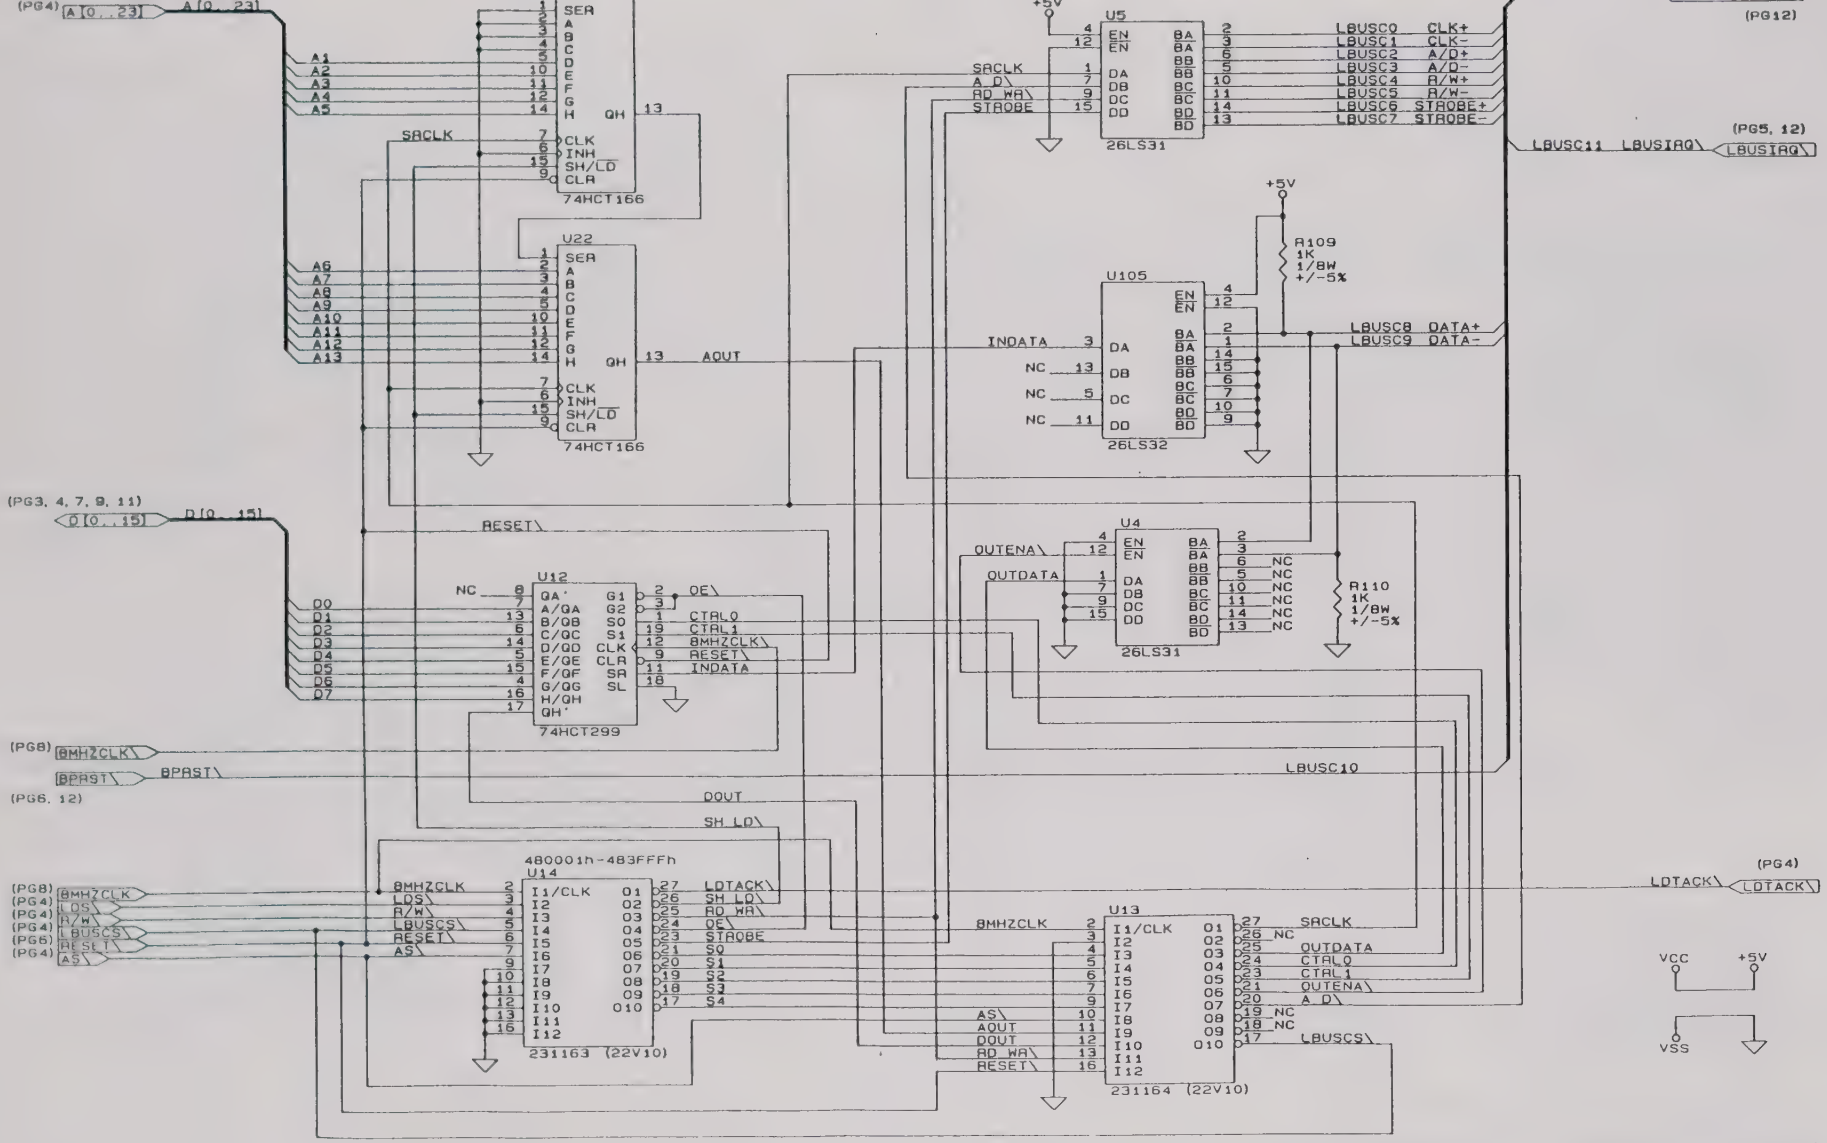

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431901	A
SCALE ———		SHEET 13 OF 13	

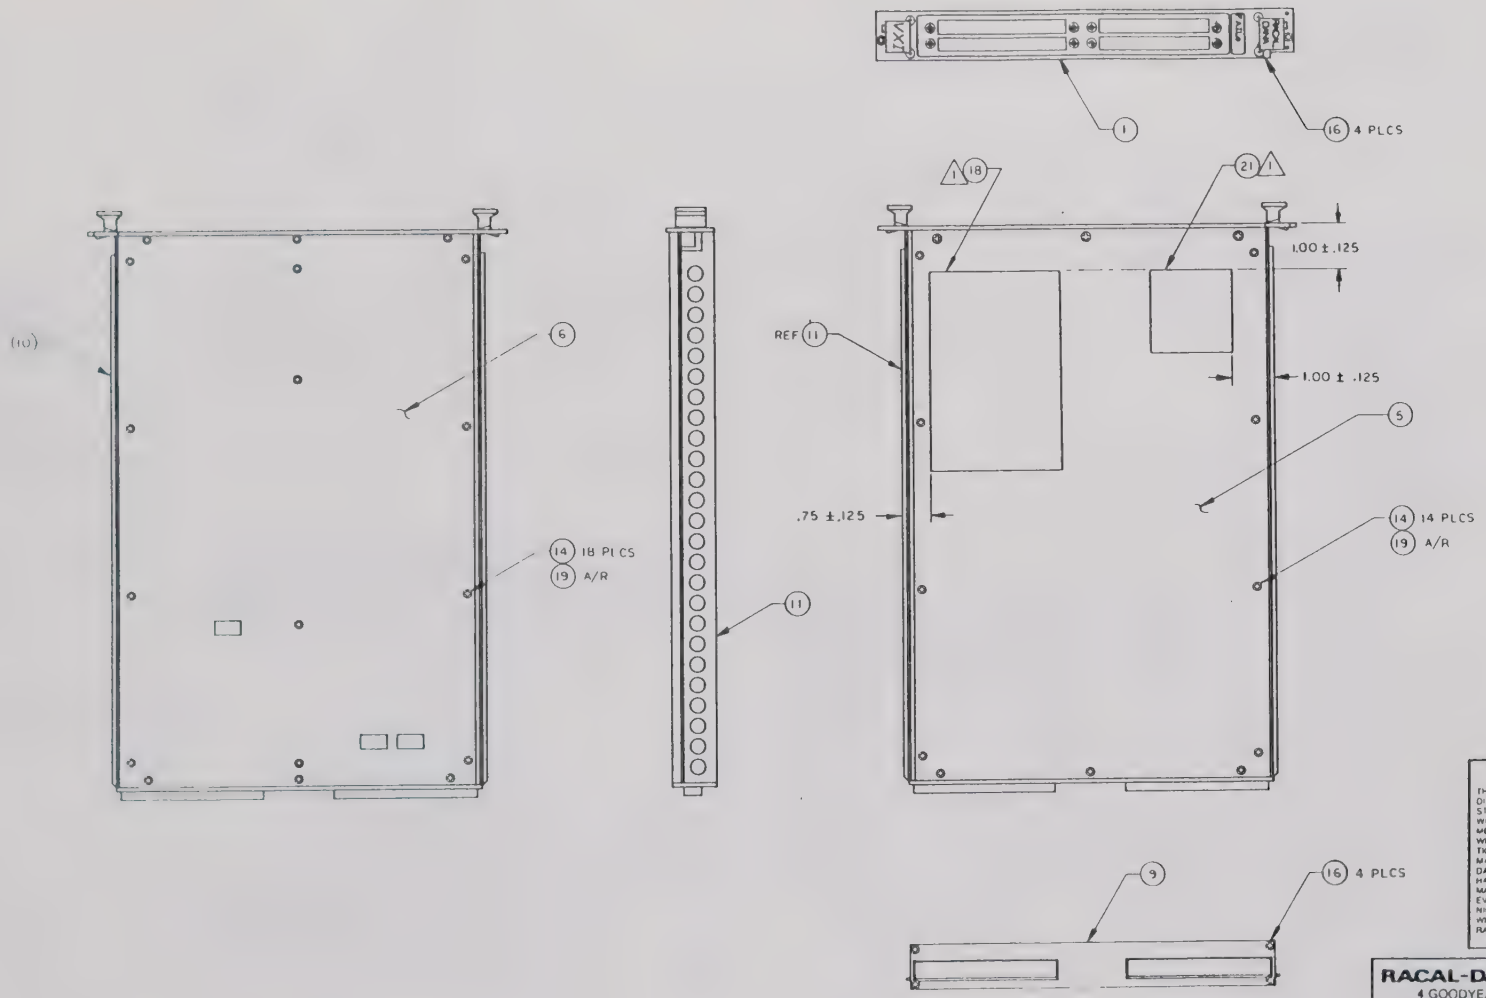

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.			
4 GOODYEAR, IRVINE, CALIFORNIA 92714			
DOCUMENT TITLE			
FINAL ASSY, 1260-14			
SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	404916	B
SCALE —		SHEET 1 OF 2	

2 INCLUDE ITEM 3 (SHIPPING KIT) IN BOX WITH ASSY.

⚠1 LOCATE LABELS WHERE SHOWN

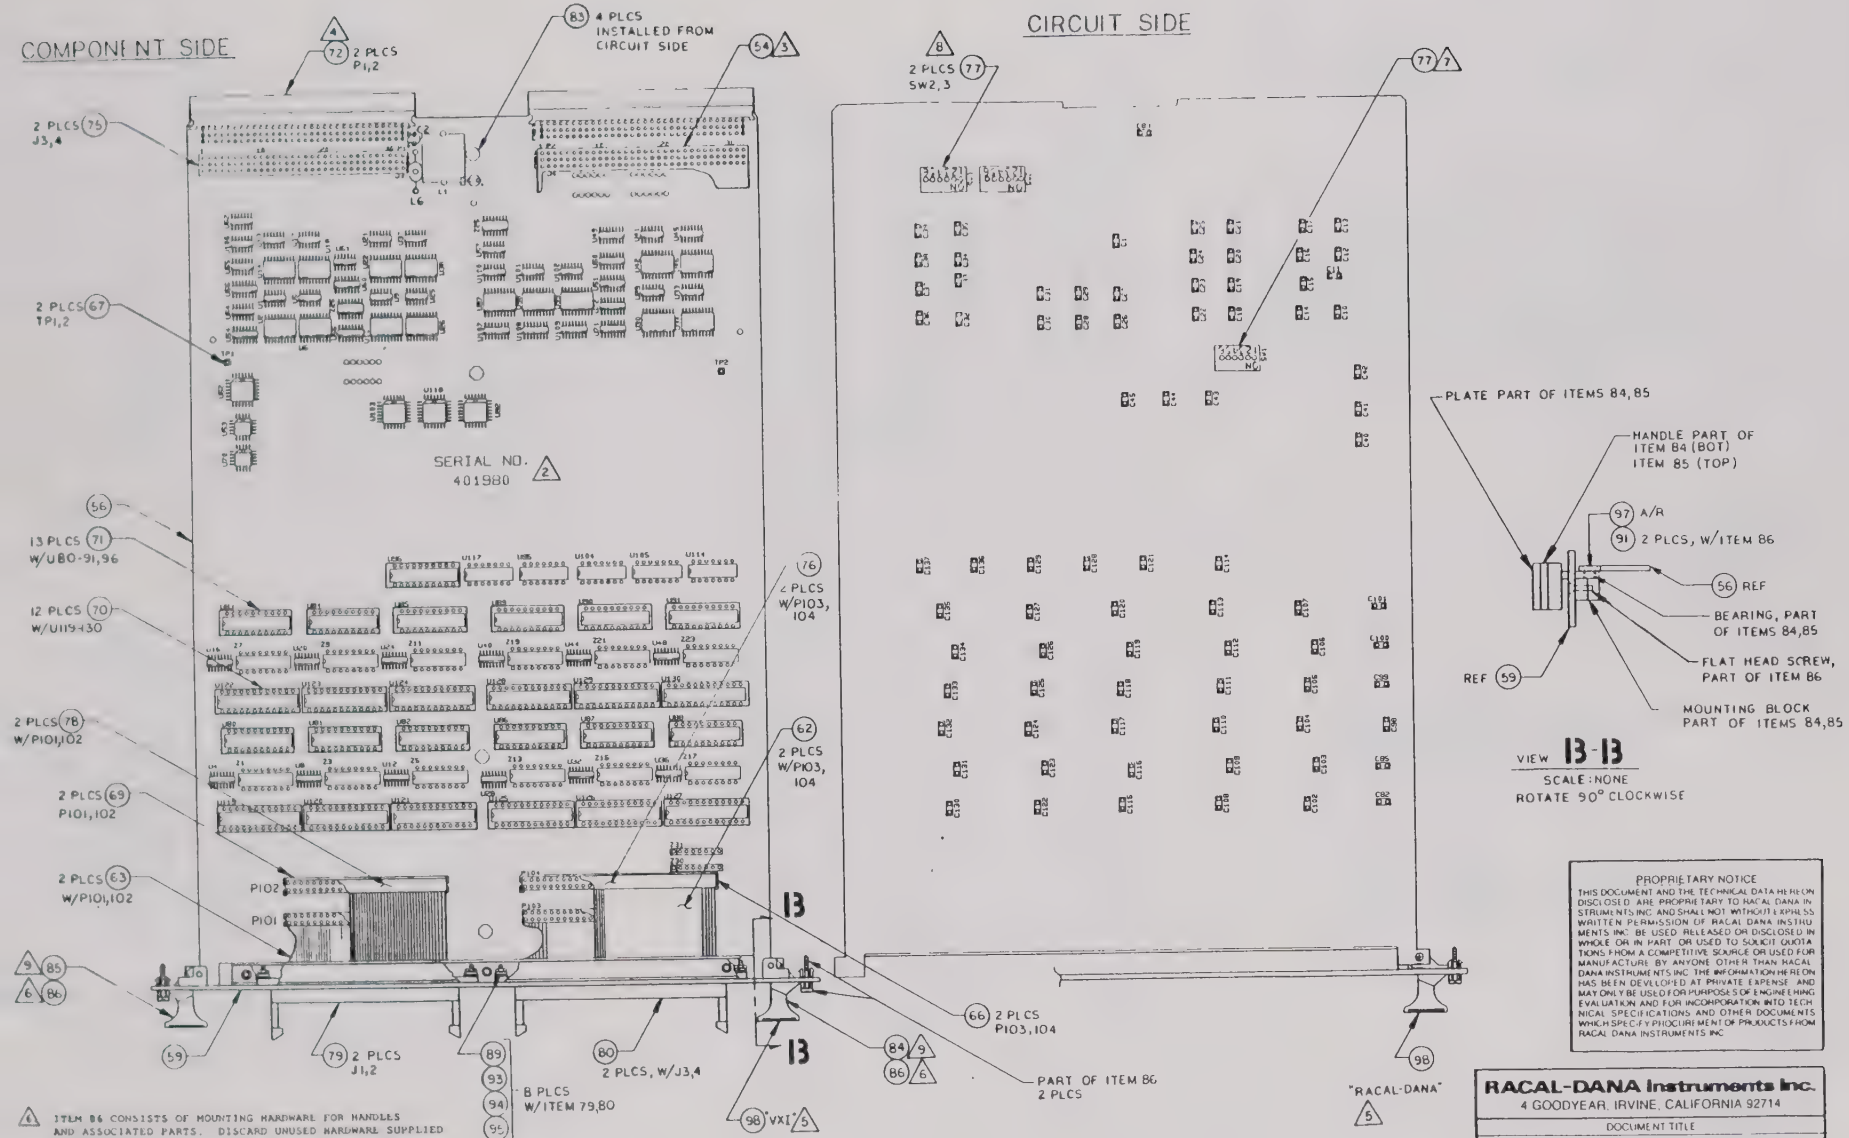

4. ITEM 86 CONSISTS OF MOUNTING HARDWARE FOR HANDLES AND ASSOCIATED PARTS. DISCARD UNUSED HARDWARE SUPPLIED WITH ITEM 86.

3. INSTALL ITEM 98 (RACAL-DANA VXI LABELS) RIGHT-READING WITH ITEM 59 NOMENCLATURE

4. P1 & P2 MUST BE INSTALLED FLUSH AT RIGHT ANGLE TO PCB

3. INSTALL (ITEM 54) PCB, INTO (ITEM 75) J4

2. INK STAMP SERIAL NUMBER ON COMPONENT SIDE IN INDICATED AREA

1. REFERENCE SCHEMATIC 431980

NOTES UNLESS OTHERWISE SPECIFIED

9. ITEM 84 CONSISTS OF 1 BOTTOM HANDLE, MOUNTING BLOCK AND ASSOCIATED PARTS. ITEM 85 IS THE SAME (AS ITEM 84), BUT THE HANDLE IS FOR THE TOP.

8. SET SW2,SW3 (ITEM 77) TO ON POSITION. DO NOT WAVE SOLDER

7. SET SW1 (ITEM 77) TO LOGICAL ADDRESS 1 PER TABLE 1. DO NOT WAVE SOLDER.

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.			
4 GOODYEAR, IRVINE, CALIFORNIA 92714			
DOCUMENT TITLE			
PCB ASSY, 1260-14			
SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	401980	A
SCALE 1:1		SHEET 1 OF 4	

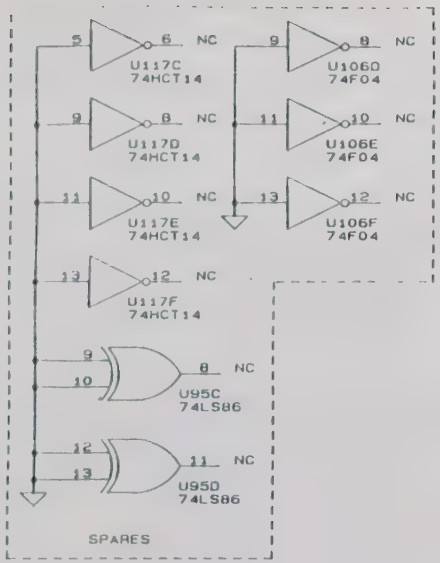

REF. DES.	IC TYPE	+5V PIN NO.	GND PIN NO.
U119-130	74LS652	24	12
U118	231297 (22V10H)	28	14
U117	74HCT14	14	7
U104, 105, 114	74HCT00	14	7
U103	231298 (20RA10J)	28	15
U96	74ALS244	20	10
U95	74LS86	14	7
U92	231299 (22V10H)	28	14
U80-91	74ALS645A-1	20	10
U71, 72	74HCT253	16	8
U70	231152 (16L8Q)	20	10
U64, 65, 106	74F04	14	7
U57	LM339	3	12
U56	74HCT85	16	8
U54, 55	74LS138	16	8
U53	231153 (16R4)	20	10
U52	231154 (22V10H)	28	14
U51	26LS31	16	8
U49, 50	26LS32	16	8
U4, 8, 12, 16, 20, 24, U28, 32, 36, 40, 44, 48, 60, U107-109	74HCT166	16	8
U2, 6, 10, 14, 18, 22, U26, 30, 34, 38, 42, 46, U97-99	74HCT273	20	10
U1, 5, 9, 13, 17, 21, 25, U29, 33, 37, 41, 45, 61, U62, 100-102	74HCT164	14	7

IC POWER AND GROUND CONNECTIONS

HIGHEST REF. DES.
Z31
U130
TP2
SW3
P104
L6
J4
C137

2. RESISTOR NETWORKS ARE IN OHMS
1. CAPACITOR VALUES ARE IN MICROFARADS, 50V, +/-20% UNLESS OTHERWISE SPECIFIED.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE
SCHEM., 1260-14

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431980	A

SCALE —— SHEET 1 OF 14

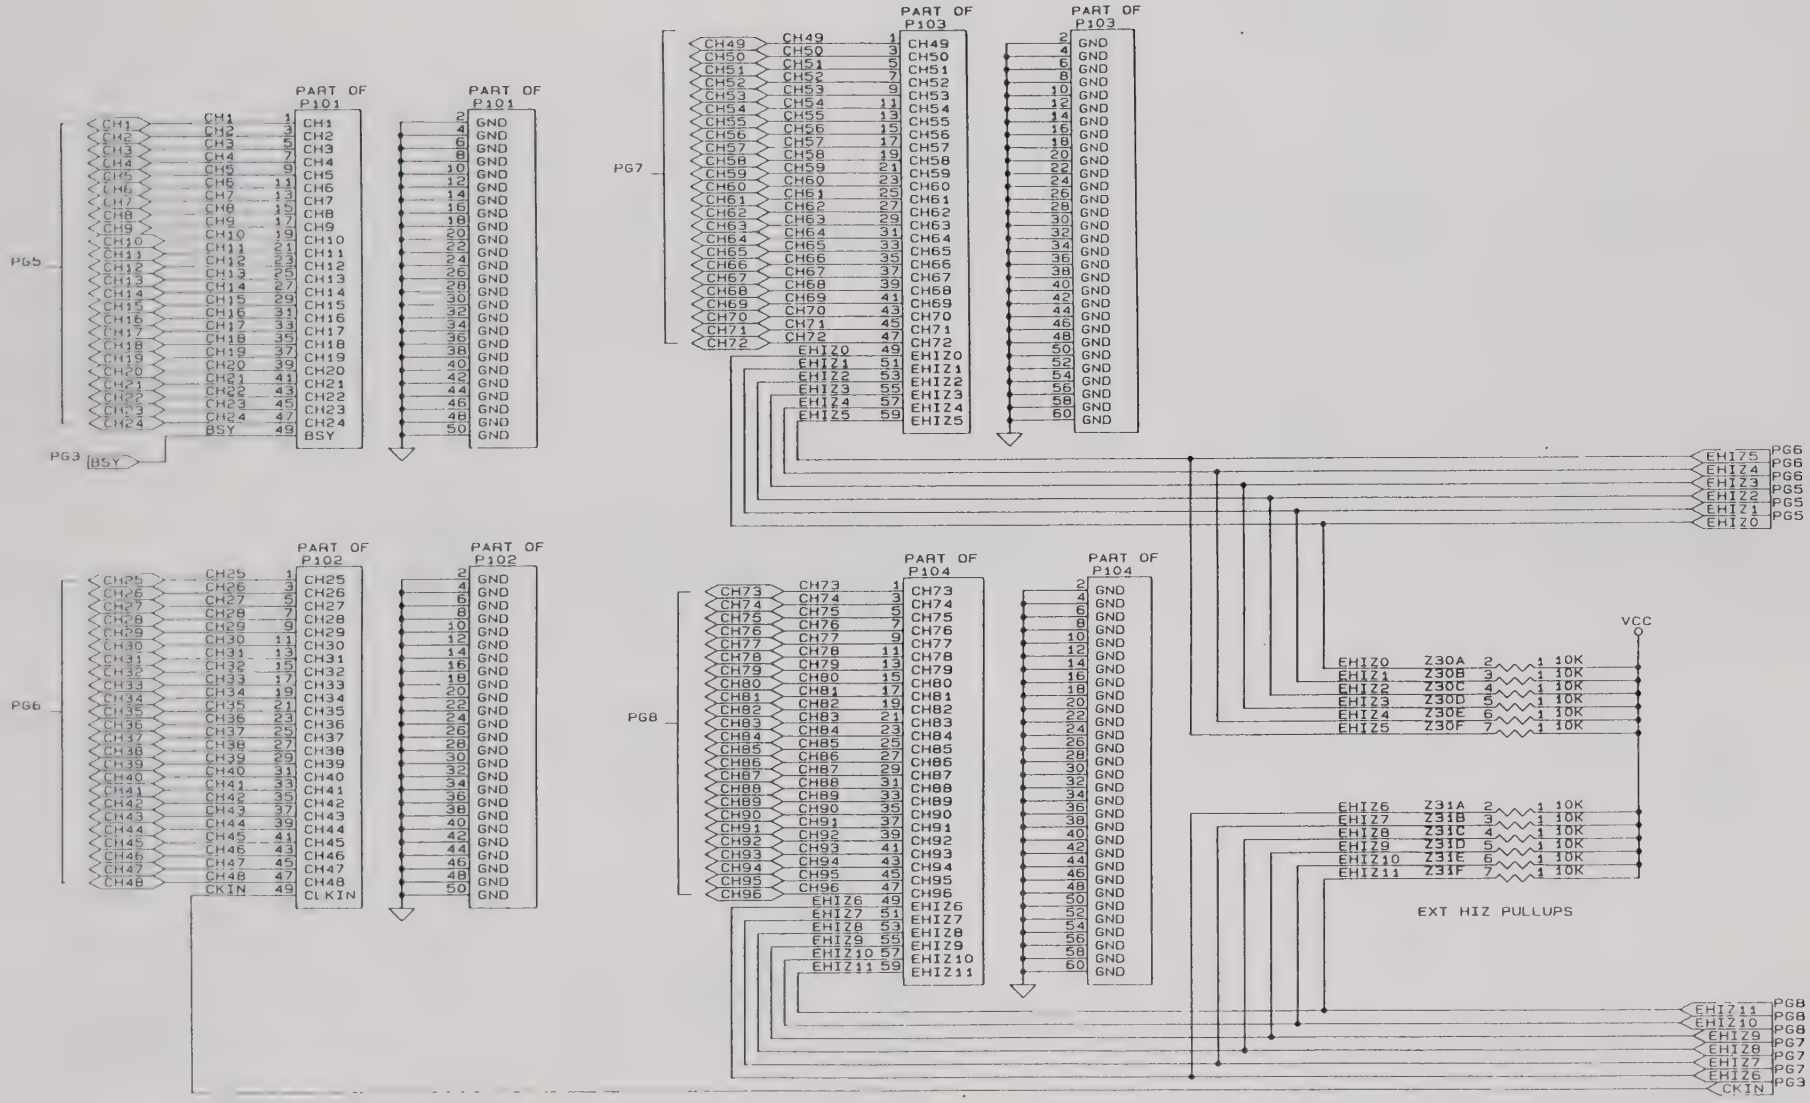

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431980	A
SCALE		SHEET 2 OF 14	

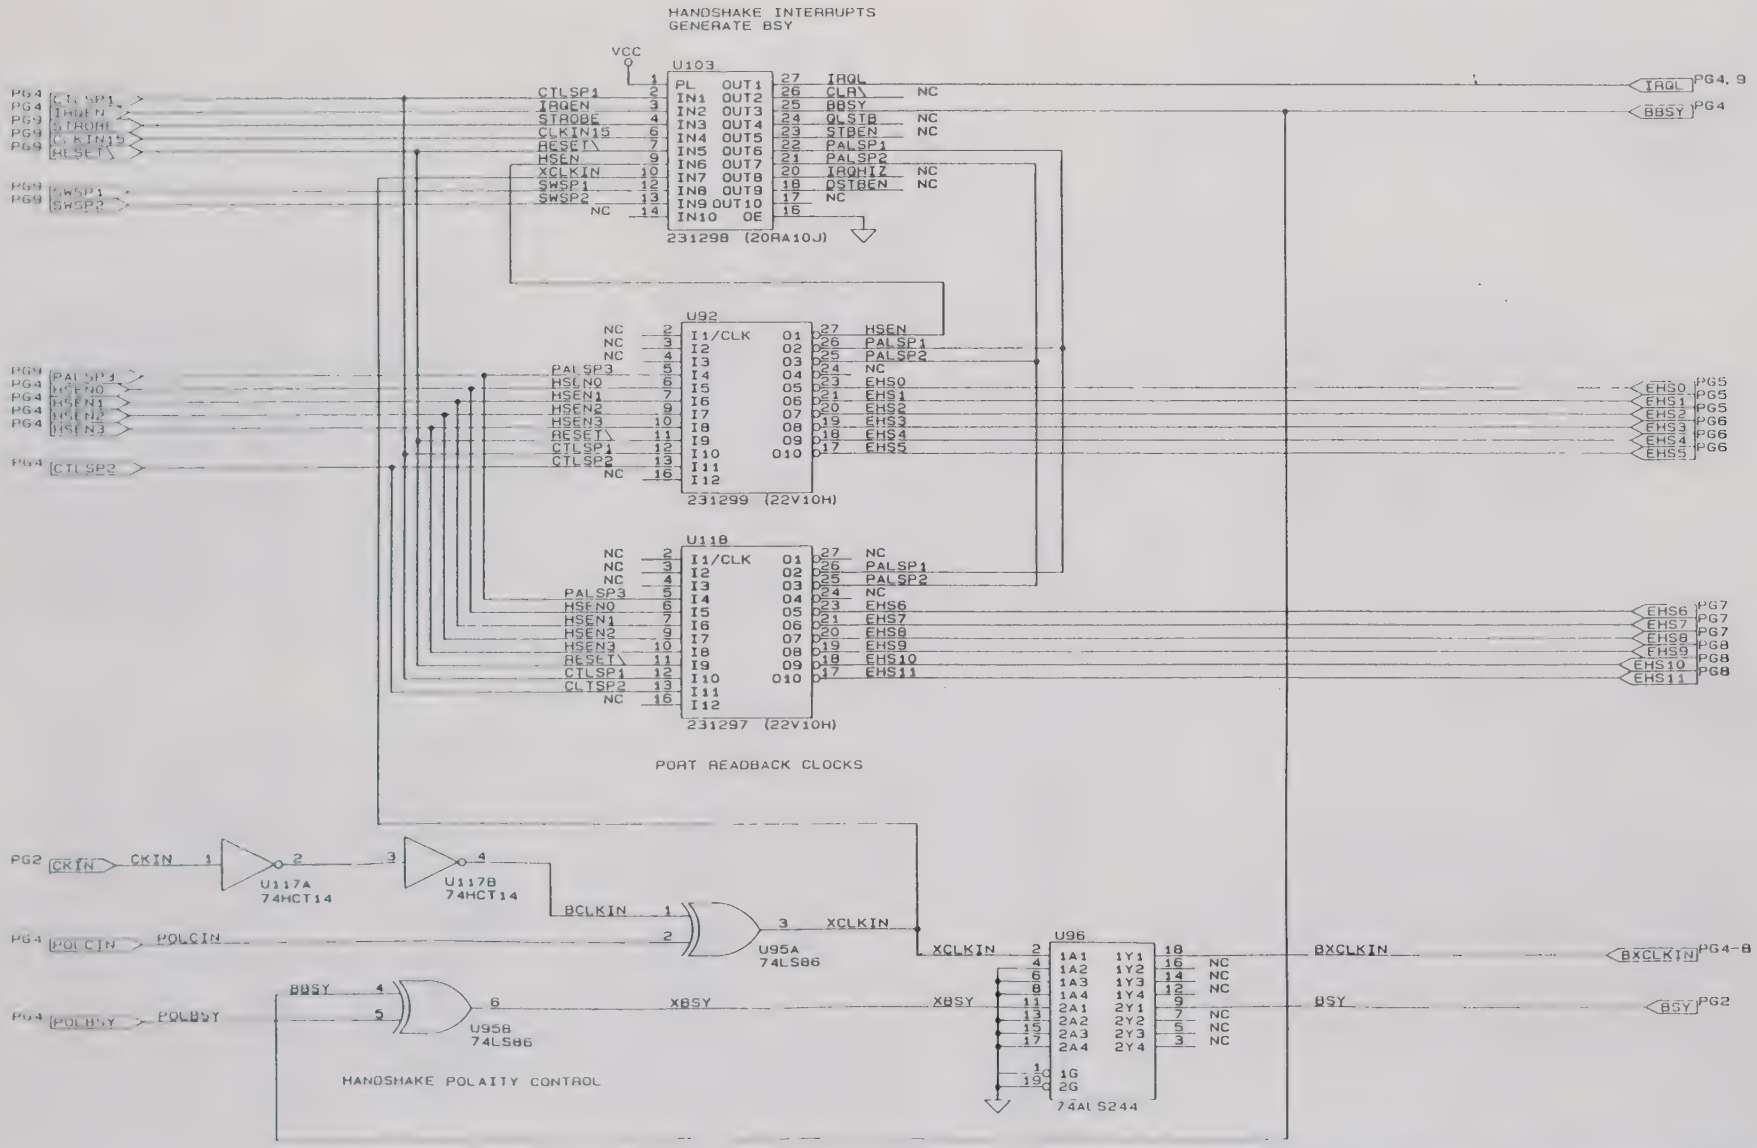

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431980	A
SCALE		SHEET 3 OF 14	

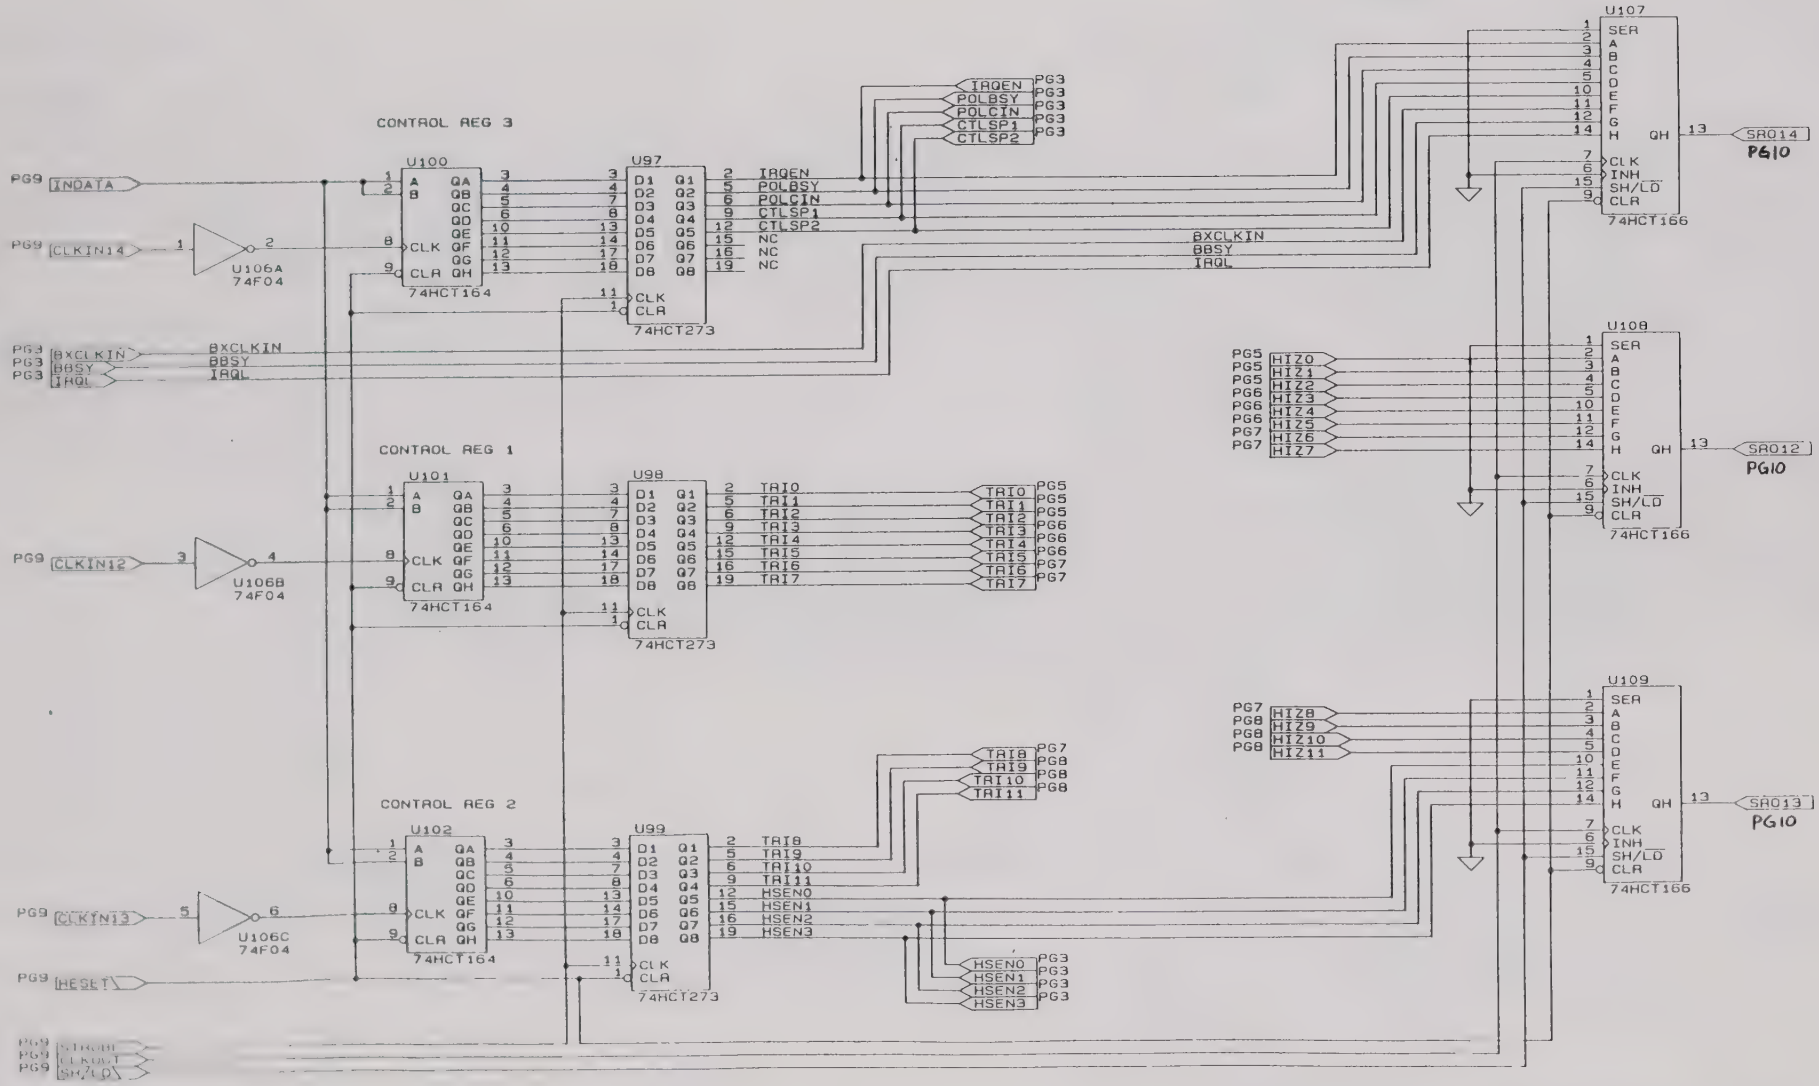

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431980	A
SCALE		SHEET 4 OF 14	

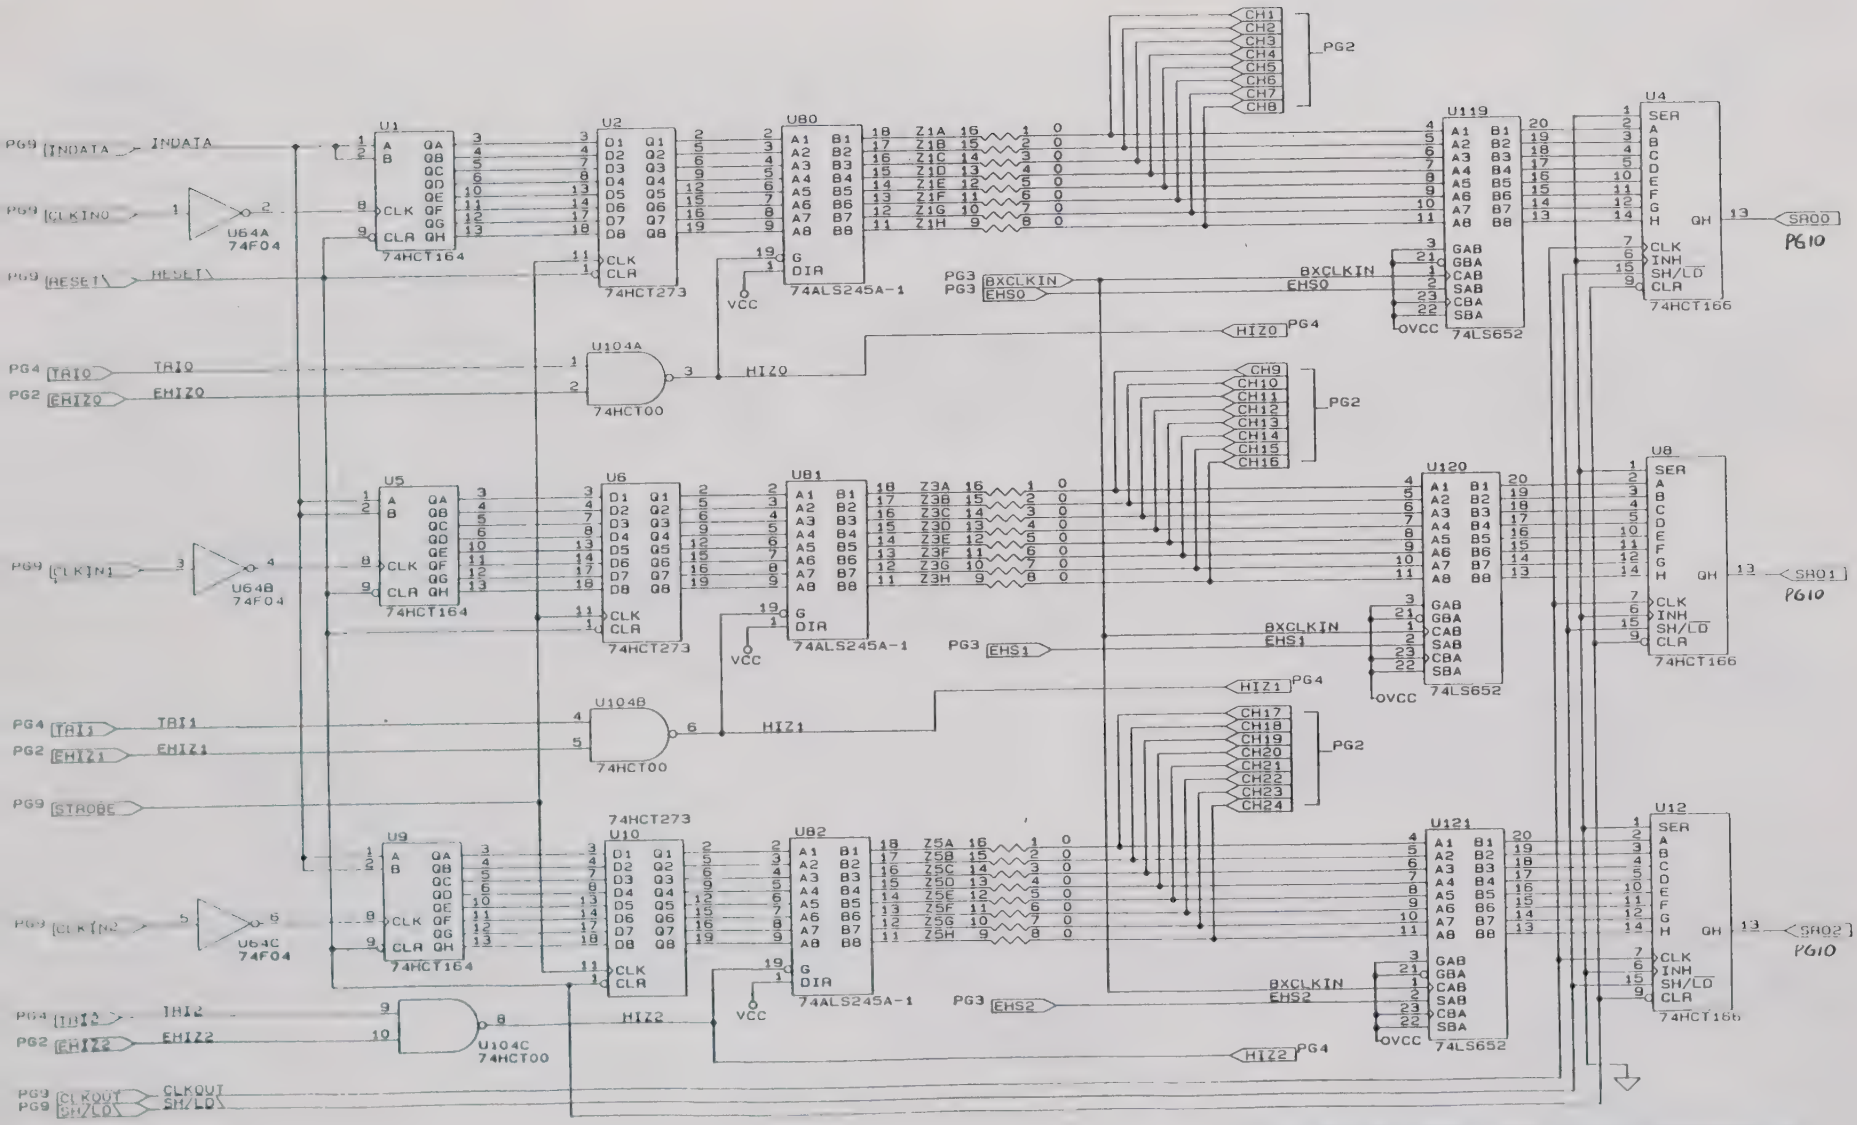

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	4131980	A
SCALE		SHEET 5 OF 14	

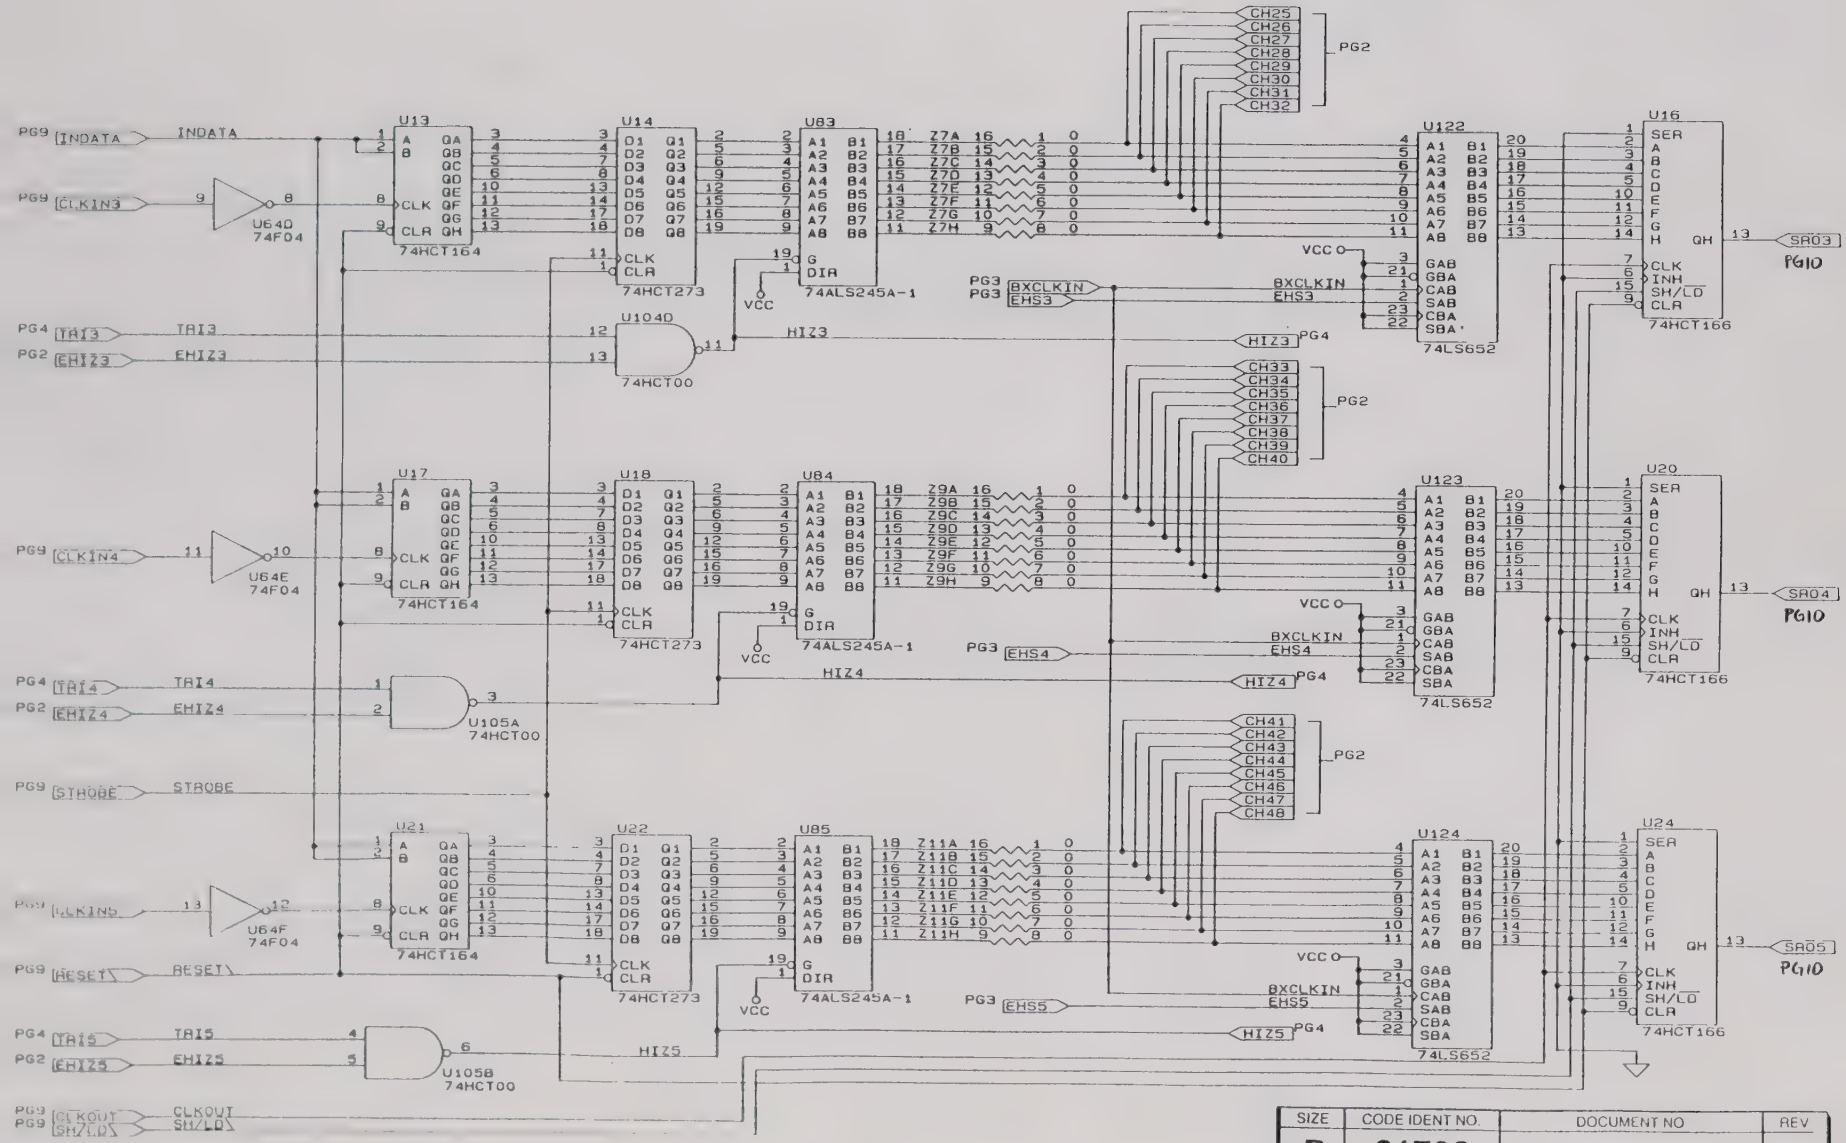

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431980	A
SCALE		SHEET 6 OF 14	

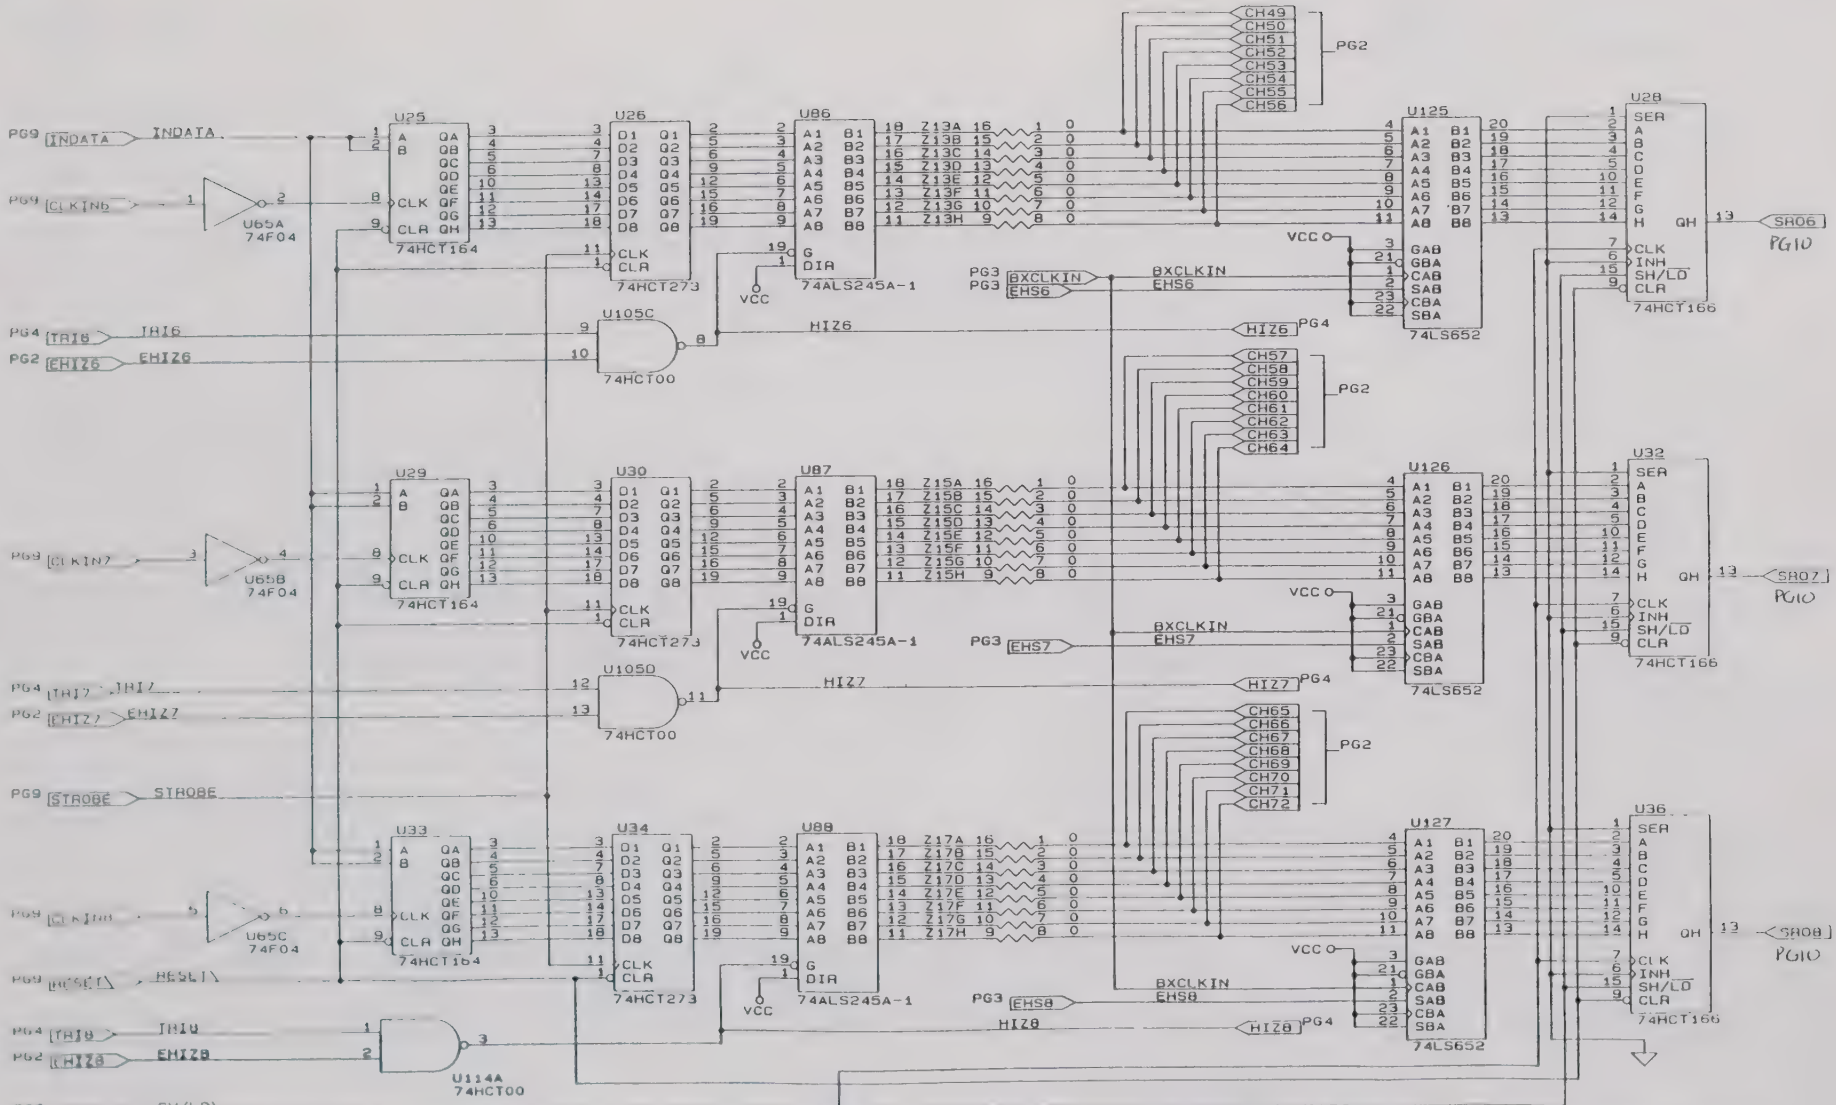

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431980	A
SCALE —		SHEET 7 OF 14	

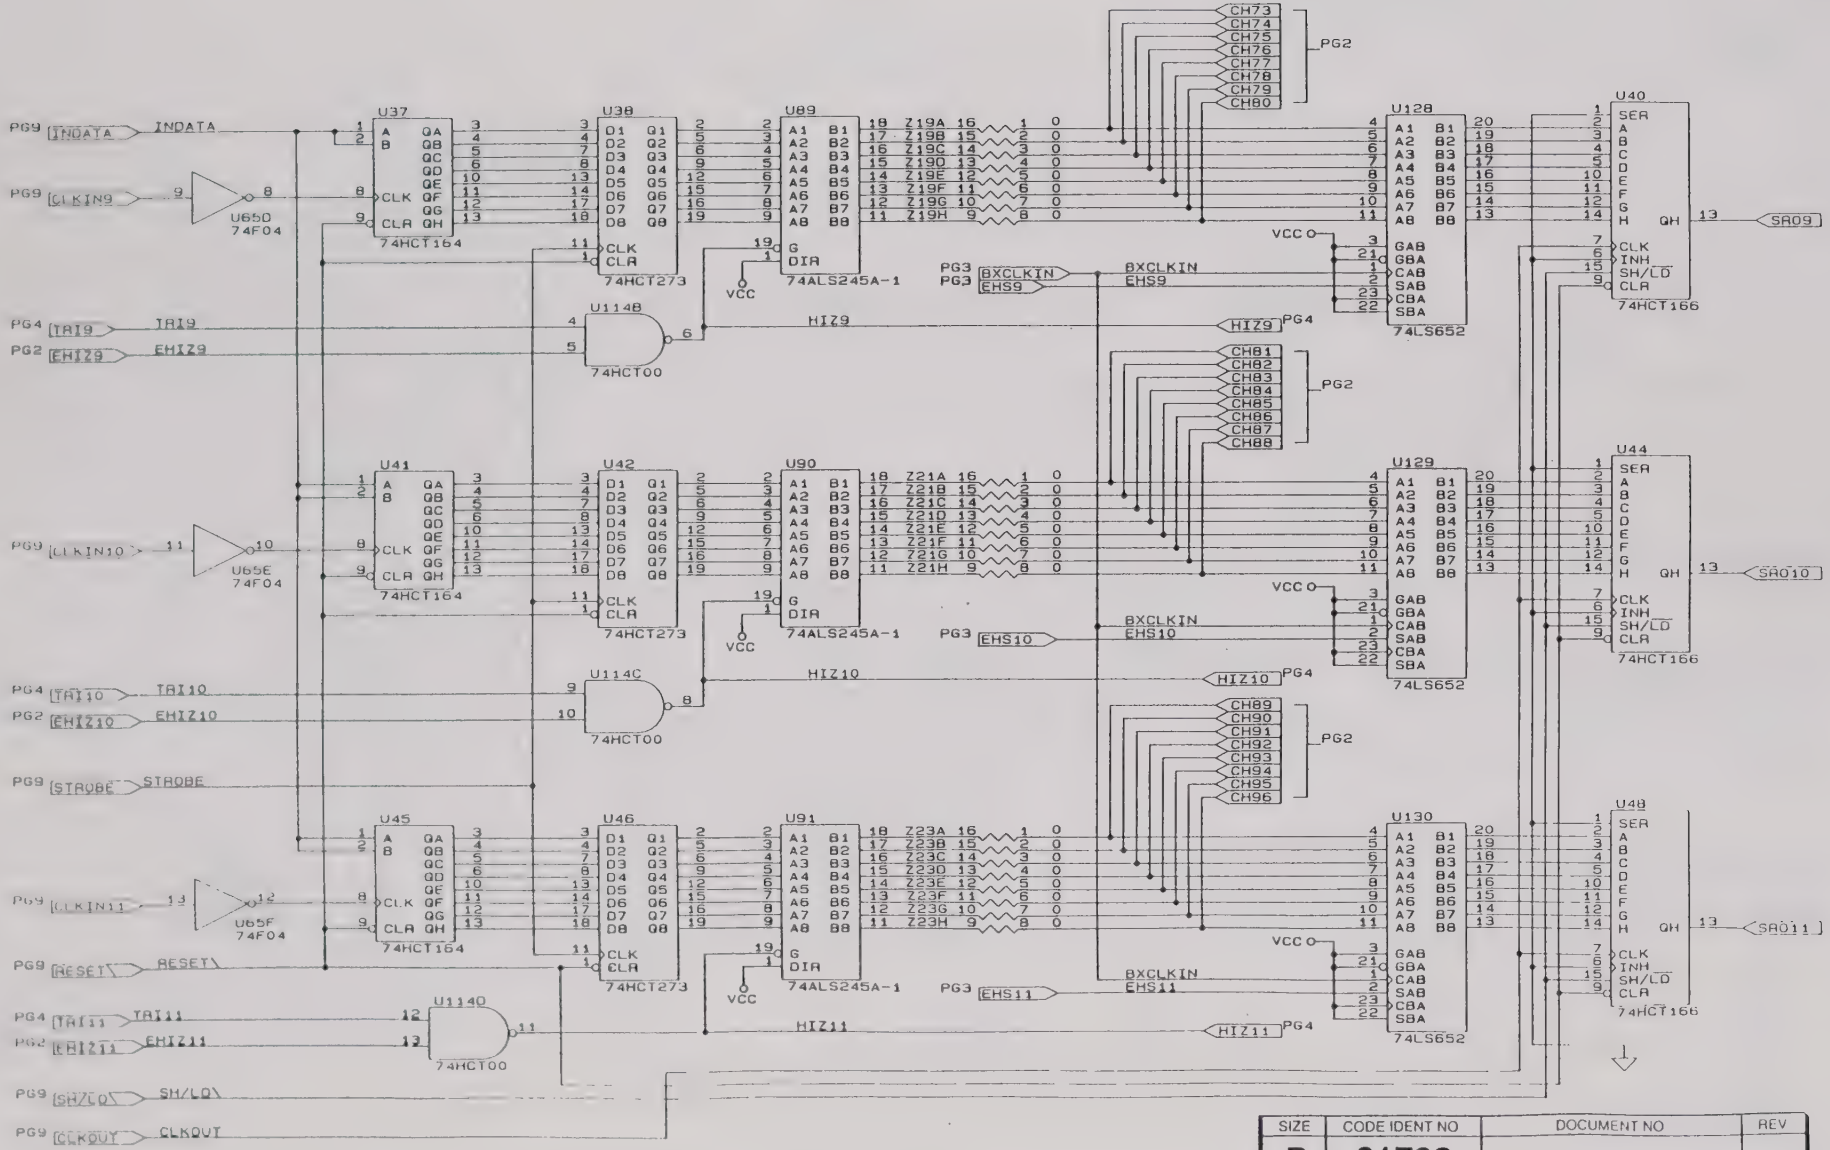

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431980	A
SCALE		SHEET 8 OF 14	

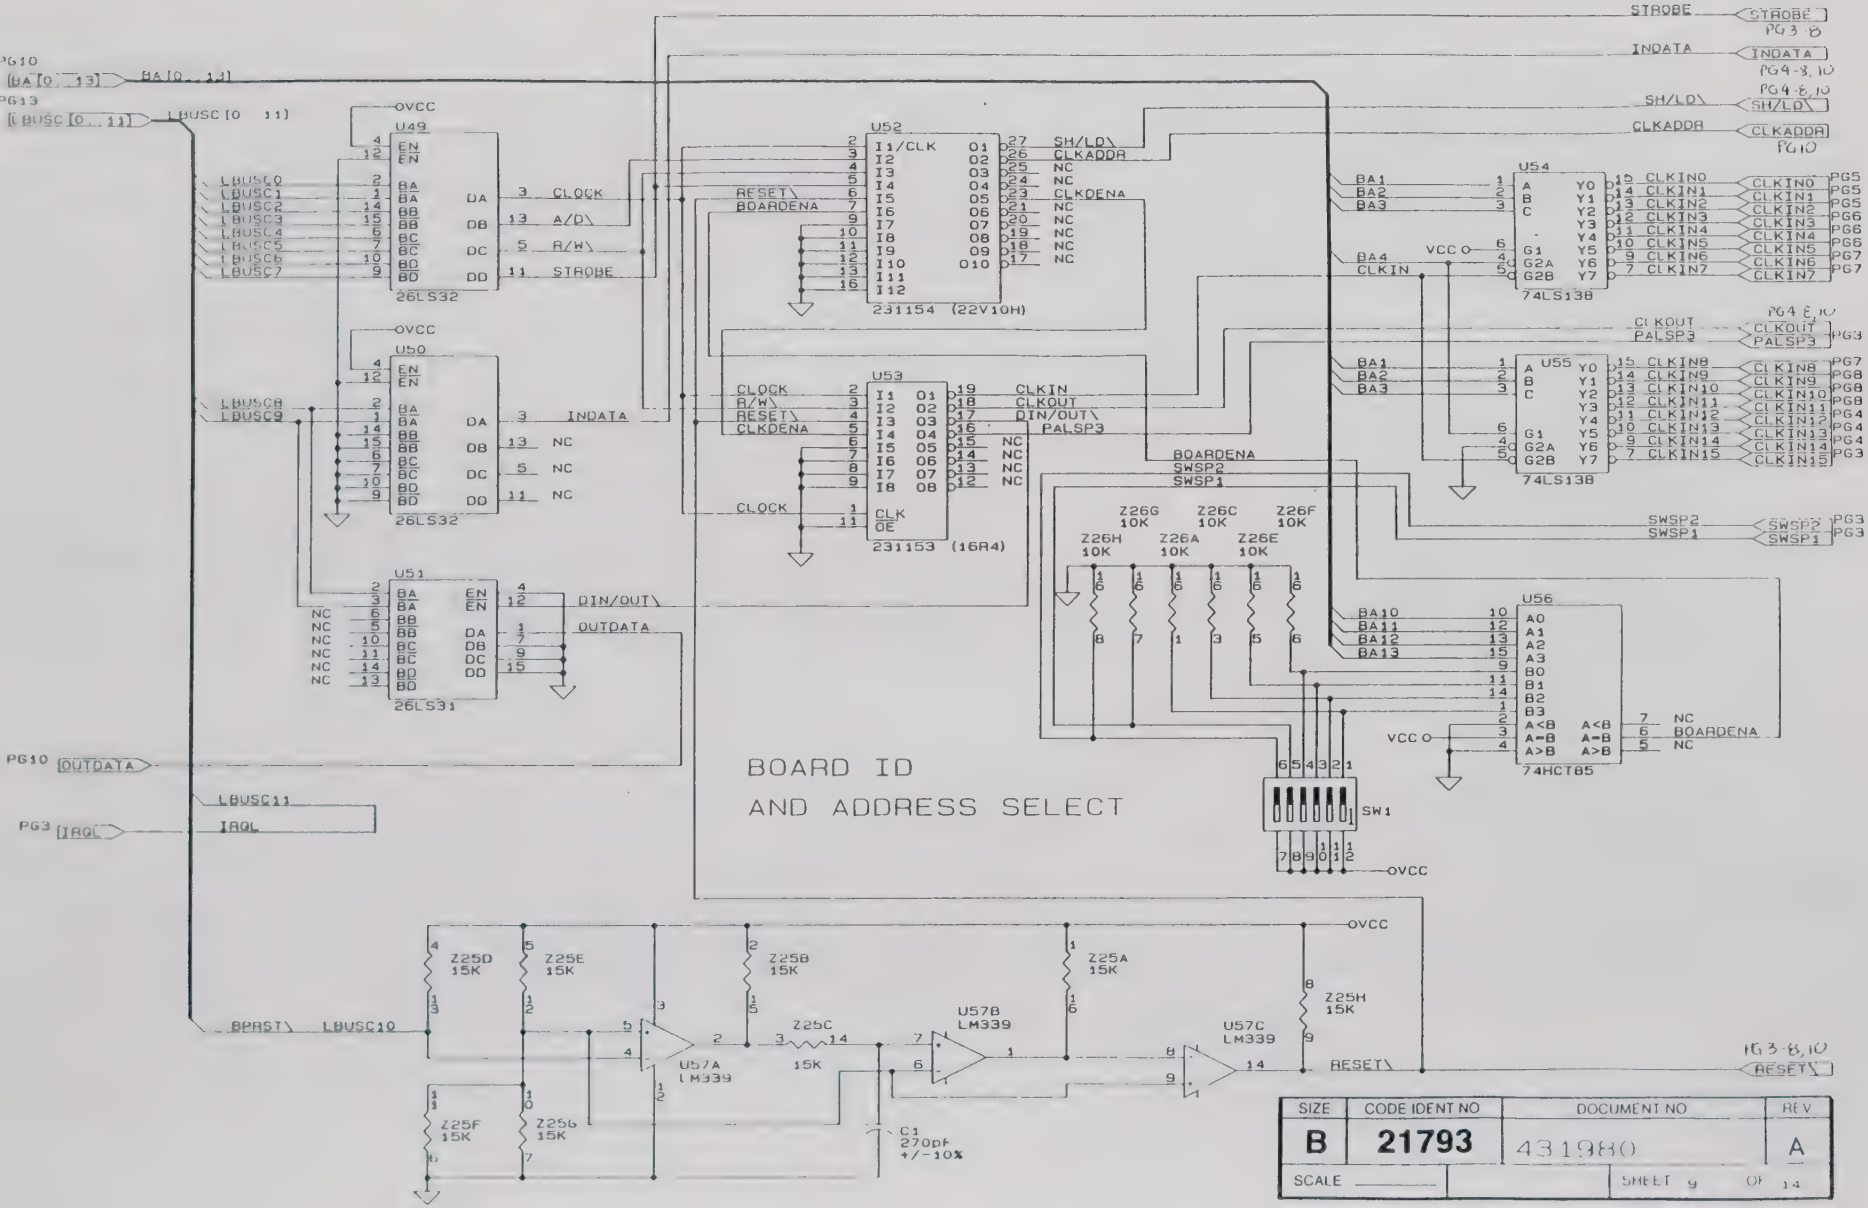

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431980	A
SCALE		SHEET 9 OF 14	

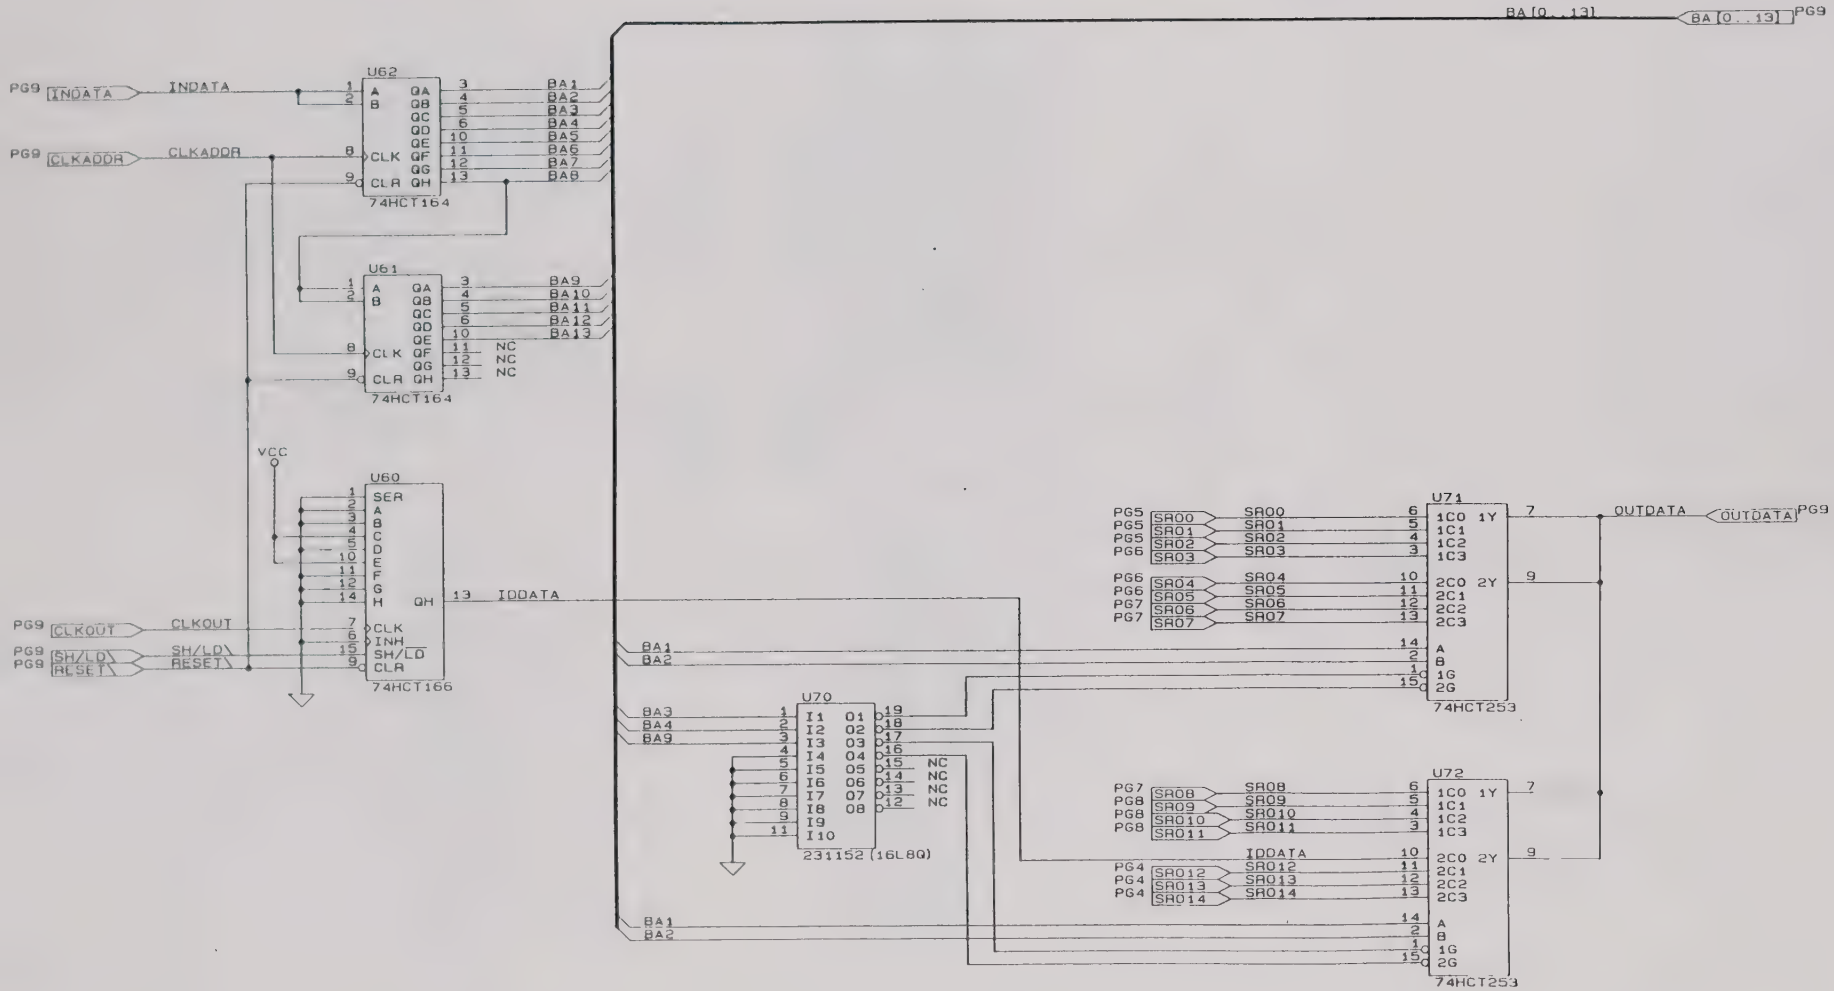

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431980	A
SCALE		SHEET 10 OF 14	

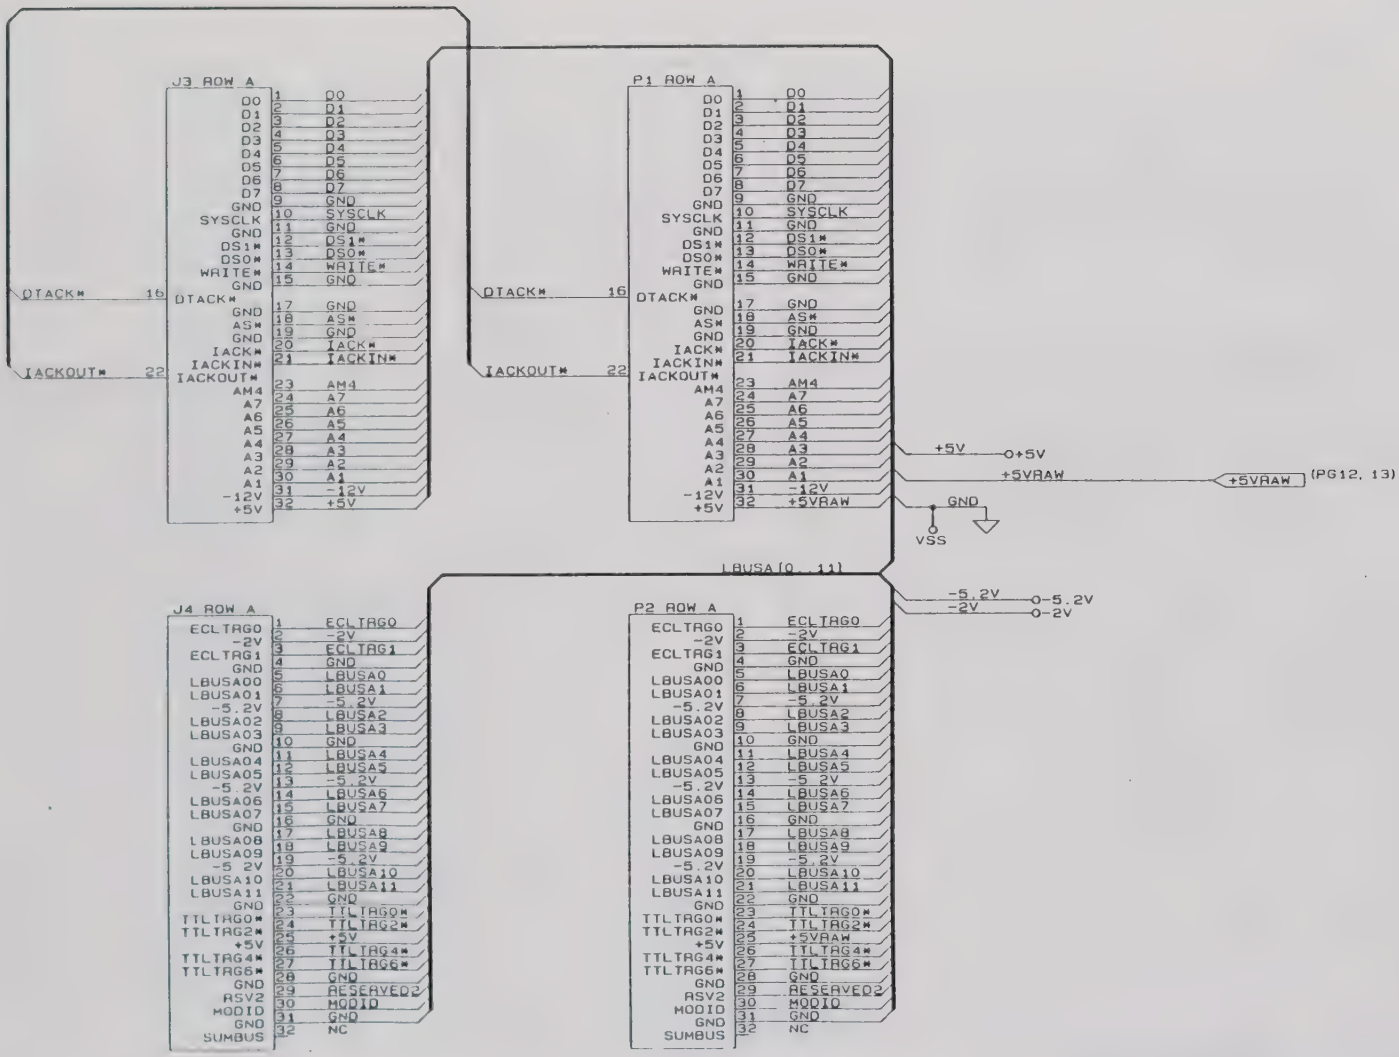

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431980	A
SCALE		SHEET 11 OF 14	

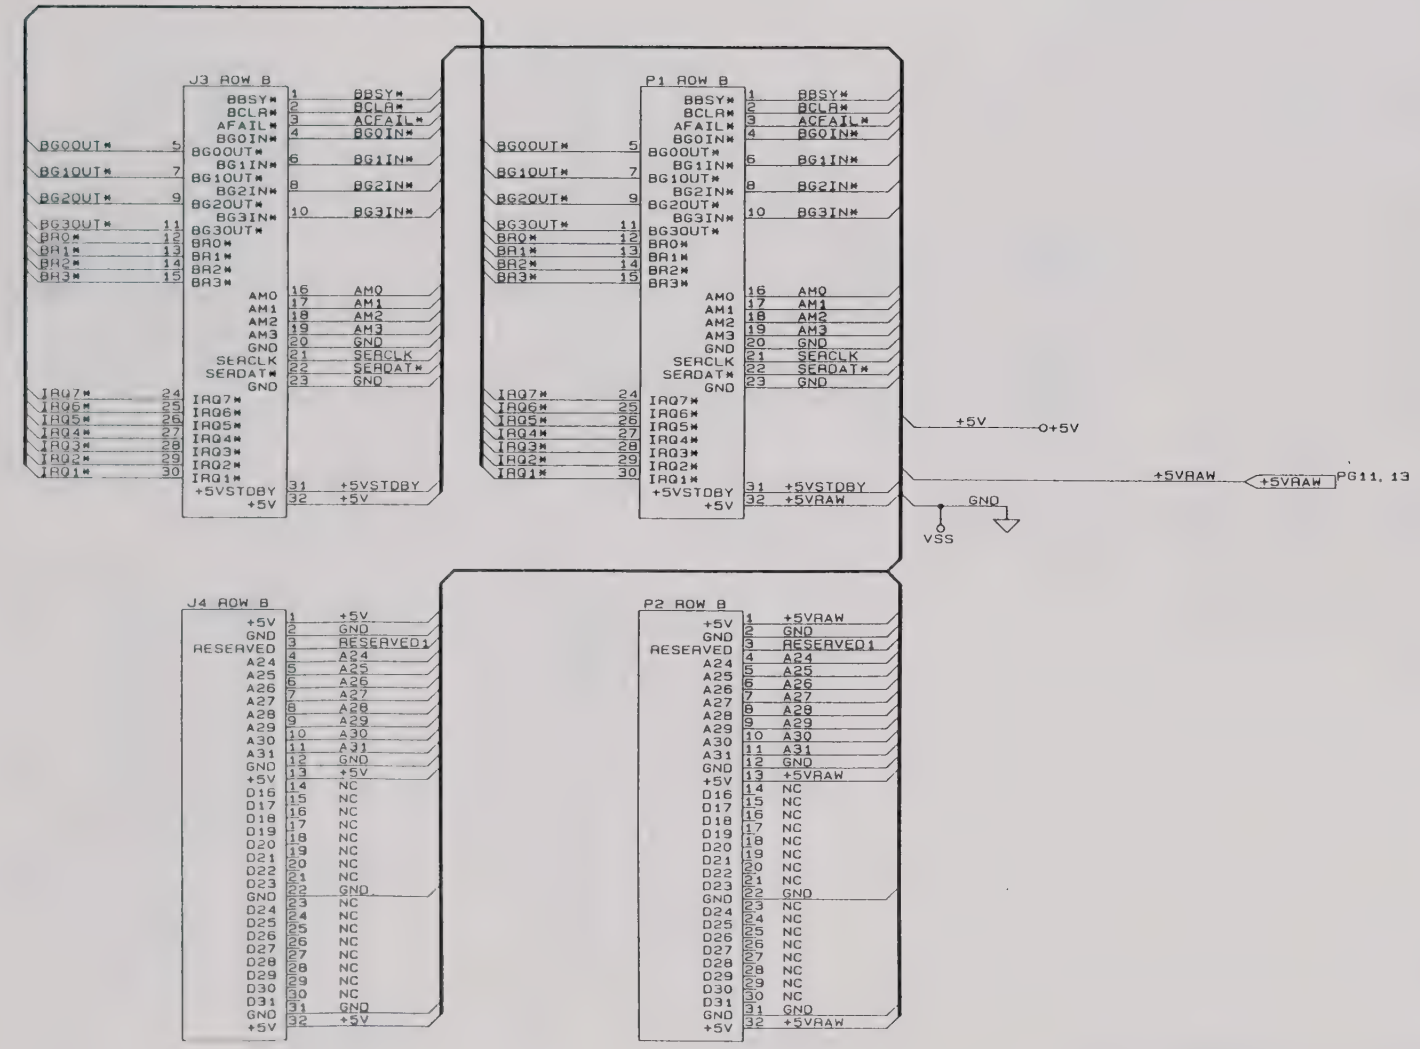

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431980	A
SCALE		SHEET 12 OF 14	

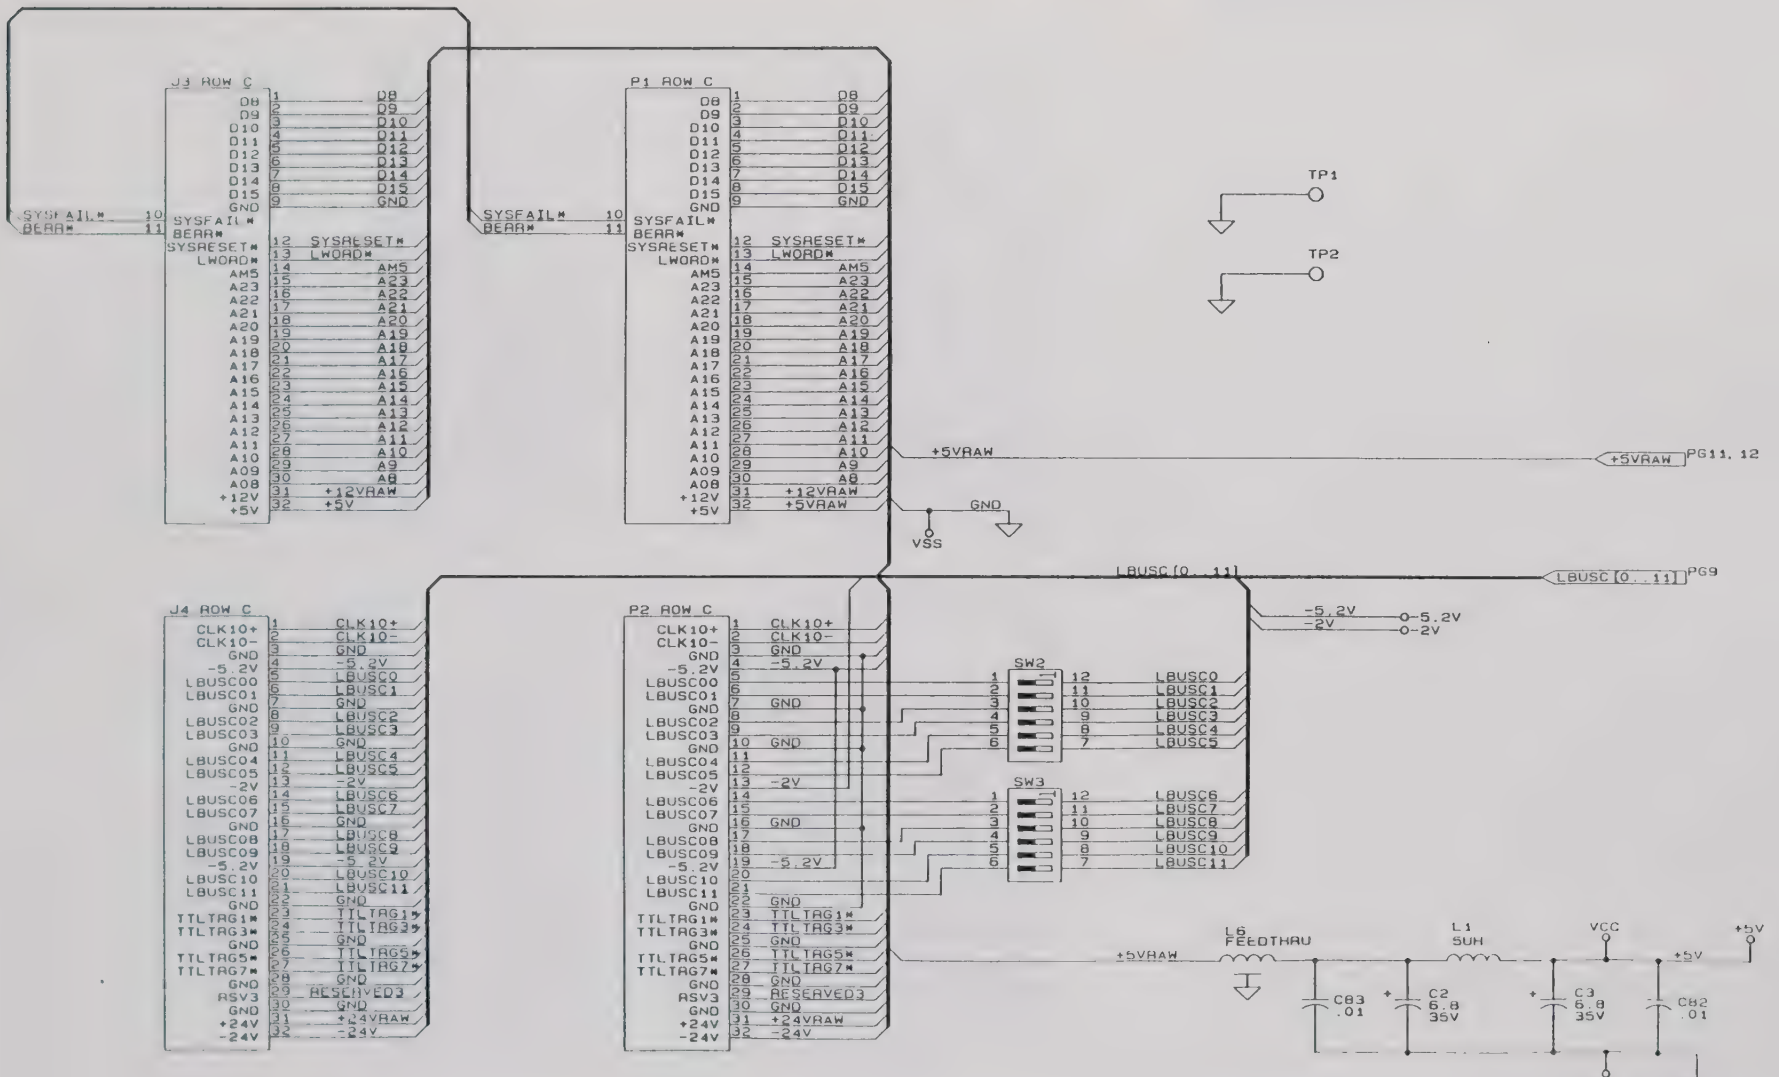

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431980	A
SCALE		SHEET 13 OF 14	

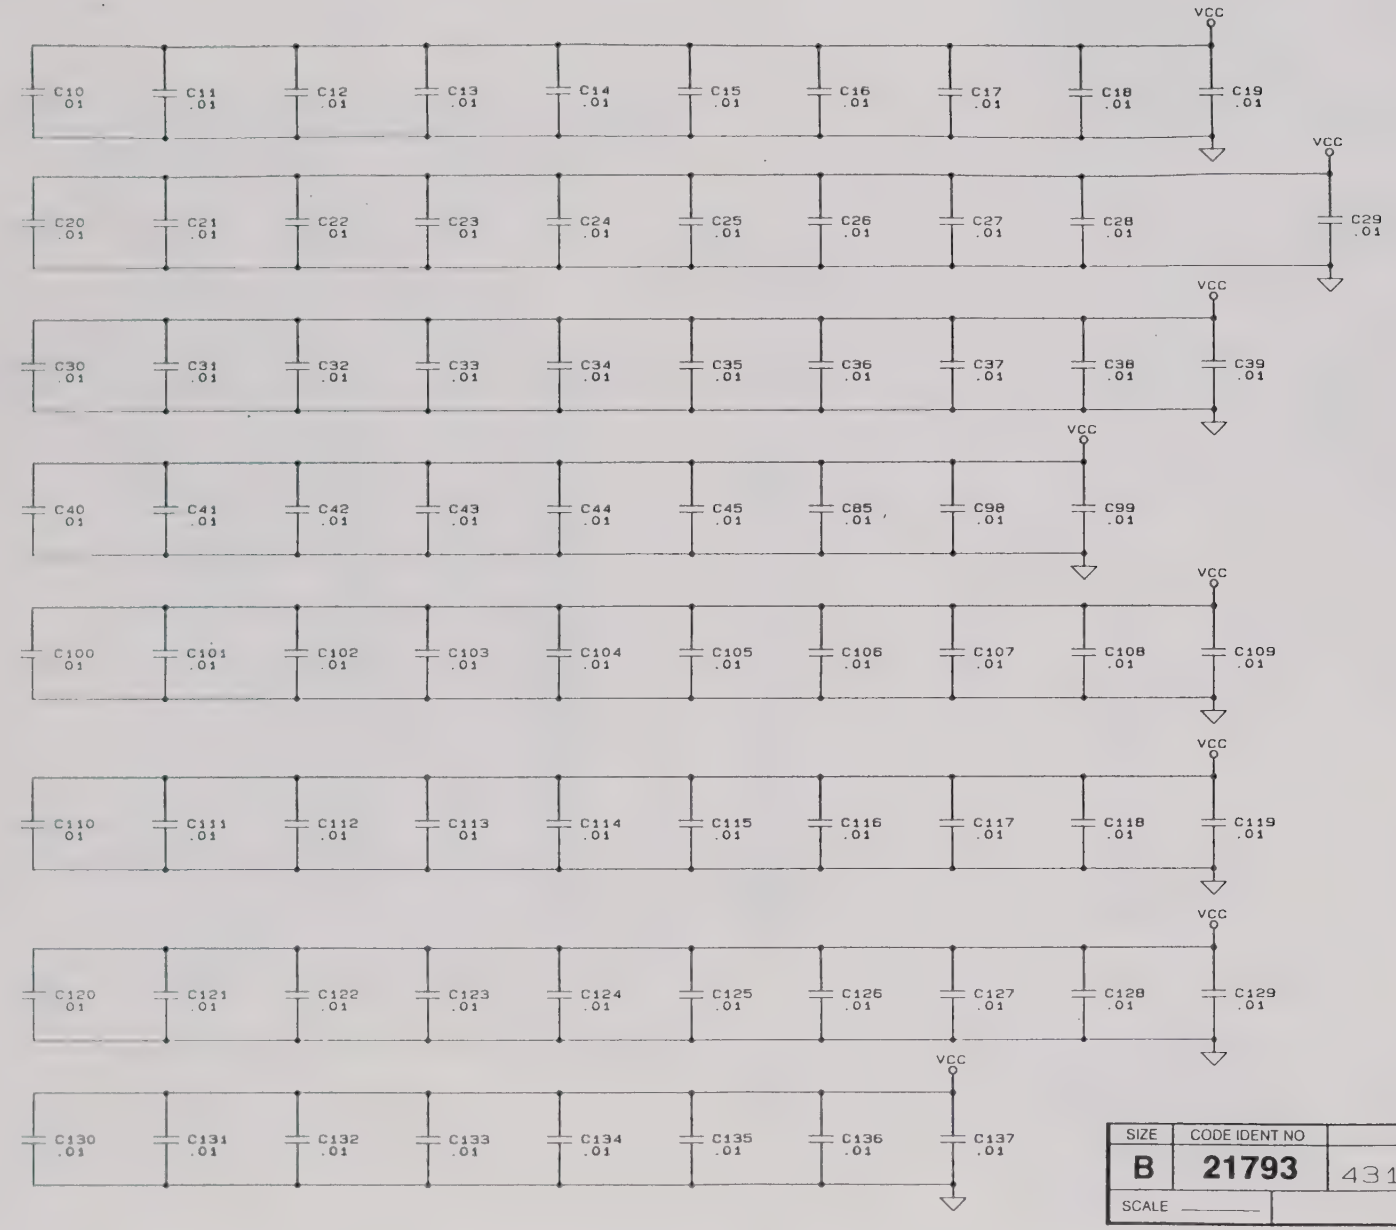

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431980	A
SCALE		SHEET 14 OF 14	

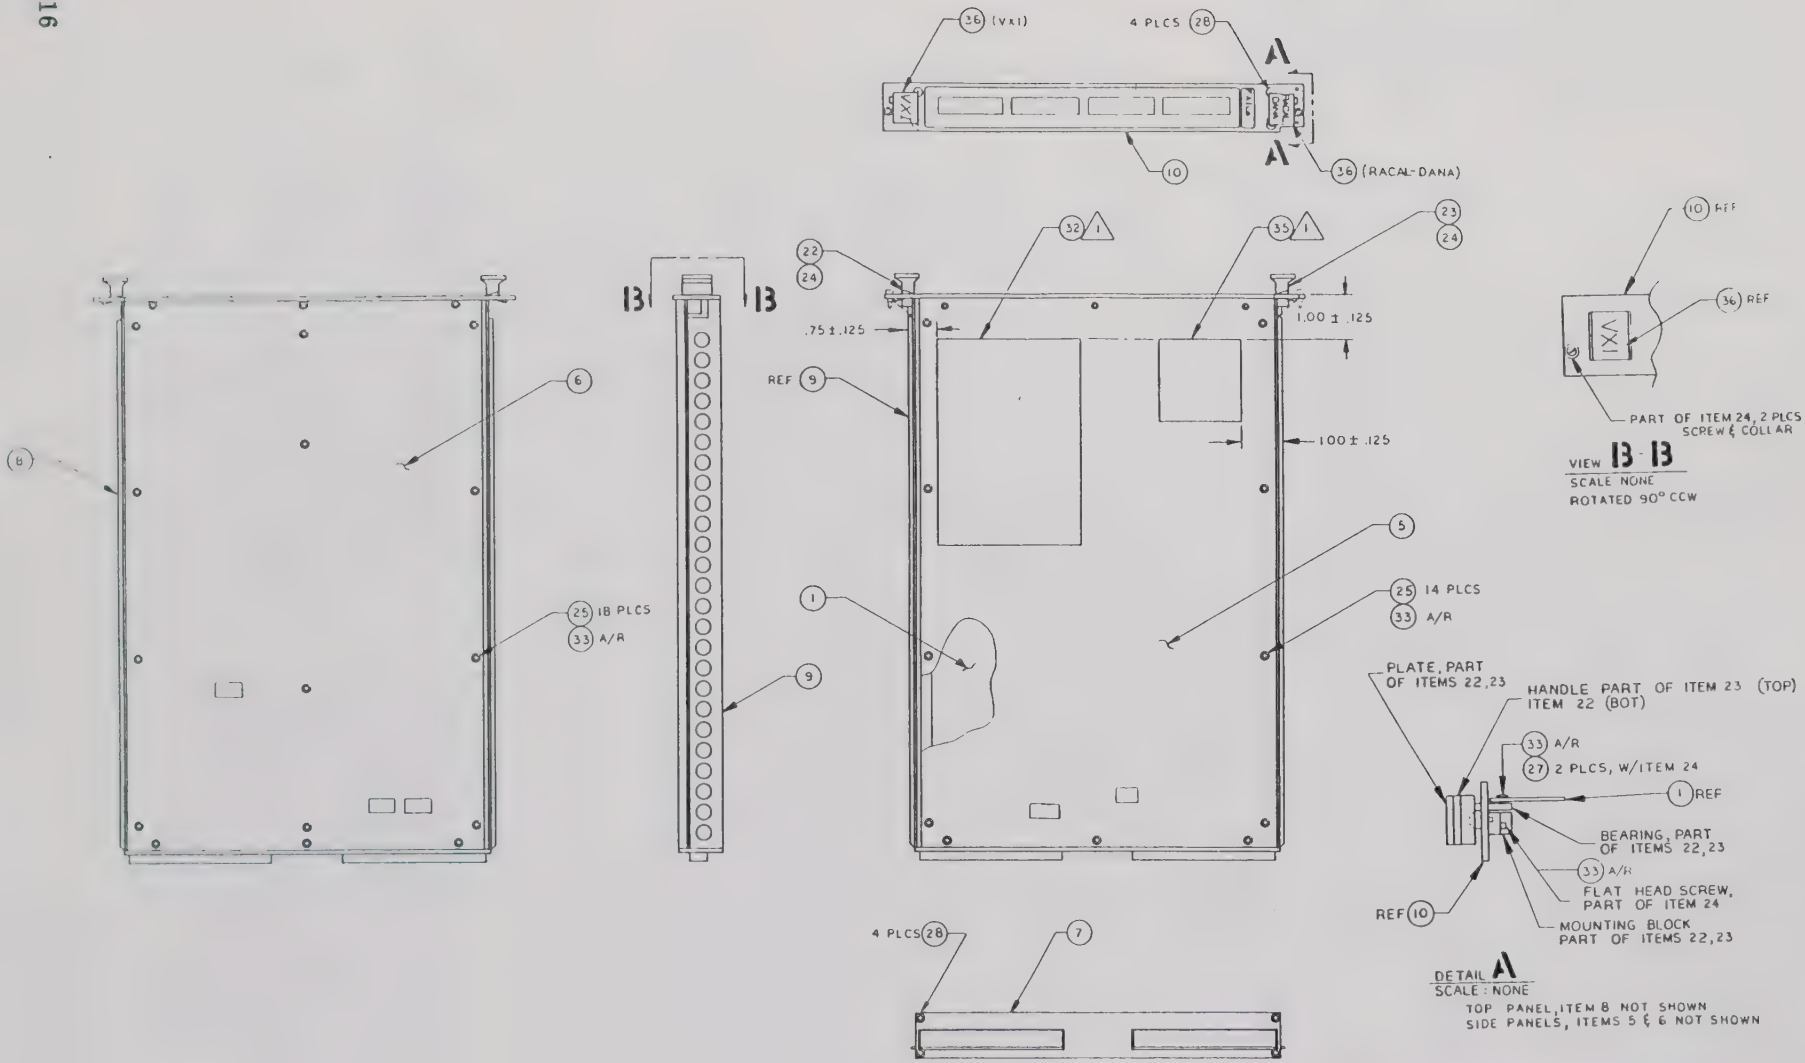

2 INCLUDE ITEM 2 (SHIPPING KIT) IN BOX WITH ASSY.

⚠ LOCATE LABELS WHERE SHOWN.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC.

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

FINAL ASSY, 1260-13

SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	404941	A

SCALE — SHEET 1 OF 2

COMPONENT SIDE

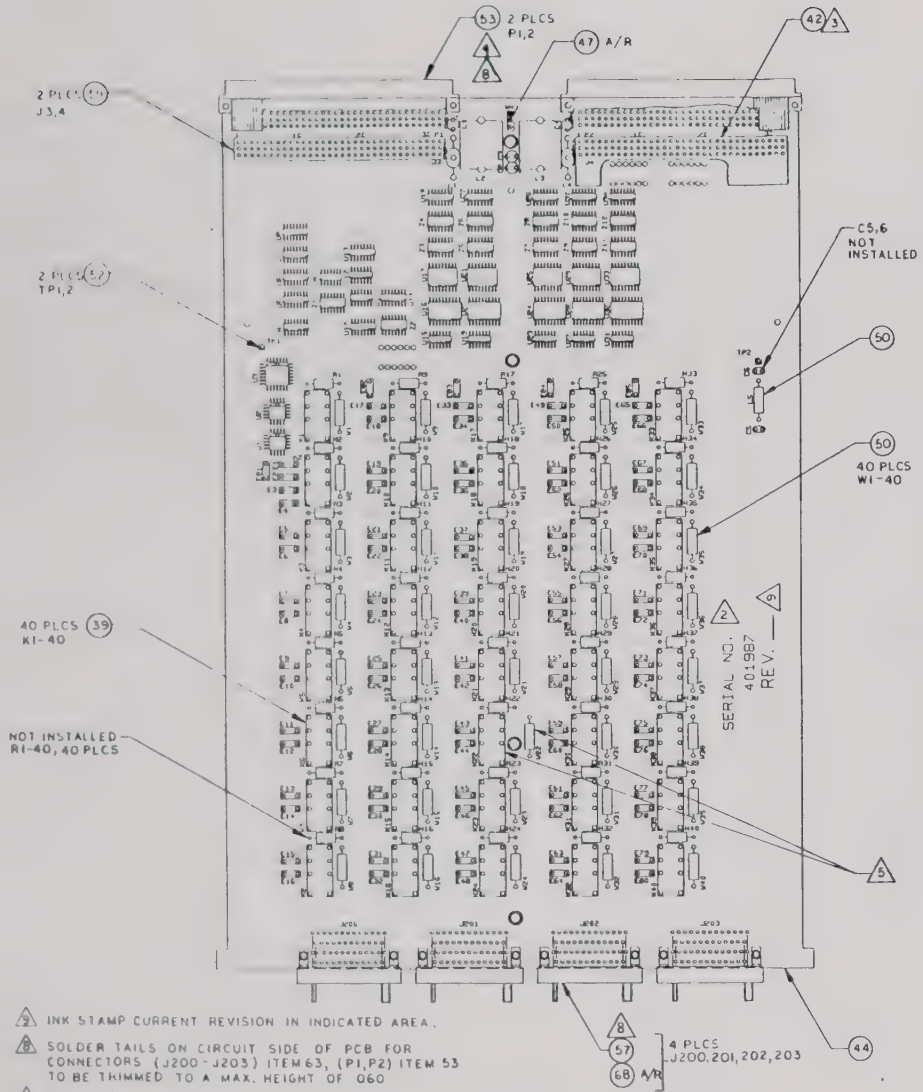

CIRCUIT SIDE

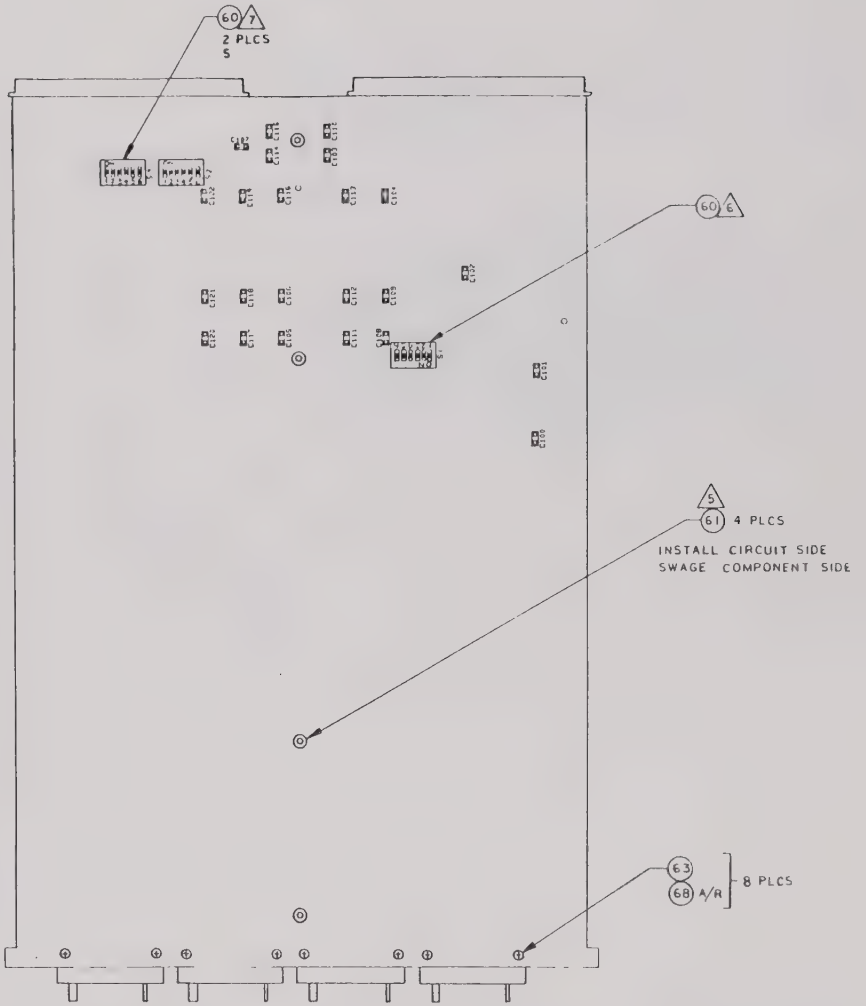

2 INK STAMP CURRENT REVISION IN INDICATED AREA.

8 SOLDER TAILS ON CIRCUIT SIDE OF PCB FOR CONNECTORS (J200-J203) ITEM 63, (P1,P2) ITEM 53 TO BE TRIMMED TO A MAX. HEIGHT OF .060

7 SET S2 & S3 (ITEM 60) TO ON POSITION. DO NOT WAVE SOLDER.

6 SET S1 (ITEM 60) TO LOGICAL ADDRESS 1 PER TABLE 1. DO NOT WAVE SOLDER.

5 K22 AND W22 TO BE INSTALLED AFTER INSTALLATION OF STANDOFF, ITEM 61.

4 P1 AND P2 MUST BE INSTALLED FLUSH AT RIGHT ANGLES TO PC BOARD

3 INSTALL (ITEM 42) PCB INTO (ITEM 59) J4.

2 INK STAMP SERIAL NUMBER ON COMPONENT SIDE IN INDICATED AREA.

1 REFERENCE SCHEMATIC 431987.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC.

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

PCB ASSY, 1260-13

SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	401987	A
SCALE NTS		SHEET 1 OF 4	

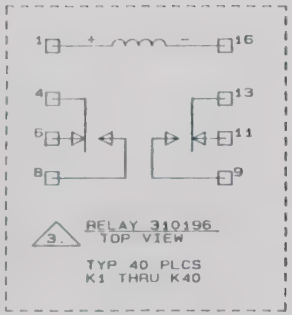

3. RELAY 310196
TOP VIEW

TYP 40 PLCS
K1 THRU K40

IC POWER AND GROUND CONNECTIONS

REF. DES.	IC TYPE	+5V PIN NO.	GND PIN NO.
U17, 21, 25, 29, 33	2803		9
U16, 20, 24, 28, 32	74HCT273	20	10
U14	74HCT85	16	8
U13	74LS138	16	8
U11, 12, 15, 19, 23, 27, 31	74HCT164	14	7
U10, 18, 22, 26, 30, 34	74HCT166	16	8
U9	LM339	3	12
U7, 8	26LS32	16	8
U6	26LS31	16	8
U4, 5	74HCT253	16	8
U3	231154 (22V10H)	28	14
U2	231153 (16R4)	20	10
U1	231152 (16L8Q)	20	10

HIGHEST REF. DES.
Z12
W41
U34
TP2
SW3
R40
P2
L5
K40
J203
E85
C122

4. C5, C6, R1 THRU R40 ARE NOT INSTALLED.

3. RELAYS K1 THRU K40 ARE RACAL DANA P/N 310196.
ALL RELAYS SHOWN IN DE-ENERGIZED POSITION.

2. RESISTOR NETWORKS ARE IN OHMS.

1. CAPACITOR VALUES ARE IN MICROFARADS, 50V, +/-20% UNLESS OTHERWISE SPECIFIED.

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE
SCHEM, 1260-13

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431987	A

SCALE | SHEET 1 OF 14

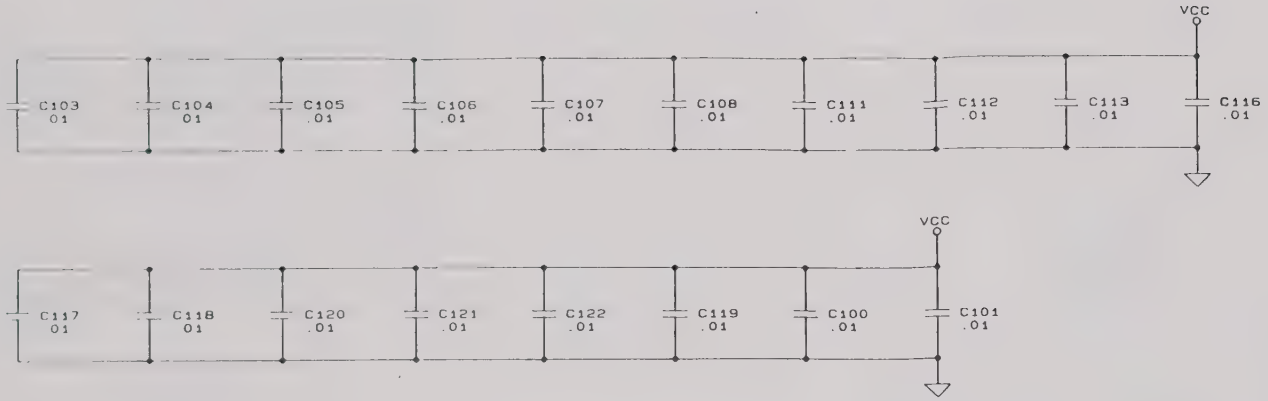

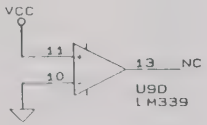

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431987	A
SCALE		SHEET 2 OF 14	

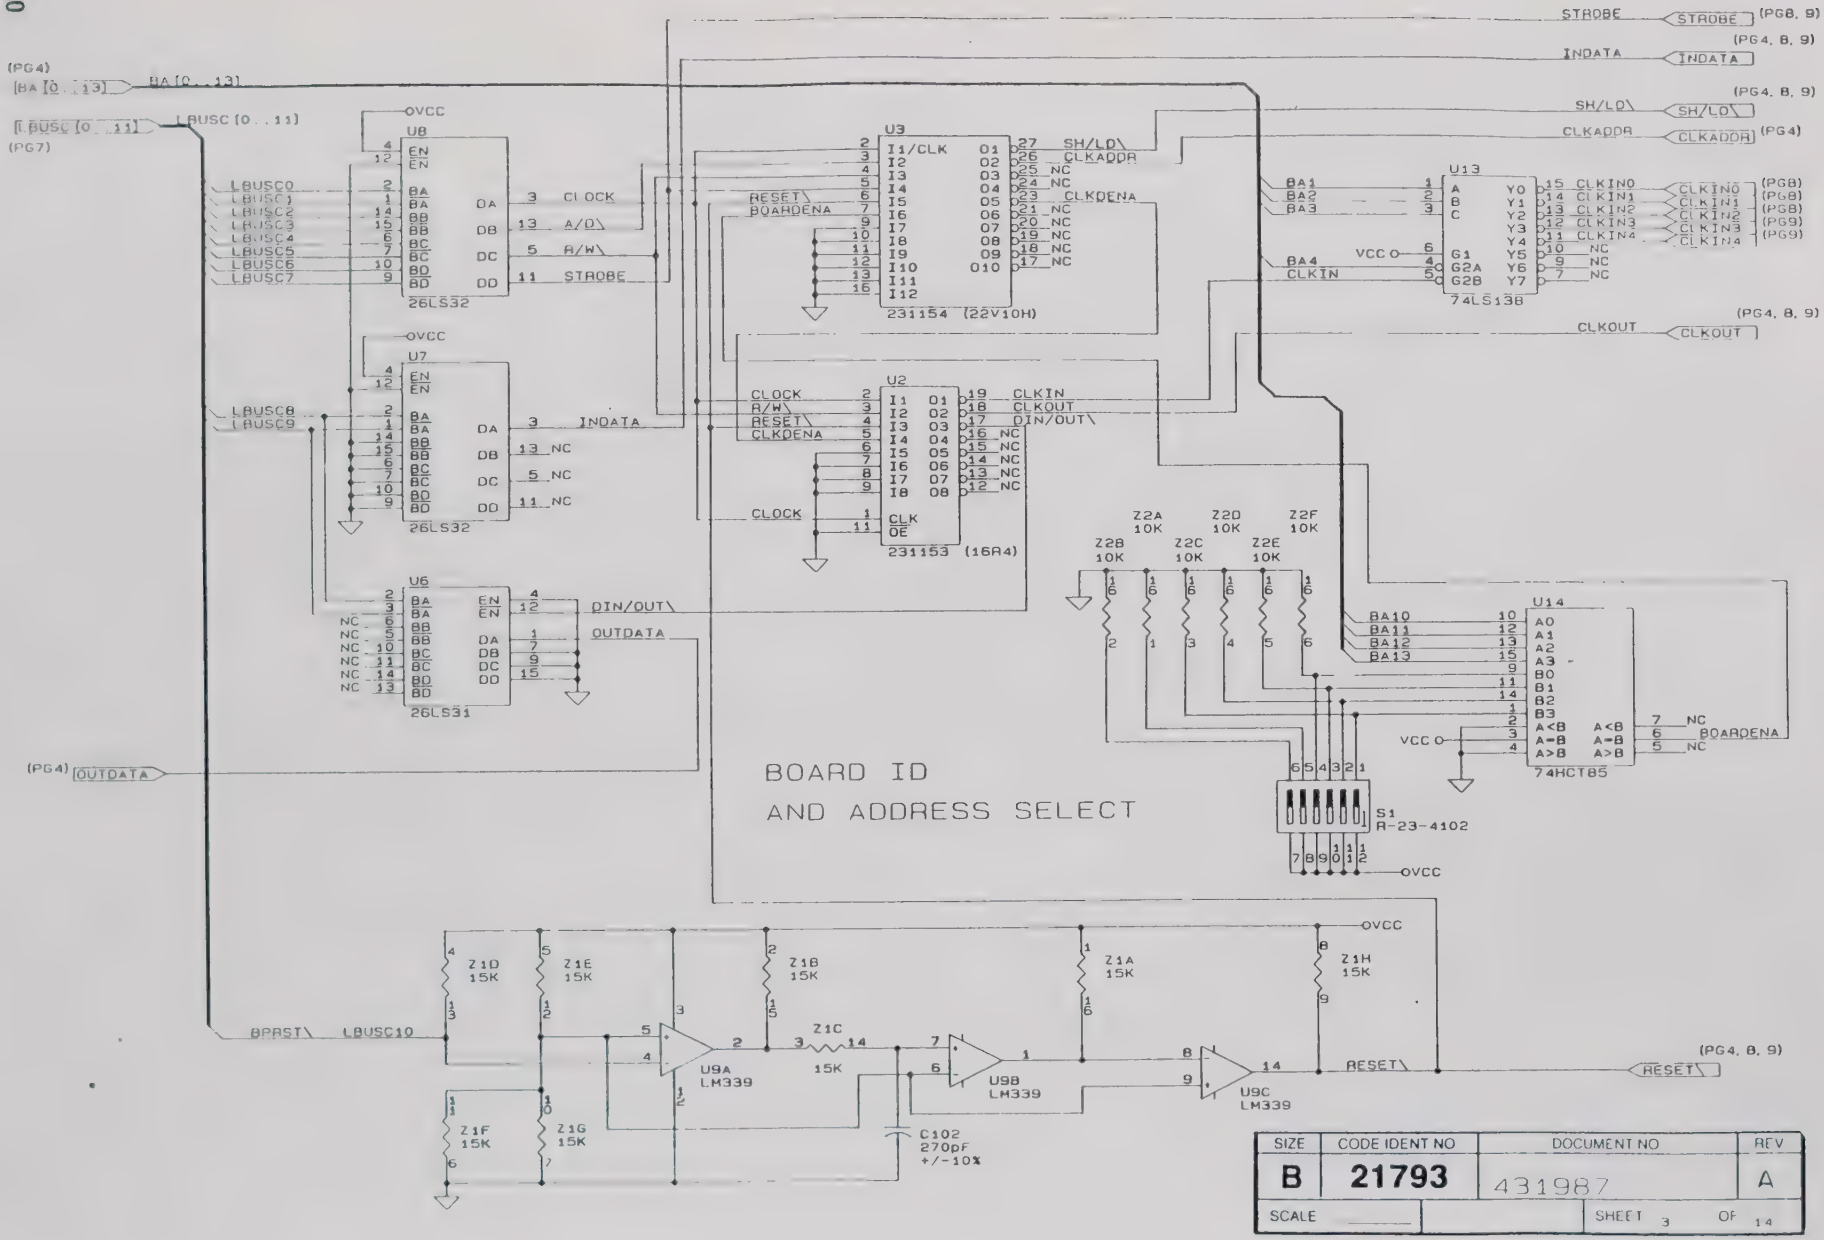

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431987	A
SCALE		SHEET 3 OF 14	

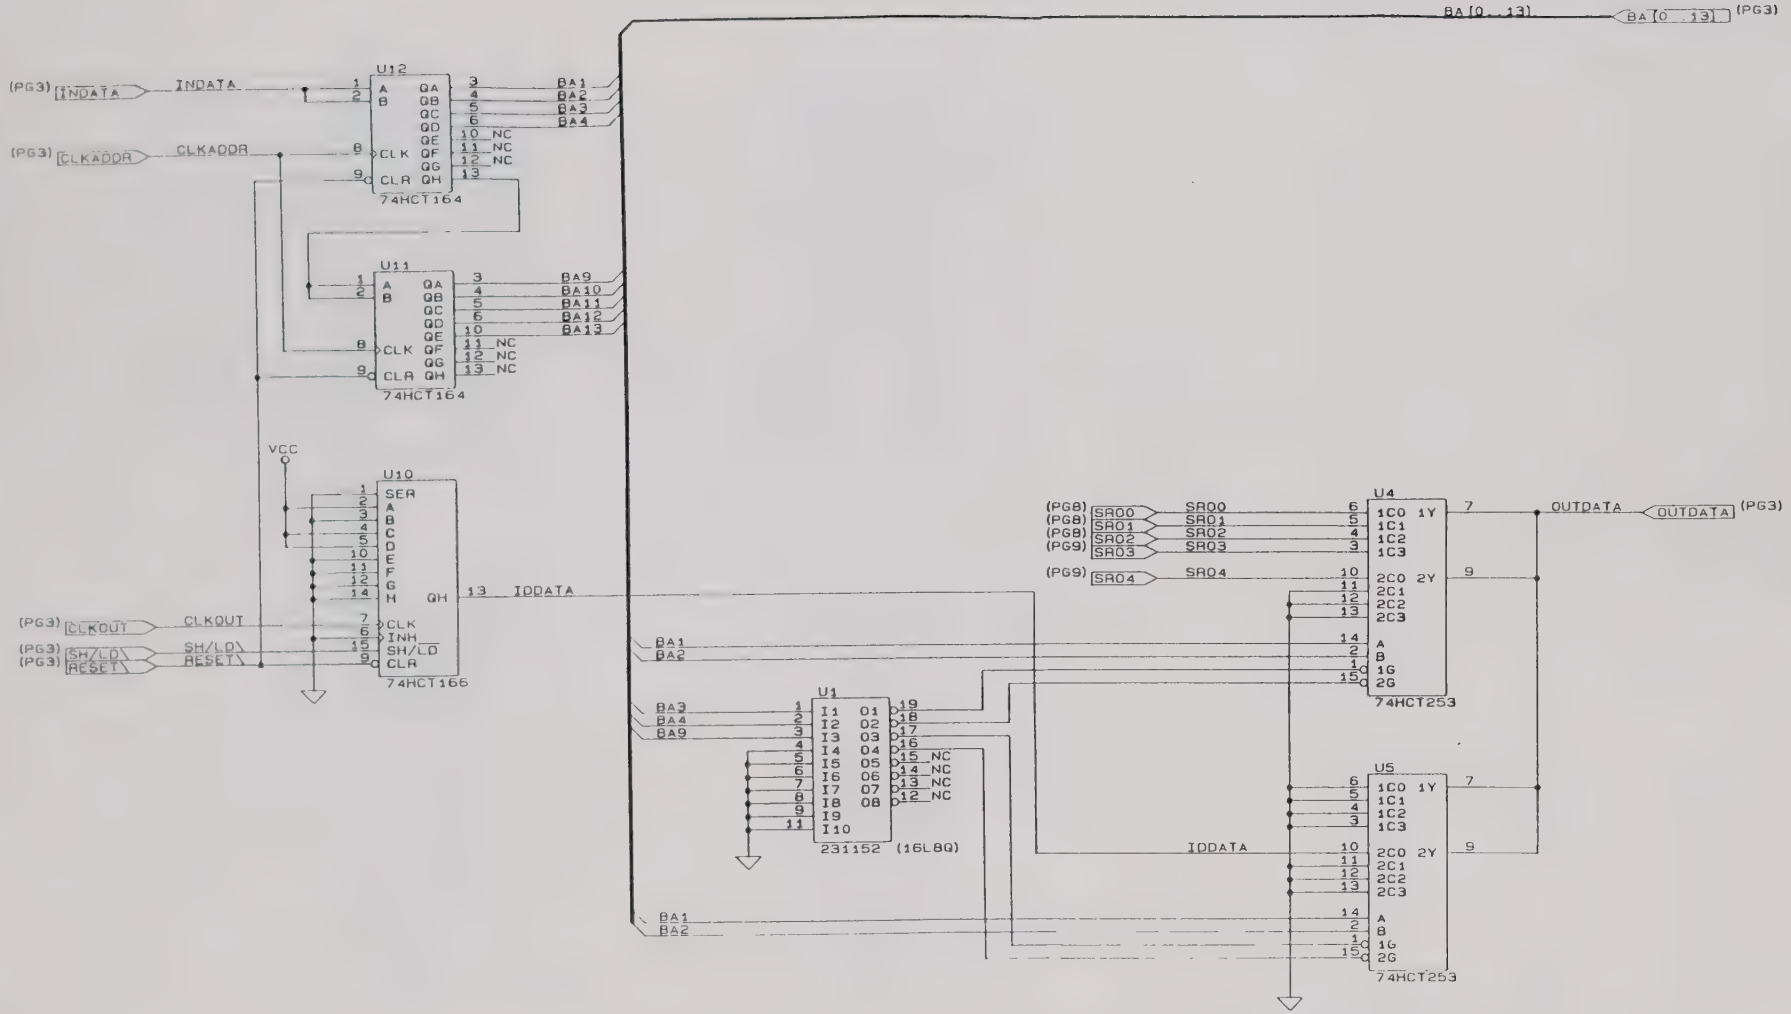

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431987	A
SCALE		SHEET 4 OF 14	

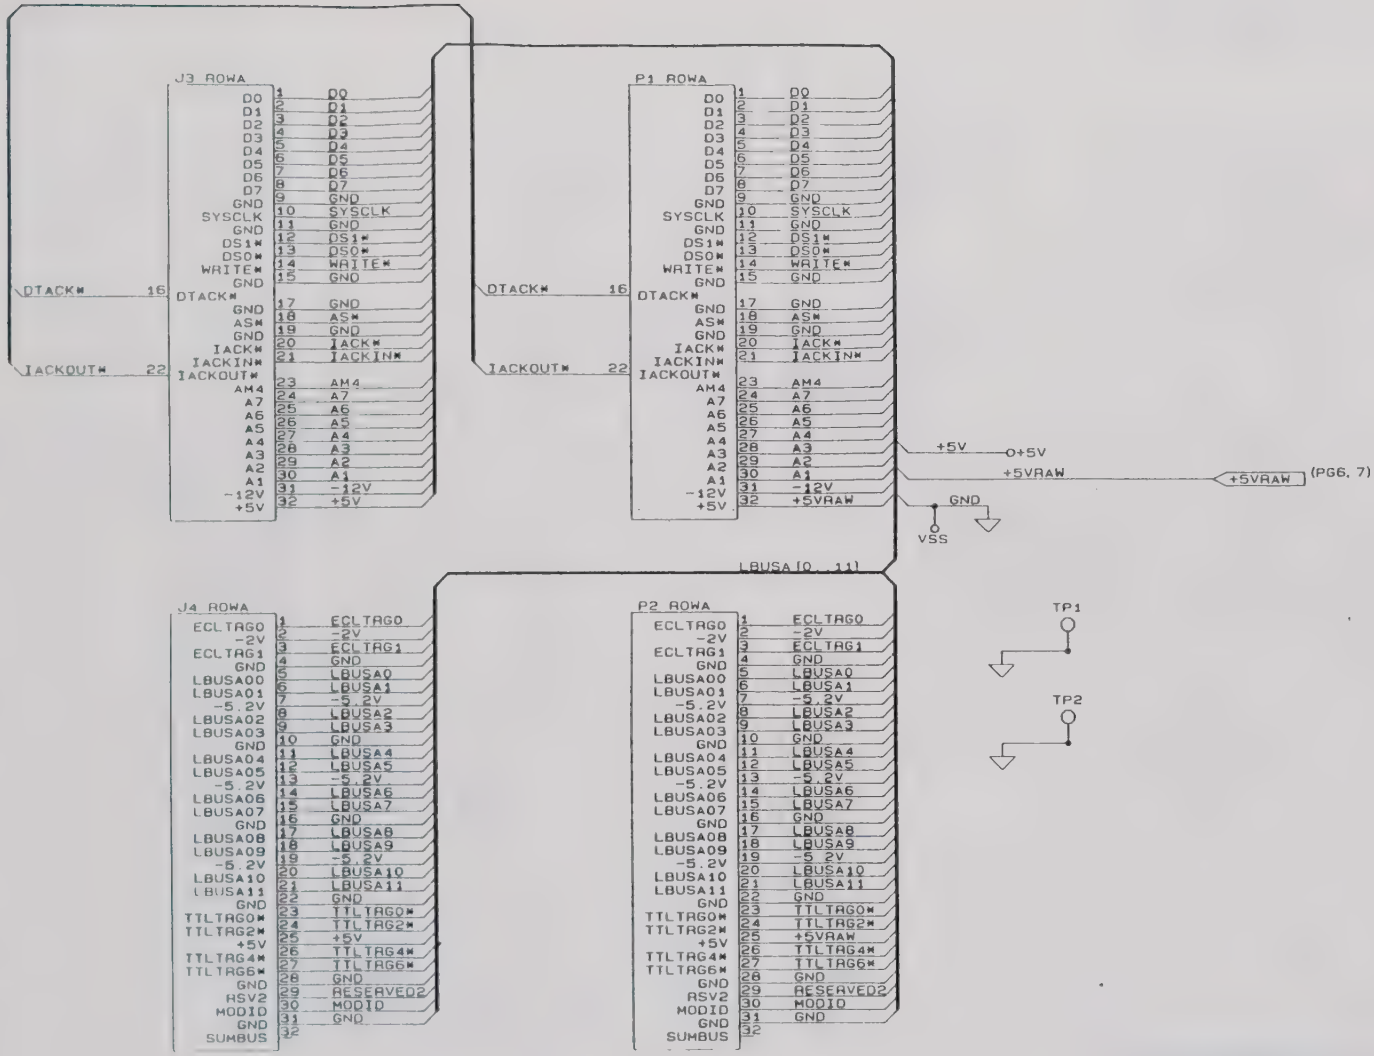

SIZE	CODE IDENT NO.	DOCUMENT NO.	REV
B	21793	431987	A
SCALE		SHEET 5	OF 14

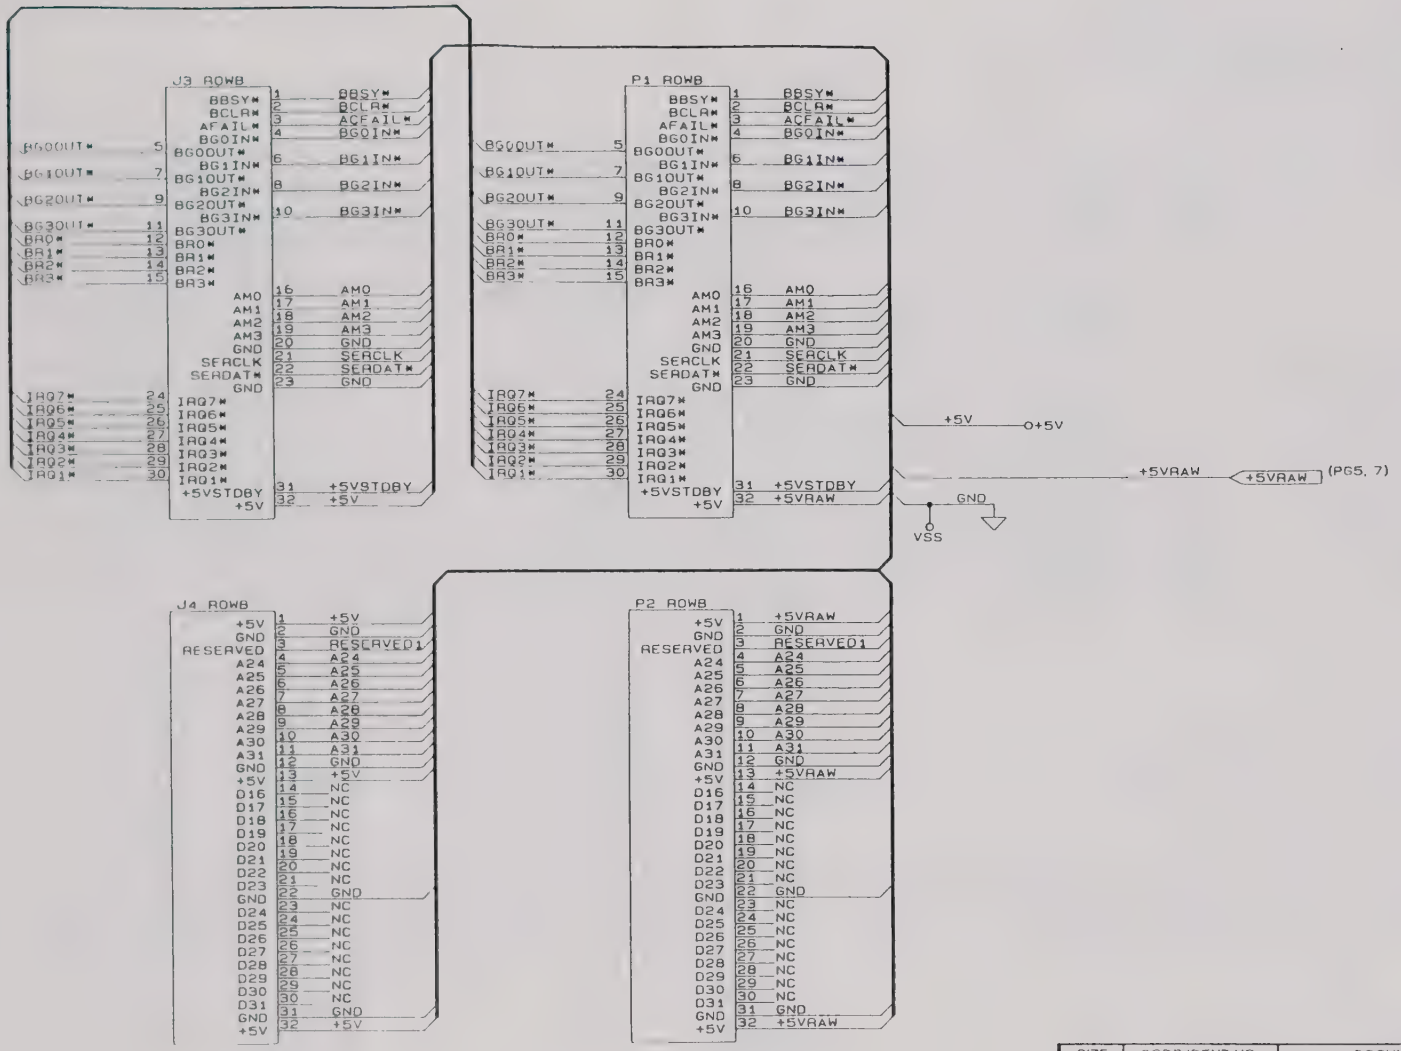

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431987	A
SCALE		SHEET 6 OF 14	

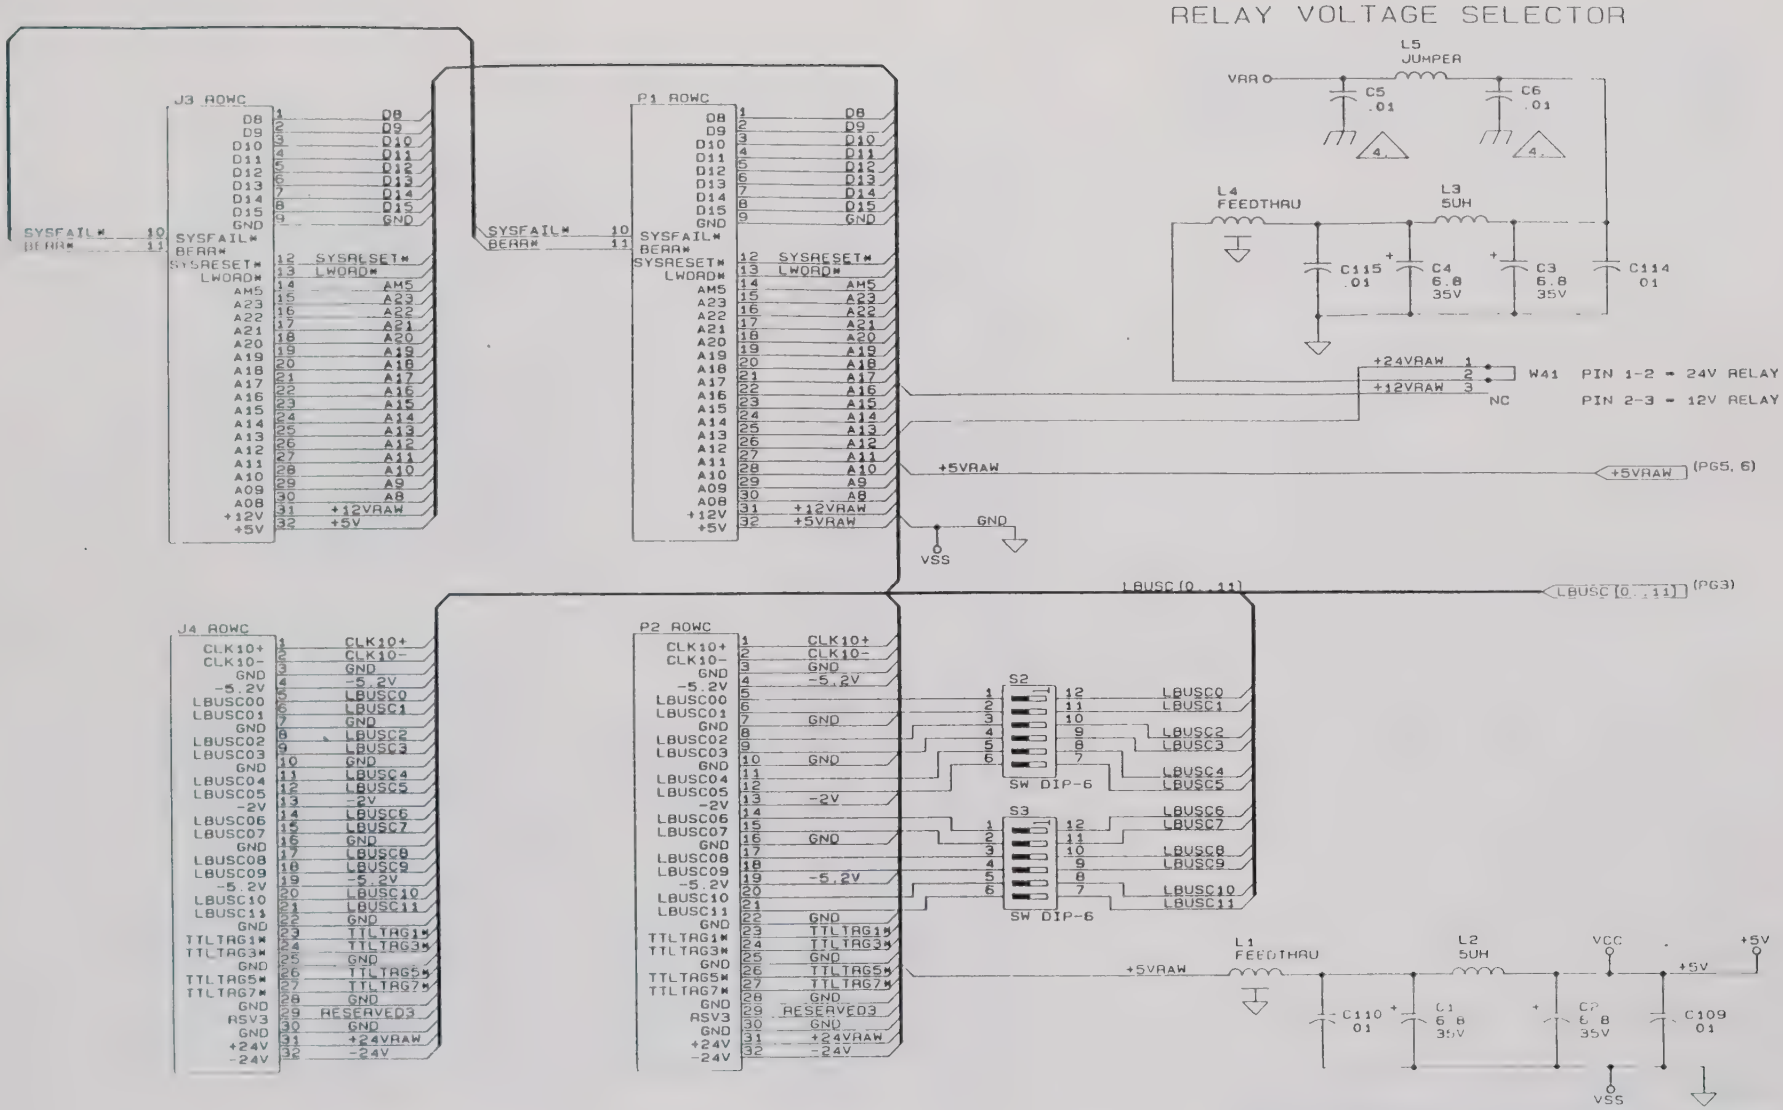

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431987	A
SCALE		SHEET 7 OF 14	

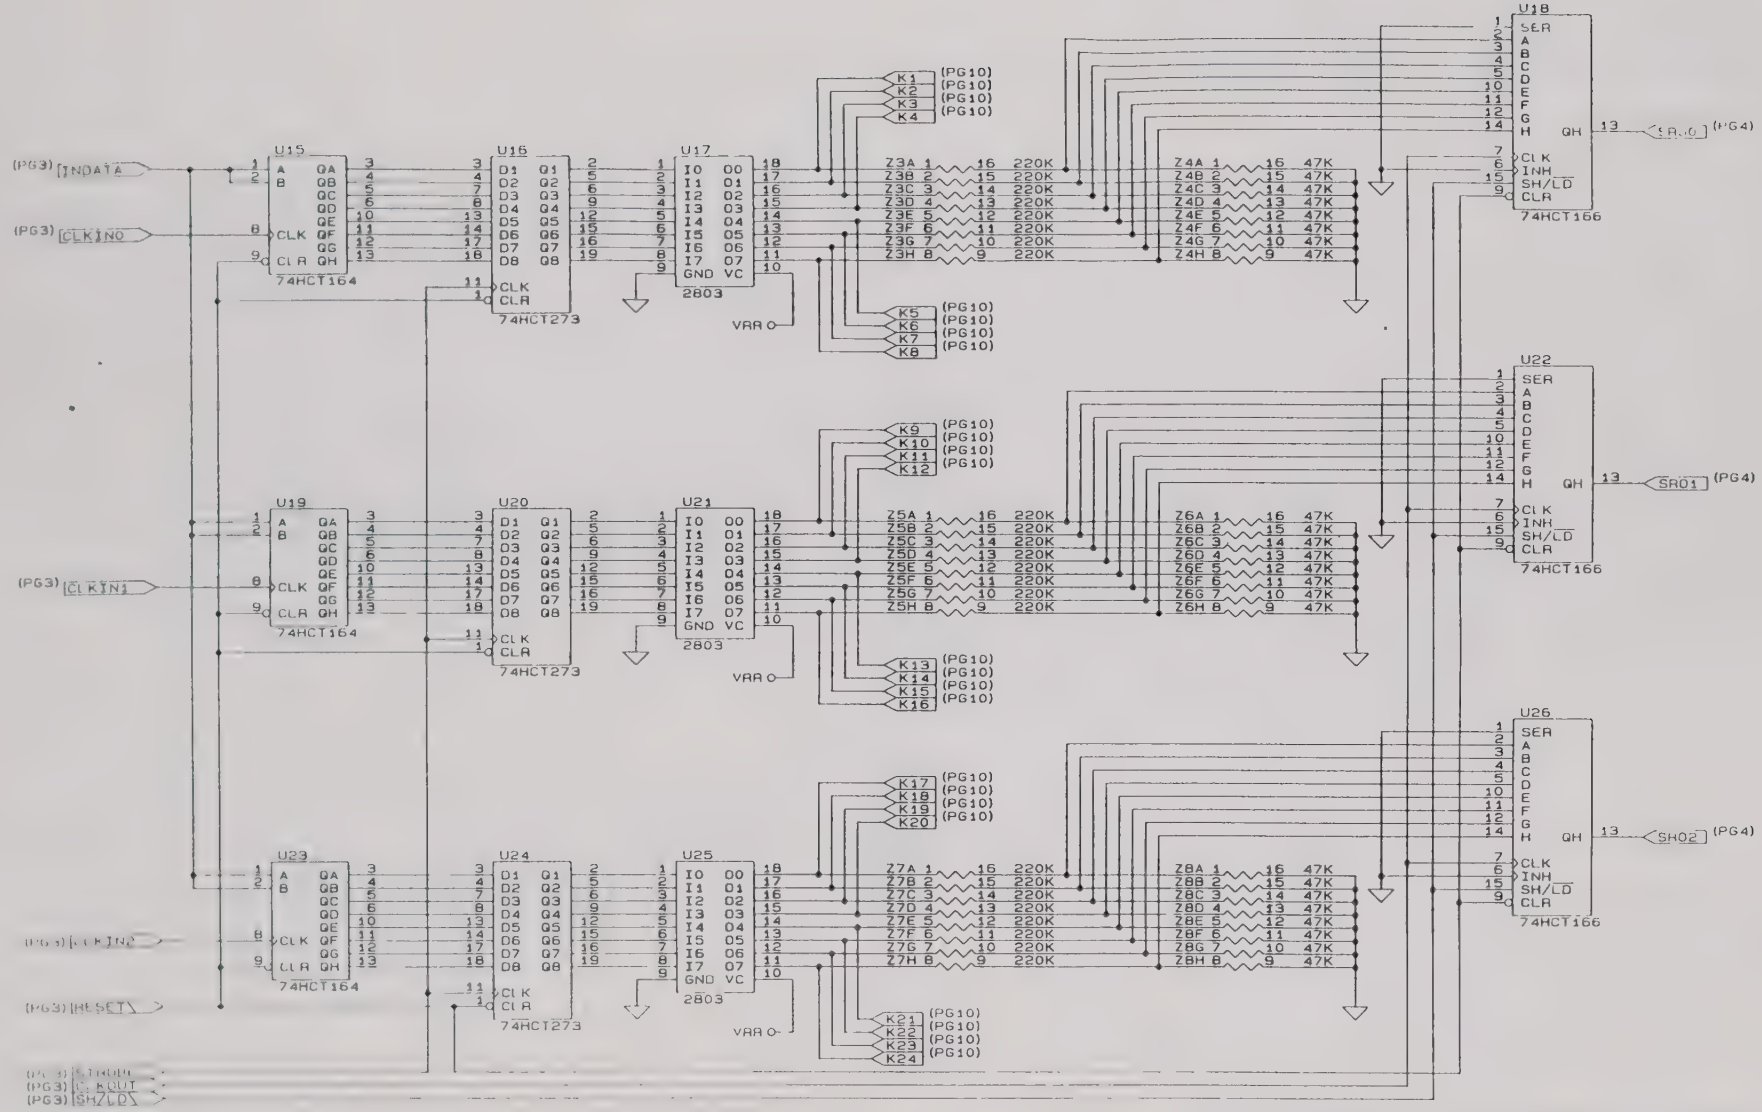

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431987	A
SCALE		SHEET 8 OF 14	

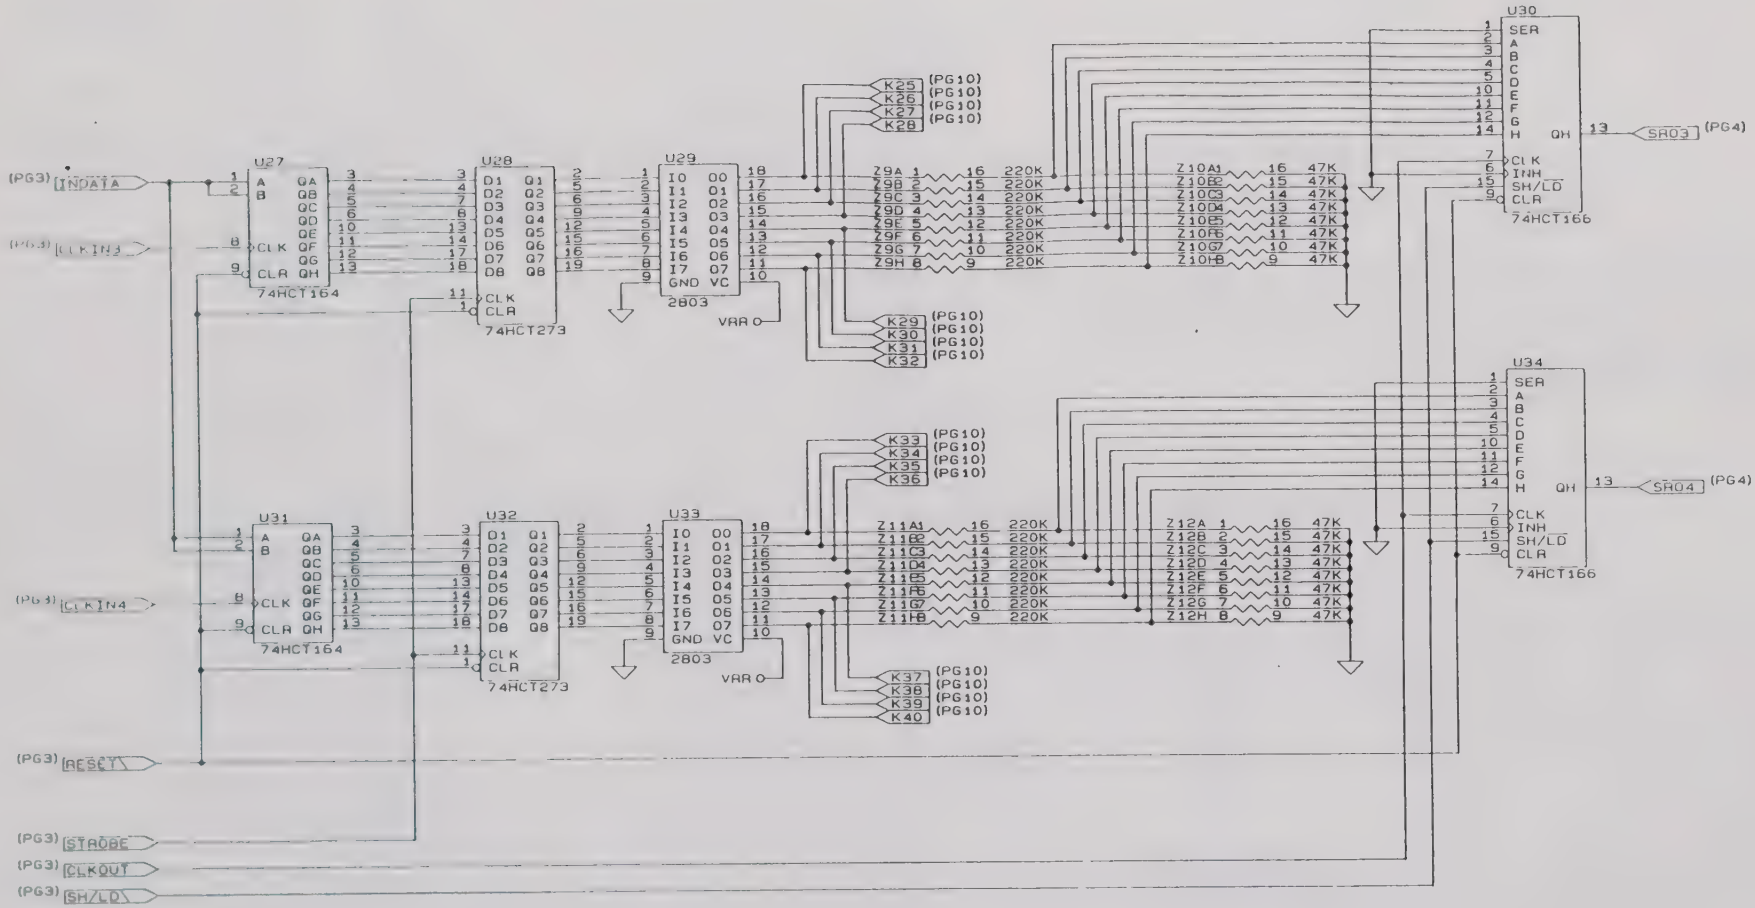

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431987	A
SCALE		SHEET 9 OF 14	

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431987	A
SCALE ____ ____		SHEET 10 OF 14	

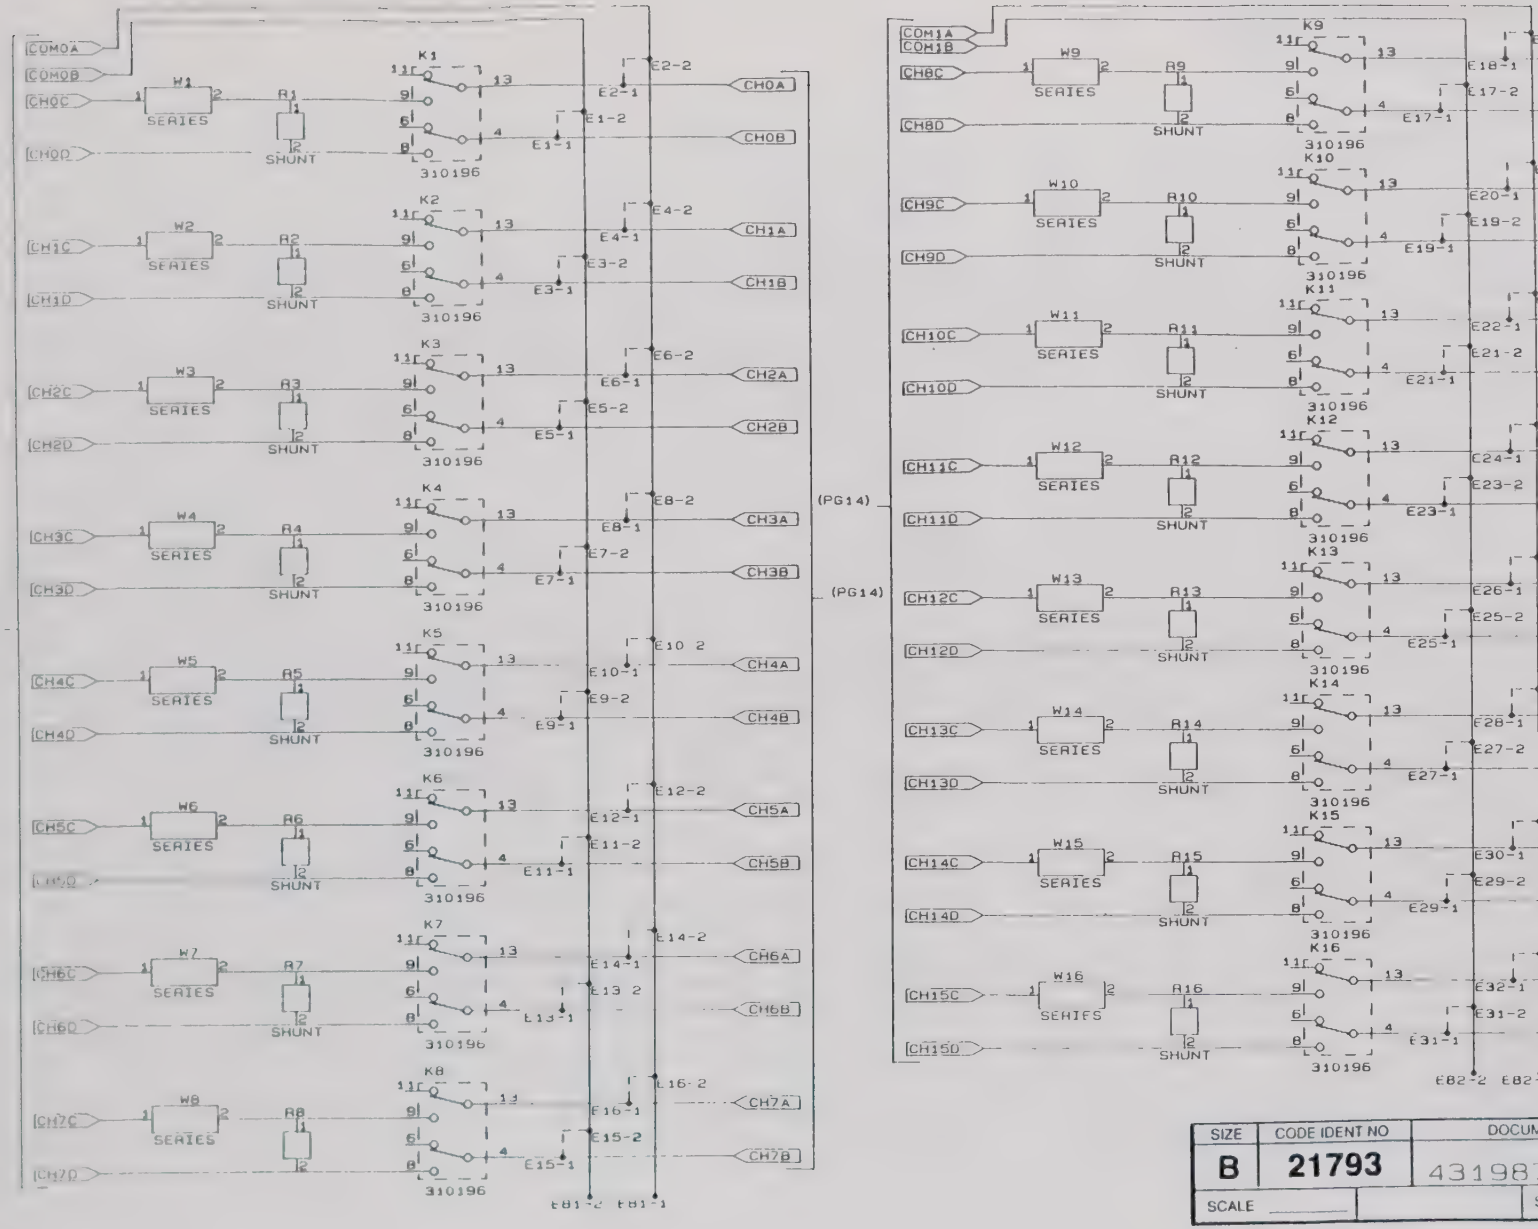

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431987	A
SCALE		SHEET 11 OF 14	

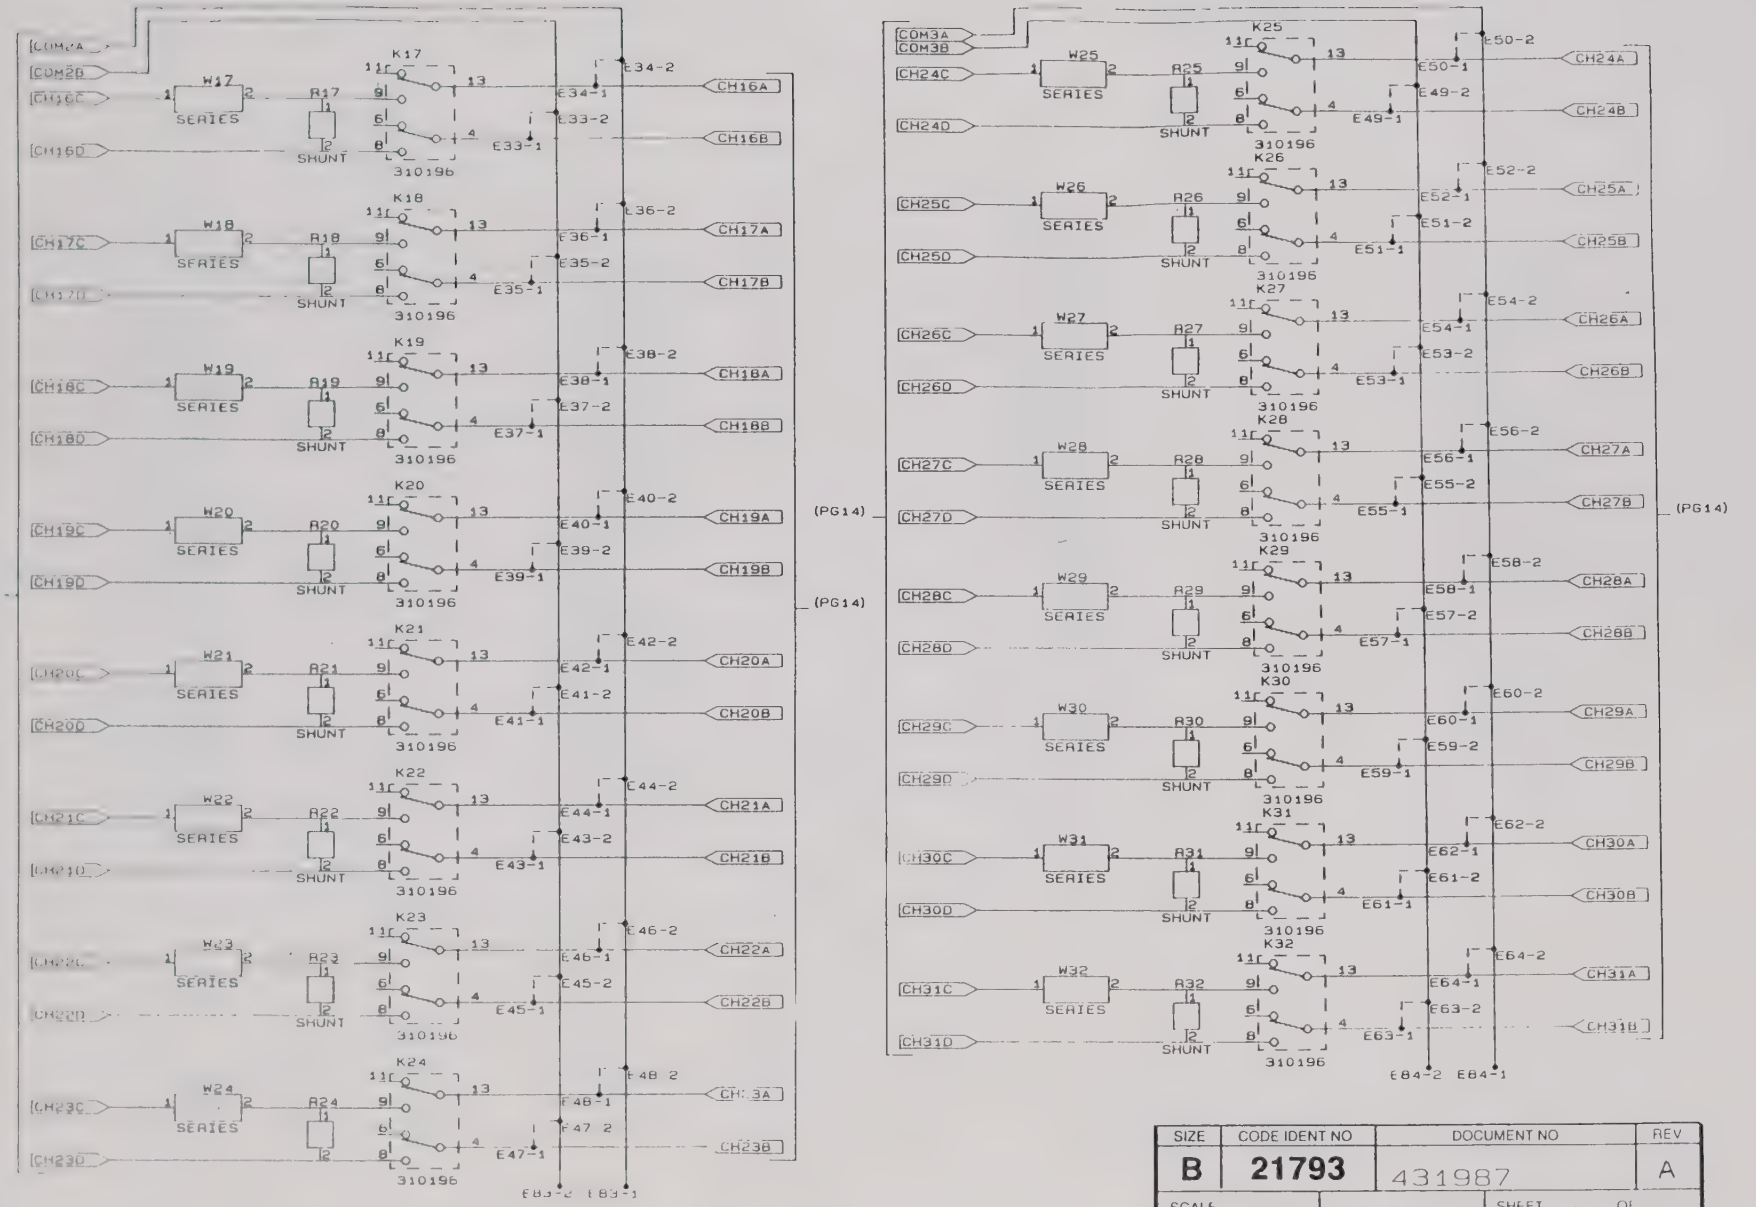

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431987	A
SCALE			SHEET 12 OF 14

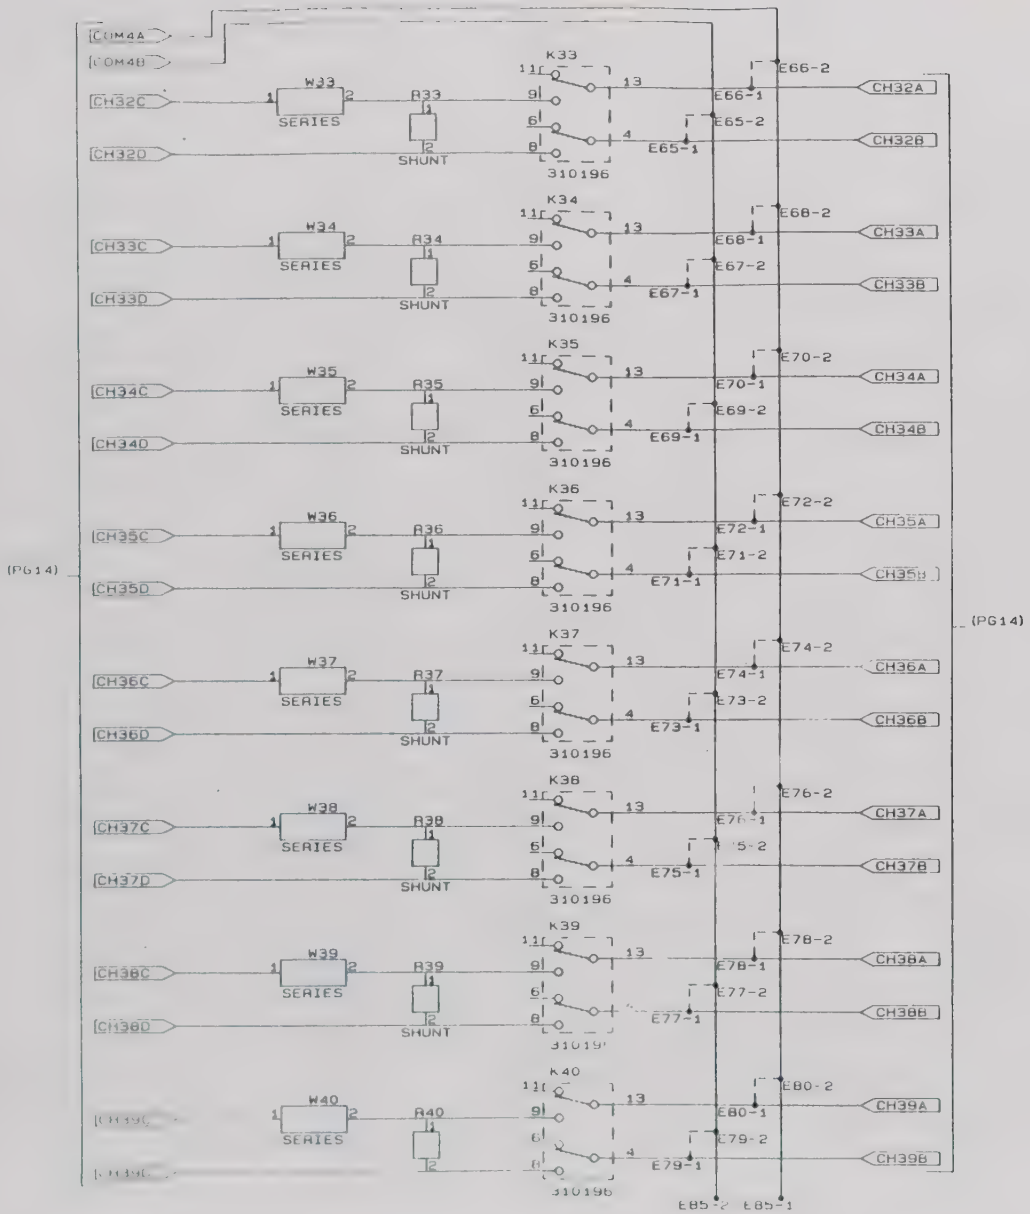

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431987	A
SCALE		SHEET 13 OF 14	

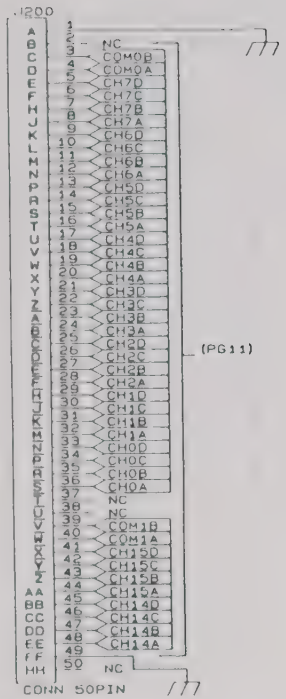

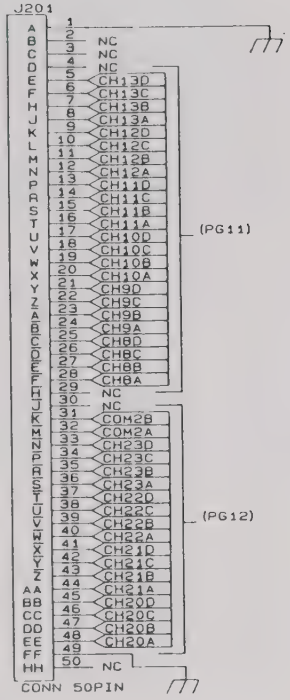

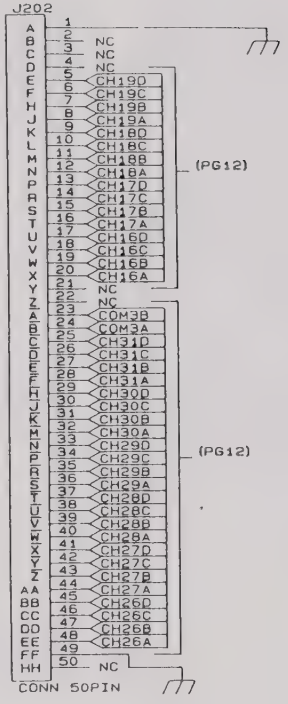

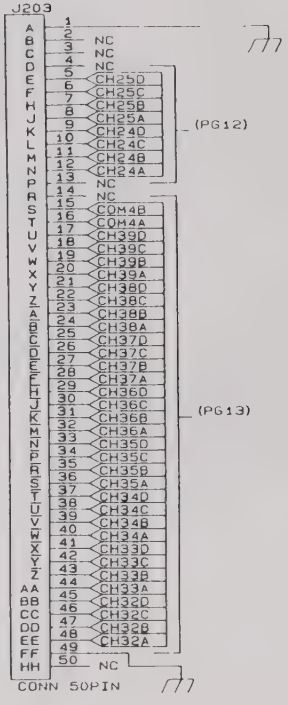

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431987	A
SCALE		SHEET 14 OF 14	

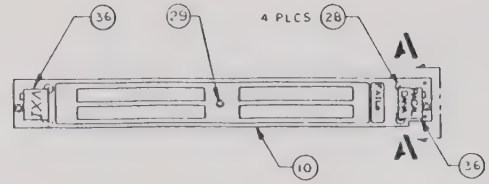

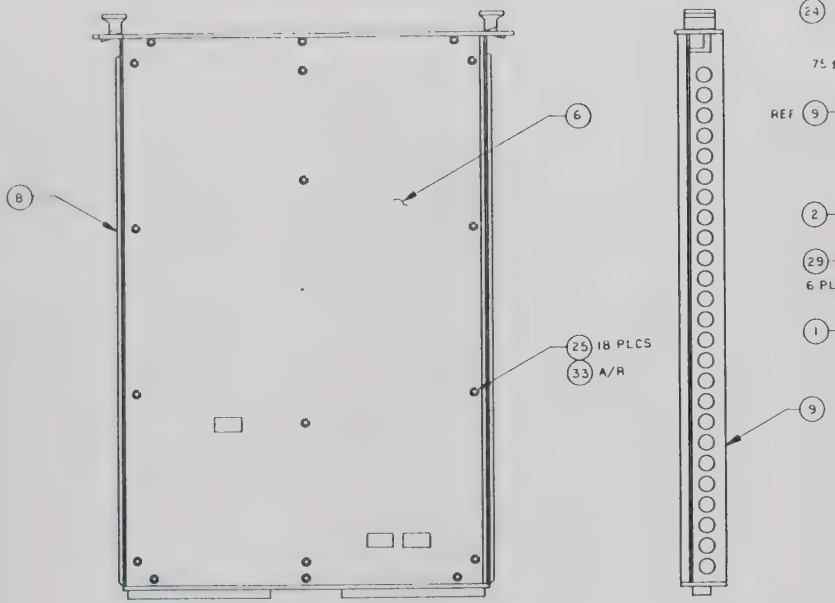

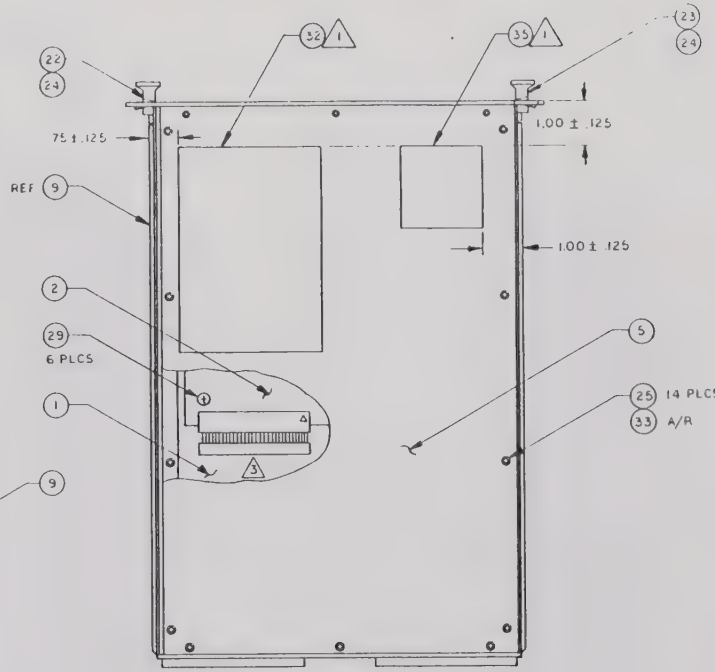

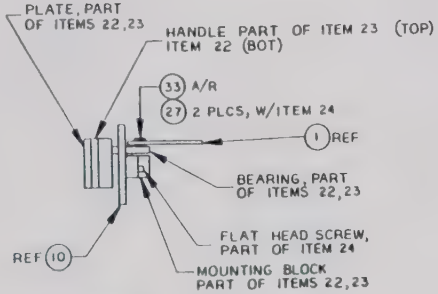

DETAIL A
SCALE NONE

TOP PANEL, ITEM 8 NOT SHOWN
SIDE PANELS, ITEMS 5 & 6 NOT SHOWN

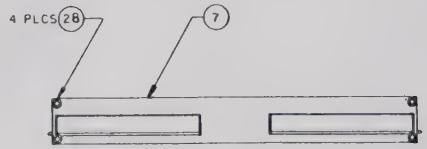

1. CONNECT CABLE FROM ITEM 1 TO ITEM 2 AS SHOWN.
2. INCLUDE ITEM 38 (SHIPPING KIT) IN BOX WITH ASSY
3. LOCATE LABELS WHERE SHOWN.
4. PRESS TO THE HANDLE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE CALIFORNIA 92714

DOCUMENT TITLE			
FINAL ASSY, 1260-35			
SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	404944	B
SCALE —		SHEET 1 OF 2	

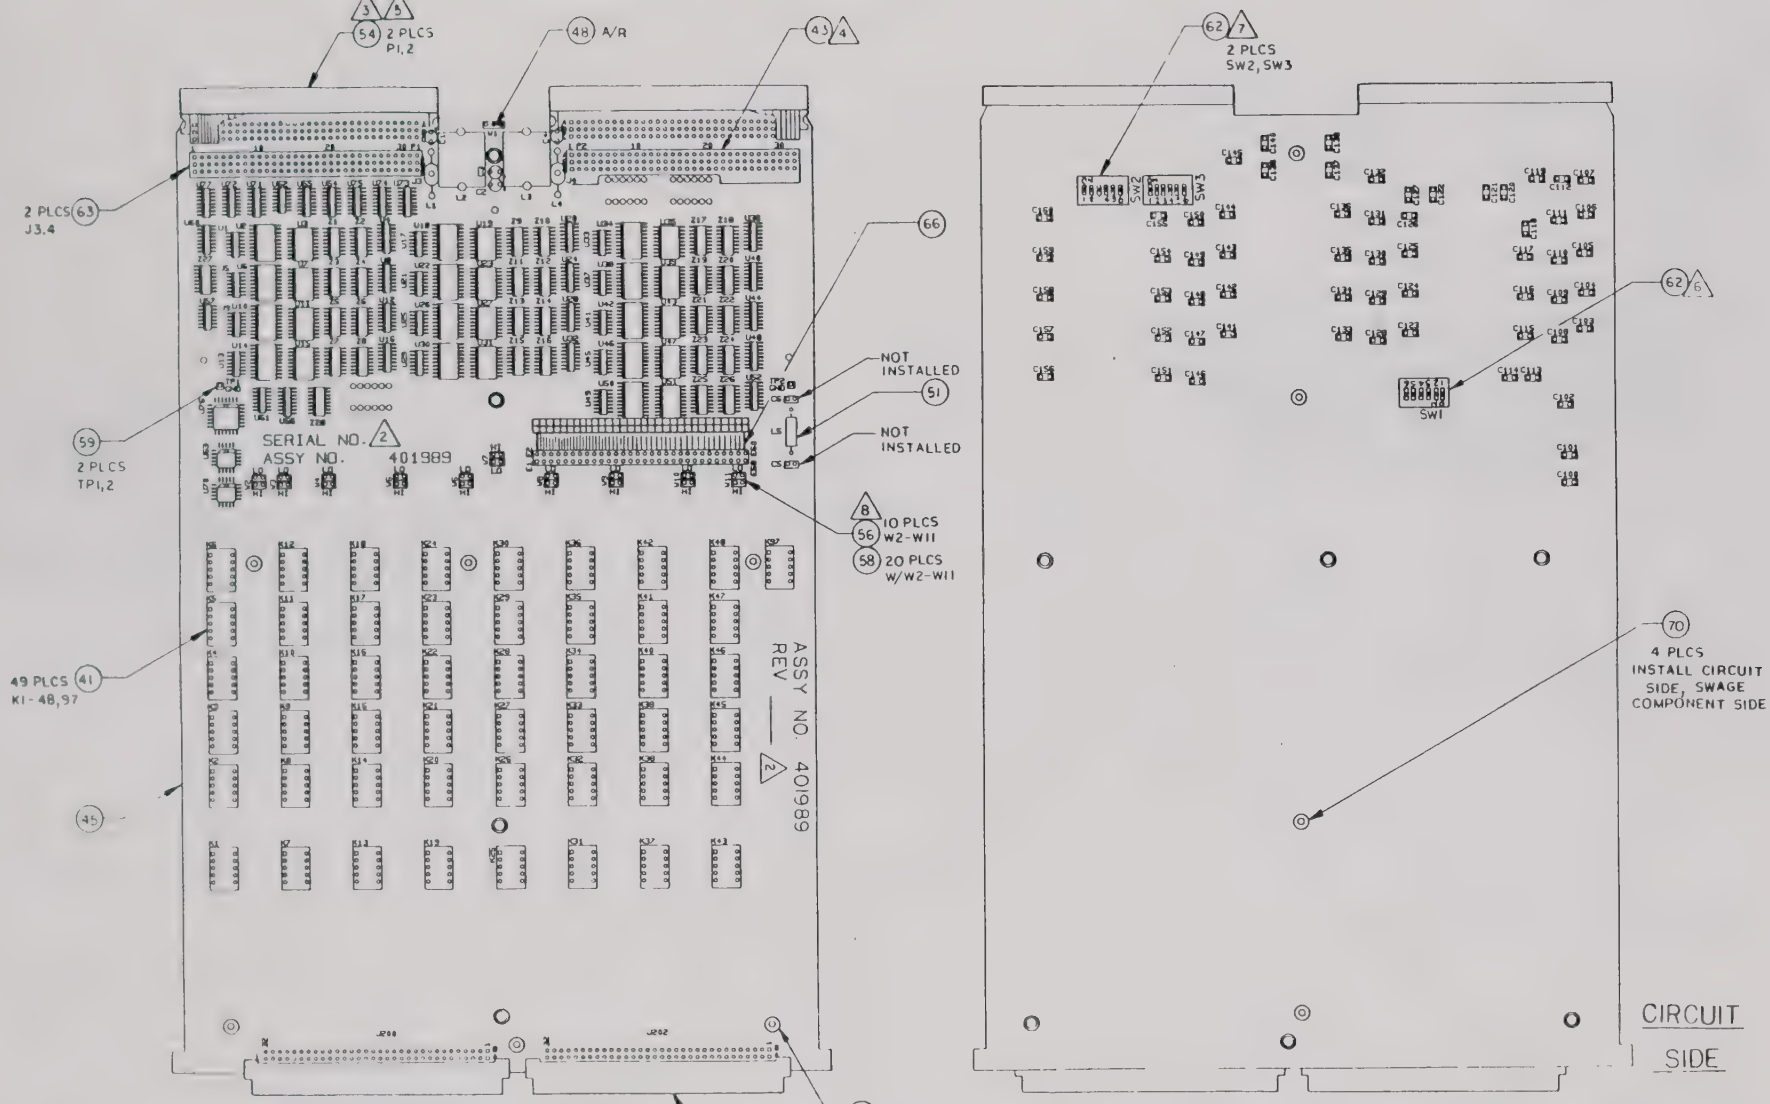

5 P1 AND P2 MUST BE INSTALLED FLUSH AT RIGHT ANGLE TO PCB.

4 INSTALL (ITEM 43) PCB INTO (ITEM 63) J4.

3 SOLDER TAILS ON CIRCUIT SIDE OF PCB FOR P1,P2 (ITEM 54) TO BE TRIMMED TO A MAX. HEIGHT OF .060.

2 INK STAMP SERIAL NUMBER, ASSY NUMBER & CURRENT REVISION ON COMPONENT SIDE APPROX. WHERE SHOWN.

1. REFERENCE SCHEMATIC 431989.

NOTES UNLESS OTHERWISE SPECIFIED

8 INSTALL PLUG-JUMPER (ITEM 58) ONTO W2-W11 (ITEM 56) AS SHOWN.

7 SET SW2 & SW3 (ITEM 62) TO ON POSITION. DO NOT WAVE SOLDER.

6 SET SW1 (ITEM 62) TO LOGICAL ADDRESS 1 PER TABLE 1. ALSO SET SW1 POSITION 5 TO ON. DO NOT WAVE SOLDER

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC. BE USED, RELEASED OR DISCLOSED IN WHOLE OR IN PART, OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE: PCB ASSY, 1260-35

SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	401989	A

SCALE — SHEET 1 OF 4

REF. DES.	IC TYPE	+5V PIN NO.	GND PIN NO.
U76	231154 (22V10H)	28	14
U75	26LS31	16	8
U73, 74	26LS32	16	8
U71, 72, 77	74HCT253	16	8
U70	231152-001 (16L8Q)	20	10
U57	LM339	3	12
U56	74HCT85	16	8
U54, 55	74LS138	16	8
U53	231153 (16R4)	20	10
U4, 8, 12, 16, 20, 24, 28 U32, 36, 40, 44, 48, 52, 60	74HCT166	16	8
U3, 7, 11, 15, 19, 23, U27, 31, 35, 39, 43, 47, 51	2803	NC	9
U2, 6, 10, 14, 18, 22, U26, 30, 34, 38, 42, 46, 50	74HCT273	20	10
U1, 5, 9, 13, 17, 21, 25, 29 U33, 37, 41, 45, 49, 61, 62	74HCT164	14	7

IC POWER AND GROUND CONNECTIONS

HIGHEST REF. DES.
Z28
W11
U77
TP2
SW3
P2
L5
K97
J202
E60
C160

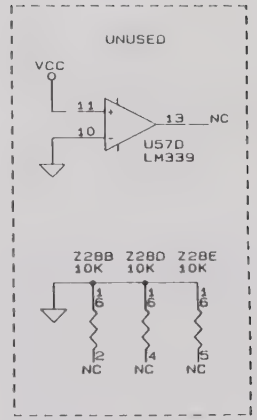

4. C5 AND C6 ARE NOT INSTALLED.

3. RELAYS K1 THRU K48,K97 ARE RACAL-DANA P/N 310197. ALL RELAYS SHOWN IN DE-ENERGIZED POSITION.

2. RESISTOR NETWORKS ARE IN OHMS.

1. CAPACITOR VALUES ARE IN MICROFARADS, 50V, +/-20% UNLESS OTHERWISE SPECIFIED.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

SCHEM, 1260-35

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431989	A

SCALE | SHEET 1 OF 17

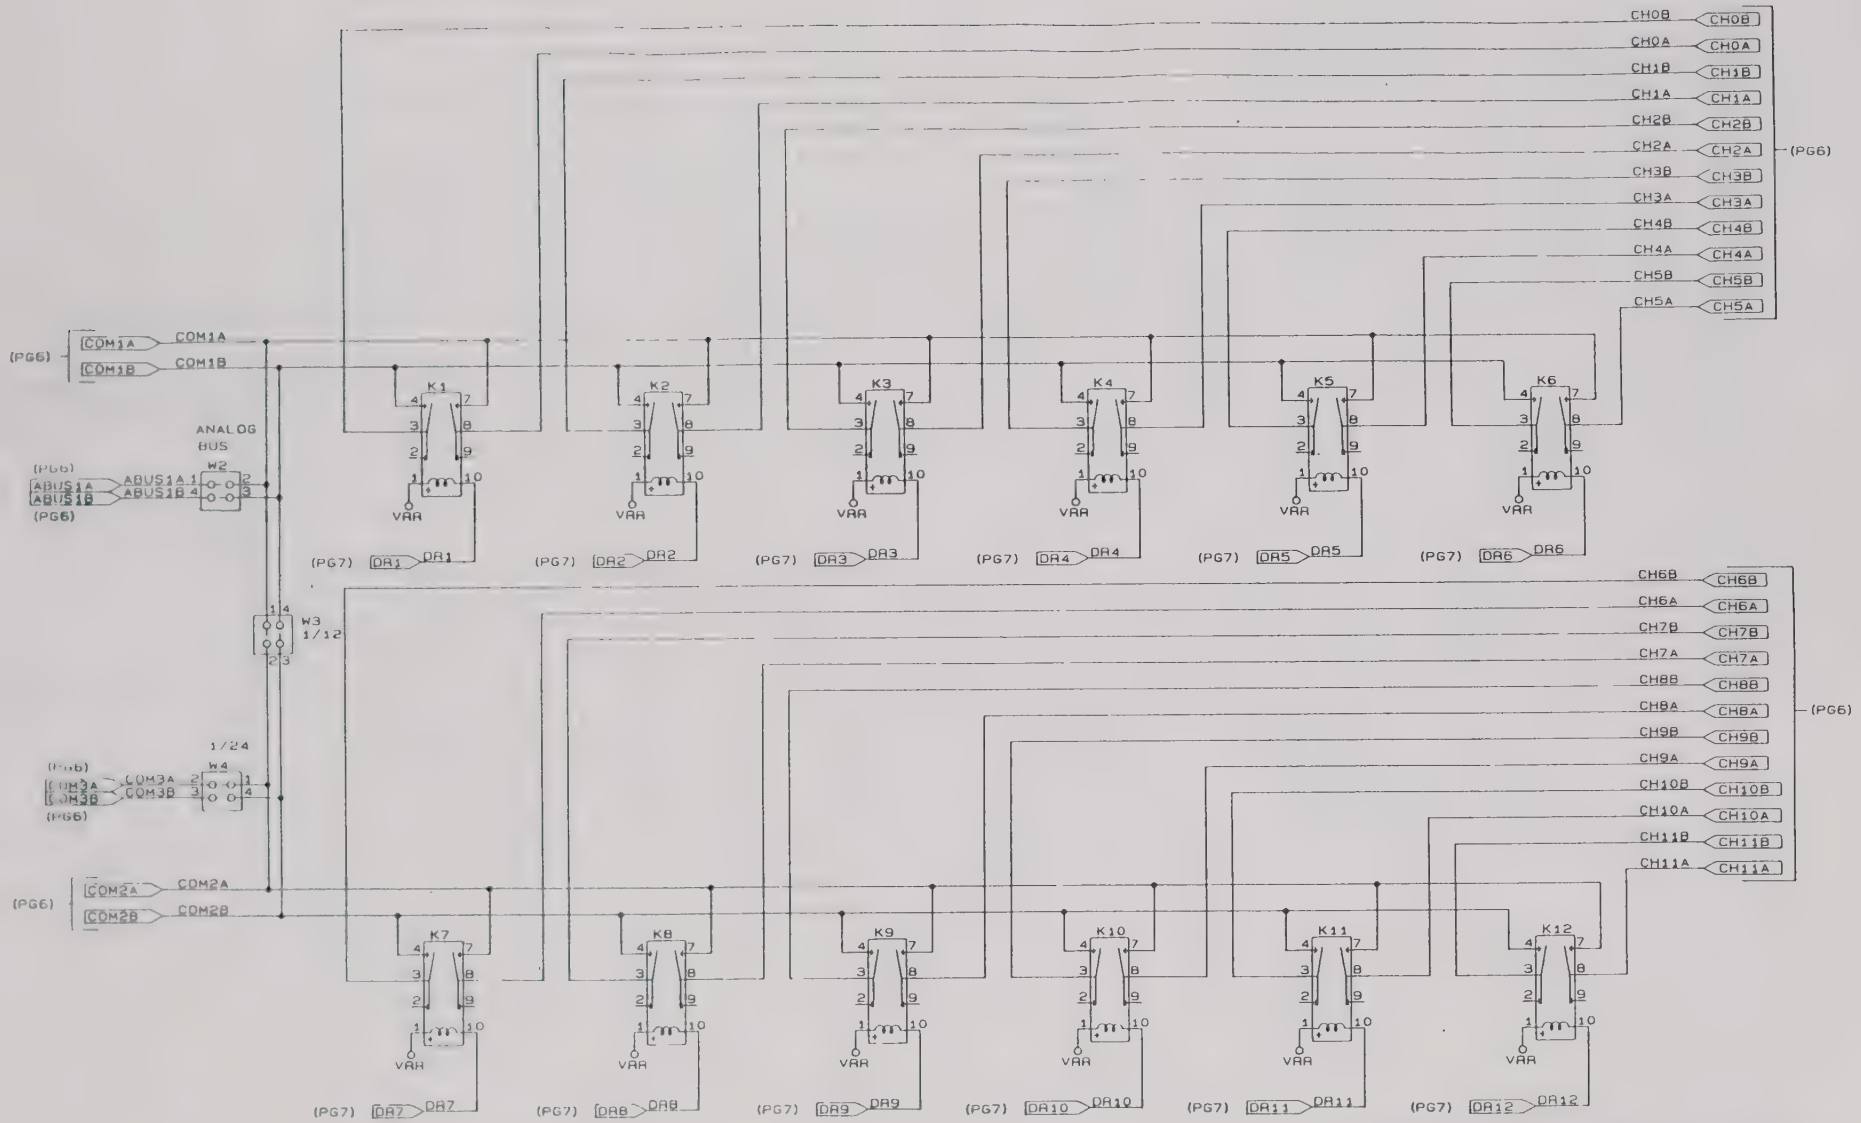

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 2	OF 17

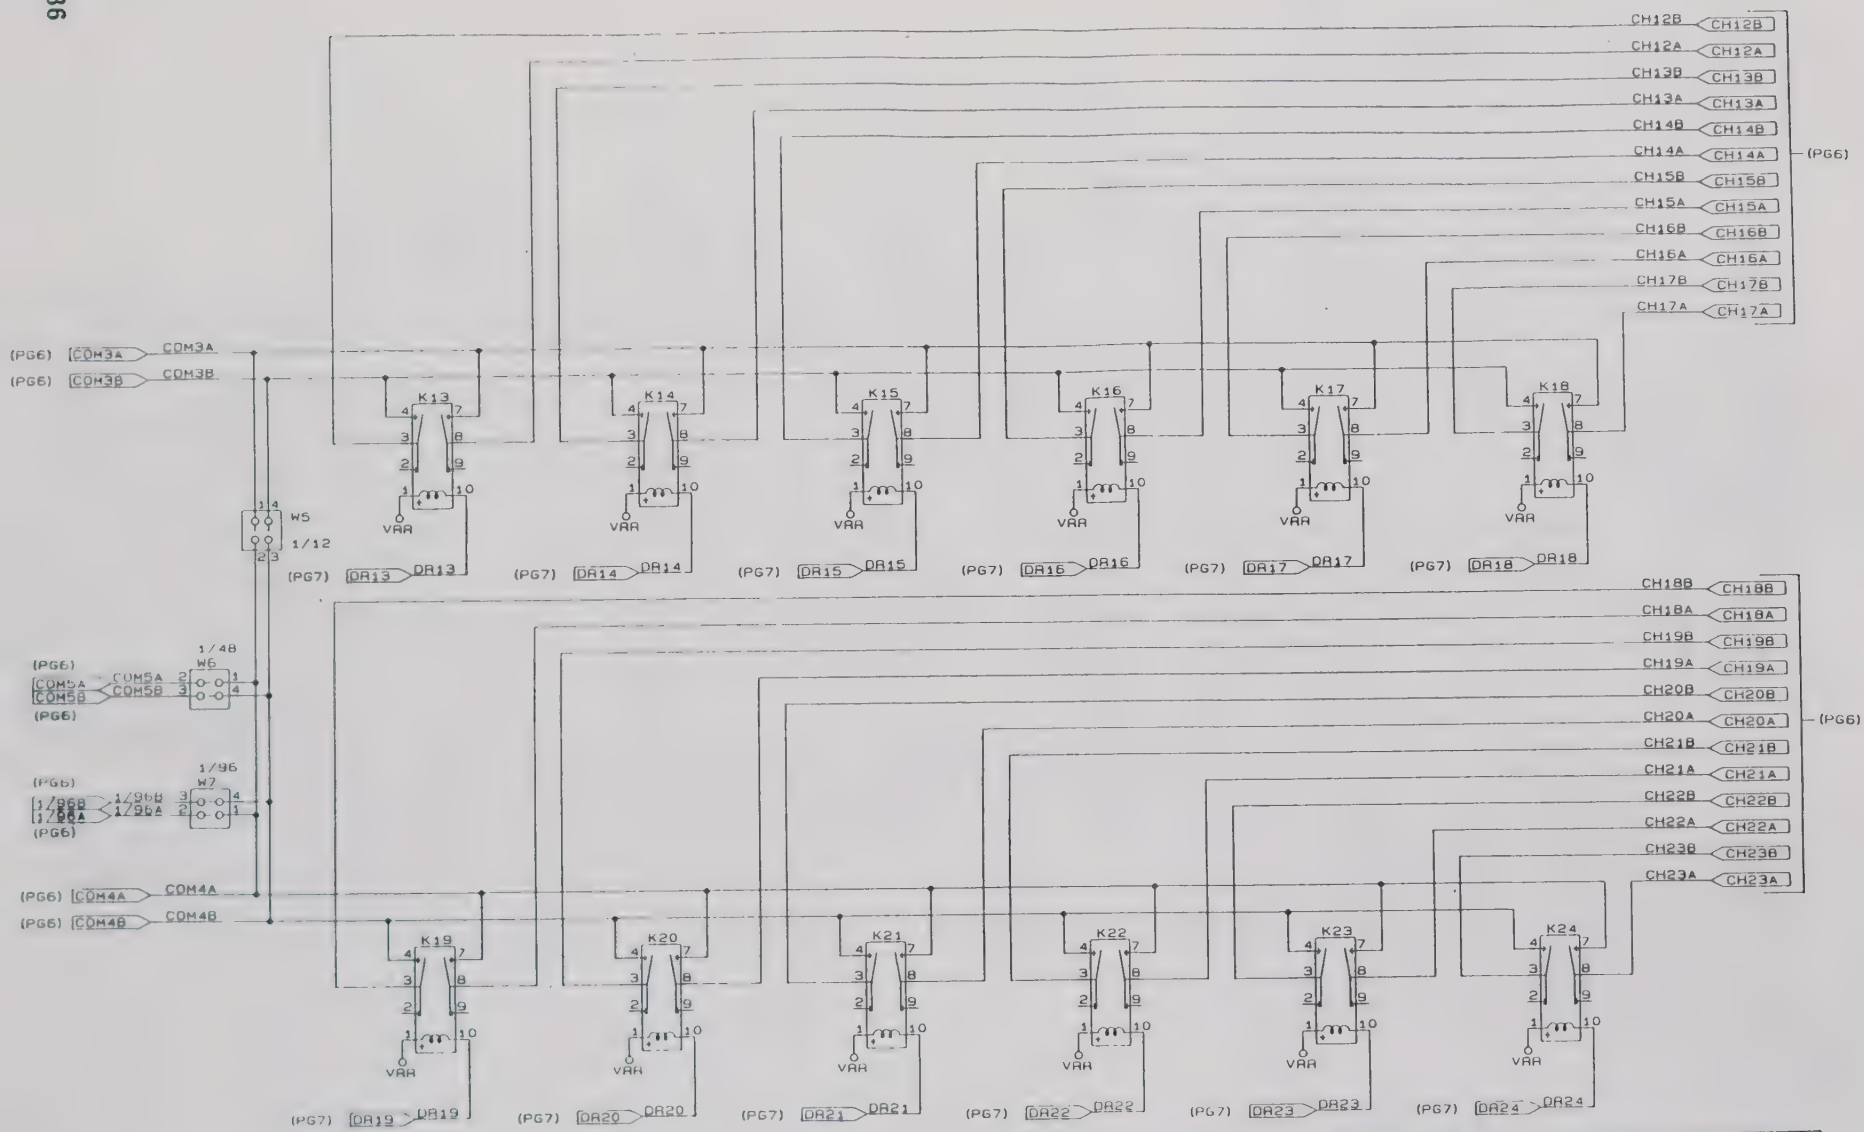

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 3 OF 17	

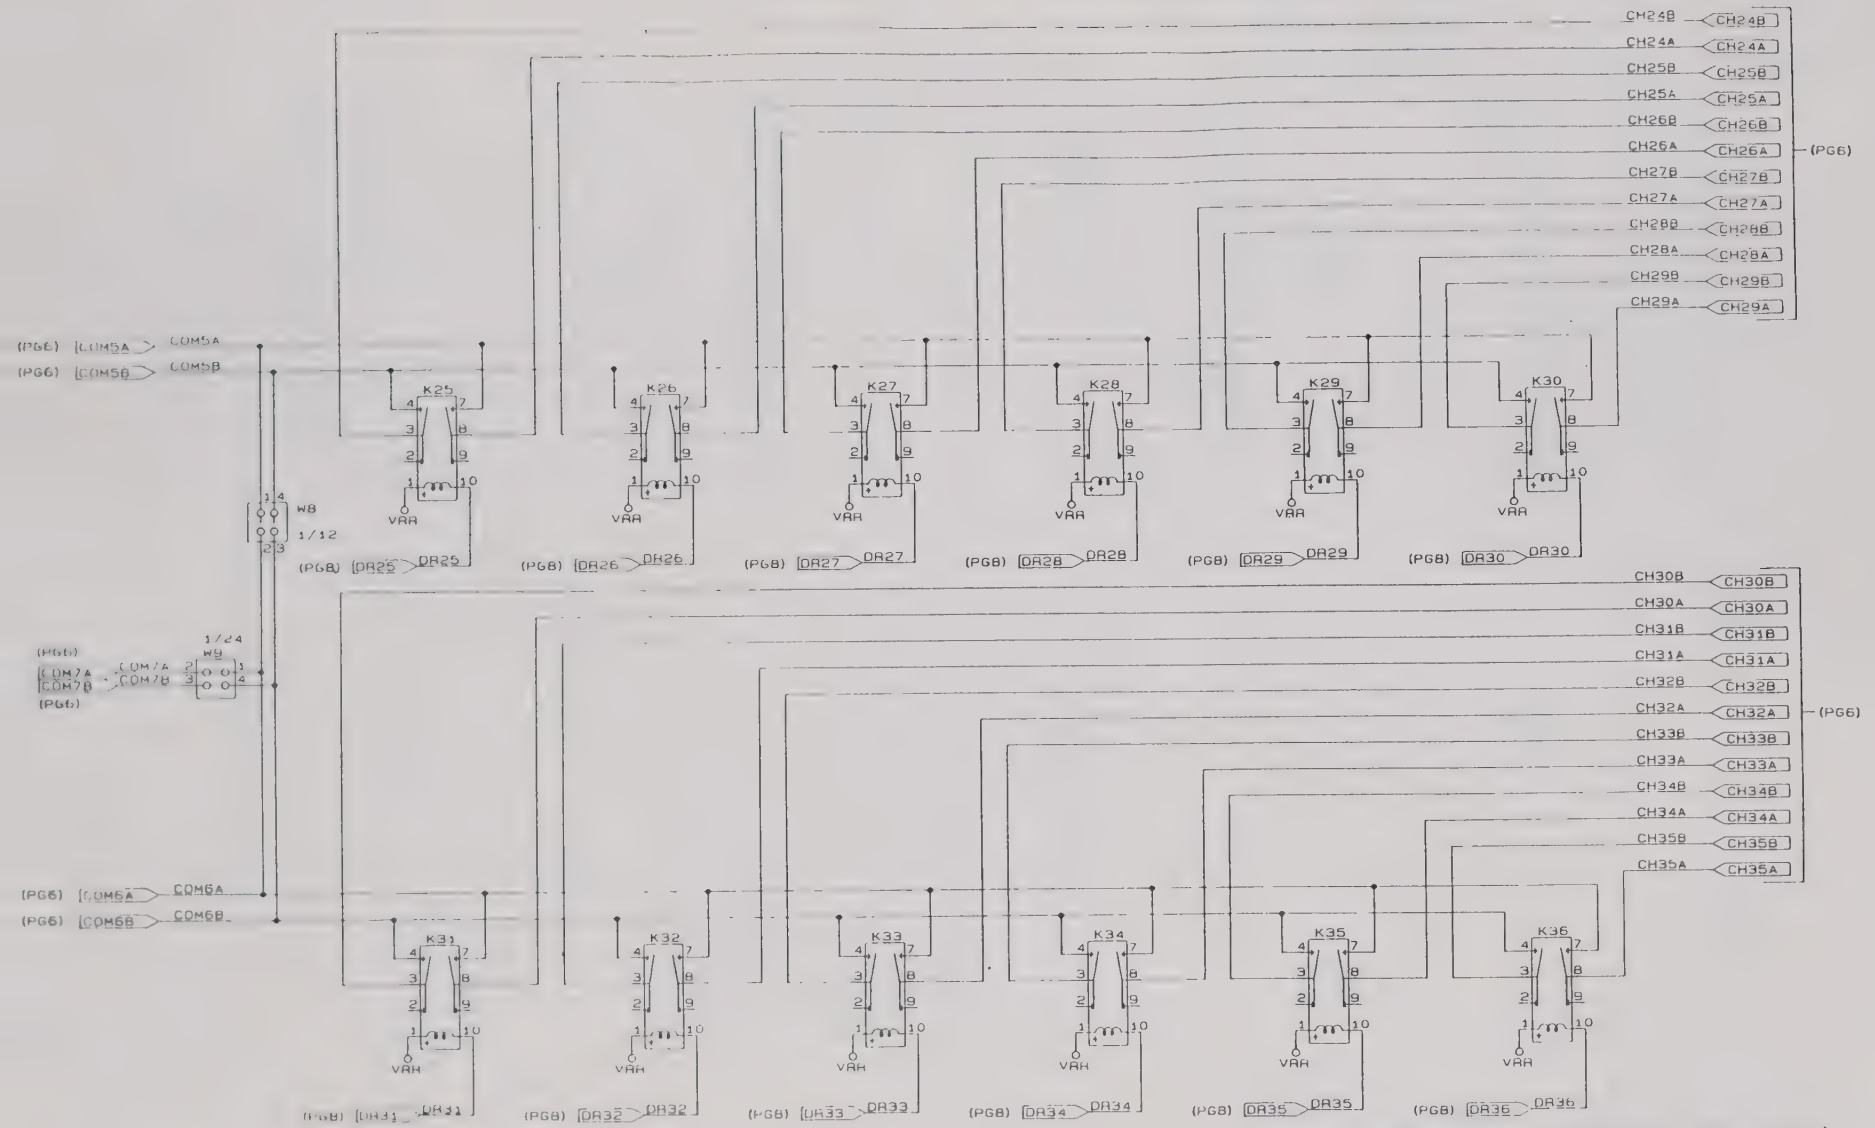

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	4319889	A
SCALE		SHEET 4 OF 17	

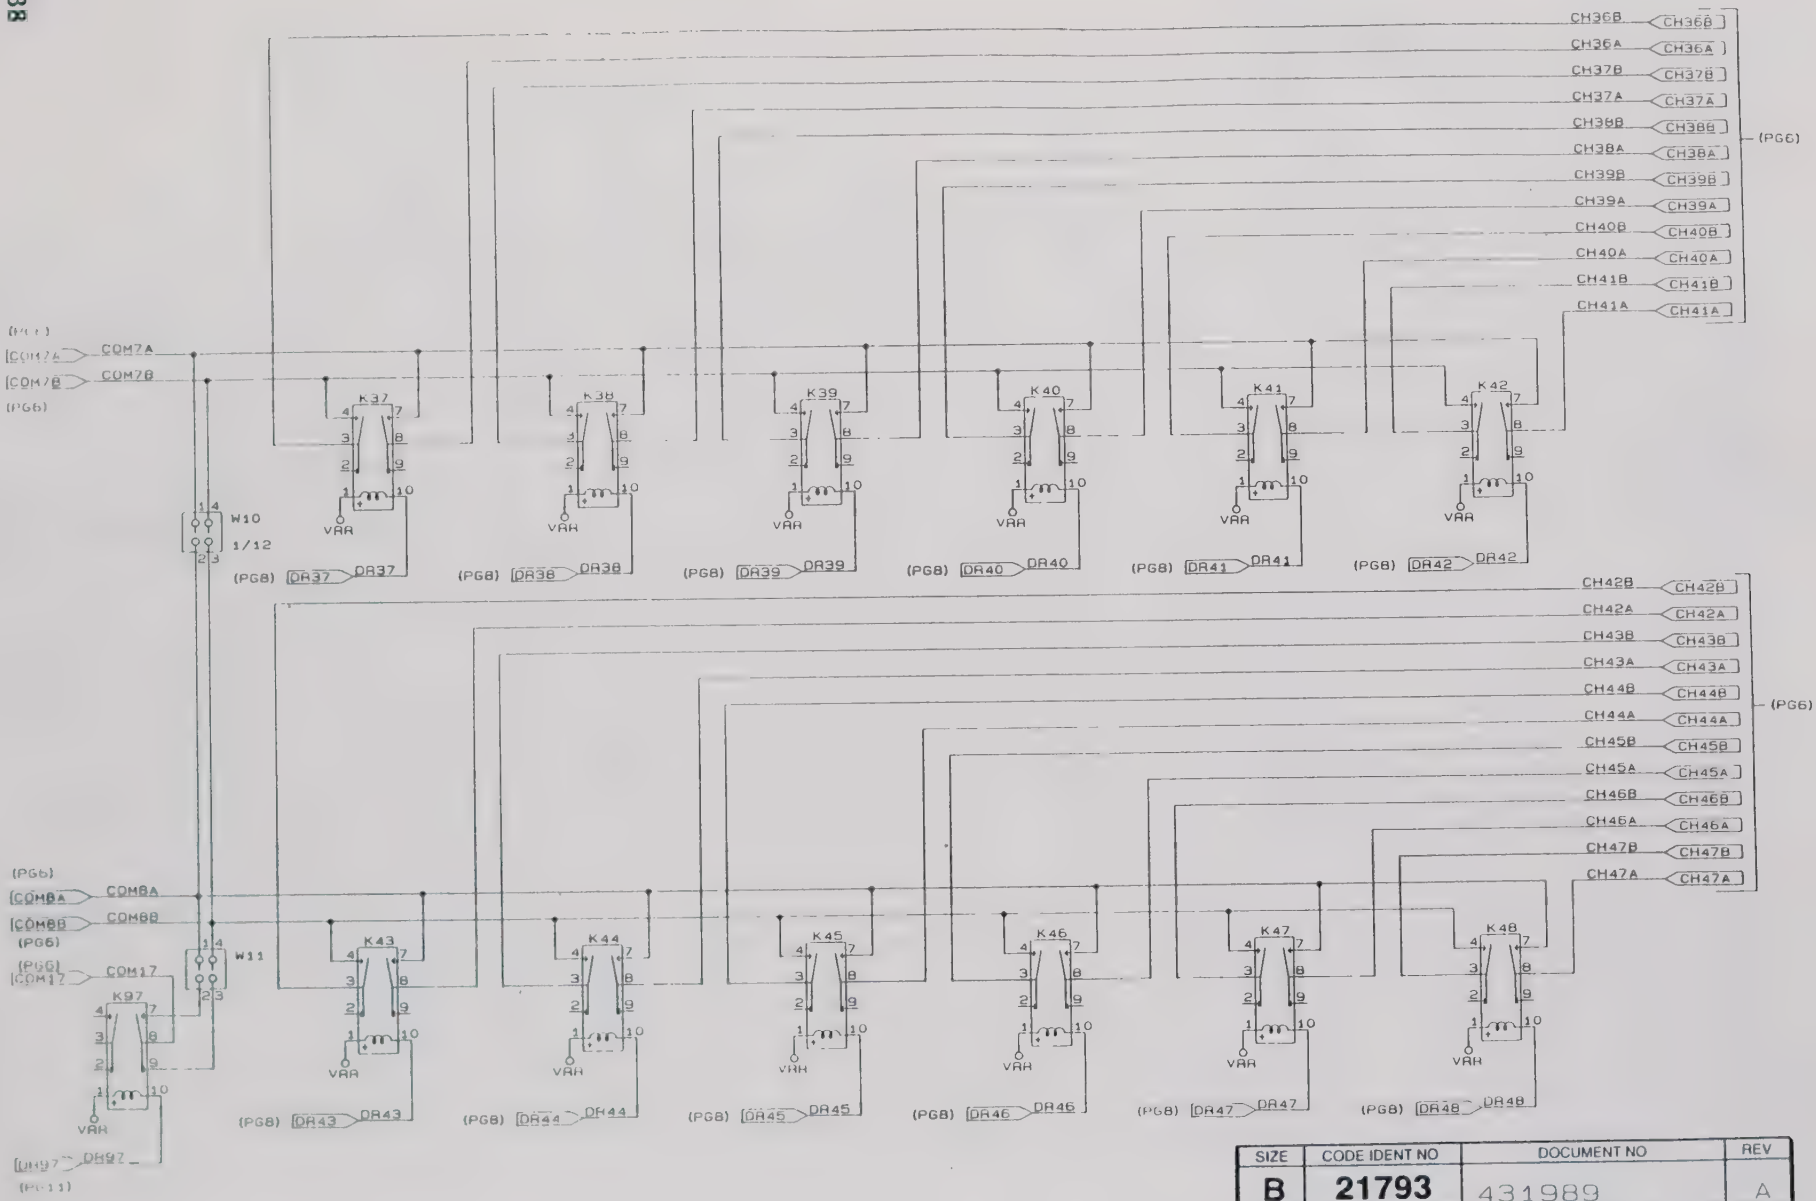

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 5 OF 17	

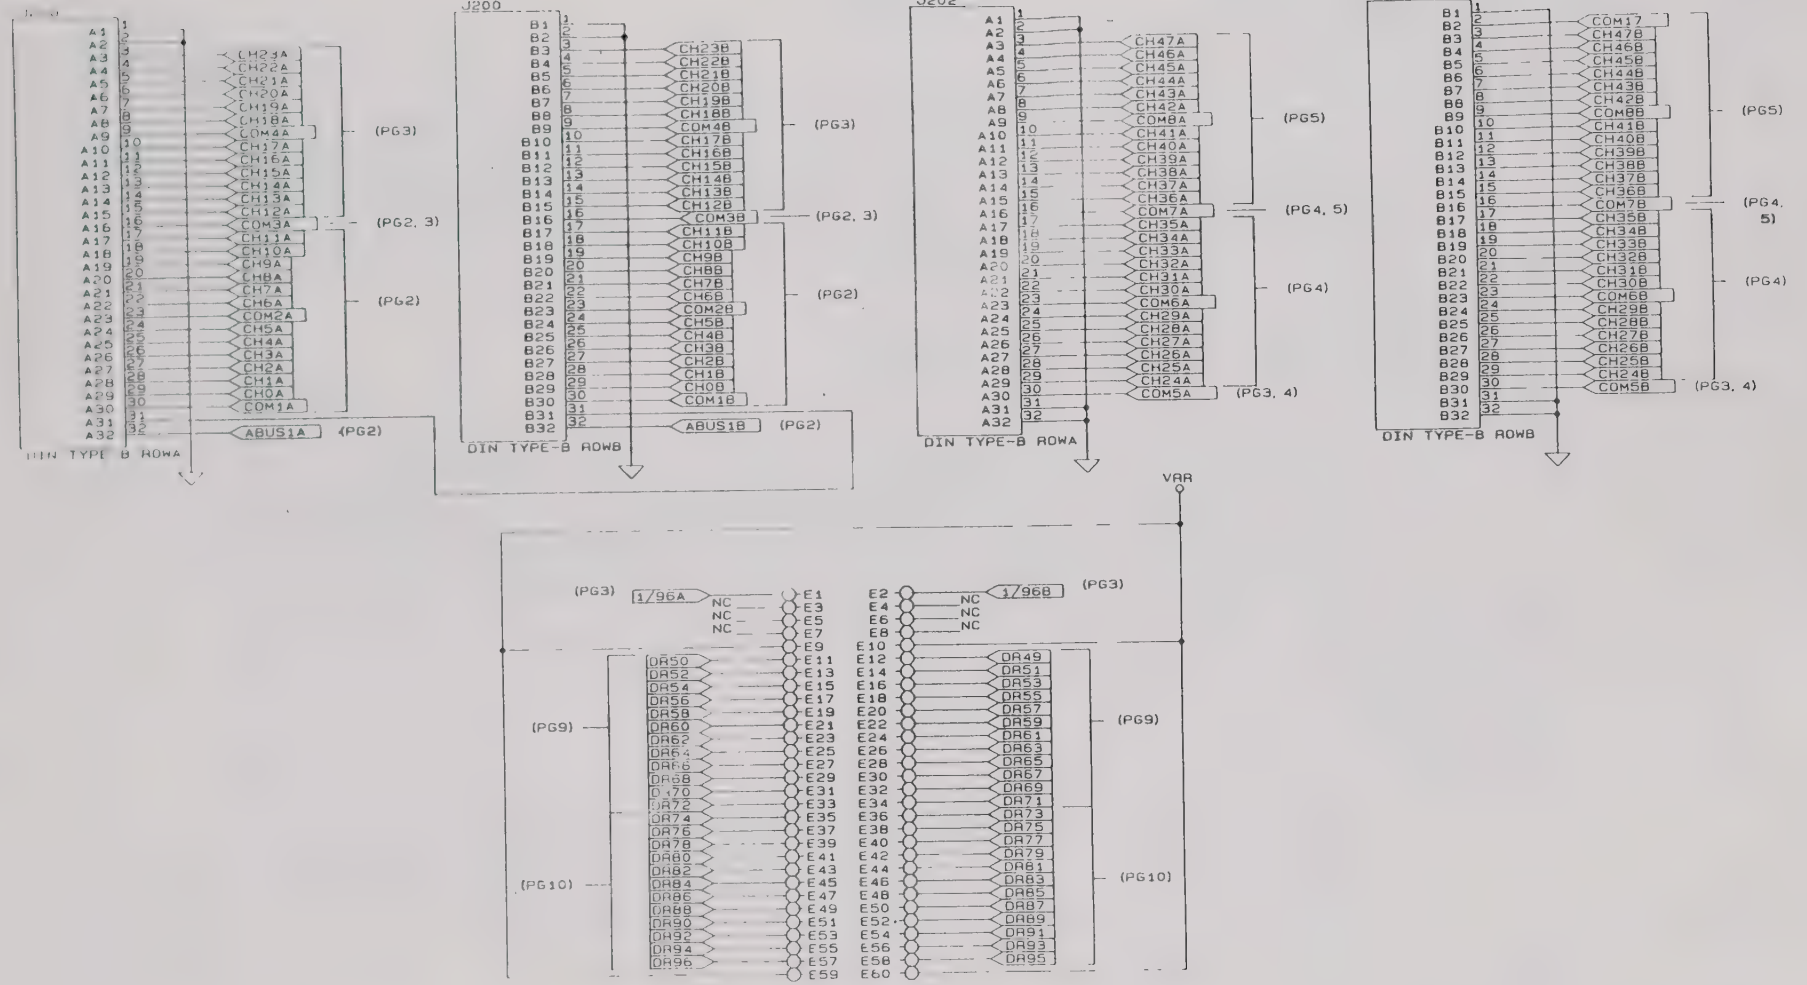

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 6	OF 17

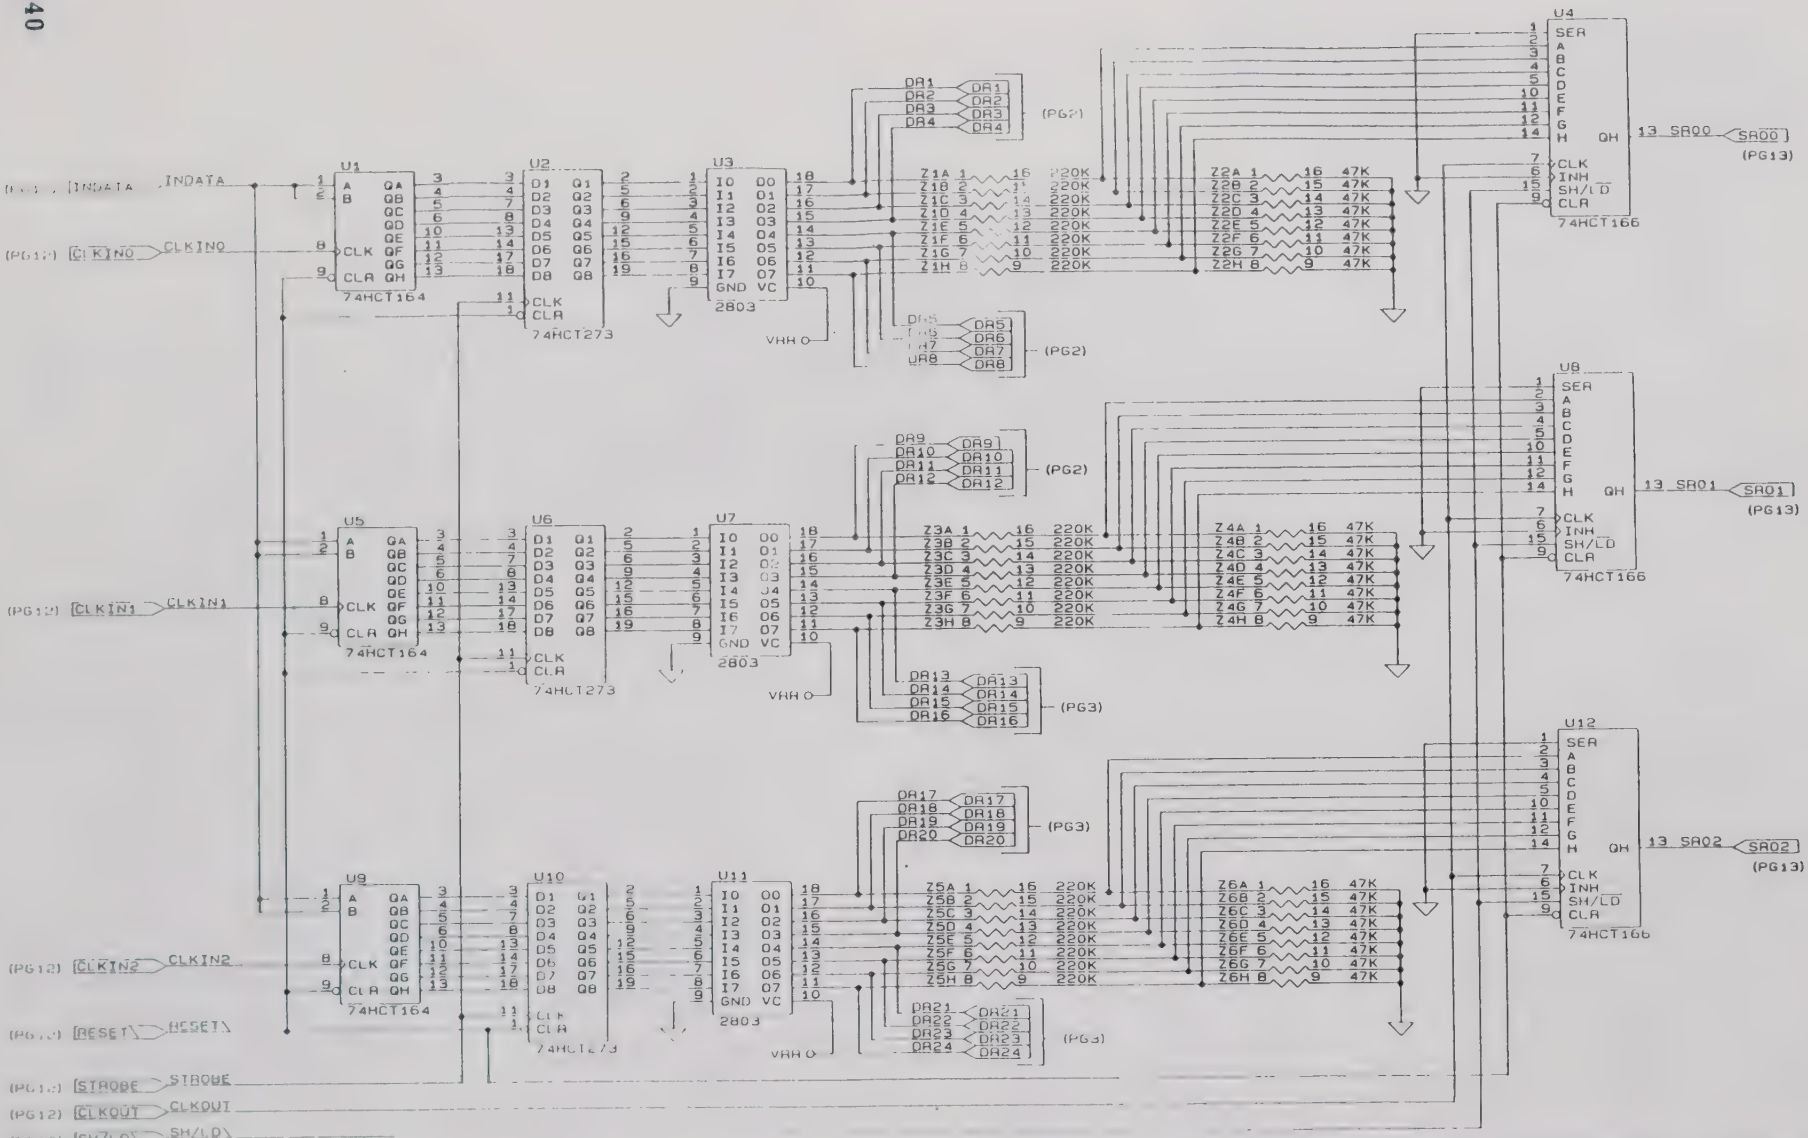

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 7 OF 17	

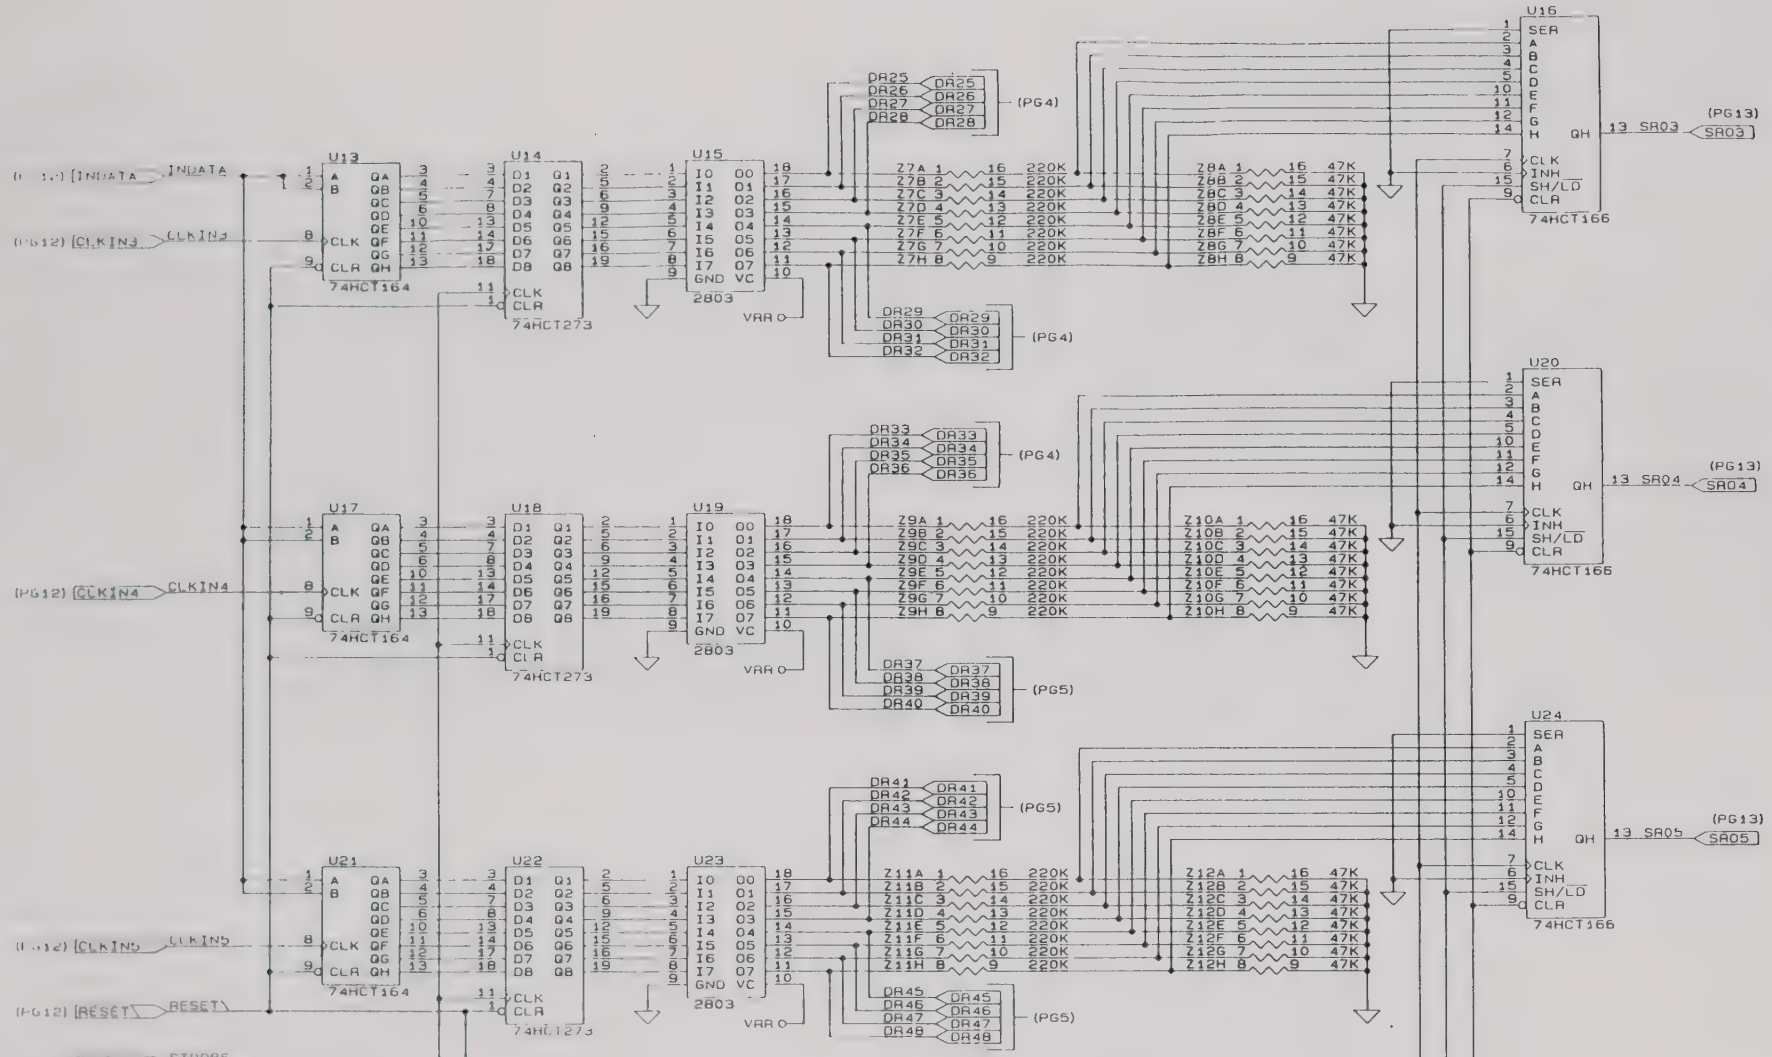

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 8 OF 17	

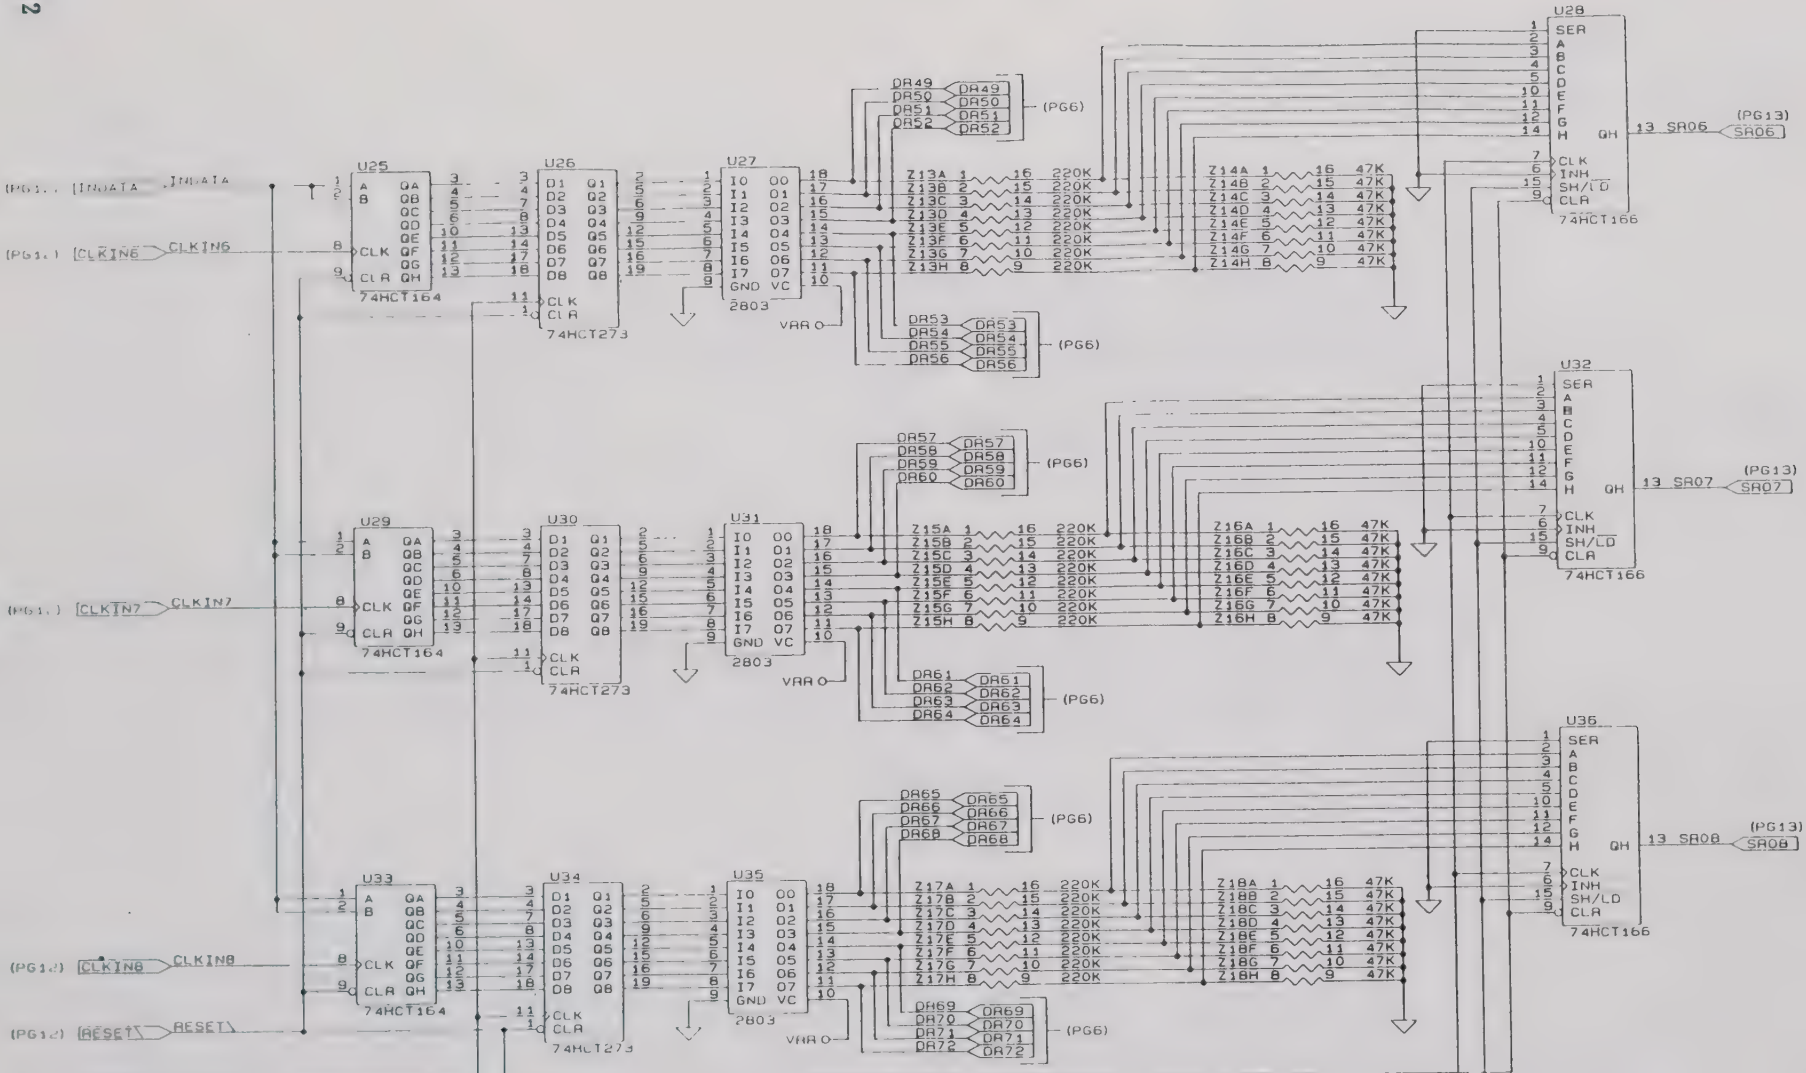

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 9 OF 17	

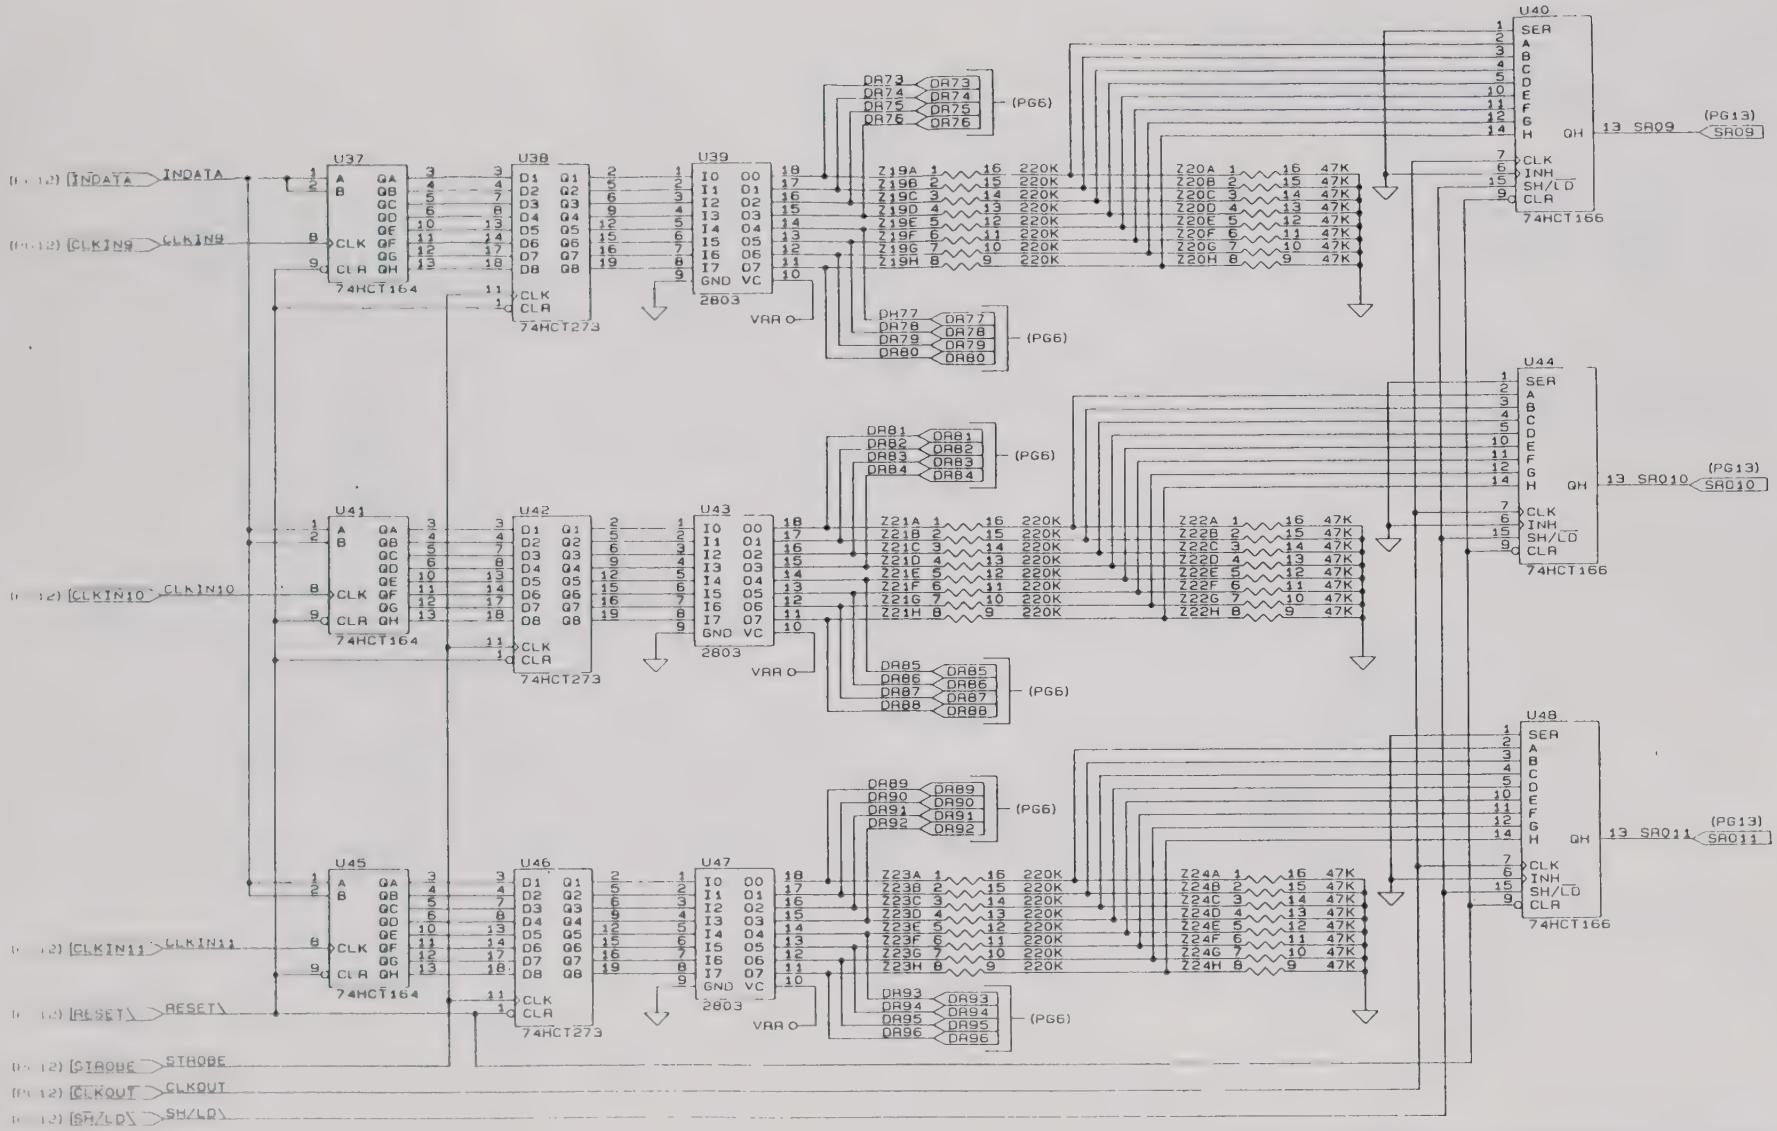

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 10 OF 17	

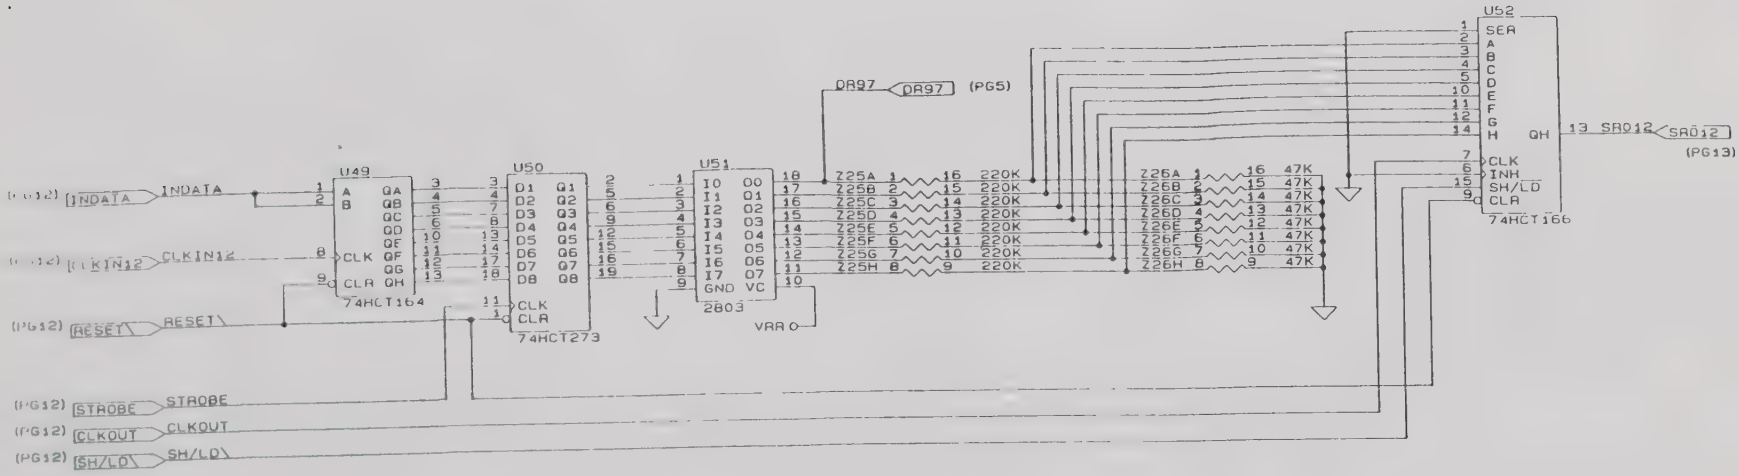

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 11 OF 17	

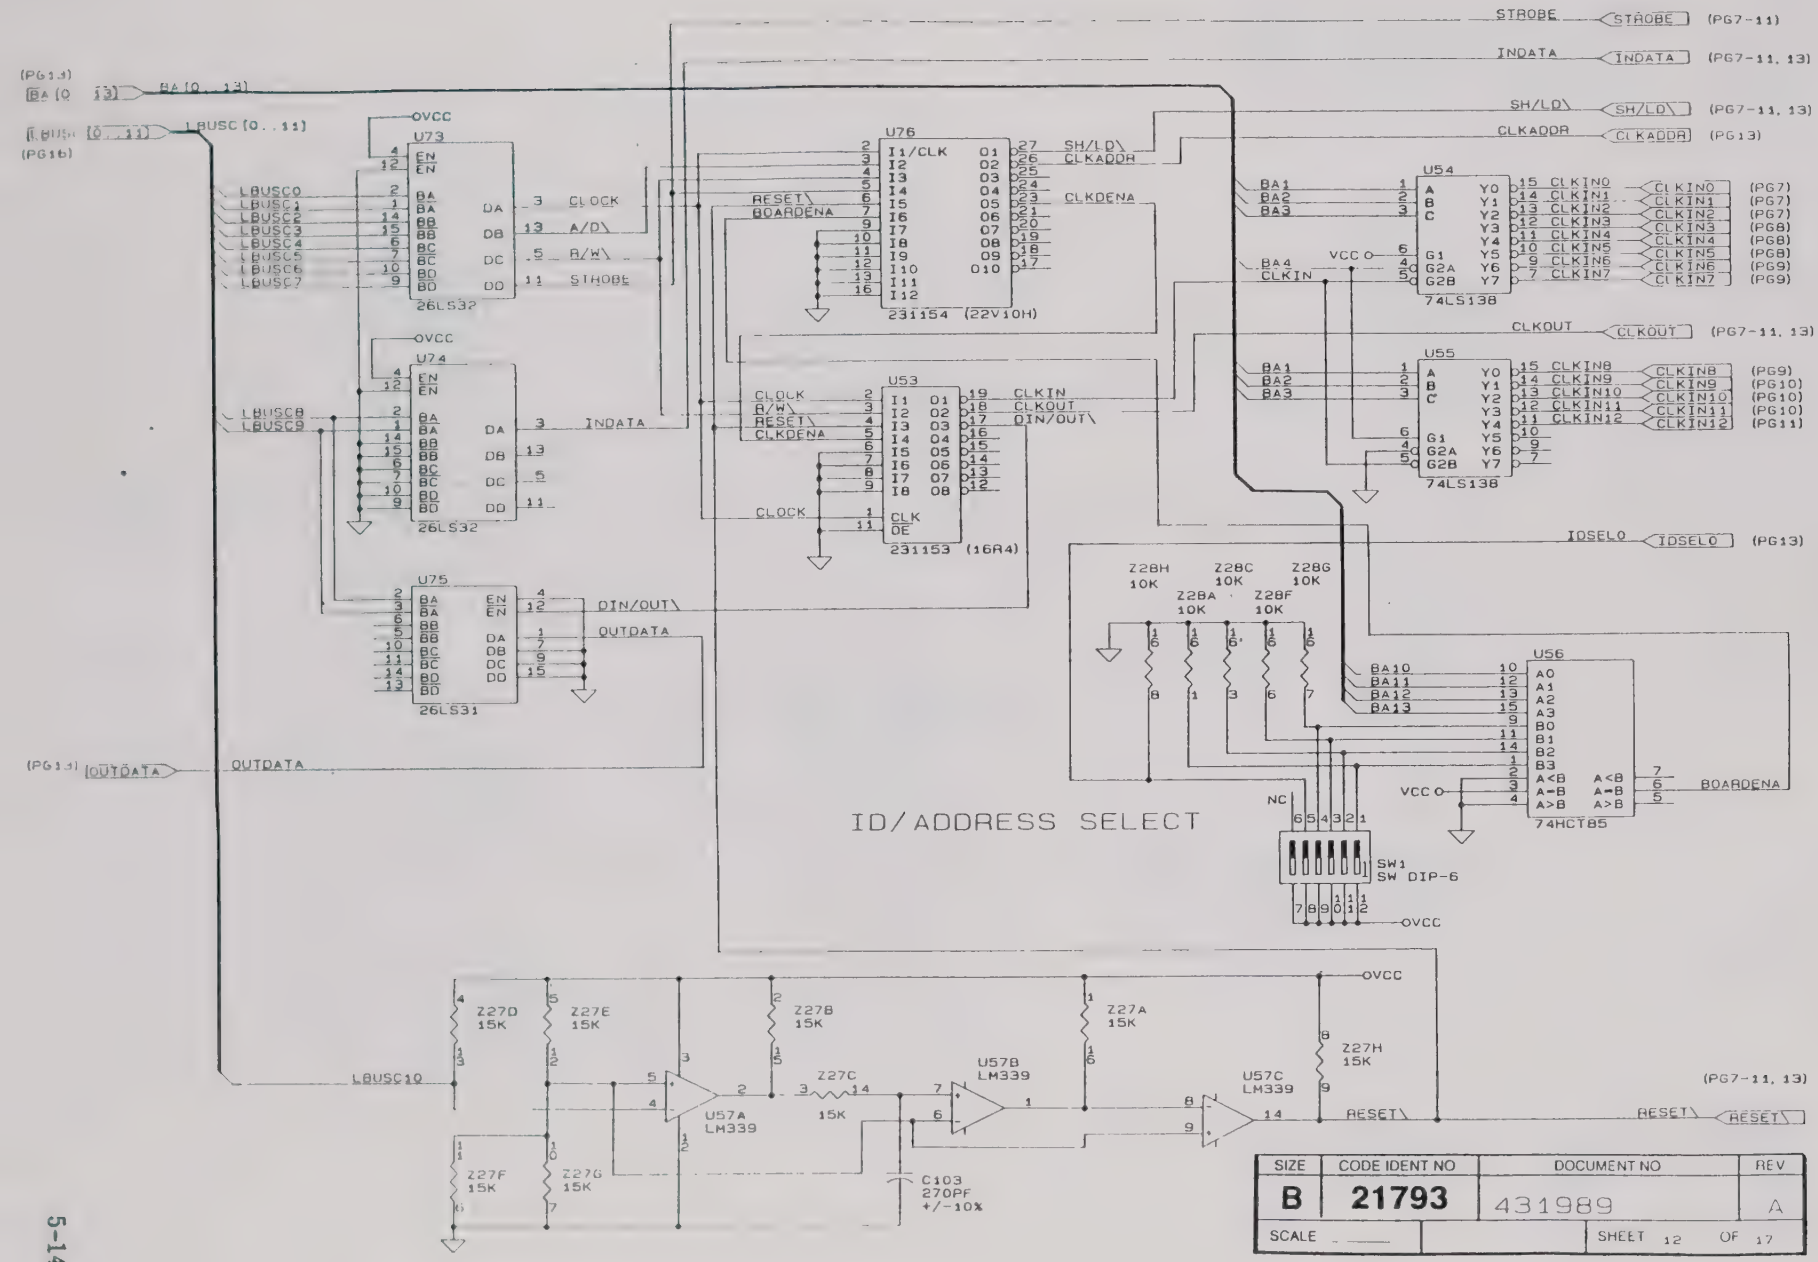

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 12 OF 17	

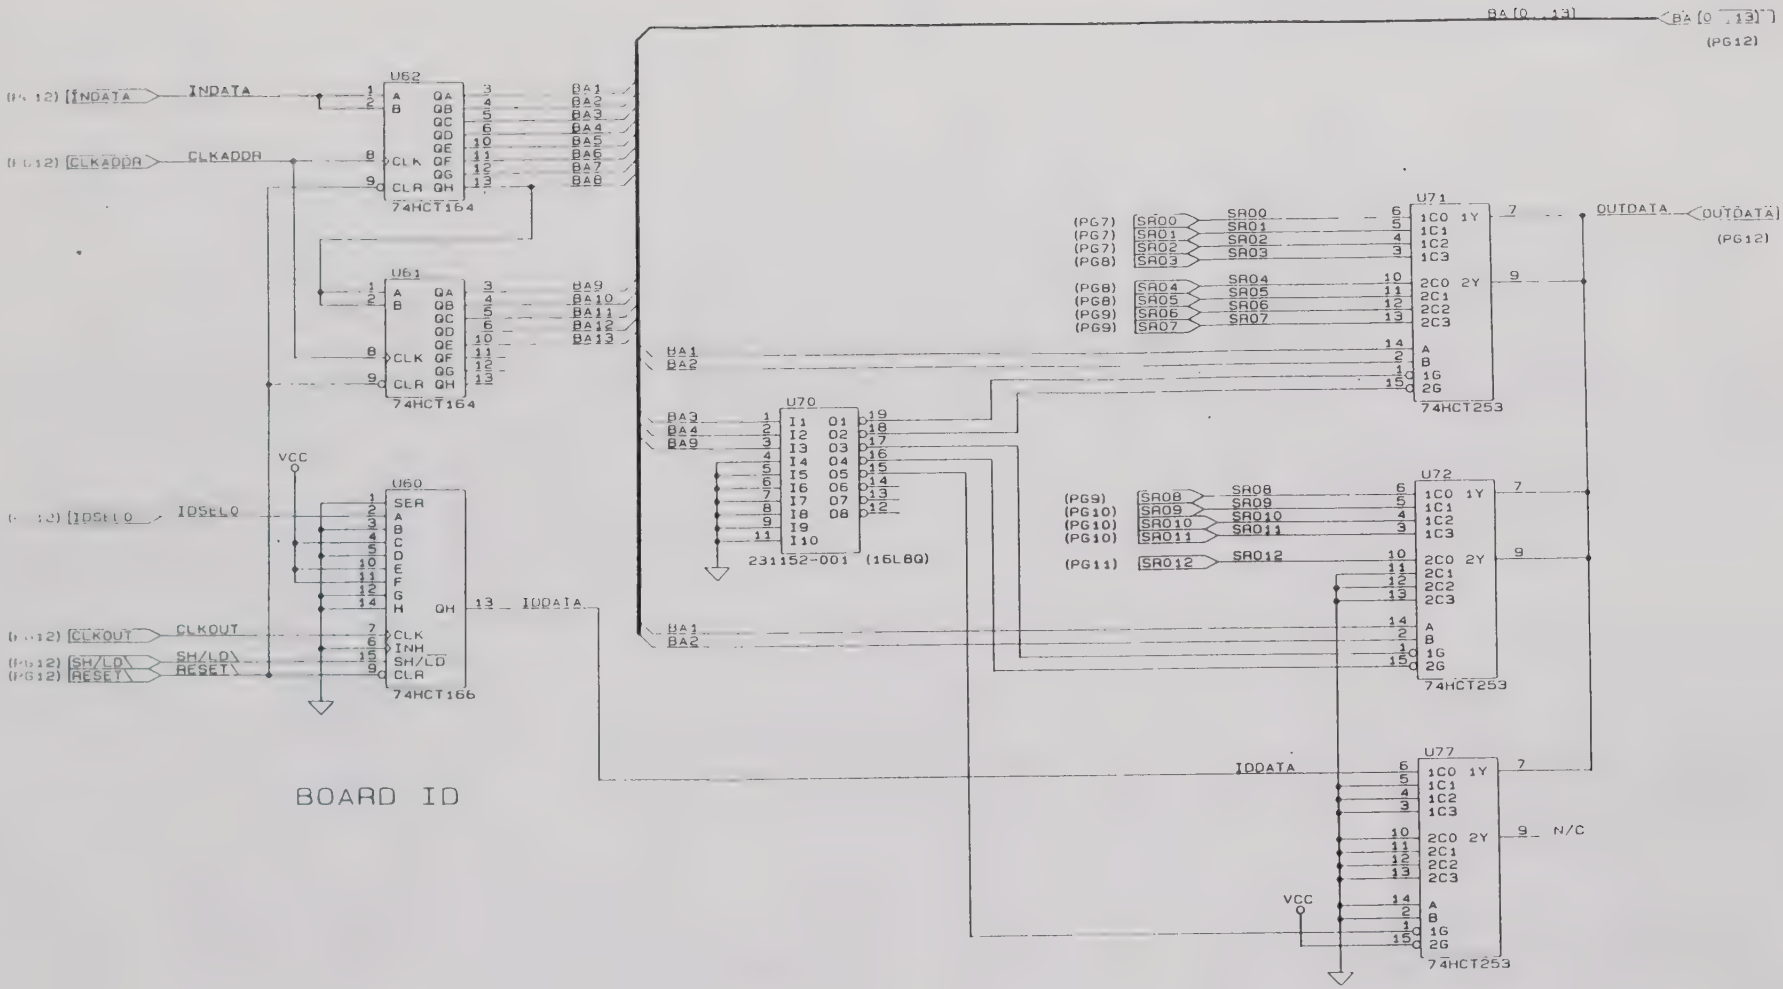

BOARD ID

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 13 OF 17	

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 14 OF 17	

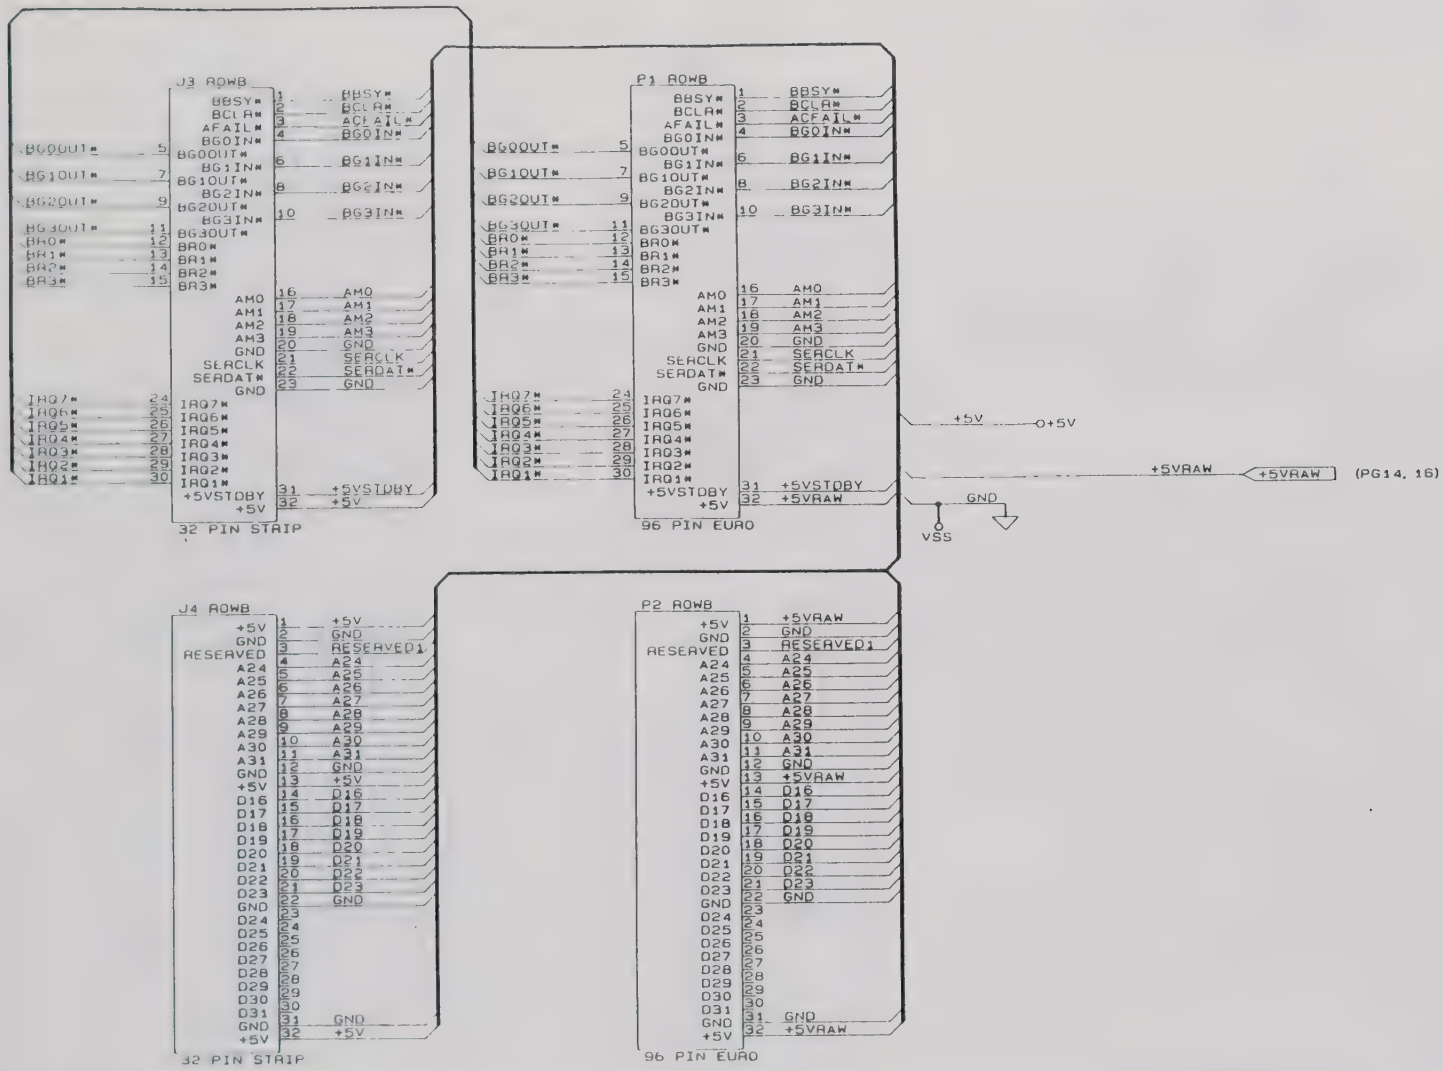

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 15 OF 17	

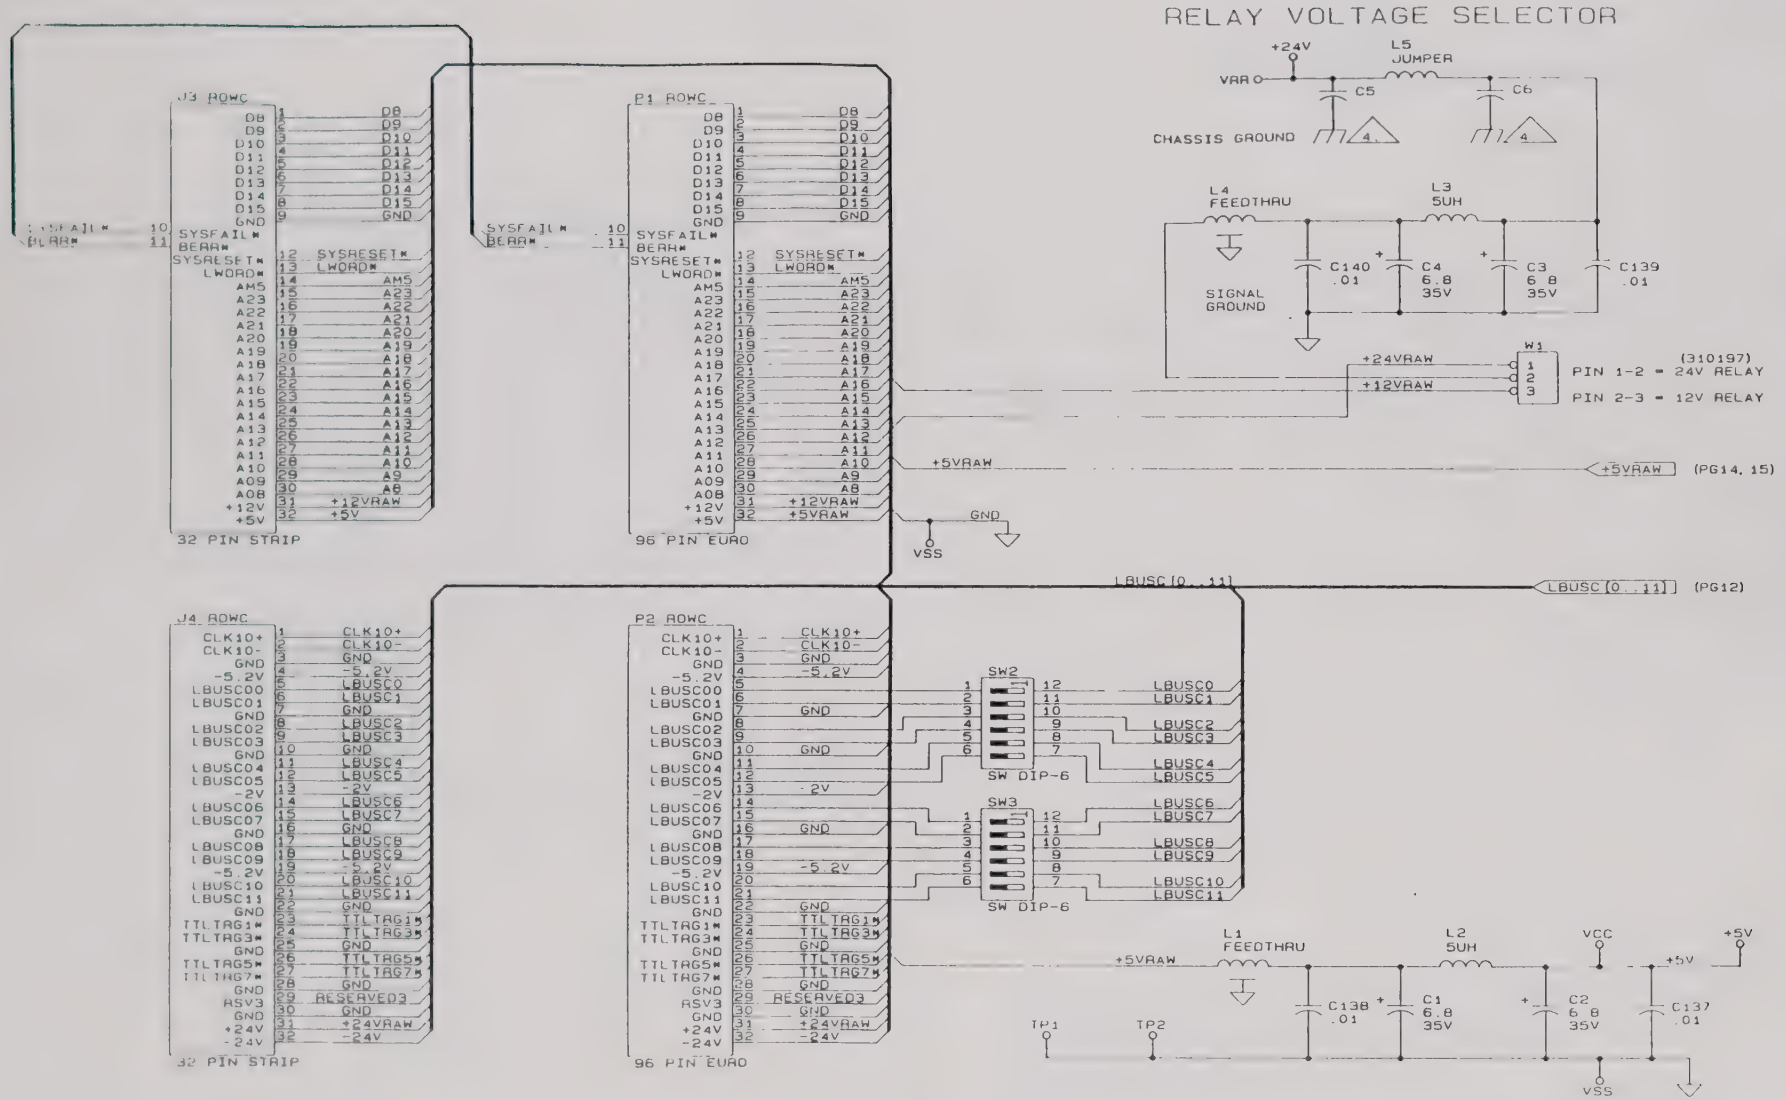

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 16 OF 17	

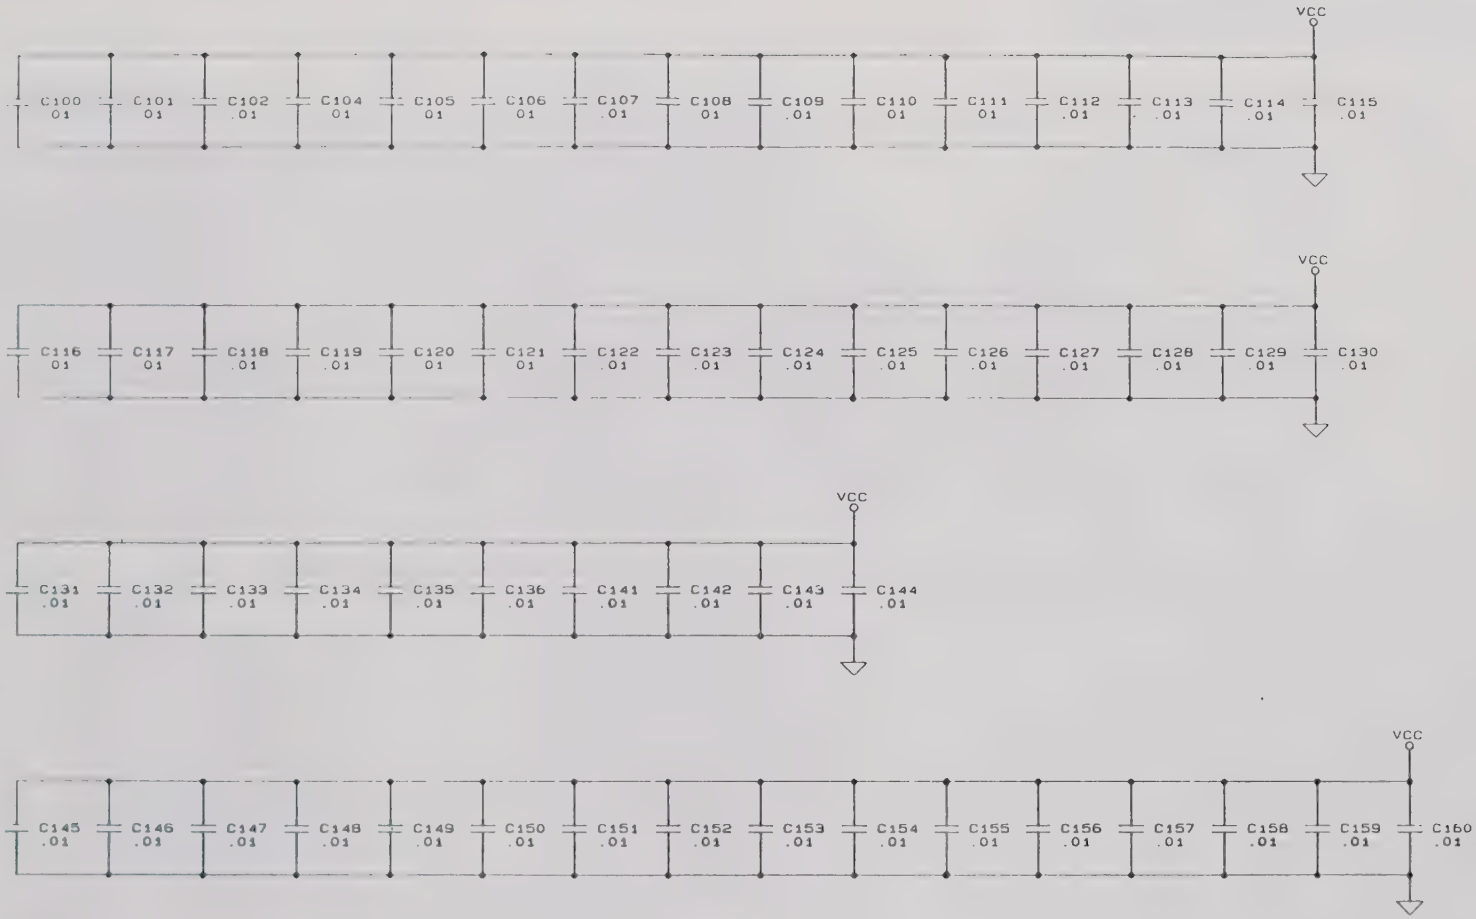

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431989	A
SCALE		SHEET 17 OF 17	

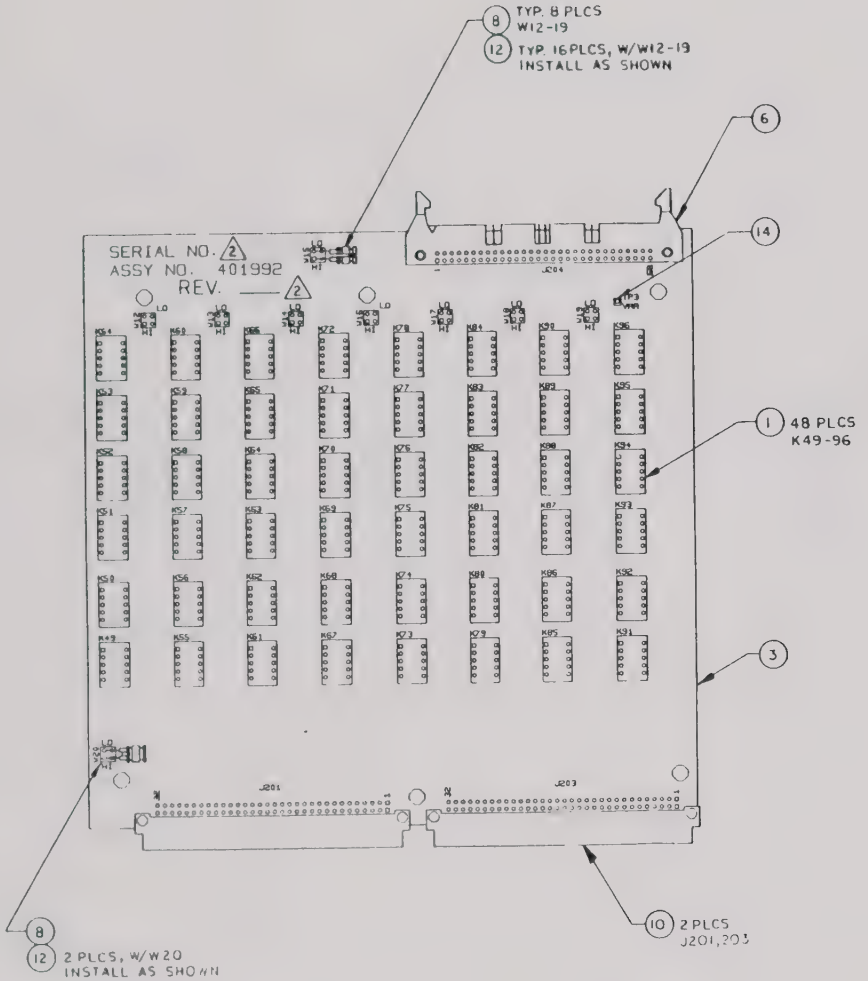

3. ALL SOLDER TAILS ON CIRCUIT SIDE OF PCB TO BE TRIMMED TO A MAX. HEIGHT OF .045.

2 INK STAMP SERIAL NUMBER, ASSY NUMBER & CURRENT REVISION ON COMPONENT SIDE IN INDICATED AREAS.

1 REFERENCE SCHEMATIC 431932.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED, RELEASED OR DISCLOSED IN WHOLE OR IN PART, OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

PCB ASSY, 1260-35D

SIZE	CODE IDENT NO	DOCUMENT NO	REV
D	21793	401992	A
SCALE —		SHEET 1 OF 2	

W20
J204
K96
HIGHEST REF. DES.

1. RELAYS K49 THRU K96 ARE RACAL-DANA P/N 310197.
   ALL RELAYS SHOWN IN DE-ENERGIZED POSITION.

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE
SCHEM, 1260-35D

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431992	A

SCALE ——— SHEET 1 OF 6

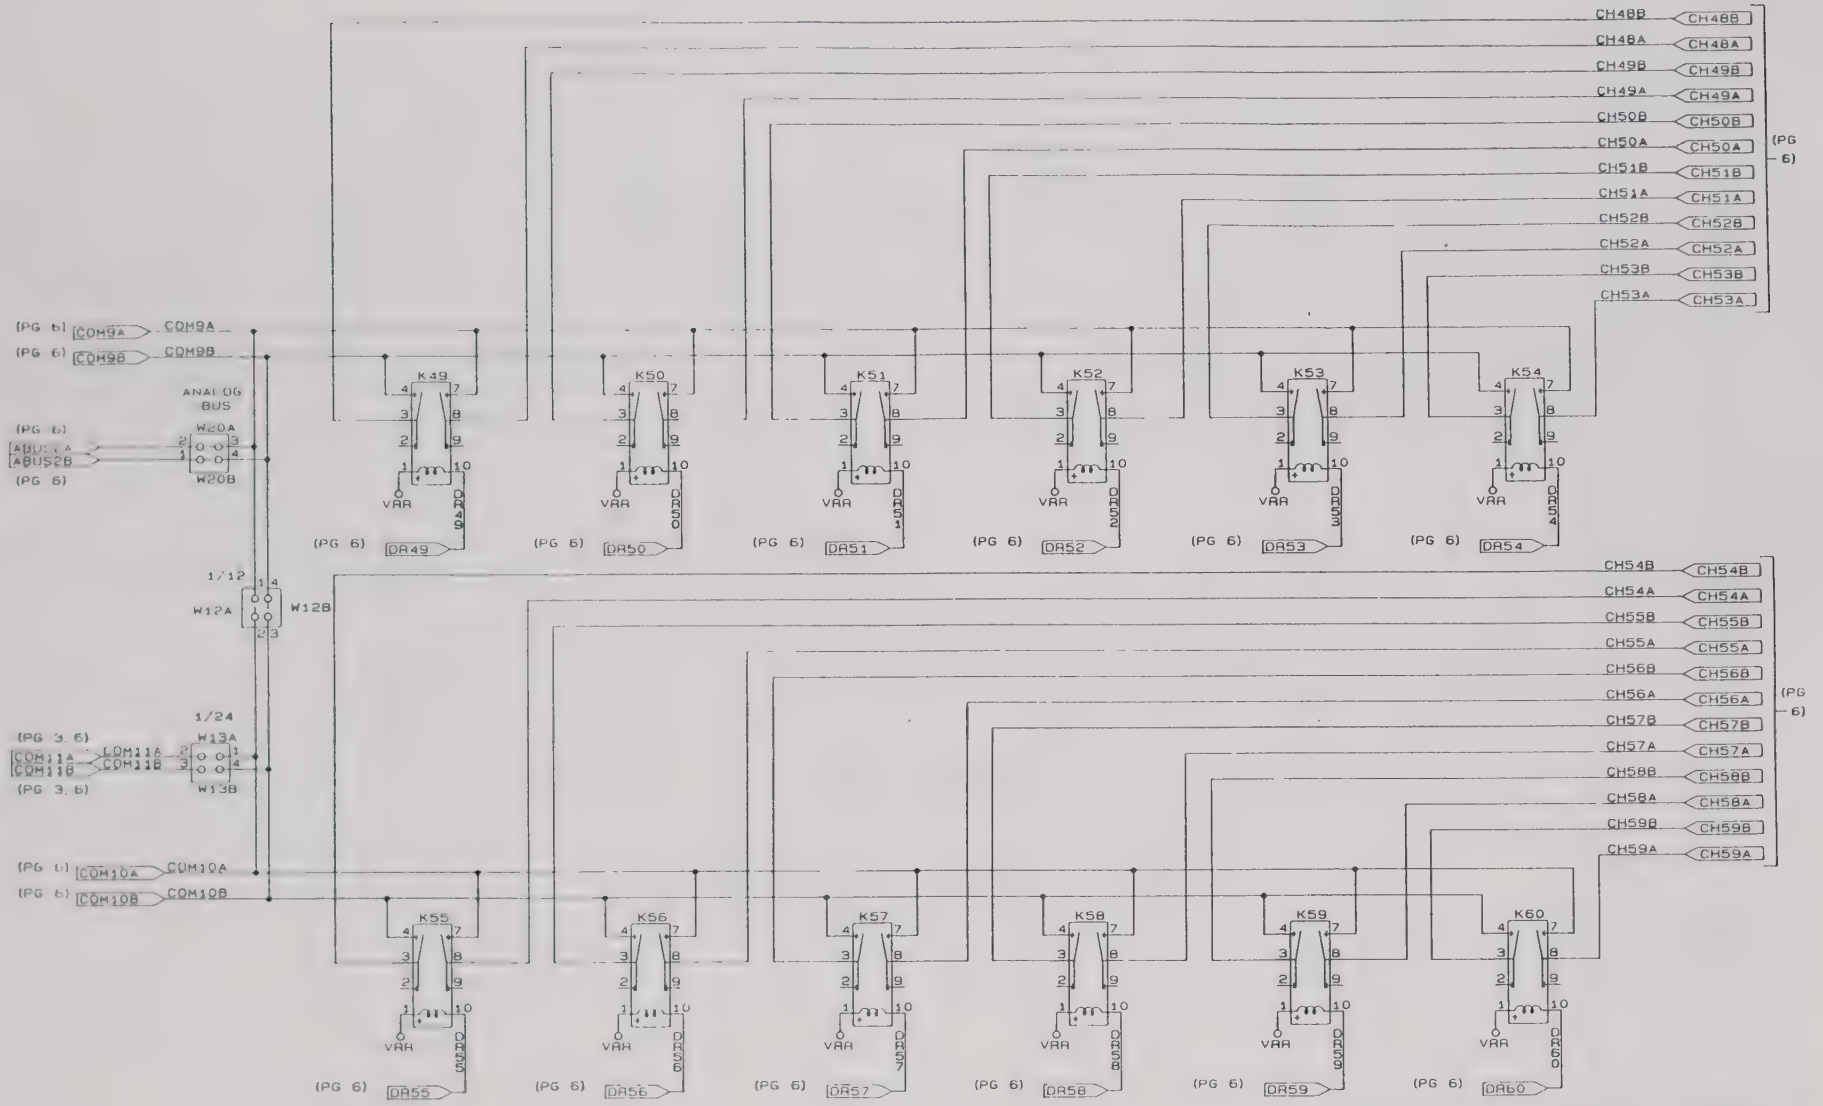

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431992	A
SCALE			SHEET 2 OF 6

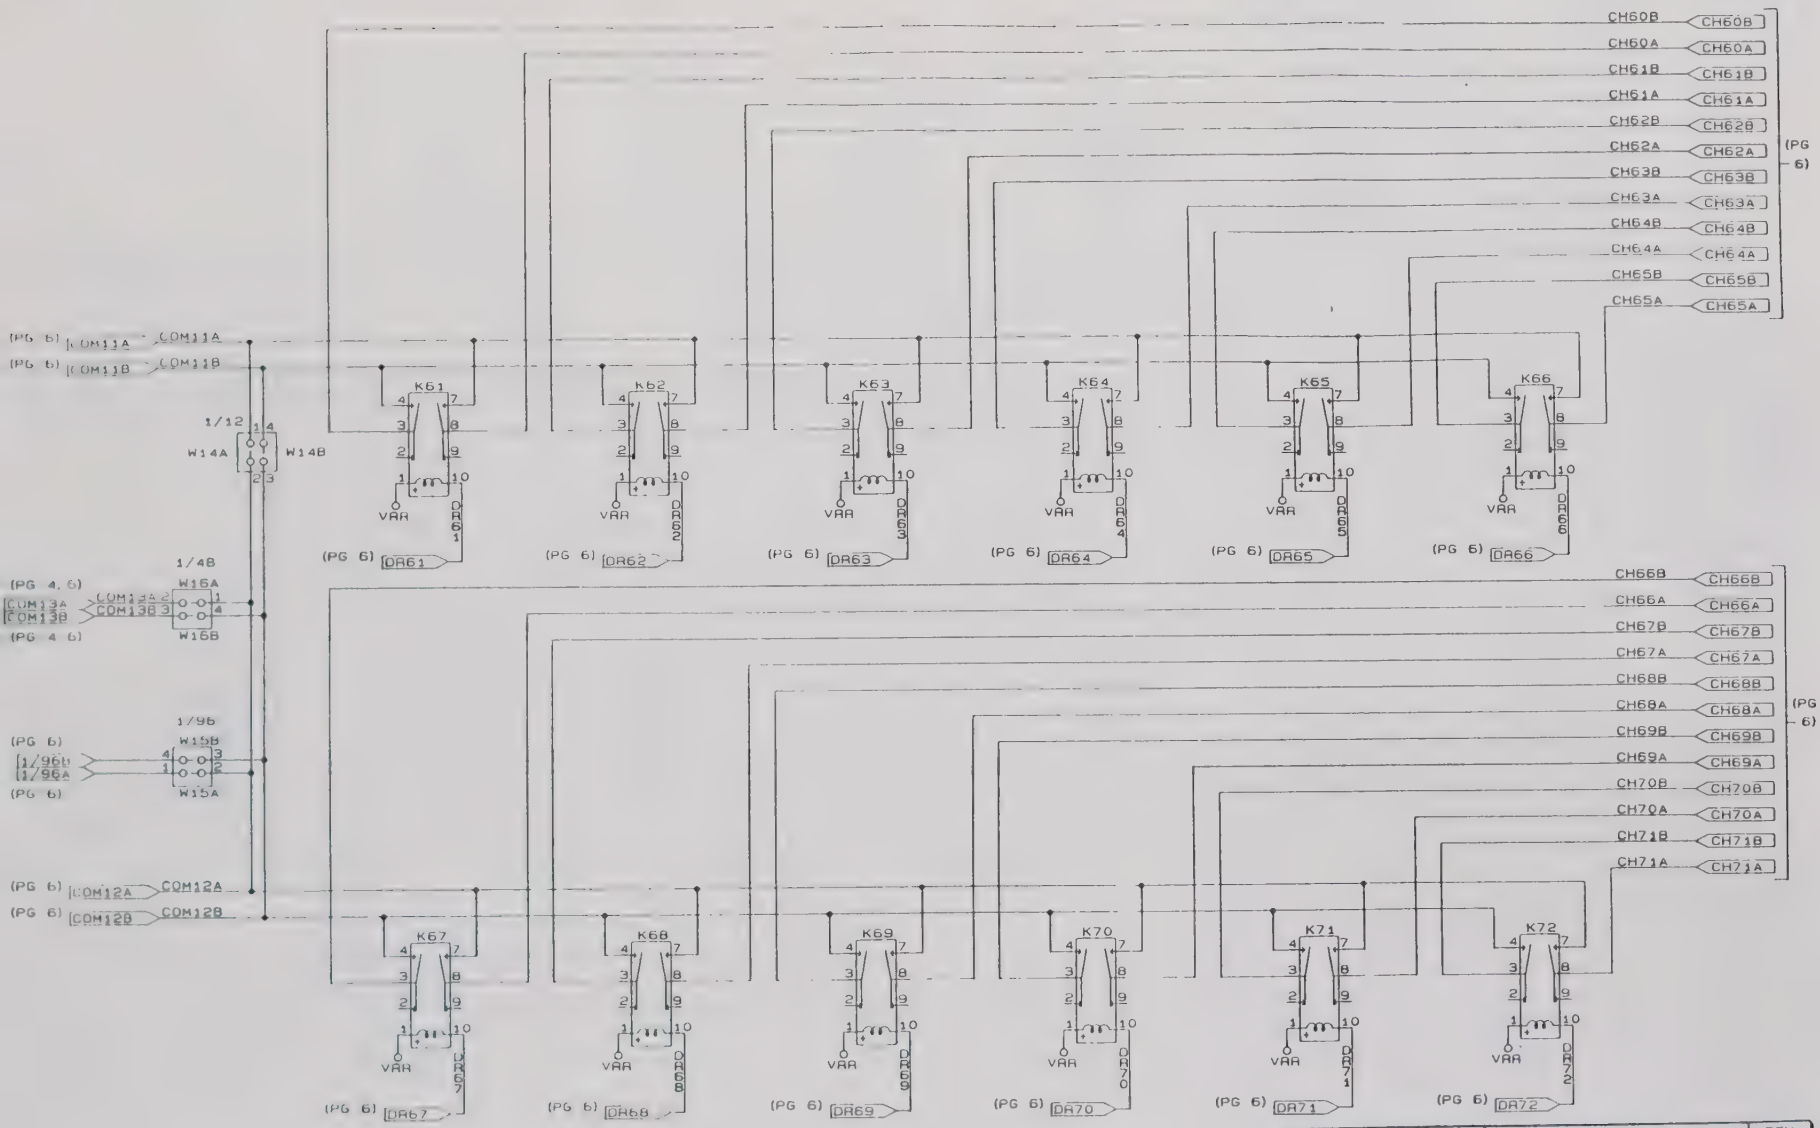

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431992	A
SCALE		SHEET 3	OF 6

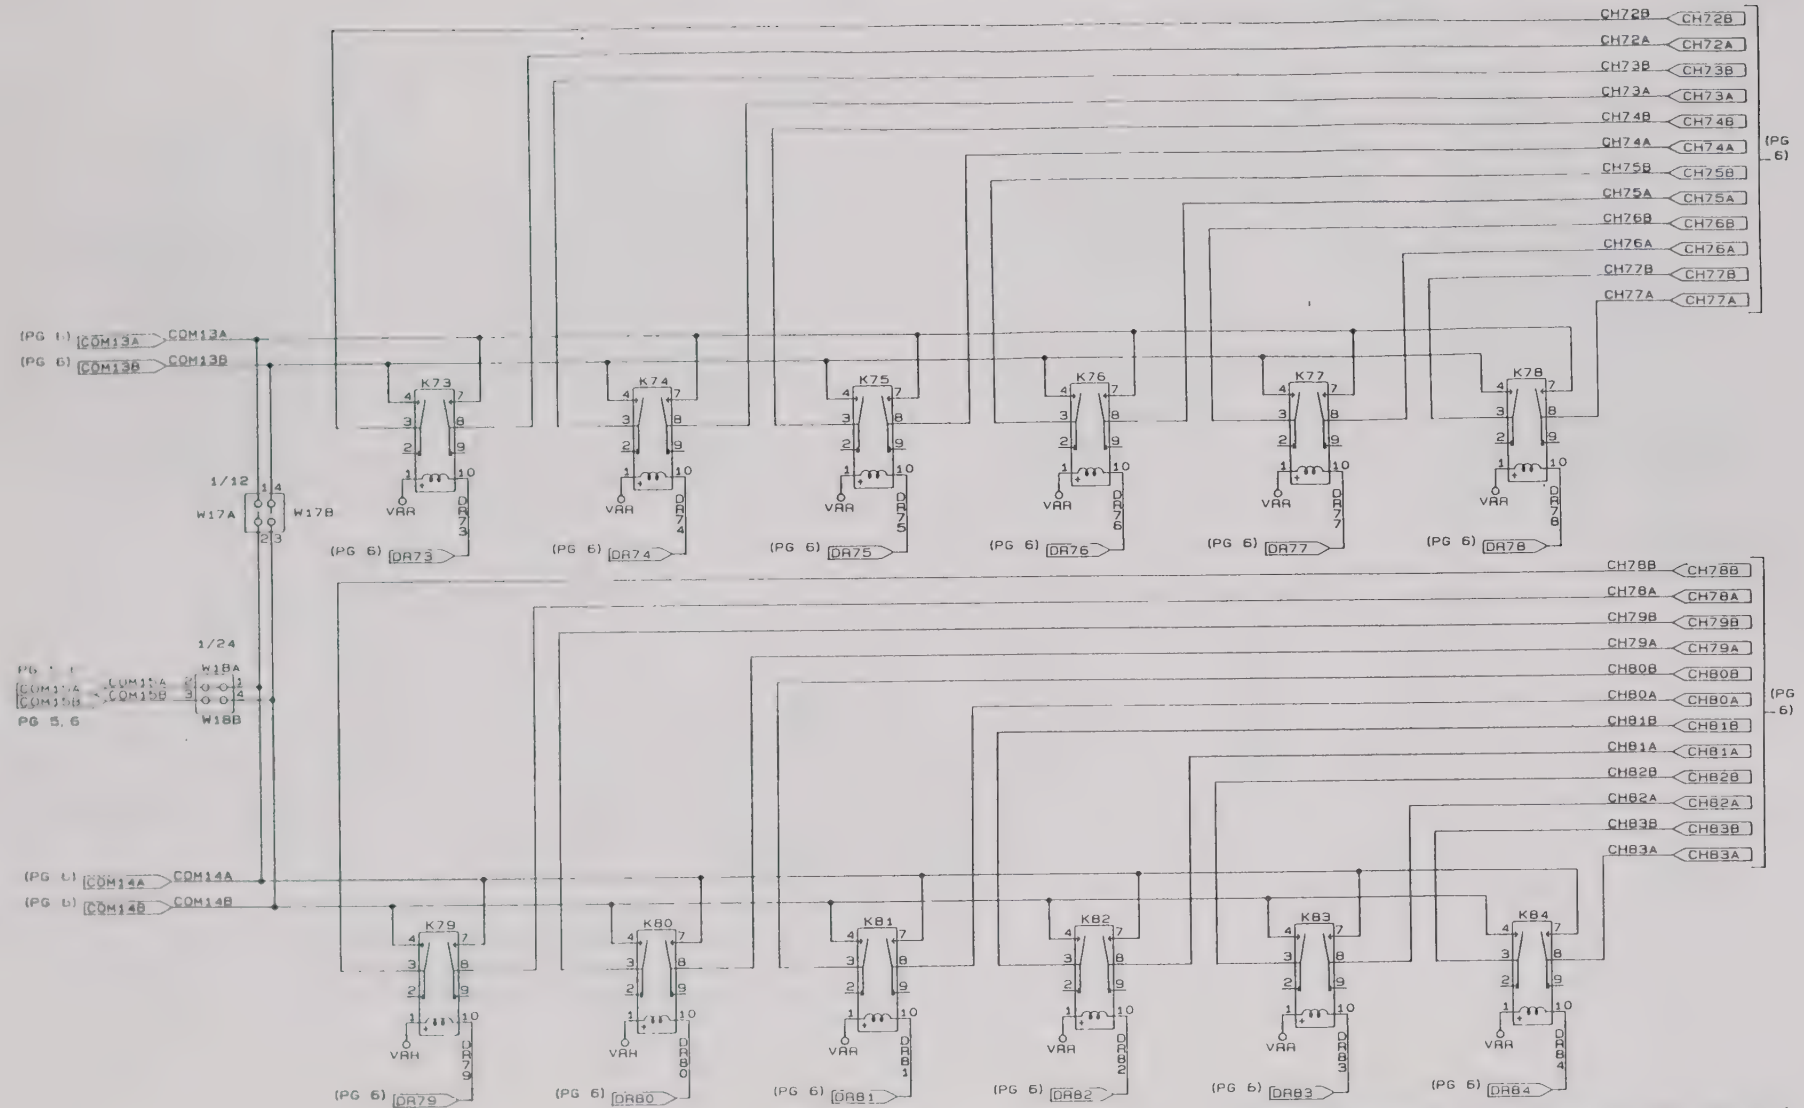

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431992	A
SCALE		SHEET 4	OF 6

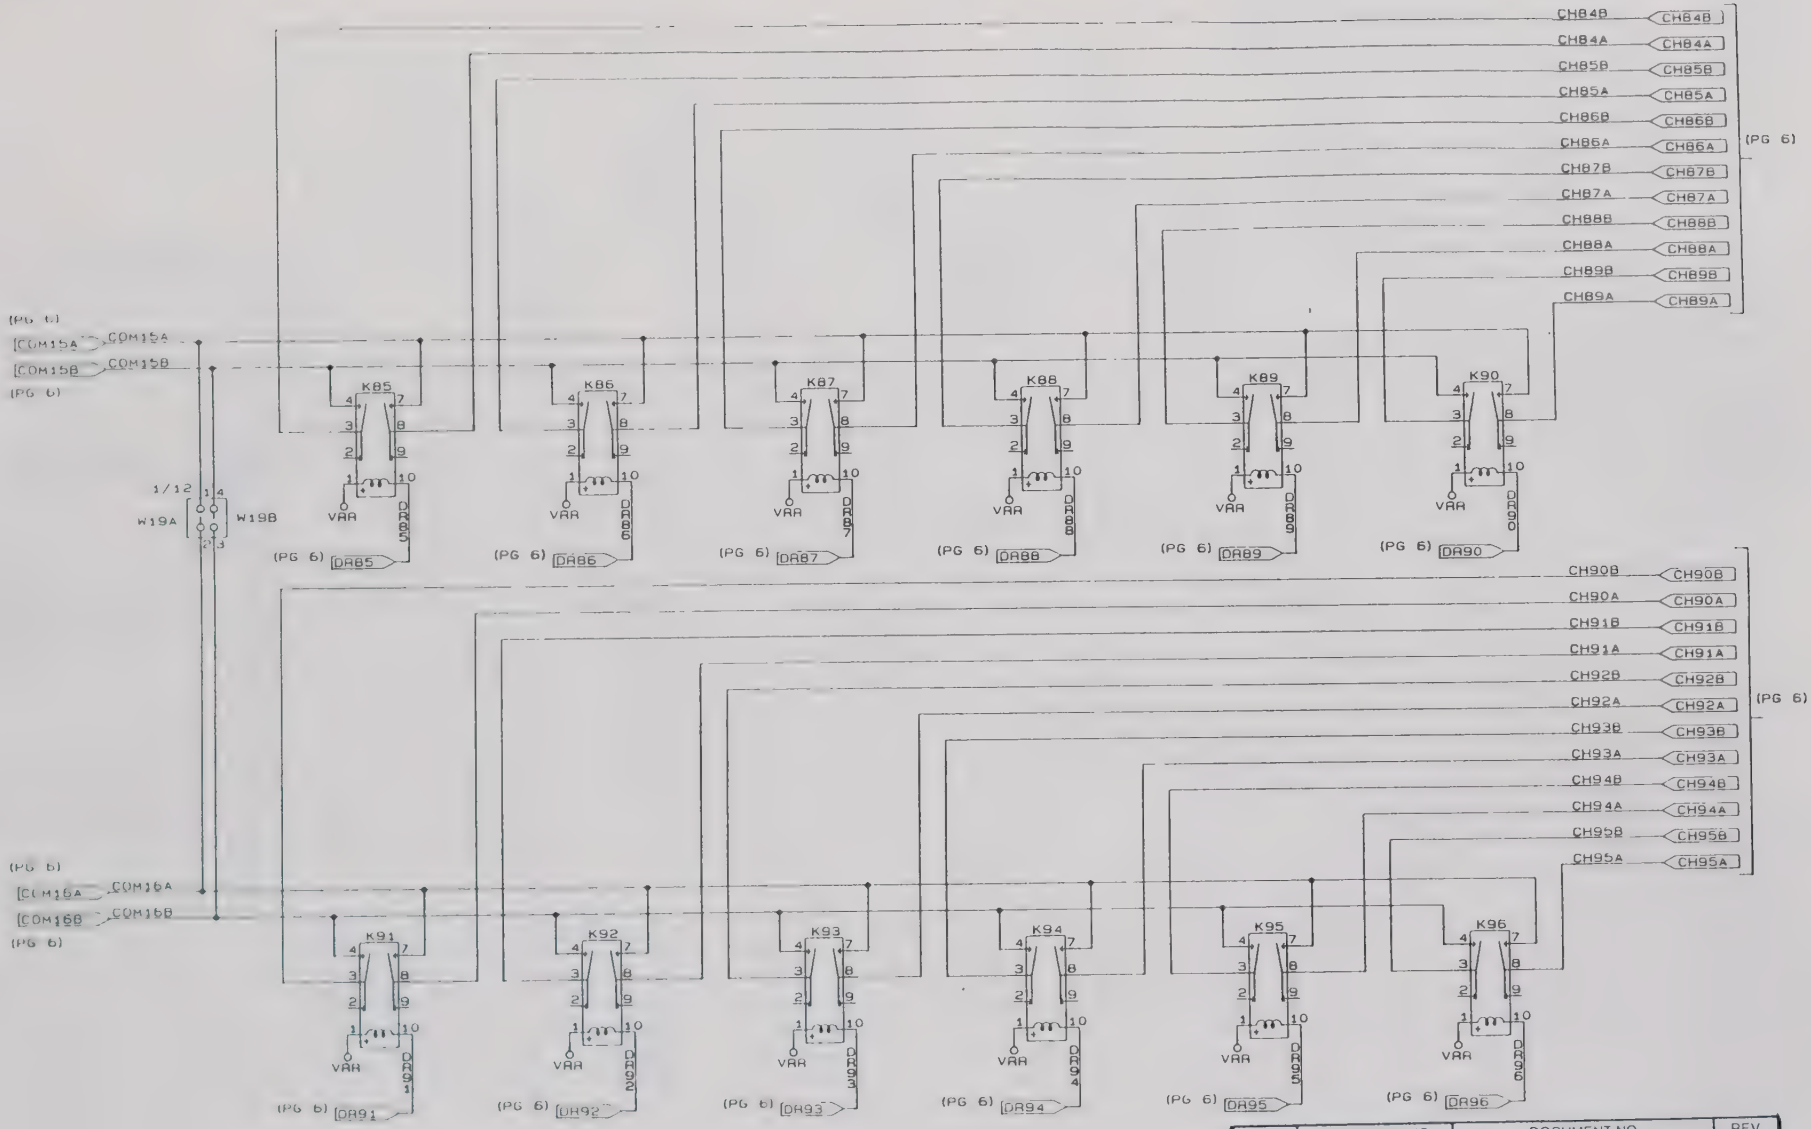

SIZE	CODE IDENT NO.	DOCUMENT NO	REV
B	21793	431992	A
SCALE		SHEET 5 OF 6	

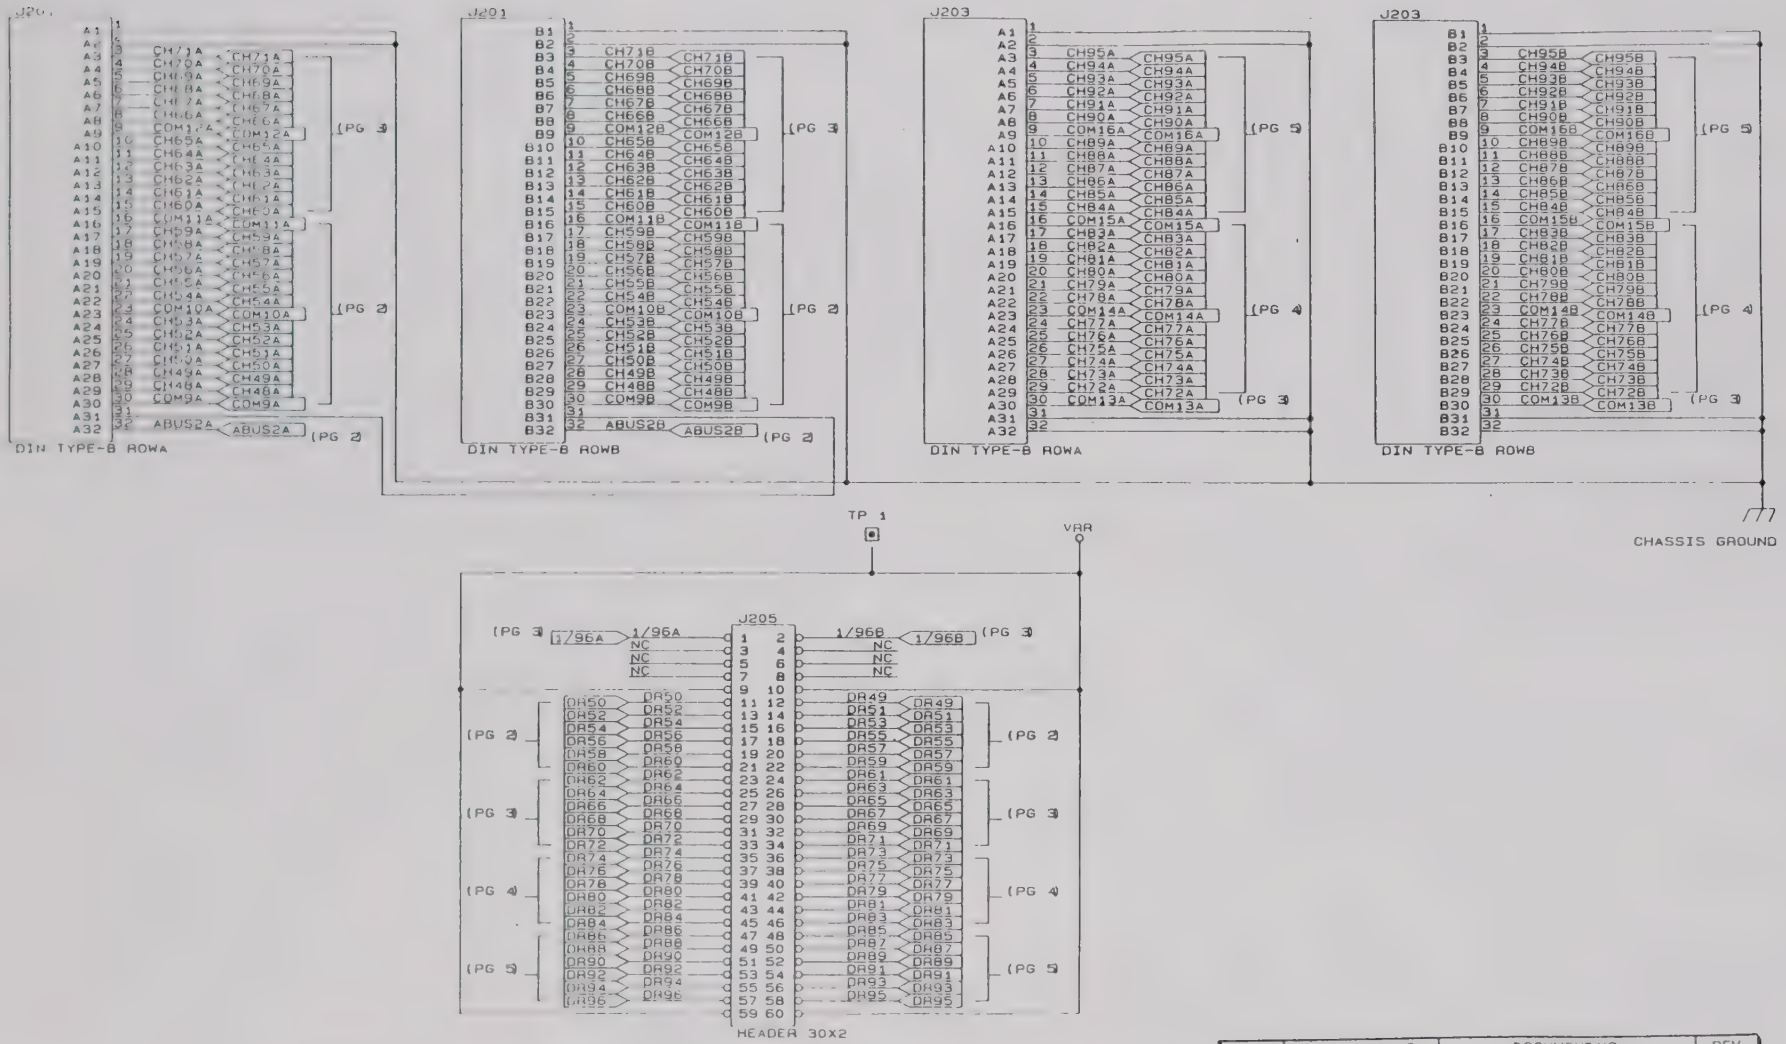

SIZE	CODE IDENT NO	DOCUMENT NO	REV
B	21793	431992	A
SCALE _____		SHEET 6 OF 6	

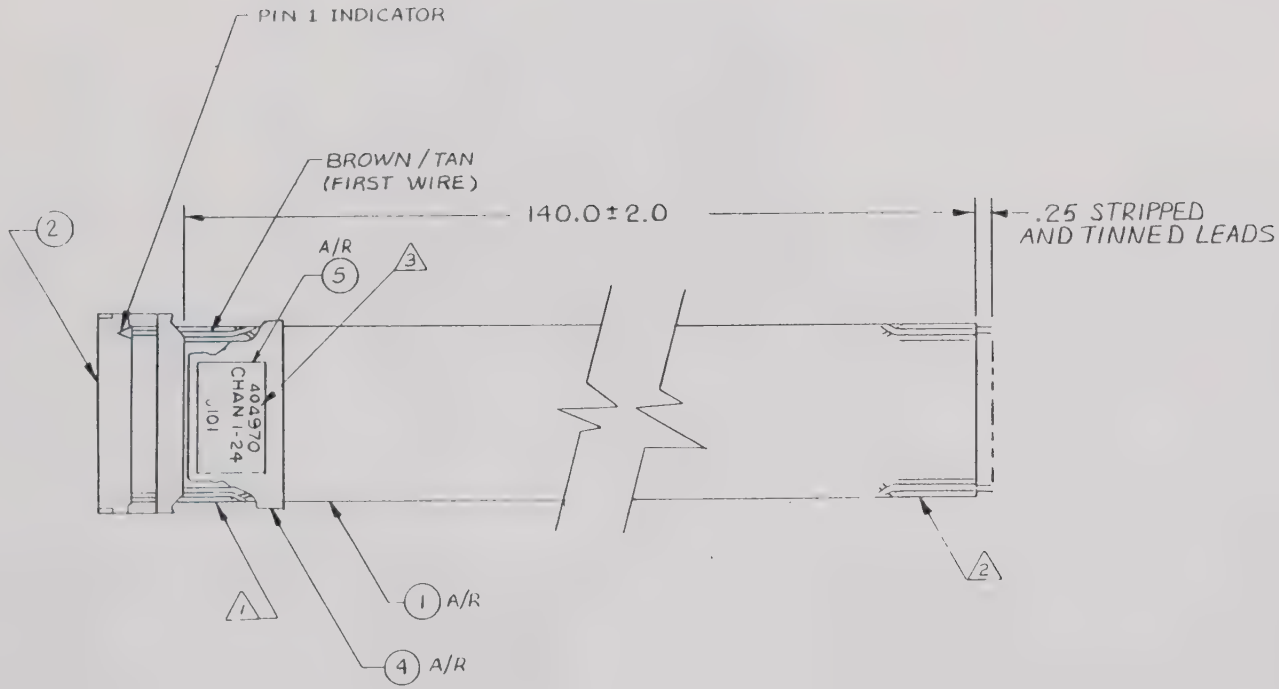

3. MARK CABLE USING BLACK EPOXY INK OR EQUIVALENT.

4. LEADS TO BE STRIPPED AND TINNED IN STRAIGHT (NON-TWISTED) SECTION OF CABLE.

5. CONNECTOR (ITEM 2) TO BE INSTALLED IN STRAIGHT (NON-TWISTED) SECTION OF CABLE.

NOTES UNLESS OTHERWISE SPECIFIED

RACAL-DANA Instruments Inc.
4 GOODYEAR IRVINE, CALIFORNIA 92714

CABLE ASSY, 1260-14, J101

SIZE	CODE IDENT NO	DOCUMENT NO	REV
C	21793	404970	A

SCALE NONE

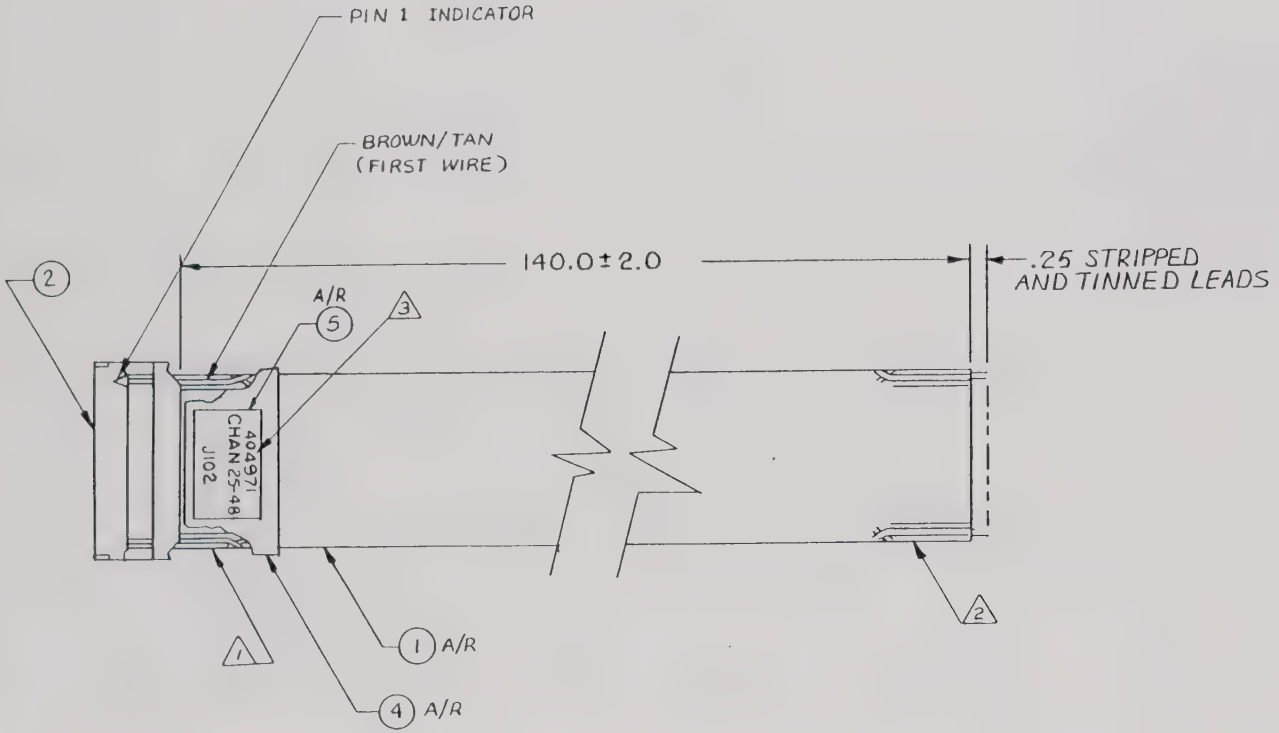

3. MARK CABLE USING BLACK EPOXY INK OR EQUIVALENT.

2. LEADS TO BE STRIPPED AND TINNED IN STRAIGHT (NON-TWISTED) SECTION OF CABLE.

1. CONNECTOR (ITEM 2) TO BE INSTALLED IN STRAIGHT (NON-TWISTED) SECTION OF CABLE.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA THEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC. AND SHALL NOT, WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC. BE USED, RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC. THE INFORMATION HEREIN HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC.

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

CABLE ASSY, 1260-14, J102

SIZE	CODE IDENT NO	DOCUMENT NO	REV
C	21793	404971	A

SCALE NONE SHEET 1 OF 2

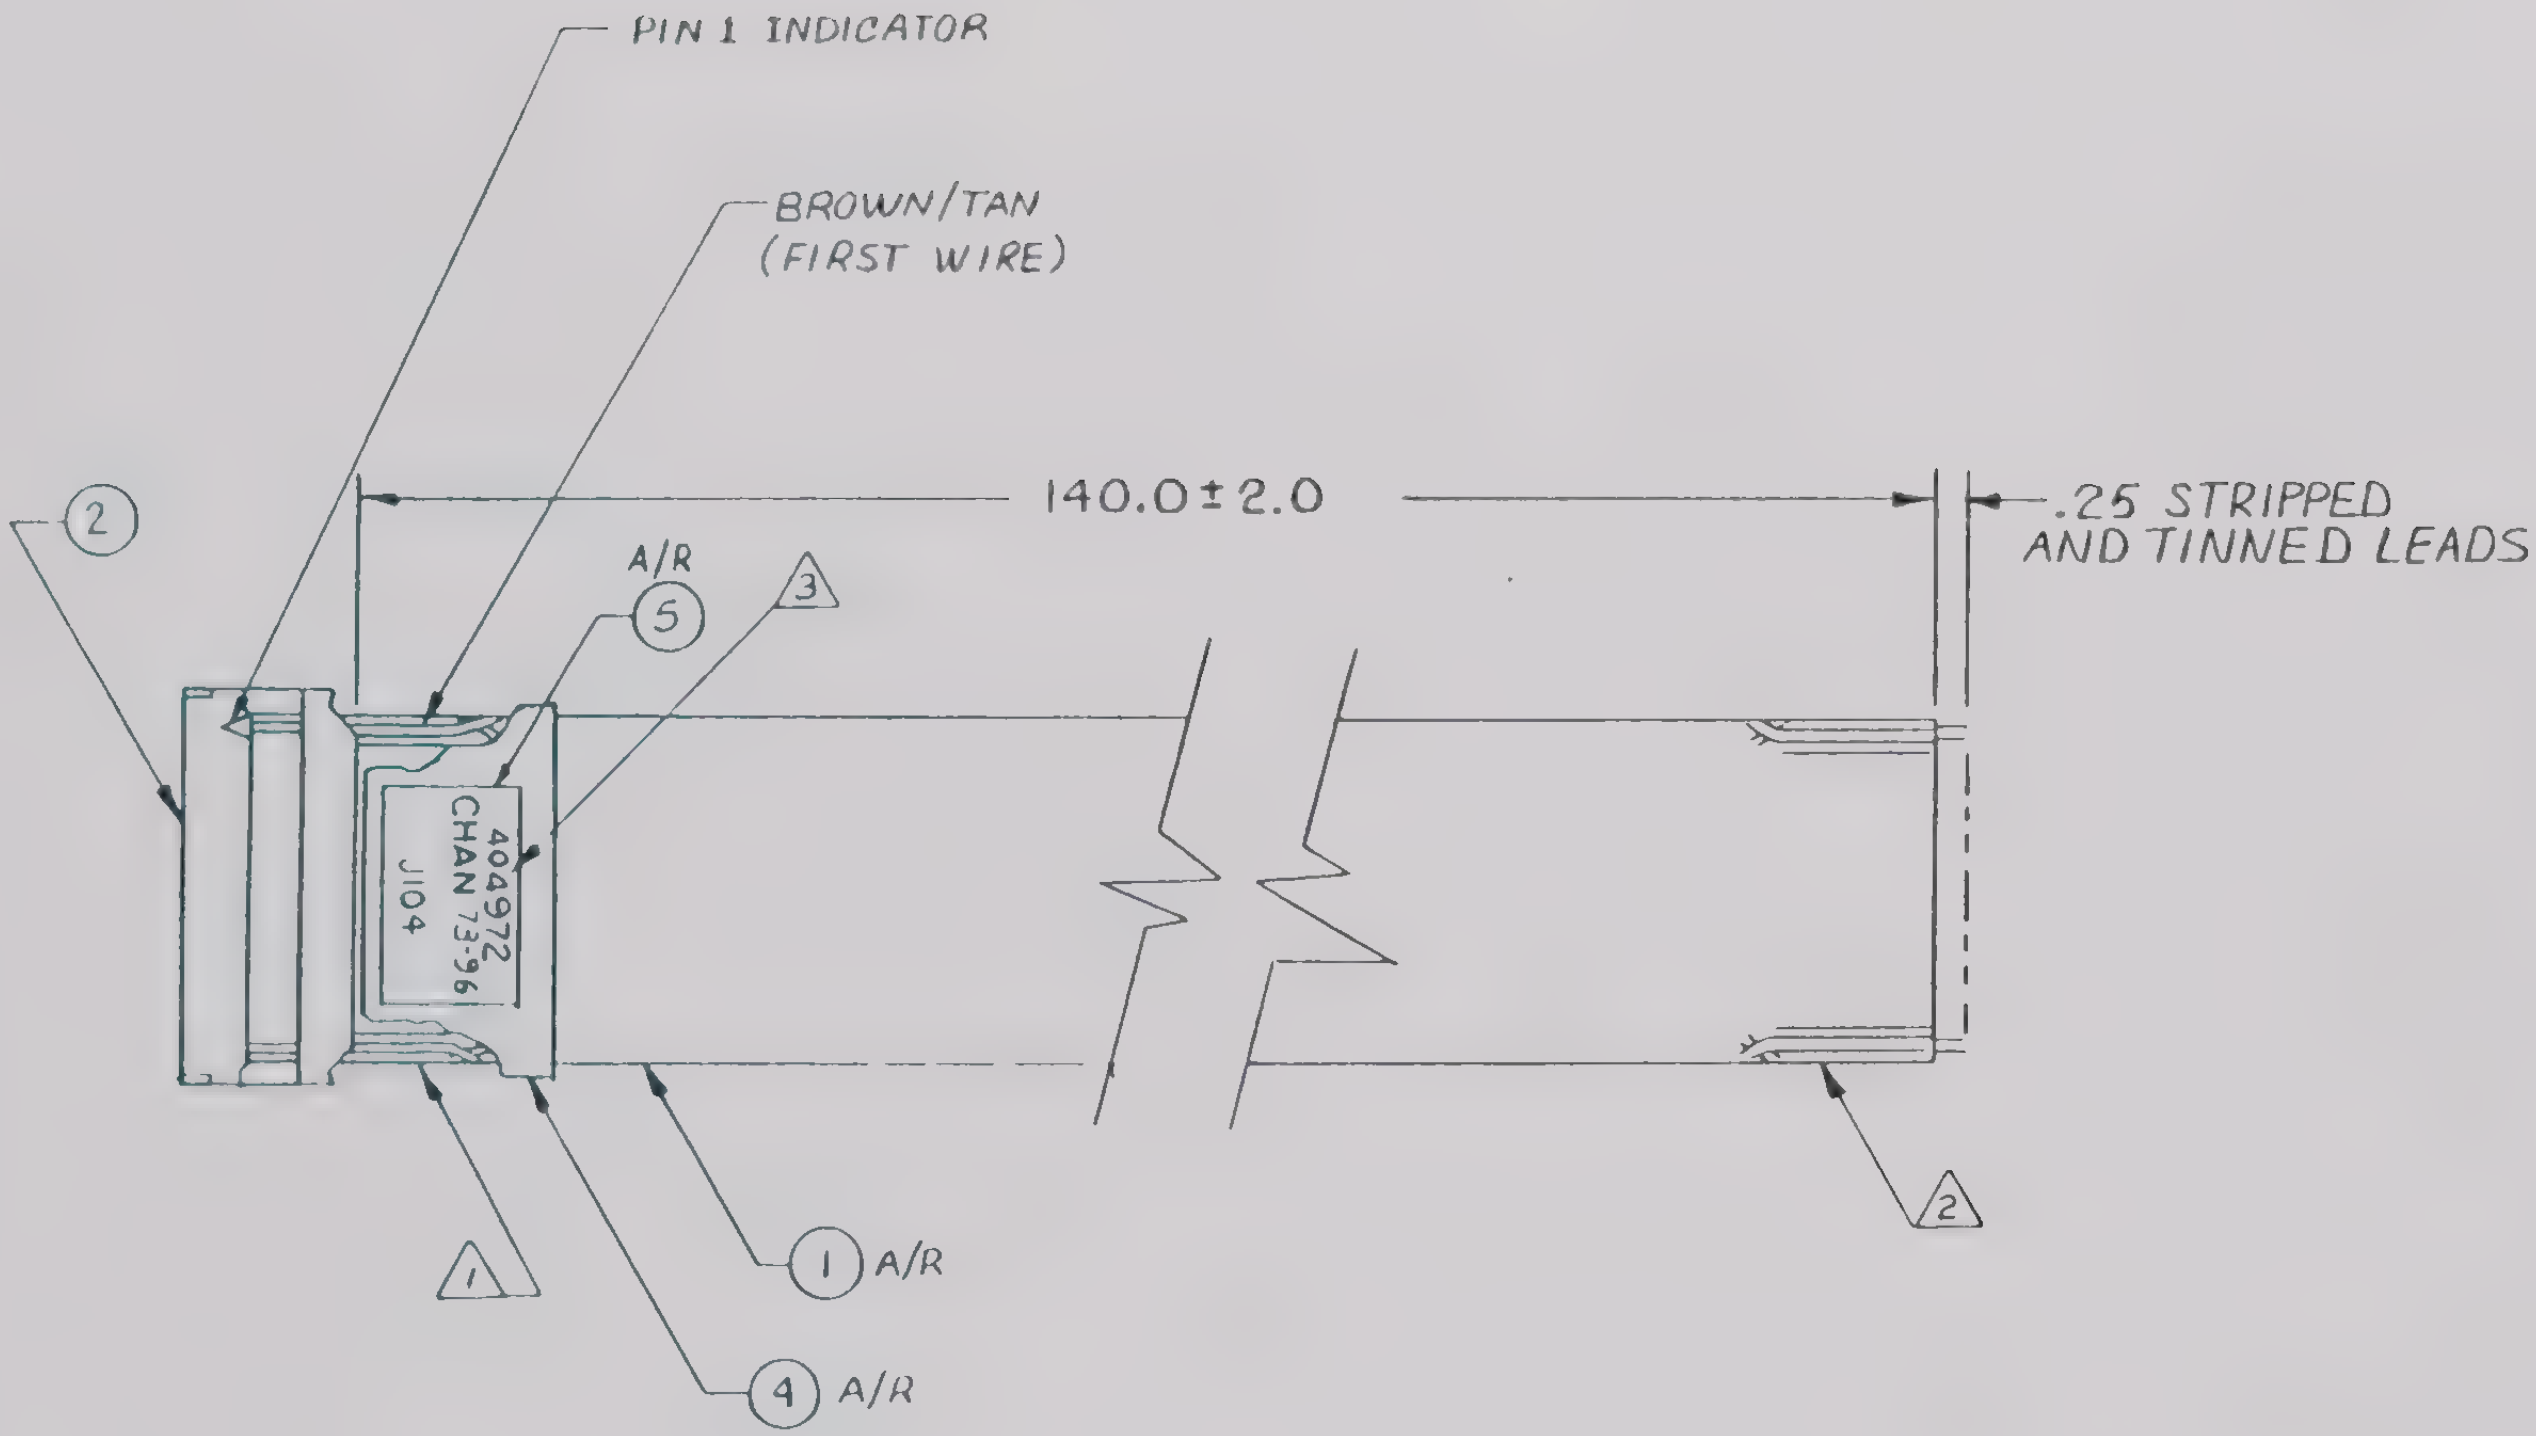

3\. MARK CABLE USING BLACK EPOXY INK OR EQUIVALENT.

2\. LEADS TO BE STRIPPED AND TINNED IN STRAIGHT (NON-TWISTED) SECTION OF CABLE.

1\. CONNECTOR (ITEM 2) TO BE INSTALLED IN STRAIGHT (NON-TWISTED) SECTION OF CABLE.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON [illegible] ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED, RELEASED OR DISCLOSED IN WHOLE OR IN PART, OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE [illegible] BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC [illegible] DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED [illegible] EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE			
CABLE ASSY, 1260-14, J104			
SIZE	CODE IDENT NO	DOCUMENT NO	REV
C	21793	404972	A
SCALE NONE		SHEET 1 OF 2	

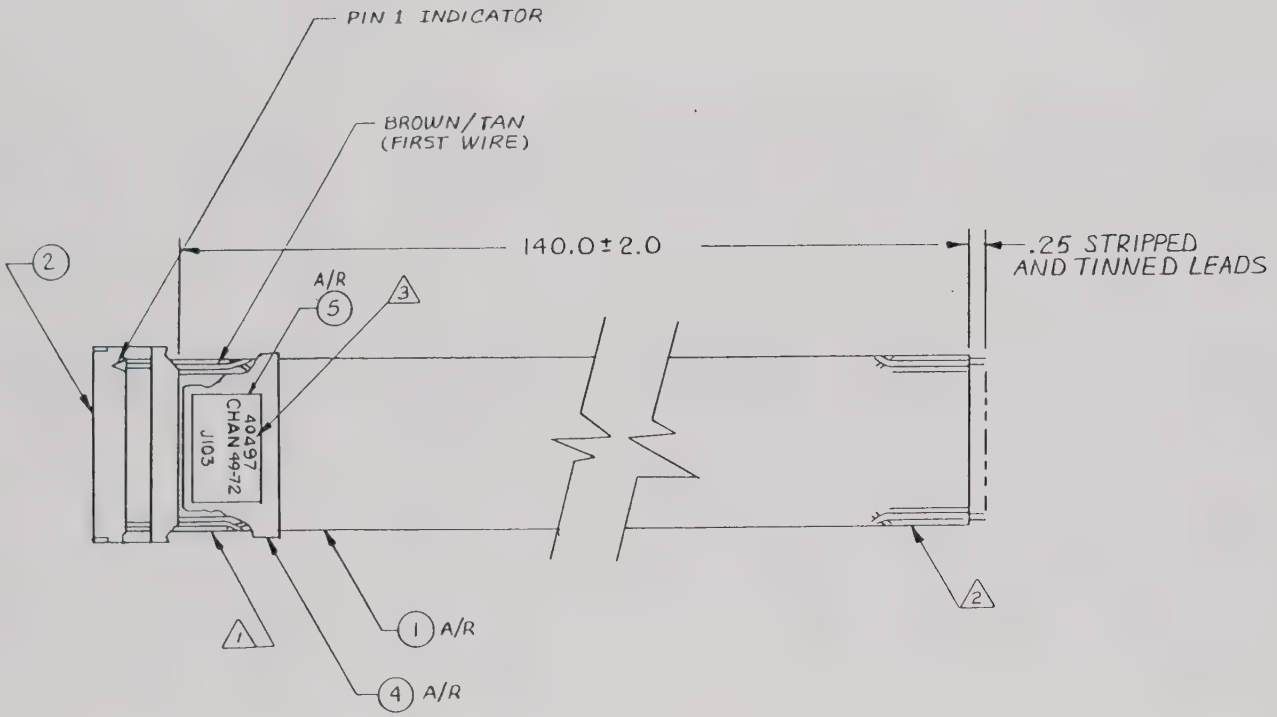

3. MARK CABLE USING BLACK EPOXY INK OR EQUIVALENT.

2. LEADS TO BE STRIPPED AND TINNED IN STRAIGHT (NON-TWISTED) SECTION OF CABLE.

1. CONNECTOR (ITEM 2) TO BE INSTALLED IN STRAIGHT (NON-TWISTED) SECTION OF CABLE.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREIN DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT, WITHOUT EXPRESS WRITTEN PERMISSION, BE USED BY RACAL DANA INSTRUMENTS INC BE SOLD OR LOANED DISCLOSED IN WHOLE OR IN PART TO ANY PERSON OR FIRM FOR USE IN CONNECTION WITH BIDS, QUOTATIONS OR MANUFACTURE OF ANY THING OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREIN HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES RELATING TO EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE
CABLE ASSY, 1260-14, J103

SIZE	CODE IDENT NO	DOCUMENT NO	REV
C	21793	404973	A

SCALE NONE | SHEET 1 OF 2

1260-12

404774	Final Assy., Actuator	6-4
404934	Shipping Kit	6-4
401905	PCB Assy., Actuator	6-5
401951	PCB Assy., LBus jumper	6-24

1260-13

404941	Final Assy., Actuator	6-28
404942	Shipping Kit	6-28
401987	PCB Assy., Actuator	6-29
401951	PCB Assy., LBus jumper	6-24

1260-14

404916	Final Assembly, Digital I/O	6-31
404936	Shipping Kit	6-31
401980	PCB Assy., Digital I/O	6-32
401951	PCB Assy., LBus jumper	6-24
404974	Cable Assy Kit, 1260-14	6-39
404970	Cable Assy., J101	6-39
404971	Cable Assy., J102	6-39
404972	Cable Assy., J103	6-40
404973	Cable Assy., J104	6-40

1260-20

404773	Final Assy., Power Module	6-6
404935	Shipping Kit	6-6
401919	PCB Assy., Power Chassis	6-7
401951	PCB Assy., LBus jumper	6-24

1260-30A

404767-001	Final Assy., Scanner / MUX	6-9
404938	Shipping Kit	6-9
401906	PCB Assy., Scanner / MUX	6-13
401951	PCB Assy., LBus jumper	6-24

1260-30B

404767-002	Final Assy., Scanner / MUX	6-10
404938	Shipping Kit	6-9
401906	PCB Assy., Scanner / MUX	6-13
401951	PCB Assy., LBus jumper	6-24

1260-30C

404767-003	Final Assy., Scanner / MUX	6-11
404938	Shipping Kit	6-9
401906	PCB Assy., Scanner / MUX	6-13
401951	PCB Assy., LBus jumper	6-24

1260-30D

404767-004	Final Assy., Scanner / MUX	6-12
404938	Shipping Kit	6-9
401906	PCB Assy., Scanner / MUX	6-13
401951	PCB Assy., LBus jumper	6-24

1260-35

404944	Final Assy., Scanner / MUX	6-35
404975	Shipping Kit	6-35
401989	PCB Assy., Scanner / MUX	6-36
401992	PCB Assy., 1260-35D	6-38
401951	PCB Assy., LBus jumper	6-24

1260-40A

404775-001	Final Assy., 4 x 24 Matrix	6-15
404937	Shipping Kit	6-15
401914	PCB Assy., 4 x 24 Matrix	6-18
401951	PCB Assy., LBus jumper	6-24

1260-40B

404775-002	Final Assy., 8 x 12 Matrix	6-16
404937	Shipping Kit	6-15
401914	PCB Assy., 4 x 24 Matrix	6-18
401951	PCB Assy., LBus jumper	6-24

1260-40C

404775-003	Final Assy., Dual 4 x 12 Matrix	6-17
404937	Shipping Kit	6-15
401914	PCB Assy., Dual 4 x 12 Matrix	6-18
401951	PCB Assy., LBus jumper	6-24

1260-54

404768	Final Assy., 50 ohm Terminated	6-21
404936	Shipping Kit	6-22
401908	PCB Assy., 50 ohm Terminated	6-23
401951	PCB Assy., LBus jumper	6-25

Option 01

401901	PCB Assy., Option 01	6-26

List of Suppliers

FSC	SUPPLIER
00779	AMP, INC. HARRISBURG, PA
01295	TEXAS INSTRUMENTS, INC. DALLAS, TEXAS
04713	MOTOROLA, INC. (SEMICONDUCTOR PRODUCTS DIV) PHOENIX, ARIZONA
05397	UNION CARBIDE CORP. (MATERIALS SYSTEMS DIV.) CLEVELAND, OHIO
05972	LOCTITE CORP. HARTFORD, CONN.
05540	AMATOM ELECTRONIC HARDWARE NEW ROCHELLE, N.Y.
06776	ROBINSON NUGENT INC. NEW ALBANY, IN
07263	FAIRCHILD (SEMICONDUCTOR DIV.) MOUNTAIN VIEW, CA
09922	BURNDY CORP. NORWALK, CT
11236	CTS OF BERNE, INC. BERNE, INDIANA
11237	CTS, KEENE INC. PASO ROBLES, CA.
17856	SILICONIX, INC. SANTA CLARA, CA
18324	SIGNETICS, INC. SUNNYVALE, CA
21793	RACAL-DANA INSTRUMENTS INC. IRVINE, CA
27014	NATIONAL SEMI-CONDUCTOR CORP. SANTA CLARA, CA
28198	POSITRONIC INDUSTRIES INC. SPRINGFIELD, MO
3V841	AB CONTROLS & CONNECTORS ABERCYNON, MID GLAMORGAN, WALES
46384	PENN ENG. & MFG. CORP DOYLESTOWN, PA.
52072	CIRCUIT ASSY. CORP. COSTA MESA, CA
52210	GETTING ENGRG & MFG. CO. SPRING MILLS, PA
55322	SAMTEC, INC NEW ALBANY, IN
56235	PRECISION STDS CORP. (BIRTCHER SEMI-CONDUCTOR DIV.) SANTA ANA, CA
56289	SPAGUE ELECTRIC CO. N. ADAMS, MA.
61529	AROMAT CORP. CUPERTINO, CA.
62559	SCHROFF, INC. WARWICK, RI
62786	HITACHI AMERICA, LTD SAN JOSE, CA
65940	ROHM CORP. IRVINE, CA
71450	CTS CORP. ELKHART, INDIANA
73138	BECKMAN INSTRUMENTS FULLERTON, CA.
81349	MILITARY SPECIFICATION
91506	AUGAT, INC. ATTLEBORO, MASSACHUSETTS
91637	DALE ELECTRONICS, INC. COLUMBUS, NEBRASKA
95275	VITRAMON, INC. BRIDGEPORT, CONNECTICUT

404774 FINAL ASSY., 1260-12

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}1	401905	PCB ASSY., 1260-12	21793	401905
{3}1	455558-001	PANEL, FRONT, 1260-12	21793	455558-001
{4}1	455524	COVER, BOTTOM	21793	455524
{5}1	455525	COVER, TOP	21793	455525
{8}2	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
{9}2	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
{11}10	617101	WASHER, FLAT, LIGHT SERIES, #2	-	-
{12}10	615014	SCREW, PPH, 2-56 X .250	-	-
{13}3	615049	SCREW, PPH, 4-40 X .875	-	-
{14}6	615512	SCREW, PFH, 2-56X.188	-	-
{15}10	617126	WASHER, LOCK, #2, LIGHT SERIES	-	-
{16}3	617127	WASHER, LOCK, #4, LIGHT SERIES	-	-
{18}1	611266	MOUNTING HARDWARE. HANDLE	62559	21100-745
{19}1	921148	LABEL SET, VXI-VME	21793	921148
{21}1	921059	LABEL, CAUTION, STATIC	21793	921059
{22}1	920710	LABEL, IDENIFICATION	21793	920710
{23}1	404934	SHIPPING KIT, 1260-30	21793	404934

404934 SHIPPING KIT, 1260-12

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{3}2	455540	KEY, LOCKOUT, TTL, A/C	21793	455540
{4}2	455541	KEY, LOCKOUT, TTL, A/C	21793	455541
{5}2	455542	KEY, LOCKOUT, TTL, A/C	21793	455542
{7}4	601855-034	CONNECTOR, SGMC. CABLE PLUG	21793	601855-034
{8}136	601857	CONTACT, SGMC. MAIL	28198	M5422N
{10}3	615014	SCREW, PPH, 2-56 X .250	-	-

401905 PCB ASSY., 1260-12

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
C1	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C2	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C3	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C4	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C100-101	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C103-116	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
J3	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J4	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J200	601856-034	CONNECTOR, SMPL, PCB RCP	28198	SMPL34FOTOLB
J201	601856-034	CONNECTOR, SMPL, PCB RCP	28198	SMPL34FOTOLB
J202	601856-034	CONNECTOR, SMPL, PCB RCP	28198	SMPL34FOTOLB
J203	601856-034	CONNECTOR, SMPL, PCB RCP	28198	SMPL34FOTOLB
K1-K20	310196	RELAY, 2FORM C	61529	DS2YE-S-DC24V
L1	100164	CAP, FEED-THRU,800PF, 50V	00779	842448-2
L2	310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L3	310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L4	100164	CAP, FEED-THRU,800PF, 50V	00779	842448-2
L5	600245	JUMPER, INSULATED	52210	L-2007-1
P1	601675	CONNECTOR, EUROCARD TYPE C, 96-PIN	00779	532505-1
P2	601675	CONNECTOR, EUROCARD TYPE C, 96-PIN	00779	532505-1
S1	R-23-4102	SWITCH,6-WAY,SINGLE THROW	3V841	206-006ST
S2	601915	SWITCH, DIP 6 POS, SMD	91506	ADF-06ST
S3	601915	SWITCH, DIP 6 POS, SMD	91506	ADF-06ST
TP1	601197	POST, TEST, .025 SQ	00779	6-87022-6
TP2	601197	POST, TEST, .025 SQ	00779	6-87022-6
U6	231125	IC, DIGITAL, LINE DRIVER	27014	DS26LS31MN
U7	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U8	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U9	231093	IC, QUAD COMPARATOR	04713	LM339D
U10	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U11	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U12	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U13	231094	IC, DEMUX DECODER	18324	N74LS138D
U14	231135	IC, DIGITAL, 4-BIT COMPARATOR	18324	PC74HCT85D
U15	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U16	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U17	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U18	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U19	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U20	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U21	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U22	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U23	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U24	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U25	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U26	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
W1	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
Z1	080114	RES NETWORK, 16P8R, 15K	73138	628-AL-153J
Z2	080120	RES NETWORK, 10K	11236	767-161R10K
Z3	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z4	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z5	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z6	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z7	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z8	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
(34)1	401951	PCB ASSY., LBUS JUMPER	21793	401951
(35)1	411905	PCB, 1260-12 (UNLOADED)	21793	411905
(53)3	611227	SPACER, PRESS, #4, PCB	46384	KFSE-116-20
(54)8	615012	SCREW, PPH, 2-56 X .125	-	-
(58)A/R	920962	LOCTITE, 242, MED STR.	05972	272

404773 FINAL ASSY., 1260-20

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}1	401919	PCB ASSY., 1260-20	21793	401919
{3}1	455523-001	PANEL, FRONT, 1260-20	21793	455523-001
{4}1	455524	COVER, BOTTOM	21793	455524
{5}1	455525	COVER, TOP	21793	455525
{8}2	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
{9}2	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
{11}10	617101	WASHER, FLAT, LIGHT SERIES, #2	-	-
{12}10	615014	SCREW, PPH, 2-56 X .250	-	-
{13}3	615049	SCREW, PPH, 4-40 X .875	-	-
{14}6	615512	SCREW, PFH, 2-56X.188	-	-
{15}10	617126	WASHER, LOCK, #2, LIGHT SERIES	-	-
{16}3	617127	WASHER, LOCK, #4, LIGHT SERIES	-	-
{18}1	611266	MOUNTING HARDWARE, HANDLE	62559	21100-745
{19}1	921148	LABEL SET, VXI-VME	21793	921148
{21}1	921059	LABEL, CAUTION, STATIC	21793	921059
{22}1	920710	LABEL, IDENIFICATION	21793	920710
{23}1	404935	SHIPPING KIT, 1260-20	21793	404935

404935 SHIPPING KIT, 1260-20

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{3}2	455540	KEY, LOCKOUT, TTL, A/C	21793	455540
{4}2	455541	KEY, LOCKOUT, TTL, A/C	21793	455541
{5}2	455542	KEY, LOCKOUT, TTL, A/C	21793	455542
{7}82	601849	TERMINAL, SOLDER	28198	FS116N2
{8}2	601850	CONNECTOR, CAB, RECEPT, 41 PIN	28198	41FOE100J0
{10}3	615014	SCREW, PPH, 2-56 X .250	-	-

401919 PCB ASSY., 1260-20 OPT

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
C1	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C2	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C3	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C4	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C100-C101	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C102	130177	CAPACITOR, CHIP, SMD, 270PF	95275	VJ1206A271KXAMT
C103-C116	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
J3	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J4	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J200,J201	601851	CONNECTOR, PCB, PLUG, 41 PIN	28198	GAPL41MOTOLS
K1-K20	310199	RELAY, POWER, 2 FORM A	61529	ST2E-DC24V
L1	100164	CAP, FEED-THRU,800PF, 50V	00779	842448-2
L2	310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L3	310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L4	100164	CAP, FEED-THRU,800PF, 50V	00779	842448-2
L5	600245	JUMPER, INSULATED	52210	L-2007-1
P1-P2	601675	CONNECTOR, EUROCARD TYPE C, 96-PIN	00779	532505-1
S1	R-23-4102	SWITCH,6-WAY,SINGLE THROW	3V841	206-006ST
S2	601915	SWITCH, DIP 6 POS, SMD	91506	ADF-06ST
S3	601915	SWITCH, DIP 6 POS, SMD	91506	ADF-06ST
TP1-TP2	601197	POST, TEST, .025 SQ	00779	6-87022-6
U1	231152	IC, PROGRAMMED PIA	21793	231152
U2	231153	IC, PROGRAMMED PLA	21793	231153
U3	231154	IC, PROGRAMMED PLA	21793	231154
U4	231147	IC, MULTIPLEXER	04713	74HC253D
U5	231147	IC, MULTIPLEXER	04713	74HC253D
U6	231125	IC, DIGITAL, LINE DRIVER	27014	DS26LS31MN
U7	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U8	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U9	231093	IC, QUAD COMPARATOR	04713	LM339D
U10	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U11	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U12	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U13	231094	IC, DEMUX DECODER	18324	N74LS138D
U14	231135	IC, DIGITAL, 4-BIT COMPARATOR	18324	PC74HCT85D
U15	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U16	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U17	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U18	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U19	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U20	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U21	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U22	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U23	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U24	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U25	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U26	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
W1-W2	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
Z1	080114	RES NETWORK, 16P8R, 15K	73138	628-AL-153J
Z2	080120	RES NETWORK, 10K	11236	767-161R10K
Z3	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z4	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z5	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z6	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J

401919 PCB ASSY . 1250-20 OPT

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
Z7	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z8	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473
{41}1	401951	PCB ASSY., LBUS JUMPER	21793	401951
{58}3	611227	SPACER, PRESS, #4, PCB	46384	KFSE-116-20
{59}4	615027	SCREW, PPH, 3-48 X .188	-	-
{61}A/R	920962	LOCTITE, 242, MED STR.	05972	272

404767-001 FINAL ASSY., 1260-30A

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}1	401906	PCB ASSY., 1260-30	21793	401906
{3}1	455557-001	PANEL, FRONT, 1260-30	21793	455557-001
{4}1	455524	COVER, BOTTOM	21793	455524
{5}1	455525	COVER, TOP	21793	455525
{8}2	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
{9}2	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
{11}10	617101	WASHER, FLAT, LIGHT SERIES, #2	-	-
{12}10	615014	SCREW, PPH, 2-56 X .250	-	-
{13}3	615049	SCREW, PPH, 4-40 X .875	-	-
{14}6	615512	SCREW, PFH, 2-56X.188	-	-
{15}10	617126	WASHER, LOCK, #2, LIGHT SERIES	-	-
{16}3	617127	WASHER, LOCK, #4, LIGHT SERIES	-	-
{18}1	611266	MOUNTING HARDWARE, HANDLE	62559	21100-745
{19}1	921148	LABEL SET, VXI-VME	21793	921148
{21}1	921059	LABEL, CAUTION, STATIC	21793	921059
{22}1	920710	LABEL, IDENIFICATION	21793	920710
{23}1	404938	SHIPPING KIT, 1260-30	21793	404938
{24}A/R	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
{25}A/R	500132	WIRE, TEFLON TWISTED PR, 24GA BLK/WHT	-	-

404938 SHIPPING KIT, 1260-30

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{3}2	455540	KEY, LOCKOUT, TTL, A/C	21793	455540
{4}2	455541	KEY, LOCKOUT, TTL, A/C	21793	455541
{5}2	455542	KEY, LOCKOUT, TTL, A/C	21793	455542
{7}2	601855-050	CONNECTOR, SGMC. CABLE PLUG	21793	601855-050
{8}100	601857	CONTACT, SGMC. MAIL	28198	M5422N
{10}3	615014	SCREW, PPH, 2-56 X .250	-	-

404767-002 FINAL ASSY., 1260-30B

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
(1)1	401906	PCB ASSY., 1260-30	21793	401906
(3)1	455557-001	PANEL, FRONT, 1260-30	21793	455557-001
(4)1	455524	COVER, BOTTOM	21793	455524
(5)1	455525	COVER, TOP	21793	455525
(8)2	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
(9)2	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
(11)10	617101	WASHER, FLAT, LIGHT SERIES, #2	-	-
(12)10	615014	SCREW, PPH, 2-56 X .250	-	-
(13)3	615049	SCREW, PPH, 4-40 X .875	-	-
(14)6	615512	SCREW, PFH, 2-56X.188	-	-
(15)10	617126	WASHER, LOCK, #2, LIGHT SERIES	-	-
(16)3	617127	WASHER, LOCK, #4, LIGHT SERIES	-	-
(18)1	611266	MOUNTING HARDWARE,HANDLE	62559	21100-745
(19)1	921148	LABEL SET, VXI-VME	21793	921148
(21)1	921059	LABEL, CAUTION, STATIC	21793	921059
(22)1	920710	LABEL, IDENIFICATION	21793	920710
(23)1	404938	SHIPPING KIT, 1260-30	21793	404938
(24)A/R	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
(25)A/R	500132	WIRE, TEFLON TWISTED PR, 24GA BLK/WHT	-	-

404767-003 FINAL ASSY., 1260-30C

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}1	401906	PCB ASSY., 1260-30	21793	401906
{3}1	455557-001	PANEL, FRONT, 1260-30	21793	455557-001
{4}1	455524	COVER, BOTTOM	21793	455524
{5}1	455525	COVER, TOP	21793	455525
{8}2	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
{9}2	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
{11}10	617101	WASHER, FLAT, LIGHT SERIES, #2	-	-
{12}10	615014	SCREW, PPH, 2-56 X .250	-	-
{13}3	615049	SCREW, PPH, 4-40 X .875	-	-
{14}6	615512	SCREW, PFH, 2-56X.188	-	-
{15}10	617126	WASHER, LOCK, #2, LIGHT SERIES	-	-
{16}3	617127	WASHER, LOCK, #4, LIGHT SERIES	-	-
{18}1	611266	MOUNTING HARDWARE, HANDLE	62559	21100-745
{19}1	921148	LABEL SET, VXI-VME	21793	921148
{21}1	921059	LABEL, CAUTION, STATIC	21793	921059
{22}1	920710	LABEL, IDENIFICATION	21793	920710
{23}1	404938	SHIPPING KIT, 1260-30	21793	404938
{24}A/R	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
{25}A/R	500132	WIRE, TEFLON TWISTED PR, 24GA BLK/WHT	-	-

404767-004 FINAL ASSY., 1260-30D

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}1	401906	PCB ASSY., 1260-30	21793	401906
{3}1	455557-001	PANEL, FRONT, 1260-30	21793	455557-001
{4}1	455524	COVER, BOTTOM	21793	455524
{5}1	455525	COVER, TOP	21793	455525
{8}2	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
{9}2	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
{11}10	617101	WASHER, FLAT, LIGHT SERIES, #2	-	-
{12}10	615014	SCREW, PPH, 2-56 X .250	-	-
{13}3	615049	SCREW, PPH, 4-40 X .875	-	-
{14}6	615512	SCREW, PFH, 2-56X.188	-	-
{15}10	617126	WASHER, LOCK, #2, LIGHT SERIES	-	-
{16}3	617127	WASHER, LOCK, #4, LIGHT SERIES	-	-
{18}1	611266	MOUNTING HARDWARE, HANDLE	62559	21100-745
{19}1	921148	LABEL SET, VXI-VME	21793	921148
{21}1	921059	LABEL, CAUTION, STATIC	21793	921059
{22}1	920710	LABEL, IDENIFICATION	21793	920710
{23}1	404938	SHIPPING KIT, 1260-30	21793	404938
{24}A/R	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
{25}A/R	500132	WIRE, TEFLON TWISTED PR, 24GA BLK/WHT	-	-

401906 PCB ASSY., 1260-30

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
C1	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C2	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C3	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C4	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C100-C101	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C102	130177	CAPACITOR, CHIP, SMD, 270PF	95275	VJ1206A271KXAMT
C103-C122	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
J3	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J4	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J200,J201	601856-050	CONNECTOR, SMPL, PCB RECEPT	21793	601856-050
K1-K40	310196	RELAY, 2FORM C	61529	DS2YE-S-DC24V
L1	100164	CAP, FEED-THRU,800PF, 50V	00779	842448-2
L2	310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L3	310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L4	100164	CAP, FEED-THRU,800PF, 50V	00779	842448-2
L5	600245	JUMPER, INSULATED	52210	L-2007-1
P1-P2	601675	CONNECTOR, EUROCARD TYPE C, 96-PIN	00779	532505-1
S1	R-23-4102	SWITCH,6-WAY,SINGLE THROW	3V841	206-006ST
S2	601915	SWITCH, DIP 6 POS, SMD	91506	ADF-06ST
S3	601915	SWITCH, DIP 6 POS, SMD	91506	ADF-06ST
TP1-TP2	601197	POST, TEST, .025 SQ	00779	6-87022-6
U1	231152	IC, PROGRAMMED PIA	21793	231152
U2	231153	IC, PROGRAMMED PLA	21793	231153
U3	231154	IC, PROGRAMMED PLA	21793	231154
U4	231147	IC, MULTIPLEXER	04713	74HC253D
U5	231147	IC, MULTIPLEXER	04713	74HC253D
U6	231125	IC, DIGITAL, LINE DRIVER	27014	DS26LS31MN
U7	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U8	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U9	231093	IC, QUAD COMPARATOR	04713	LM339D
U10	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U11	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U12	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U13	231094	IC, DEMUX DECODER	18324	N74LS138D
U14	231135	IC, DIGITAL, 4-BIT COMPARATOR	18324	PC74HCT85D
U15	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U16	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U17	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U18	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U19	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U20	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U21	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U22	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U23	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U24	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U25	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U26	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U27	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U28	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U29	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U30	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U31	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U32	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273

401906 PCB ASSY., 1260-30

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
U33	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U34	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
Z1	080114	RES NETWORK, 16P8R, 15K	73138	628-AL-153J
Z2	080120	RES NETWORK, 10K	11236	767-161R10K
Z3	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z4	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z5	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z6	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z7	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z8	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z9	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z10	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z11	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z12	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
{43}1	401951	PCB ASSY., LBUS JUMPER	21793	401951
{44}1	411906	PCB, SCANNER/MUX (UNLOADED)	21793	411906
{47}A/R	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
{62}3	611227	SPACER, PRESS, #4, PCB	46384	KFSE-116-20
{63}4	615012	SCREW, PPH, 2-56 X .125	-	-
{70}A/R	920962	LOCTITE. 242. MED STR.	05972	272

404775-001 FINAL ASSY., 1260-40A

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}1	401914	PCB ASSY., 1260-40	21793	401914
{4}1	455446	SHIELD, SIDE PANEL, TOP	21793	455446
{5}1	455446-001	SHIELD, SIDE, TOP, L.H.	21793	455446-001
{6}1	455447	SHIELD, SIDE PANEL, BOTTOM	21793	455447
{7}1	455447-001	SHIELD, SIDE, BOTTOM, L.H.	21793	455447-001
{8}1	455499-001	PANEL, FRONT, 1260-40	21793	455499-001
{9}1	455501	COVER, TOP, 1260-40	21793	455501
{10}1	455502	COVER, BOTTOM, 1260-40	21793	455502
{11}1	455521	BRACKET, FRONT	21793	455521
{14}2	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
{15}2	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
{18}10	615044	SCREW, PPH, 4-40 X .375	-	-
{19}4	615049	SCREW, PPH, 4-40 X .875	-	-
{20}14	615512	SCREW, PFH, 2-56X.188	-	-
{21}14	617127	WASHER, LOCK, #4, LIGHT SERIES	-	-
{24}1	611266	MOUNTING HARDWARE, HANDLE	62559	21100-745
{25}1	921148	LABEL SET, VXI-VME	21793	921148
{27}1	921059	LABEL, CAUTION, STATIC	21793	921059
{28}1	920710	LABEL, IDENIFICATION	21793	920710
{29}1	404937	SHIPPING KIT, 1260-40	21793	404937
{30}A/R	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
{31}A/R	500132	WIRE, TEFLON TWISTED PR, 24GA BLK/WHT	-	-

404937 SHIPPING KIT, 1260-40

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{3}2	455540	KEY, LOCKOUT, TTL, A/C	21793	455540
{4}2	455541	KEY, LOCKOUT, TTL, A/C	21793	455541
{5}2	455542	KEY, LOCKOUT, TTL, A/C	21793	455542
{7}2	601855-050	CONNECTOR, SGMC. CABLE PLUG	21793	601855-050
{8}2	601855-020	CONNECTOR, SGMC. CABLE PLUG	21793	601855-020
{9}140	601857	CONTACT, SGMC. MALE	28198	M5422N
{11}3	615014	SCREW, PPH, 2-56 X .250	-	-

404775-002 FINAL ASSY., 1260-40B

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}1	401914	PCB ASSY., 1260-40	21793	401914
{4}1	455446	SHIELD, SIDE PANEL, TOP	21793	455446
{5}1	455446-001	SHIELD, SIDE, TOP, L.H.	21793	455446-001
{6}1	455447	SHIELD, SIDE PANEL, BOTTOM	21793	455447
{7}1	455447-001	SHIELD, SIDE, BOTTOM, L.H.	21793	455447-001
{8}1	455499-001	PANEL, FRONT, 1260-40	21793	455499-001
{9}1	455501	COVER, TOP, 1260-40	21793	455501
{10}1	455502	COVER, BOTTOM, 1260-40	21793	455502
{11}1	455521	BRACKET, FRONT	21793	455521
{14}2	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
{15}2	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
{18}10	615044	SCREW, PPH, 4-40 X .375	-	-
{19}4	615049	SCREW, PPH, 4-40 X .875	-	-
{20}14	615512	SCREW, PFH, 2-56X.188	-	-
{21}14	617127	WASHER, LOCK, #4, LIGHT SERIES	-	-
{24}1	611266	MOUNTING HARDWARE, HANDLE	62559	21100-745
{25}1	921148	LABEL SET, VXI-VME	21793	921148
{27}1	921059	LABEL, CAUTION, STATIC	21793	921059
{28}1	920710	LABEL, IDENIFICATION	21793	920710
{29}1	404937	SHIPPING KIT, 1260-40	21793	404937
{30}A/R	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
{31}A/R	500132	WIRE, TEFLON TWISTED PR, 24GA BLK/WHT	-	-

404775-003 FINAL ASSY., 1260-40C

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}1	401914	PCB ASSY., 1260-40	21793	401914
{4}1	455446	SHIELD, SIDE PANEL, TOP	21793	455446
{5}1	455446-001	SHIELD, SIDE, TOP, L.H.	21793	455446-001
{6}1	455447	SHIELD, SIDE PANEL, BOTTOM	21793	455447
{7}1	455447-001	SHIELD, SIDE, BOTTOM, L.H.	21793	455447-001
{8}1	455499-001	PANEL, FRONT, 1260-40	21793	455499-001
{9}1	455501	COVER, TOP, 1260-40	21793	455501
{10}1	455502	COVER, BOTTOM, 1260-40	21793	455502
{11}1	455521	BRACKET, FRONT	21793	455521
{14}2	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
{15}2	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
{18}10	615044	SCREW, PPH, 4-40 X .375	-	-
{19}4	615049	SCREW, PPH, 4-40 X .875	-	-
{20}14	615512	SCREW, PFH, 2-56X.188	-	-
{21}14	617127	WASHER, LOCK, #4, LIGHT SERIES	-	-
{24}1	611266	MOUNTING HARDWARE, HANDLE	62559	21100-745
{25}1	921148	LABEL SET, VXI-VME	21793	921148
{27}1	921059	LABEL, CAUTION, STATIC	21793	921059
{28}1	920710	LABEL, IDENIFICATION	21793	920710
{29}1	404937	SHIPPING KIT, 1260-40	21793	404937
{30}A/R	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
{31}A/R	500132	WIRE, TEFLON TWISTED PR, 24GA BLK/WHT	-	-

401914 PCB ASSY., 1260-40

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
C1	130177	CAPACITOR, CHIP, SMD, 270PF	95275	VJ1206A271KXAMT
C2	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C3	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C4	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C5	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C10-C45	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C80	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C81	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C82	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C83	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C85	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C98	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C99	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
J3	601925	CONNECTOR, PCB, RECPT, 96-PIN	52072	618008
J4	601925	CONNECTOR, PCB, RECPT, 96-PIN	52072	618008
J200	601856-020	CONNECTOR, SMPL, PCB RECEPT	21793	601856-020
J201	601856-050	CONNECTOR, SMPL, PCB RECEPT	21793	601856-050
J202	601856-050	CONNECTOR, SMPL, PCB RECEPT	21793	601856-050
J203	601856-020	CONNECTOR, SMPL, PCB RECEPT	21793	601856-020
K1-K96	310197	RELAY, 2 FORM C	61529	TQ2E-24V
L1	310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L2	310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L3	600245	JUMPER, INSULATED	52210	L-2007-1
L5	100164	CAP, FEED-THRU,800PF, 50V	00779	842448-2
L6	100164	CAP, FEED-THRU,800PF, 50V	00779	842448-2
P1	601675	CONNECTOR, EUROCARD TYPE C, 96-PIN	00779	532505-1
P2	601675	CONNECTOR, EUROCARD TYPE C, 96-PIN	00779	532505-1
SW1	R-23-4102	SWITCH,6-WAY,SINGLE THROW	3V841	206-006ST
SW2	601915	SWITCH, DIP, 6 POS, SMD	91506	ADF-06ST
SW3	601915	SWITCH, DIP, 6 POS, SMD	91506	ADF-06ST
U1	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U2	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U3	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U4	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U5	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U6	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U7	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U8	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U9	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U10	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U11	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U12	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U13	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U14	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U15	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U16	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U17	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U18	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U19	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U20	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U21	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U22	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U23	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U24	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U25	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U26	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U27	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U28	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U29	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U30	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U31	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW

401914 PCB ASSY., 1260-40

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
U32	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U33	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U34	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U35	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U36	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U37	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U38	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U39	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U40	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U41	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U42	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U43	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U44	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U45	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U46	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U47	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U48	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U49	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U50	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U51	231125	IC, DIGITAL, LINE DRIVER	27014	DS26LS31MN
U52	231154	IC, PROGRAMMED PLA	21793	231154
U53	231153	IC, PROGRAMMED PLA	21793	231153
U54	231094	IC, DEMUX DECODER	18324	N74LS138D
U55	231094	IC, DEMUX DECODER	18324	N74LS138D
U56	231135	IC, DIGITAL, 4-BIT COMPARATOR	18324	PC74HCT85D
U57	231093	IC, QUAD COMPARATOR	04713	LM339D
U60	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U61	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U62	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U70	231152	IC, PROGRAMMED PIA	21793	231152
U71	231147	IC, MULTIPLEXER	04713	74HC253D
U72	231147	IC, MULTIPLEXER	04713	74HC253D
Z1	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z2	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z3	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z4	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z5	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z6	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z7	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z8	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z9	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z10	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z11	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z12	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z13	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z14	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z15	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z16	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z17	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z18	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z19	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z20	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z21	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z22	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z23	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z24	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z25	080114	RES NETWORK, 16P8R, 15K	73138	628-AL-153J

401914 PCB ASSY., 1260-40

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
Z26	080120	RES NETWORK, 10K	11236	767-161R10K
{46}1	411914	PCB 1260-14 (UNLOADED)	21793	411914
{50}4	611227	SPACER, PRESS, #4, PCB	46384	KFSE-116-20
{51}8	615013	SCREW, PPF, 2-56 X .125	-	-
{57}1	401951	PCB ASSY, LBUS JUMPER	21793	401951
{59}A/R	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022

404768 FINAL ASSY., 1260-54

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}1	401908	PCB ASSY., 1260-54	21793	401908
{3}1	404936	SHIPPING KIT, 1260-14,54	21793	404936
{5}1	921059	LABEL, CAUTION, STATIC	21793	921059
{7}1	921212-006	LABEL, VXI, 1260-54	21793	921212-006
{9}1	455781	PANEL, REAR, SINGLE	21793	455781
{11}1	455784-001	PANEL, VXI TOP	21793	455784-001
{13}1	455784-002	PANEL, VXI BOTTOM	21793	455784-002
{15}1	455780	PANEL, LEFT, 1260-54	21793	455780
{17}1	455780-001	PANEL, RIGHT, 1260-54	21793	455780-001
{19}8	616480	SCREW, PFH, 4-40 X .375	-	-
{21}33	615539	SCREW, PFH, 4-40X. 125	-	-

404936 SHIPPING KIT, 1260-14, 54

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
(1)2	455540	KEY, LOCKOUT, TTL, A/C	21793	455540
(2)2	455541	KEY, LOCKOUT, TTL, A/C	21793	455541
(3)2	455542	KEY, LOCKOUT, TTL, A/C	21793	455542
(5)3	615013	SCREW, PPH, 2-56 X .188	-	-

401908 PCB ASSY., 1260-54

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
C1-C4	1110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C100	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C101	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C102	1130177	CAPACITOR, CHIP, SMD, 270PF	95275	VJ1206A271KXAMT
C103-C122	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C200-C279	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
E1-E30	1455520	COAX TERMINAL, PCB MOUNT	21793	1455520
J3	1601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J4	1601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J100-J123	1601787	CONNECTOR, COAXIAL, RECEPTACLE	98291	51-053-000
K1-K36	1310168	RELAY, RF, 2 FORM C	01526	3SAV2590A2
L1	1100164	CAP, FEED-THRU,800PF, 50V	00779	1842448-2
L2	1310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L3	1310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L4	1100164	CAP, FEED-THRU,800PF, 50V	00779	1842448-2
L5	1600245	JUMPER, INSULATED	52210	IL-2007-1
P1	1601675-001	CONNECTOR, EUROCARD, 96 PIN (MODIFIED)	21793	1601675-001
P2	1601675-001	CONNECTOR, EUROCARD, 96 PIN (MODIFIED)	21793	1601675-001
RV1	1220102	VARISTOR, 56V, 1.7W	03508	V56ZA2
SW1	1601969	SWITCH, DIP 6 POS, LOW PROFILE	65832	K406S
SW2	1601969	SWITCH, DIP 6 POS, LOW PROFILE	65832	K406S
SW3	1601969	SWITCH, DIP 6 POS, LOW PROFILE	65832	K406S
TP1	1601197	POST, TEST, .025 SQ	00779	6-87022-6
TP2	1601197	POST, TEST, .025 SQ	00779	6-87022-6
U1	1231152	IC, PROGRAMMED PIA	21793	1231152
U2	1231153	IC, PROGRAMMED PLA	21793	1231153
U3	1231154	IC, PROGRAMMED PLA	21793	1231154
U4	1231147	IC, MULTIPLEXER	04713	74HC253D
U5	1231147	IC, MULTIPLEXER	04713	74HC253D
U6	1231125	IC, DIGITAL, LINE DRIVER	27014	DS26LS31MN
U7	1231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U8	1231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U9	1231093	IC, QUAD COMPARATOR	04713	LM339D
U10	1231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U11	1231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U12	1231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U13	1231094	IC, DEMUX DECODER	18324	N74LS138D
U14	1231135	IC, DIGITAL, 4-BIT COMPARATOR	18324	PC74HCT85D
U15	1231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U16	1231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U17	1231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U18	1231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U19	1231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U20	1231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U21	1231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U22	1231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U23	1231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U24	1231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U25	1231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U26	1231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U27	1231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U28	1231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U29	1231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U30	1231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U31	1231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U32	1231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U33	1231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U34	1231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
W1	1601208-016	CONNECTOR, PCB, PLUG, 3-PIN	52072	CA-S03-238-43

401908 PCB ASSY., 1260-54

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
Z1	080114	RES NETWORK, 16P8R, 15K	73138	628-AL-153J
Z2	080120	RES NETWORK, 10K	11236	767-161R10K
Z3	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z4	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z5	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z6	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z7	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z8	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z9	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z10	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z11	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z12	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
(35)1	401951	PCB ASSY., LBUS JUMPER	21793	401951
(37)1	411908	PCB 1260-54 (UNLOADED)	21793	411908
(41)1	455687-002	PANEL, FRONT, SMC CONNECTOR	21793	455687-002
(42)1	601984	BRACKET, SUPPORT, PCB	67349	VMEB2000
(43)A/R	500009	TUBING, SHRINK, .12 ID, BLK	29005	RNF-100-1-1/8
(44)A/R	500254	CABLE, COAXIAL, 50 OHM	92194	9178B
(48)1	601195	PLUG, JUMPER, 0.1 CTR, LOW PROFILE	00779	530153-2
(56)30	601944	CONNECTOR, RECEPTACLE, PANEL MOUNT SMC	98291	50-010-3195
(57)12	610777	CABLE TIE	16956	08-432
(60)60	611257	WASHER, SHOULDER #10	86928	5607-99
(61)3	611258-001	STANDOFF, SWAGE 4-40 X .170	06540	8091-11B-8-440-28
(62)1	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
(63)1	615016	SCREW, PPH, 2-56 X .375	-	-
(64)1	615514	SCREW, PFH, 2-56 X .312	-	-
(65)1	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
(66)2	617002	NUT, HEX, 2-56	-	-
(67)1	617101	WASHER, FLAT, LIGHT SERIES, #2	-	-
(68)A/R	920962	LOCTITE, 242, MED STR.	05972	272
(69)5	611266	MOUNTING HARDWARE, HANDLE	62559	21100-745
(70)1	921148	LABEL SET, VXI-VME	21793	921148
(71)2	616405	SCREW, PFH, M2.5-.45 X 12	-	-

401951 PCB ASSY., L-BUS JUMPER

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
(1)1	411951	PCB, L-BUS JUMPER (UNLOADED)	21793	411951
(3)2	601858	CONNECTOR, PCB, PLUG, 32PIN	52072	CAS32MPF1E

401901 PCB ASSY., 1250 MASTER CPU (OPT.01)

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
C1	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035AS
C2	110143	CAP, TANTA, 1 UF, 35V, 20 PERCENT	05397	T355A105M035AS
C100-C12	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
CR1	211083	DIODE, SILICON	81349	1N916B
P3A	601858	CONNECTOR, PCB, PLUG, 32PIN	52072	CAS32MPF1B
P3B	601858	CONNECTOR, PCB, PLUG, 32PIN	52072	CAS32MPF1B
P3C	601858	CONNECTOR, PCB, PLUG, 32PIN	52072	CAS32MPF1B
P4A	601858	CONNECTOR, PCB, PLUG, 32PIN	52072	CAS32MPF1B
P4B	601858	CONNECTOR, PCB, PLUG, 32PIN	52072	CAS32MPF1B
P4C	601858	CONNECTOR, PCB, PLUG, 32PIN	52072	CAS32MPF1B
P5	601710-003	CONNECTOR, RT.ANGLE, SINGLE ROW, 3P	52072	CA-S03R-23B09
P6	601710-003	CONNECTOR, RT.ANGLE, SINGLE ROW, 3P	52072	CA-S03R-23B09
Q1	200320	TRANSISTOR, NPN	04713	MMBT3904
Q2	200295	TRANSISTOR, N-CHAN, MOSFET	17856	VN10KM
Q3	200320	TRANSISTOR, NPN	04713	MMBT3904
Q4	200320	TRANSISTOR, NPN	04713	MMBT3904
Q100	200320	TRANSISTOR, NPN	04713	MMBT3904
R100	050000-102	RES, CHIP, 1K, .06W, 5PCT	91637	CRCW0805SERIES
R101	050038	RES, CHIP, 825 OHM, 1/8W, 5PCT	65940	MCR18825J
R102	050039	RES, CHIP, 1.24K, 1/8W, 1PCT	65940	MCR181.24KFW
R103	050000-102	RES, CHIP, 1K, .06W, 5PCT	91637	CRCW0805SERIES
R104	R-20-5764	RES, CHIP, 100 OHM, 1/8W, 5 PCT	65940	MCR18100OHM5PCT
R105	050040	RES, CHIP, 6.04K, 1/8W, 1PCT	65940	MCR186.04KFW
R106	050000-102	RES, CHIP, 1K, .06W, 5PCT	91637	CRCW0805SERIES
R107	050047	RES, CHIP, 2.21K, .06W, 1PCT	56235	50705CPX2211F30
R108	R-20-5787	RES, CHIP, 330 OHM,1/8W,5 PCT,200V	65940	MCR18330OHM5PCT
R109	R-20-5792	RES, CHIP, 1K, 1/8W,5 PCT,200V	65940	MCR18-1K-5 PCT
R110	R-20-5792	RES, CHIP, 1K, 1/8W,5 PCT,200V	65940	MCR18-1K-5 PCT
R111	R-20-5765	RES, CHIP, 470 OHM, 1/8W, 5 PCT	65940	MCR18470OHM5PCT
R112	R-20-5792	RES, CHIP, 1K, 1/8W,5 PCT,200V	65940	MCR18-1K-5 PCT
S1	601699	SWITCH, DIP, 8 POS, LOW PROFILE	71450	207-8-LPST
S2	601859	SWITCH, DIP, 4 POS	11237	2074LPST
U1	231094	IC, DEMUX DECODER	18324	N74LS138D
U2	231122	IC, SOIC	01295	SN74LS641-1DW
U3	231123	IC, MULTIPLEXER	18324	74LS151D
U4	231125	IC, DIGITAL, LINE DRIVER	27014	DS26LS31MN
U5	231125	IC, DIGITAL, LINE DRIVER	27014	DS26LS31MN
U6	231122	IC, SOIC	01295	SN74LS641-1DW
U7	230986	IC,8-BIT COMPARATOR	07263	74F521SC
U8	231092	IC, TRI-STATE BUFFER	18324	74LS244D
U9	231118	IC, DIGITAL BUFFER	01295	SN74LS652DW
U10	231129	IC, OCTAL BUS TRANSCEIVERS	18324	N74LS645-1D
U11	231093	IC, QUAD COMPARATOR	04713	LM339D
U12	231119	IC, SHIFT REGISTER	18324	74HCT299D
U13	231164	MEMORY	21793	231164
U14	231163	MEMORY	21793	231163
U15	230980	IC,DUAL JK POS EDGE-TRIG F-F	07263	74F109SC
U16	231094	IC, DEMUX DECODER	18324	N74LS138D
U17	231092	IC, TRI-STATE BUFFER	18324	74LS244D
U18	230986	IC,8-BIT COMPARATOR	07263	74F521SC
U19	231162	MEMORY	21793	231162
U20	231124	IC, FLIP-FLOP	18324	N74LS374D
U21	231121	IC, QUADRUPLE 2-INPUT POS-OR GATE	01295	SN74HC32D
U22	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U23	231161	MEMORY	21793	231161
U24	231160	MEMORY	21793	231160
U25	231159	MEMORY	21793	231159
U26	231158	MEMORY	21793	231158
U27	231157	MEMORY	21793	231157

401901 PCB ASSY., 1260 MASTER CPU (OPT.01)

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
U28	231156	MEMORY	21793	231156
U29	231155	MEMORY	21793	231155
U30	230780	IC, COUNTER TIMER	04713	MC6840P
U31	231136	IC, MICROPROCESSING UNIT	62786	HD68C00CP-8
U32	231146	IC, MEMORY, EEPROM	21793	231146
U33	231166	MEMORY	21793	231166
U34	231167	MEMORY	21793	231167
U100	231129	IC, OCTAL BUS TRANSCEIVERS	18324	N74LS645-1D
U101	231118	IC, DIGITAL BUFFER	01295	SN74LS652DW
U102	231092	IC, TRI-STATE BUFFER	18324	74LS244D
U103	230986	IC,8-BIT COMPARATOR	07263	74F521SC
U104	231127	IC, FLIP-FLOP	04713	SN74LS74AD
U105	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U106	231124	IC, FLIP-FLOP	18324	N74LS374D
U107	231126	IC, NAND GATE	18324	74S38D
U108	231128	IC, ENCODER	01295	SN74LS148D
U109	231124	IC, FLIP-FLOP	18324	N74LS374D
U110	231092	IC, TRI-STATE BUFFER	18324	74LS244D
U111	231093	IC, QUAD COMPARATOR	04713	LM339D
U112	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U113	231094	IC, DEMUX DECODER	18324	N74LS138D
U114	231137	IC, MEMORY	21793	231137
U115	231137	IC, MEMORY	21793	231137
VR1	230951	IC, 1.2V MICRO PWR V REF DIODE	27014	LM385BM-1.2
Z1	080121	RES, NETWORK, 3.3K, 16P, 8R	11236	767-163R33KS
Z2	080116	RES NETWORK, 16P8R, 10K	73138	628-AL-103J
Z3	080120	RES NETWORK, 10K	11236	767-161R10K
Z4	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z100-Z103	080120	RES NETWORK, 10K	11236	767-161R10K
{65}1	411901	PCB OPTION 01 (UNLOADED)	21793	411901
{69}A/R	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
{71}1	601277	IC SOCKET, 28-PIN	06776	ICA-286-S-TG
{76}1	601715	SOCKET, CHIP CARRIER, 68 PIN	09922	Q1LE68P-410T
{77}4	601735-016	CONNECTOR, PCB, RECEPT, 16-PIN	55322	SL116G32
{92}3	610257	STANDOFF, SWAGE, 1/4D, 4-40 X .31	06540	9534BB04403A
{93}1	404782	CABLE ASSY., LED FAIL	21793	404782

404941 FINAL ASSY., 1260-13

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}1	401987	PCB ASSY., 1260-13 (UNLOADED)	21793	401987
{3}1	404942	SHIPPING KIT, 1260-13	21793	404942
{5}1	455901	PANEL, RIGHT SIDE	21793	455901
{6}1	455779-003	PANEL, SIDE, LEFT	21793	455779-003
{7}1	455781	PANEL, REAR, SINGLE	21793	455781
{8}1	455784-001	PANEL, VXI TOP	21793	455784-001
{9}1	455784-002	PANEL, VXI BOTTOM	21793	455784-002
{10}1	455795	PANEL, FRONT, 1260-13	21793	455795
{22}1	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
{23}1	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
{24}0.5	611266	MOUNTING HARDWARE, HANDLE	62559	21100-745
{25}32	615539	SCREW, PFH, 4-40X, 125	-	-
{27}2	616405	SCREW, PFH, M2.5-.45 X 12	-	-
{28}8	616480	SCREW, PFH, 4-40 X .375	-	-
{32}1	921212-008	LABEL, VXI, 1260-13	21793	921212-008
{33}A/R	920962	LOCTITE, 242, MED STR.	05972	272
{35}1	921059	LABEL, CAUTION, STATIC	21793	921059
{36}1	921148	LABEL SET, VXI-VME	21793	921148

404942 SHIPPING KIT, 1260-13

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}2	455540	KEY, LOCKOUT, TTL, A/C	21793	455540
{2}2	455541	KEY, LOCKOUT, TTL, A/C	21793	455541
{3}2	455542	KEY, LOCKOUT, TTL, A/C	21793	455542
{6}4	601855-050	CONNECTOR, SGMC, CABLE PLUG	21793	601855-050
{7}200	601857	CONTACT, SGMC, MALE	28198	M5422N
{9}3	615013	SCREW, PPH, 2-56 X .188	-	-

401987 PCB ASSY., 1260-13

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
C1-C4	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C100	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C101	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C102	130177	CAPACITOR, CHIP, SMD, 270PF	95275	VJ1206A271KXAMT
C103-C122	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
J3	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J4	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J200	601856-050	CONNECTOR, SMPL, PCB RECEPT	21793	601856-050
J201	601856-050	CONNECTOR, SMPL, PCB RECEPT	21793	601856-050
J202	601856-050	CONNECTOR, SMPL, PCB RECEPT	21793	601856-050
J203	601856-050	CONNECTOR, SMPL, PCB RECEPT	21793	601856-050
K1-K40	310196	RELAY, 2FORM C	61529	DS2YE-S-DC24V
L1	100164	CAP, FEED-THRU,800PF, 50V	00779	842448-2
L2	310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L3	310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L4	100164	CAP, FEED-THRU,800PF, 50V	00779	842448-2
L5	600245	JUMPER, INSULATED	52210	L-2007-1
P1	601675	CONNECTOR, EUROCARD TYPE C, 96-PIN	00779	532505-1
P2	601675	CONNECTOR, EUROCARD TYPE C, 96-PIN	00779	532505-1
S1-S3	601969	SWITCH, DIP 6 POS, LOW PROFILE	65832	K406S
TP1	601197	POST, TEST, .025 SQ	00779	6-87022-6
TP2	601197	POST, TEST, .025 SQ	00779	6-87022-6
U1	231152	IC, PROGRAMMED PIA	21793	231152
U2	231153	IC, PROGRAMMED PLA	21793	231153
U3	231154	IC, PROGRAMMED PLA	21793	231154
U4	231147	IC, MULTIPLEXER	04713	74HC253D
U5	231147	IC, MULTIPLEXER	04713	74HC253D
U6	231125	IC, DIGITAL, LINE DRIVER	27014	DS26LS31MN
U7	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U8	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U9	231093	IC, QUAD COMPARATOR	04713	LM339D
U10	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U11	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U12	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U13	231094	IC, DEMUX DECODER	18324	N74LS138D
U14	231135	IC, DIGITAL, 4-BIT COMPARATOR	18324	PC74HCT85D
U15	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U16	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U17	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U18	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U19	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U20	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U21	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U22	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U23	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U24	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U25	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U26	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U27	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U28	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U29	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U30	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U31	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U32	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U33	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U34	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
W1-W40	600245	JUMPER, INSULATED	52210	L-2007-1
Z1	080114	RES NETWORK, 16P8R, 15K	73138	628-AL-153J
Z2	080120	RES NETWORK, 10K	11236	767-161R10K

401987 PCB ASSY., 1260-13

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
Z3	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z4	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z5	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z6	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z7	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z8	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z9	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z10	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z11	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z12	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
{42}1	401951	PCB ASSY., LBUS JUMPER	21793	401951
{44}1	411987	PCB 1260-13 (UNLOADED)	21793	411987
{47}A/R	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
{61}4	611258-001	STANDOFF, SWAGE 4-40 X .170	06540	8091-118-B-440-28
{63}8	615012	SCREW, PPH, 2-56 X .125	-	-
{68}A/R	920962	LOCTITE, 242, MED STR.	05972	272

404916 FINAL ASSY., 1260-14

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}1	401980	PCB ASSY., 1260-14	21793	401980
{3}1	404936	SHIPPING KIT, 1260-14	21793	404936
{5}1	455901	PANEL, SIDE, RIGHT	21793	455901
{6}1	455779-003	PANEL, SIDE, LEFT	21793	455779-003
{9}1	455781	PANEL, REAR, SINGLE	21793	455781
{10}1	455784-001	PANEL, VXI TOP	21793	455784-001
{11}1	455784-002	PANEL, VXI BOTTOM	21793	455784-002
{14}32	615539	SCREW, PFH, 4-40X. 125	--	--
{16}8	616480	SCREW, PFH, 4-40 X .375	-	-
{18}1	921212-009	LABEL, VXI, 1260-14	21793	921212-009
{19}A/R	920962	LOCTITE, 242, MED STR.	05972	272
{21}1	921059	LABEL, CAUTION, STATIC	21793	921059

404936 SHIPPING KIT, 1260-14, 54

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}2	455540	KEY, LOCKOUT, TTL, A/C	21793	455540
{2}2	455541	KEY, LOCKOUT, TTL, A/C	21793	455541
{3}2	455542	KEY, LOCKOUT, TTL, A/C	21793	455542
{5}3	615013	SCREW, PPH, 2-56 X .188	-	-

401980 PCB ASSY., 1260-14

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
C1	130177	CAPACITOR, CHIP, SMD, 270PF	95275	VJ1206A271KXAMT
C2	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C3	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C10-C45	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C82	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C83	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C85	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C98	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C99	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C100-C137	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
J1	601987	CONNECTOR, IDC PLUG, 50P	53387	4650-6300
J2	601987	CONNECTOR, IDC PLUG, 50P	53387	4650-6300
J3	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J3	601988	CONNECTOR, IDC PLUG, 60P	53387	4660-6300
J4	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J4	601988	CONNECTOR, IDC PLUG, 60P	53387	4660-6300
L1	310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L6	100164	CAP, FEED-THRU,800PF, 50V	00779	842448-2
P1	601675-001	CONNECTOR, EUROCARD, 96 PIN (MODIFIED)	21793	601675-001
P2	601675-001	CONNECTOR, EUROCARD, 96 PIN (MODIFIED)	21793	601675-001
P101	601604	CONNECTOR, PCB, PLUG, 50-PIN, STRAIGHT	08261	842-800-571-000
P102	601604	CONNECTOR, PCB, PLUG, 50-PIN, STRAIGHT	08261	842-800-571-000
P103	601169	CONNECTOR, IDC, 60P, BREAKAWAY	55322	TSW-130-07-G-D
P104	601169	CONNECTOR, IDC, 60P, BREAKAWAY	55322	TSW-130-07-G-D
SW1-SW3	601969	SWITCH, DIP 6 POS, LOW PROFILE	65832	K406S
TP1	601197	POST, TEST, .025 SQ	00779	6-87022-6
TP2	601197	POST, TEST, .025 SQ	00779	6-87022-6
U1	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U2	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U4	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U5	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U6	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U8	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U9	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U10	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U12	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U13	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U14	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U16	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U17	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U18	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U20	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U21	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U22	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U24	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U25	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U26	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U28	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U29	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U30	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U32	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U33	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U34	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U36	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U37	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U38	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U40	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U41	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U42	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273

401980 PCB ASSY., 1260-14

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
U44	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U45	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U46	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U48	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U49	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U50	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U51	231125	IC, DIGITAL, LINE DRIVER	27014	DS26LS31MN
U52	231154	IC, PROGRAMMED PLA	21793	231154
U53	231153	IC, PROGRAMMED PLA	21793	231153
U54	231094	IC, DEMUX DECODER	18324	N74LS138D
U55	231094	IC, DEMUX DECODER	18324	N74LS138D
U56	231135	IC, DIGITAL, 4-BIT COMPARATOR	18324	PC74HCT85D
U57	231093	IC, QUAD COMPARATOR	04713	LM339D
U60	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U61	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U62	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U64	230973	IC,HEX INVERTER	07263	74F04SC
U65	230973	IC,HEX INVERTER	07263	74F04SC
U70	231152	IC, PROGRAMMED PIA	21793	231152
U71	231147	IC, MULTIPLEXER	04713	74HC253D
U72	231147	IC, MULTIPLEXER	04713	74HC253D
U80-U90	231073	IC, DIGITAL, RECEIVER	01295	SN74ALS64SA-1N
U92	231299	IC, MODE SELECT PAL	21793	231299
U95	230414	IC,QUAD 2-INPUT "EXCLUSIVE OR"GATES	01295	74LS86
U96	230963	IC, DIGITAL BUFFER	01295	SN74ALS244N
U97-U99	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U100-U102	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U103	231298	IC, HANDSHAKE PAL	21793	231298
U104	230796	IC, QUAD 2-INPUT NAND GATE	02735	74HCT00E
U105	230796	IC, QUAD 2-INPUT NAND GATE	02735	74HCT00E
U106	230973	IC,HEX INVERTER	07263	74F04SC
U107-U109	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U114	230796	IC, QUAD 2-INPUT NAND GATE	02735	74HCT00E
U117	231143	IC, HEX INVERTER	18324	74HCT14N
U118	231297	IC, PAL	21793	231297
U119-U130	230936	IC, OCTAL BUS TRNCVRS & REGISTRS	01295	SN74LS652NT
Z1	080134	RES NETWORK, DIPSHUNT, 1 OHM, 16P8R	11236	198DM8-5555555
Z3	080134	RES NETWORK, DIPSHUNT, 1 OHM, 16P8R	11236	198DM8-5555555
Z5	080134	RES NETWORK, DIPSHUNT, 1 OHM, 16P8R	11236	198DM8-5555555
Z7	080134	RES NETWORK, DIPSHUNT, 1 OHM, 16P8R	11236	198DM8-5555555
Z9	080134	RES NETWORK, DIPSHUNT, 1 OHM, 16P8R	11236	198DM8-5555555
Z11	080134	RES NETWORK, DIPSHUNT, 1 OHM, 16P8R	11236	198DM8-5555555
Z13	080134	RES NETWORK, DIPSHUNT, 1 OHM, 16P8R	11236	198DM8-5555555
Z15	080134	RES NETWORK, DIPSHUNT, 1 OHM, 16P8R	11236	198DM8-5555555
Z17	080134	RES NETWORK, DIPSHUNT, 1 OHM, 16P8R	11236	198DM8-5555555
Z19	080134	RES NETWORK, DIPSHUNT, 1 OHM, 16P8R	11236	198DM8-5555555
Z21	080134	RES NETWORK, DIPSHUNT, 1 OHM, 16P8R	11236	198DM8-5555555
Z23	080134	RES NETWORK, DIPSHUNT, 1 OHM, 16P8R	11236	198DM8-5555555
Z25	080114	RES NETWORK, 16P8R, 15K	73138	628-AL-153J
Z26	080120	RES NETWORK, 10K	11236	767-161R10K
Z30	080020	RES NETWORK, 8P7R, 10K, 2 PERCENT	11236	750-81-R10K
Z31	080020	RES NETWORK, 8P7R, 10K, 2 PERCENT	11236	750-81-R10K
{54}1	401951	PCB ASSY., LBUS JUMPER	21793	401951
{56}1	411980	PCB 1260-14 (UNLOADED)	21793	411980
{59}1	455776	PANEL, FRONT, 1260-14	21793	455776
{62}A/R	500253	CABLE, FLAT RIBBON, 60 COND	53387	3365/60
{63}A/R	500272	CABLE, FLAT, RIBBON, 50 CONDUCTOR, 28GA	70903	9L28050
{70}12	601606	SOCKET, IC, 24-PIN, LOW PROFILE	00779	641933-4
{71}13	601632	CONNECTOR, DIP, RECEPTACLE, 20P	00779	641612-4

401980 PCB ASSY.. 1250-14

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{76}2	601966	CONNECTOR, CABLE, FLAT, 60 PIN	53387	3334-6000
{78}2	601985	CONNECTOR, IDC SOCKET, 50P	53387	3425-6000
{83}4	611258-001	STANDOFF, SWAGE 4-40 X .170	06540	8091-118-B-440-28
{84}1	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
{85}1	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
{86}5	611266	MOUNTING HARDWARE, HANDLE	62559	21100-745
{89}8	615545	SCREW, PFH, 4-40 X .500	-	-
{91}2	616405	SCREW, PFH, M2.5-.45 X 12	-	-
{93}8	617016	NUT, HEX, 4-40	---	---
{94}8	617102	WASHER, FLAT, #4, LIGHT SERIES	-	-
{95}8	617127	WASHER, LOCK, #4, LIGHT SERIES	-	-
{97}A/R	920962	LOCTITE, 242, MED STR.	05972	272
{98}1	921148	LABEL SET, VXI-VME	21793	921148

404944 FINAL ASSY., 1260-35

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}1	401989	PCB ASSY., 1260-35	21793	401989
{2}1	401992	PCB ASSY., 1260-35D	21793	401992
{5}1	455901	PANEL, SIDE, RIGHT	21793	455901
{6}1	455779-003	PANEL, SIDE, LEFT	21793	455779-003
{7}1	455781	PANEL, REAR, SINGLE	21793	455781
{8}1	455784-001	PANEL, VXI TOP	21793	455784-001
{9}1	455784-002	PANEL, VXI BOTTOM	21793	455784-002
{10}1	455814	PANEL, FRONT	21793	455814
{22}1	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
{23}1	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
{24}5	611266	MOUNTING HARDWARE, HANDLE	62559	21100-745
{25}32	615539	SCREW, PFH, 4-40X. 125	-	-
{27}2	616405	SCREW, PFH, M2.5-.45 X 12	-	-
{28}8	616480	SCREW, PFH, 4-40 X .375	-	-
{29}7	616251	SCREW, PPH, SEMS ASSY, 4-40X.250	78189	
{32}1	921212-010	LABEL, VXI, 1260-35	21793	921212-010
{33}A/R	920962	LOCTITE, 242, MED STR.	05972	272
{35}1	921059	LABEL, CAUTION, STATIC	21793	921059
{36}1	921148	LABEL SET, VXI-VME	21793	921148
{38}1	404975	SHIPPING KIT, 1260-35	21793	404975

404975 SHIPPING KIT 1260-35

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}2	455540	KEY, LOCKOUT, TTL, A/C	21793	455540
{2}2	455541	KEY, LOCKOUT, TTL, A/C	21793	455541
{3}2	455542	KEY, LOCKOUT, TTL, A/C	21793	455542
{6}4	602004	CONNECTOR, TYPE B, FEMALE, 64-PIN	06383	120-064-455
{7}4	602004-001	STRAIN RELIEF, WITH HANDLE	06383	120-000-032
{8}4	602004-002	PULL TAB, SOCKET, 2.5W	06383	LPT-50
{11}3	615013	SCREW, PPF, 2-56 X .188	-	-

401989 PCB ASSY., 1260-35

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
C1	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C2	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C3	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C4	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	05397	T355F685M035A5
C100-C102	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C103	130177	CAPACITOR, CHIP, SMD, 270PF	95275	VJ1206A271KXAMT
C104-C150	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
J3	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J4	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	52072	618008
J200	602005	CONNECTOR, DIN TYPE B, MALE, 64 PIN	06383	100-064033S
J202	602005	CONNECTOR, DIN TYPE B, MALE, 64 PIN	06383	100-064033B
K1-K48	310197	RELAY, 2 FORM C	61529	TQ2E-24V
K97	310197	RELAY, 2 FORM C	61529	TQ2E-24V
L1	100164	CAP, FEED-THRU,800PF, 50V	00779	842448-2
L2	310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L3	310193	CHOKE, SHIELDED, 5UH	91637	IH-5-5-10
L4	100164	CAP, FEED-THRU,800PF, 50V	00779	842448-2
L5	600245	JUMPER, INSULATED	52210	L-2007-1
P1	601675-001	CONNECTOR, EUROCARD, 96 PIN (MODIFIED)	21793	601675-001
P2	601675-001	CONNECTOR, EUROCARD, 96 PIN (MODIFIED)	21793	601675-001
SW1	601969	SWITCH, DIP 6 POS, LOW PROFILE	65832	K406S
SW2	601969	SWITCH, DIP 6 POS, LOW PROFILE	65832	K406S
SW3	601969	SWITCH, DIP 6 POS, LOW PROFILE	65832	K406S
TP1	601197	POST, TEST, .025 SQ	00779	6-87022-6
TP2	601197	POST, TEST, .025 SQ	00779	6-87022-6
U1	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U2	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U3	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U4	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U5	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U6	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U7	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U8	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U9	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U10	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U11	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U12	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U13	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U14	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U15	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U16	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U17	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U18	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U19	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U20	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U21	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U22	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U23	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U24	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U25	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U26	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U27	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U28	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U29	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U30	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U31	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U32	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U33	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U34	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273

401989 PCB ASSY., 1260-35

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
U35	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U36	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U37	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U38	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U39	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U40	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U41	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U42	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U43	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U44	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U45	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U46	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U47	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U48	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U49	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U50	231130	IC, DIGITAL, FLIP FLOP	18324	PC74HC273
U51	231098	IC, SOIC TRANSISTOR	56289	ULN-2803LW
U52	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U53	231153	IC, PROGRAMMED PLA	21793	231153
U54	231094	IC, DEMUX DECODER	18324	N74LS138D
U55	231094	IC, DEMUX DECODER	18324	N74LS138D
U56	231135	IC, DIGITAL, 4-BIT COMPARATOR	18324	PC74HCT85D
U57	231093	IC, QUAD COMPARATOR	04713	LM339D
U60	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U61	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U62	231131	IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U70	231152-001	IC, DIGITAL 16L8, PAL	21793	231152-001
U71	231147	IC, MULTIPLEXER	04713	74HC253D
U72	231147	IC, MULTIPLEXER	04713	74HC253D
U73	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U74	231096	IC, QUAD DIFF RECEIVER	01295	AM26LS32ACD
U75	231125	IC, DIGITAL, LINE DRIVER	27014	DS26LS31MN
U76	231154	IC, PROGRAMMED PLA	21793	231154
U77	231147	IC, MULTIPLEXER	04713	74HC253D
W2-W11	602007	CONNECTOR, STRAIGHT, DOUBLE ROW, 4 PIN	52072	CAD0423B43
Z1	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z2	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z3	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z4	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z5	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z6	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z7	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z8	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z9	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z10	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z11	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z12	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z13	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z14	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z15	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z16	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z17	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z18	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z19	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z20	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z21	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z22	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z23	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z24	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J

401989 PCB ASSY., 1260-35

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
Z25	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z26	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z27	080114	RES NETWORK, 16P8R, 15K	73138	628-AL-153J
Z28	080120	RES NETWORK, 10K	11236	767-161R10K
(43)1	401951	PCB ASSY., LBUS JUMPER	21793	401951
(45)1	411989	PCB, 1260-35 (UNLOADED)	21793	411989
(48)1	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
(58)20	601195	PLUG, JUMPER, 0.1 CTR, LOW PROFILE	00779	530153-2
(66)1	602023	CABLE ASSY., 1DC 60 PIN	21793	602023
(67)6	610257	STANDOFF, SWAGE, 1/4D, 4-40 X .31	06540	95348804403A
(70)1	611258-001	STANDOFF, SWAGE 4-40 X .170	06540	8091-11B-B-440-28

401992 PCB ASSY., 1260-35D

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
J201	602005	CONNECTOR, DIN TYPE B, MALE, 64 PIN	06383	100-0640338
J203	602005	CONNECTOR, DIN TYPE B, MALE, 64 PIN	06383	100-0640338
J204	602008	CONNECTOR, RIGHT ANGLE, 60 PIN	52072	CA-60HRM-1F-S
K49-K96	310197	RELAY, 2 FORM C	61529	TO2E-24V
TP3	601197	POST, TEST, .025 SQ	00779	6-87022-6
W12-W20	602006	CONNECTOR, RIGHT ANGLE, 4 PIN	52072	CA-004R-23R-09
(3)1	411992	PCB, 1260-35D (UNLOADED)	21793	411992
(12)18	601195	PLUG, JUMPER, 0.1 CTR, LOW PROFILE	00779	530153-2

404974 CABLE ASSY., KIT , 1260-14

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}1	404970	CABLE ASSY., J101	21793	404970
{2}1	404971	CABLE ASSY., J102	21793	404971
{3}1	404972	CABLE ASSY., J104	21793	404972
{4}1	404973	CABLE ASSY., J103	21793	404973

404970 CABLE ASSY., 1260-14-J101

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}A//R	500292	CABLE, 50 CONDUCTORS, FLAT, TWISTED	53387	1700150
{2}1	601627	CONNECTOR, FLAT CABLE, RECEPTACLE, 50P	53387	3425-6050
{4}A/R	M2305351134	INSULATION ELECTRICAL HEAT SHRINK	81349	M23053/5-113-4
{5}A/R	LT100 1INCH	TAPE POLYESTER	34359	853, 1 INCH

404971 CABLE ASSY., 1260-14-J102

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}2	500292	CABLE, 50 CONDUCTORS, FLAT, TWISTED	53387	1700150
{2}1	601627	CONNECTOR, FLAT CABLE, RECEPTACLE, 50P	53387	3425-6050
{4}A/R	M2305351134	INSULATION ELECTRICAL HEAT SHRINK	81349	M23053/5-113-4
{5}A/R	LT100 1INCH	TAPE POLYESTER	34359	853, 1 INCH

404973 CABLE ASSY., 1260-14,J103

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}A/R	500300	CABLE, 60 CONDUCTOR FLAT, TWISTED	52072	CA-60IDC-TF
{2}1	601457	CONNECTOR, FLAT CABLE, 60-PIN	52072	CA-60IDS2-F-SR
{4}A/R	M2305351134	INSULATION ELECTRICAL, HEAT SHRINK	81349	M23053/5-113-4
{5}A/R	LT100 1INCH	TAPE, POLYESTER	34359	853, 1INCH

404972 CABLE ASSY., 1260-14, J104

REF DESIG	RACAL-DANA P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}A/R	500300			
{2}1	601457	CONNECTOR, FLAT CABLE, 60-PIN	52072	CA-60IDS2-F-SR
{4}A/R	M2305351134	INSULATION ELECTRICAL HEAT SHRINK	81349	M23053/5-113-4
{5}A/R	LT100 1INCH	TAPE POLYESTER	34359	853, 1 INCH

SECTION 7 WIRE LIST

404767-001	Final Assy., 1260-30A	7-2
404767-002	Final Assy., 1260-30B	7-4
404767-003	Final Assy., 1260-30C	7-6
404767-004	Final Assy., 1260-30D	7-8
404775-001	Final Assy., 1260-40A	7-10
404775-002	Final Assy., 1260-40B	7-13
404775-003	Final Assy., 1260-40C	7-17
401908	PCB Assy., 1260-54	7-21

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
COM0-1	E0-1	BARE COPPER,22GA	500022	A/R	BUS
COM0-2	E0-2				
COM1-1	E1-1				
COM1-2	E1-2				
COM2-1	E2-1				
COM2-2	E2-2				
COM3-1	E3-1				
COM3-2	E3-2				
COM4-1	E4-1				
COM4-2	E4-2				
COM5-1	E5-1				
COM5-2	E5-2				
COM6-1	E6-1				
COM6-2	E6-2				
COM7-1	E7-1				
COM7-2	E7-2				
E01-1	E12-1				
E01-2	E12-2				
E23-1	E34-1				
E23-2	E34-2	BARE COPPER,22GA	500022	A/R	BUS

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO	DOCUMENT NO	REV.
FINAL ASSY., 1260-30A	A	21793	404767-001	B
	DRN K.MONROE			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E45-1	E56-1	BARE COPPER,22GA	500022	A/R	BUS
E45-2	E56-2	BARE COPPER,22GA	500022	A/R	BUS
E67-1	E00-1	TEF,STR,24GA,WHT	500132	A/R	TWISTED PAIR
E67-2	E00-2	TEF,STR,24GA, BLK	500132	A/R	

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO	REV.
FINAL ASSY., 1260-30A	A	21793	404767-001	B
	DRNK. MONROE			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
COM0-1	E0-1	BARE COPPER,22GA	500022	A/R	BUS
COM0-2	E0-2				
COM1-1	E1-1				
COM1-2	E1-2				
COM2-1	E2-1				
COM2-2	E2-2				
COM3-1	E3-1				
COM3-2	E3-2				
COM4-1	E4-1				
COM4-2	E4-2				
COM5-1	E5-1				
COM5-2	E5-2				
COM6-1	E6-1				
COM6-2	E6-2				
COM7-1	E7-1				
COM7-2	E7-2				
E01-1	E12-1				
E01-2	E12-2				
E45-1	E56-1				
E45-2	E56-2				
		BARE COPPER,22GA	500022	A/R	BUS

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO	DOCUMENT NO	REV
FINAL ASSY., 1260-30B	A	21793	404767-002	B
	DRN K. MONROE			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E23-1	E00-1	TEF,STR,24GA WHT	500132	A/r	TWISTED PAIR
E23-2	E00-2	" BLK	"	"	
E67-1	E10-1	" WHT	"	"	TWISTED PAIR
E67-2	E10-2	TEF,STR,24GA BLK	500132	A/R	

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO	RE.
FINAL ASSY., 1260-30B	A	21793	404767-002	B
	DRN K. MONROE			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
COM0-1	E0-1	BARE COPPER,22GA	500022	A/R	BUS
COM0-2	E0-2				
COM1-1	E1-1				
COM1-2	E1-2				
COM2-1	E2-1				
COM2-2	E2-2				
COM3-1	E3-1				
COM3-2	E3-2				
COM4-1	E4-1				
COM4-2	E4-2				
COM5-1	E5-1				
COM5-2	E5-2				
COM6-1	E6-1				
COM6-2	E6-2				
COM7-1	E7-1				
COM7-2	E7-2				
		BARE COPPER,22GA	500022	A/R	BUS
E01-1	E00-1	TEF,STR,24GA WHT	500132	A/R	TWISTED PAIR
E01-2	E00-2	" BLK	"	"	
E23-1	E10-1	" WHT	"	"	TWISTED PAIR
E23-2	E10-2	TEF,STR,24GA BLK	500132	A/R	

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO	DOCUMENT NO	RE
FINAL ASSY., 1260-30C	A	21793	404767-003	B
	DRN K.MONROE			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E45-1	E20-1	TEF,STR,24GA WHT	500132	A/R	TWISTED PAIR
E45-2	E20-2	" BLK	"	"	
E67-1	E30-1	" WHT	"	"	TWISTED PAIR
E67-2	E30-2	TEF,STR,24GA BLK	500132	A/R	

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO	DOCUMENT NO	REV.
FINAL ASSY., 1260-30C	A	21793	404767-003	B
	DRN K. MONROE			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
COM0-1	E00-1	TEF,STR,24GA WHT	500132	A/R	TWISTED
COM0-2	E00-2	" BLK			PAIR
COM1-1	E10-1	" WHT			"
COM1-2	E10-2	" BLK			
COM2-1	E20-1	" WHT			"
COM2-2	E20-2	" BLK			
COM3-1	E30-1	" WHT			"
COM3-2	E30-2	" BLK			
COM4-1	E40-1	" WHT			"
COM4-2	E40-2	" BLK			
COM5-1	E50-1	" WHT			"
COM5-2	E50-2	" BLK			
COM6-1	E60-1	" WHT			"
COM6-2	E60-2	" BLK			
COM7-1	E70-1	" WHT			TWISTED
COM7-2	E70-2	TEF,STR,24GA BLK	500132	A/R	PAIR

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO	DOCUMENT NO	REV
FINAL ASSY., 1260-30D	A	21793	404767-004	B
	DRN K. MONROE			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E117-1	E117-4	BARE COPPER, 22GA	500022	A/R	BUS
E117-2	E117-3	"	500022	A/R	"
E118-1	E118-4	"	500022	A/R	"
E118-2	E118-3	"	500022	A/R	"
E119-1	E119-4	"	500022	A/R	"
E119-2	E119-3	"	500022	A/R	"
E120-1	E120-4	"	500022	A/R	"
E120-2	E120-3	"	500022	A/R	"
E113-1	E121-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED
E113-2	E121-2	TEF,STR,24GA, BLK	500132	A/R	PAIR
E114-1	E122-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED
E114-2	E122-2	TEF,STR,24GA, BLK	500132	A/R	PAIR
E115-1	E123-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED
E115-2	E123-2	TEF,STR,24GA, BLK	500132	A/R	PAIR
E116-1	E124-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED
E116-2	E124-2	TEF,STR,24GA, BLK	500132	A/R	PAIR
E25-1	E21-1	TEF,STR,24GA,WHT	500132	A/R	TWISTED
E25-2	E21-2	TEF,STR,24GA,BLK	500132	A/R	PAIR
E26-1	E22-1	TEF,STR,24GA,WHT	500132	A/R	TWISTED
E26-2	E22-2	TEF,STR,24GA,BLK	500132	A/R	PAIR

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO.	REV
FINAL ASSY., 1260-40A	A	21793	404775-001	B
	DRN			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E27-1	E17-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E27-2	E17-2	TEF,STR,24GA, BLK	500132	A/R	
E28-1	E18-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E28-2	E18-2	TEF,STR,24GA, BLK	500132	A/R	
E29-1	E13-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E29-2	E13-2	TEF,STR,24GA, BLK	500132	A/R	
E30-1	E14-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E30-2	E14-2	TEF,STR,24GA, BLK	500132	A/R	
E31-1	E9-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E31-2	E9-2	TEF,STR,24GA, BLK	500132	A/R	
E32-1	E10-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E32-2	E10-2	TEF,STR,24GA, BLK	500132	A/R	
E33-1	E5-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E33-2	E5-2	TEF,STR,24GA, BLK	500132	A/R	
E34-1	E6-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E34-2	E6-2	TEF,STR,24GA, BLK	500132	A/R	
E35-1	E1-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E35-2	E1-2	TEF,STR,24GA, BLK	500132	A/R	
E36-1	E2-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E36-2	E2-2	TEF,STR,24GA, BLK	500132	A/R	

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO.	REV
FINAL ASSY., 1260-40A	A	21793	404775-001	B
	DRN			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E101-1	E3-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E101-2	E3-2	TEF,STR,24GA, BLK	500132	A/R	
E102-1	E4-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E102-2	E4-2	TEF,STR,24GA, BLK	500132	A/R	
E103-1	E7-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E103-2	E7-2	TEF,STR,24GA, BLK	500132	A/R	
E104-1	E8-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E104-2	E8-2	TEF,STR,24GA, BLK	500132	A/R	
E105-1	E11-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E105-2	E11-2	TEF,STR,24GA, BLK	500132	A/R	
E106-1	E12-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E106-2	E12-2	TEF,STR,24GA, BLK	500132	A/R	
E107-1	E15-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E107-2	E15-2	TEF,STR,24GA, BLK	500132	A/R	
E108-1	E16-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E108-2	E16-2	TEF,STR,24GA, BLK	500132	A/R	
E109-1	E19-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E109-2	E19-2	TEF,STR,24GA, BLK	500132	A/R	
E110-1	E20-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E110-2	E20-2	TEF,STR,24GA, BLK	500132	A/R	

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO.	REV.
FINAL ASSY., 1260-40A	A	21793	404775-001	B
	DRN			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E111-1	E23-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E111-2	E23-2	TEF,STR,24GA, BLK	500132	A/R	
E112-1	E24-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E112-2	E24-2	TEF,STR,24GA, BLK	500132	A/R	

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO.	REV
FINAL ASSY., 1260-40A	A	21793	404775-001	B
	DRN			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E113-1	E113-4	BARE COPPER, 22GA	500022	A/R	BUS
E113-2	E113-3				
E114-1	E114-4				
E114-2	E114-3				
E115-1	E115-4				
E115-2	E115-3				
E116-1	E116-4				
E116-2	E116-3				
E117-1	E117-4				
E117-2	E117-3				
E118-1	E118-4				
E118-2	E118-3				
E119-1	E119-4				
E119-2	E119-3				
E120-1	E120-4				
E120-2	E120-3				
E101-1	E101-4				
E101-2	E101-3				
E102-1	E102-4				
E102-2	E102-3				

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO	REV.
FINAL ASSY., 1260-40B	A	21793	404775-002	B
	DRN			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E103-1	E103-4	BARE COPPER, 22GA	500022	A/R	BUS
E103-2	E103-3				
E104-1	E104-4				
E104-2	E104-3				
E105-1	E105-4				
E105-2	E105-3				
E106-1	E106-4				
E106-2	E106-3				
E107-1	E107-4				
E107-2	E107-3				
E108-1	E108-4				
E108-2	E108-3				
E109-1	E109-4				
E109-2	E109-3				
E110-1	E110-4				
E110-2	E110-3				
E111-1	E111-4				
E111-2	E111-3				
E112-1	E112-4				
E112-2	E112-3				

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO.	REV
FINAL ASSY., 1260-40B	A	21793	404775-002	B
	DRN			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E25-1	E21-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E25-2	E21-2	TEF,STR,24GA, BLK	500132	A/R	
E26-1	E22-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E26-2	E22-2	TEF,STR,24GA, BLK	500132	A/R	
E27-1	E17-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E27-2	E17-2	TEF,STR,24GA, BLK	500132	A/R	
E28-1	E18-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E28-2	E18-2	TEF,STR,24GA, BLK	500132	A/R	
E29-1	E13-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E29-2	E13-2	TEF,STR,24GA, BLK	500132	A/R	
E30-1	E14-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E30-2	E14-2	TEF,STR,24GA, BLK	500132	A/R	
E31-1	E9-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E31-2	E9-2	TEF,STR,24GA, BLK	500132	A/R	
E32-1	E10-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E32-2	E10-2	TEF,STR,24GA, BLK	500132	A/R	
E33-1	E5-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E33-2	E5-2	TEF,STR,24GA, BLK	500132	A/R	
E34-1	E6-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E34-2	E6-2	TEF,STR, 24GA, BLK	500132	A/R	

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO.	REV
FINAL ASSY., 1260-40B	A	21793	404775-002	B
	DRN			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E35-1	E1-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E35-2	E1-2	TEF,STR,24GA, BLK	500132	A/R	
E36-1	E2-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E36-2	E2-2	TEF,STR,24GA, BLK	500132	A/R	

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO.	REV
FINAL ASSY., 1260-40B	A	21793	404775-002	B
	DRN			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E113-1	E113-4	BARE COPPER, 22GA	500022	A/R	BUS
E113-2	E113-3	"	500022	A/R	"
E114-1	E114-4	"	500022	A/R	"
E114-2	E114-3	"	500022	A/R	"
E115-1	E115-4	"	500022	A/R	"
E115-2	E115-3	"	500022	A/R	"
E116-1	E116-4	"	500022	A/R	"
E116-2	E116-3	"	500022	A/R	"
E117-1	E117-4	"	500022	A/R	"
E117-2	E117-3	"	500022	A/R	"
E118-1	E118-4	"	500022	A/R	"
E118-2	E118-3	"	500022	A/R	"
E119-1	E119-4	"	500022	A/R	"
E119-2	E119-3	"	500022	A/R	"
E120-1	E120-4	"	500022	A/R	"
E120-2	E120-3	"	500022	A/R	"
E25-1	E21-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E25-2	E21-2	TEF,STR,24GA, BLK	500132	A/R	

RACAL-DANA Instruments Inc. 4 GOODYEAR. IRVINE. CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO	REV
FINAL ASSY., 1260-40C	A	21793	404775-003	B
	DRN			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E26-1	E22-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E26-2	E22-2	TEF,STR,24GA, BLK	500132	A/R	
E27-1	E17-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E27-2	E17-2	TEF,STR,24GA, BLK	500132	A/R	
E28-1	E18-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E28-2	E18-2	TEF,STR,24GA, BLK	500132	A/R	
E29-1	E13-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E29-2	E13-2	TEF,STR,24GA, BLK	500132	A/R	
E30-1	E14-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E30-2	E14-2	TEF,STR,24GA, BLK	500132	A/R	
E31-1	E9-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E31-2	E9-2	TEF,STR,24GA, BLK	500132	A/R	
E32-1	E10-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E32-2	E10-2	TEF,STR,24GA, BLK	500132	A/R	
E33-1	E5-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E33-2	E5-2	TEF,STR,24GA, BLK	500132	A/R	
E34-1	E6-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E34-2	E6-2	TEF,STR,24GA, BLK	500132	A/R	
E35-1	E1-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E35-2	E1-2	TEF,STR,24GA, BLK	500132	A/R	

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO.	RE /
FINAL ASSY., 1260-40C	A	21793	404775-003	B
	DRN			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E36-1	E2-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E36-2	E2-2	TEF,STR,24GA, BLK	500132	A/R	
E101-1	E3-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E101-2	E3-2	TEF,STR,24GA, BLK	500132	A/R	
E102-1	E4-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E102-2	E4-2	TEF,STR,24GA, BLK	500132	A/R	
E103-1	E7-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E103-2	E7-2	TEF,STR,24GA, BLK	500132	A/R	
E104-1	E8-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E104-2	E8-2	TEF,STR,24GA, BLK	500132	A/R	
E105-1	E11-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E105-2	E11-2	TEF,STR,24GA, BLK	500132	A/R	
E106-1	E12-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E106-2	E12-2	TEF,STR,24GA, BLK	500132	A/R	
E107-1	E15-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E107-2	E15-2	TEF,STR,24GA, BLK	500132	A/R	
E108-1	E16-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E108-2	E16-2	TEF,STR,24GA, BLK	500132	A/R	
E109-1	E19-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED PAIR
E109-2	E19-2	TEF,STR,24GA, BLK	500132	A/R	

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO.	REV
FINAL ASSY., 1260-40C	A	21793	404775-003	B
	DRN			

WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NUMBER	WIRE LENGTH	REFERENCE
E110-1	E20-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED
E110-2	E20-2	TEF,STR,24GA, BLK	500132	A/R	PAIR
E111-1	E23-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED
E111-2	E23-2	TEF,STR,24GA, BLK	500132	A/R	PAIR
E112-1	E24-1	TEF,STR,24GA, WHT	500132	A/R	TWISTED
E112-2	E24-2	TEF,STR,24GA, BLK	500132	A/R	PAIR

RACAL-DANA Instruments Inc. 4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE	SIZE	CODE IDENT NO.	DOCUMENT NO.	REV
FINAL ASSY., 1260-40C	A	21793	404775-003	B
	DRN			

ENGINEERING WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NO.	WIRE LENGTH	REFERENCE
E POINT	CHANNEL				
E1	00	CABLE, COAX, 50 OHM	500254	A/R	
E2	01	CABLE, COAX, 50 OHM	500254	A/R	
E3	02	CABLE, COAX, 50 OHM	500254	A/R	
E4	03	CABLE, COAX, 50 OHM	500254	A/R	
E5	COM 0	CABLE, COAX, 50 OHM	500254	A/R	
E6	10	CABLE, COAX, 50 OHM	500254	A/R	
E7	11	CABLE, COAX, 50 OHM	500254	A/R	
E8	12	CABLE, COAX, 50 OHM	500254	A/R	
E9	13	CABLE, COAX, 50 OHM	500254	A/R	
E10	COM 1	CABLE, COAX, 50 OHM	500254	A/R	
E11	20	CABLE, COAX, 50 OHM	500254	A/R	
E12	21	CABLE, COAX, 50 OHM	500254	A/R	
E13	22	CABLE, COAX, 50 OHM	500254	A/R	
E14	23	CABLE, COAX, 50 OHM	500254	A/R	
E15	COM 2	CABLE, COAX, 50 OHM	500254	A/R	
E16	30	CABLE, COAX, 50 OHM	500254	A/R	
E17	31	CABLE, COAX, 50 OHM	500254	A/R	
E18	32	CABLE, COAX, 50 OHM	500254	A/R	
E19	33	CABLE, COAX, 50 OHM	500254	A/R	
E20	COM 3	CABLE, COAX, 50 OHM	500254	A/R	

RACAL-DANA Instruments, Inc., 4 Goodyear St., Irvine, CA 92718

DOCUMENT TITLE	SIZE	CODE NO.	DOCUMENT NO.	REV
PCB ASSY. 1260-54	A	21793	401908	A
	DRN			

S0610F | DOC NO. 401908

ENGINEERING WIRE LIST

FROM	TO	CONDUCTOR TYPE, GAUGE, COLOR	PART NO.	WIRE LENGTH	REFERENCE
E21	40	CABLE, COAX, 50 OHM	500254	A/R	
E22	41	CABLE, COAX, 50 OHM	500254	A/R	
E23	42	CABLE, COAX, 50 OHM	500254	A/R	
E24	43	CABLE, COAX, 50 OHM	500254	A/R	
E25	COM 4	CABLE, COAX, 50 OHM	500254	A/R	
E26	50	CABLE, COAX, 50 OHM	500254	A/R	
E27	51	CABLE, COAX, 50 OHM	500254	A/R	
E28	52	CABLE, COAX, 50 OHM	500254	A/R	
E29	53	CABLE, COAX, 50 OHM	500254	A/R	
E30	COM 5	CABLE, COAX, 50 OHM	500254	A/R	

RACAL-DANA Instruments, Inc., 4 Goodyear St., Irvine, CA 92718

DOCUMENT TITLE	SIZE	CODE NO.	DOCUMENT NO.	REV
PCB ASSY, 1260-54	A	21793	401908	A
	DRN			

RACAL-DANA Instruments Inc.

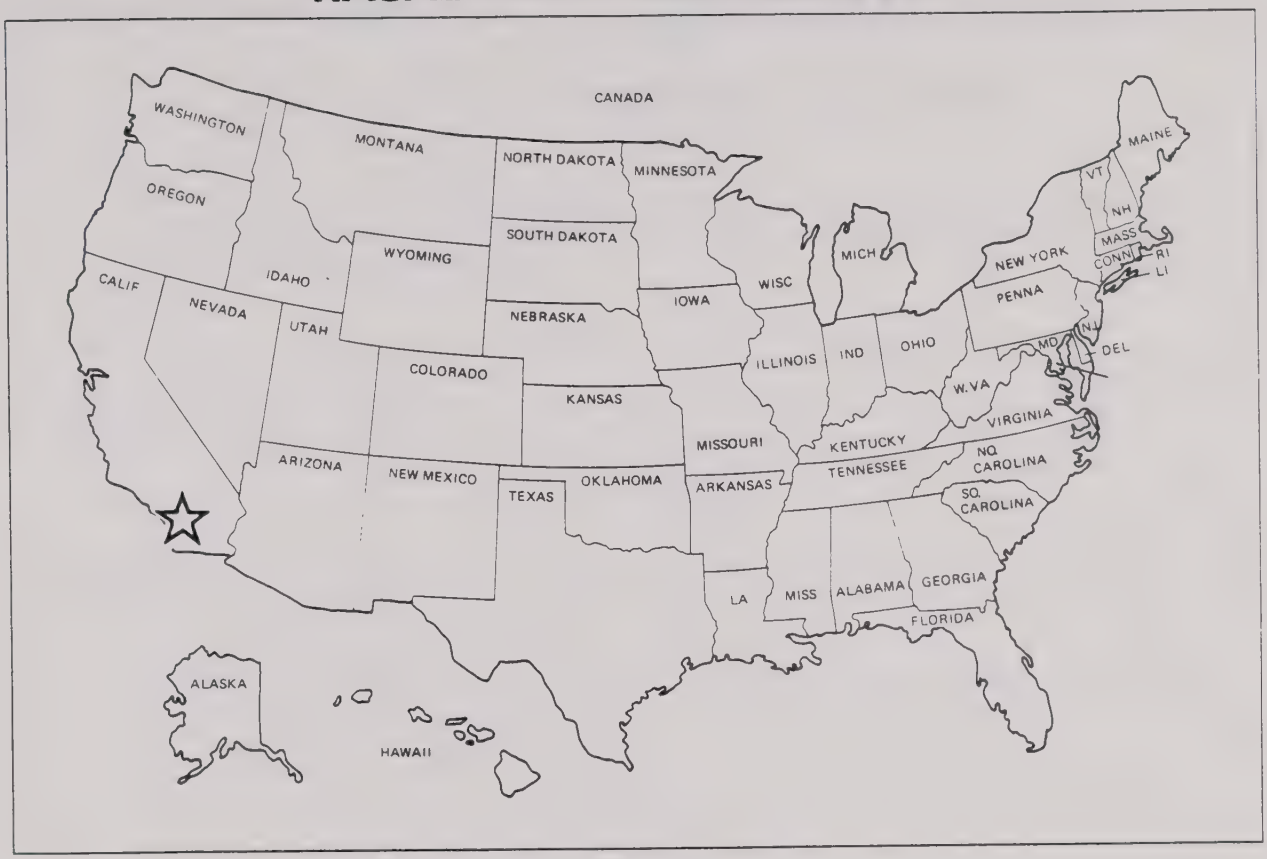

SALES, APPLICATIONS AND SERVICE SUPPORT

RACAL-DANA INSTRUMENTS INC.
4 Goodyear Street
Irvine, California 92718
Telephone: 1-800 RAC-DANA
(714) 859-8999 (In CA)
Fax: (714) 859-2505
TRT: 188715

INTERNATIONAL SERVICE CENTERS

Racal-Dana Instruments Ltd., Hardley Industrial Estate, Hythe, Southampton, Hampshire SO4 6ZH, England. (0703) 843265.Telex.47600
Racal-Dana Instruments S.A., 18 Avenue Dutartre, 78150 Le Chesnay, France (3) 955 88 88. Telex: 697215
Racal-Dana Instruments GmbH, Frankenforster Strasse 21, 5060 Bergisch Gladback 1, Federal Republic of Germany, 2204 60081. Telex. 887 8428
Racal-Dana Instruments Italia srl, Via Mecenate 84/A, 20138 Milano, MI, Italy (02) 5062767/5052686/503444, Telex. 315697

RACAL-DANA Instruments Inc. *4 Goodyear Street, Irvine, California 92718-2202*

REPAIR AND CALIBRATION REQUEST FORM

To allow us to better understand your repair requests, we suggest you use the following outline when calling and include a copy with your instrument to be sent to the Racal-Dana Repair Facility.

Model No_____ Serial No_____ Date_____

Company Name_____ P.O. No_____

Billing Address_____

City State Zip

Shipping Address_____

City State Zip

Technical Contact_____ Phone Number (___)_____

Purchasing Contact_____ Phone Number (___)_____

1. Describe, in detail, the problem and symptoms you are having. Please include all set up details, such as input/output levels, frequencies, waveform details, etc.

_____

_____

_____

_____

2. If problem is occurring when unit is in remote, please list the program strings used and the controller type.

_____

_____

_____

3. Please give any additional information you feel would be beneficial in facilitating a faster repair time (i.e., modifications, etc.).

_____

_____

_____

4. Is calibration data required? Yes No (circle one)

Call for RMA No. before shipping: Customer Service
(714) 859-8999 x230 OR 1 (800) RAC-DANA

Ship instrument to: Customer Service Department
Racal-Dana Instruments Inc.
4 Goodyear Street
Irvine, CA 92718

Note: We do not accept "collect" shipments.

www.manualsplus.com
1013856